


CONTROL LOCATIONS

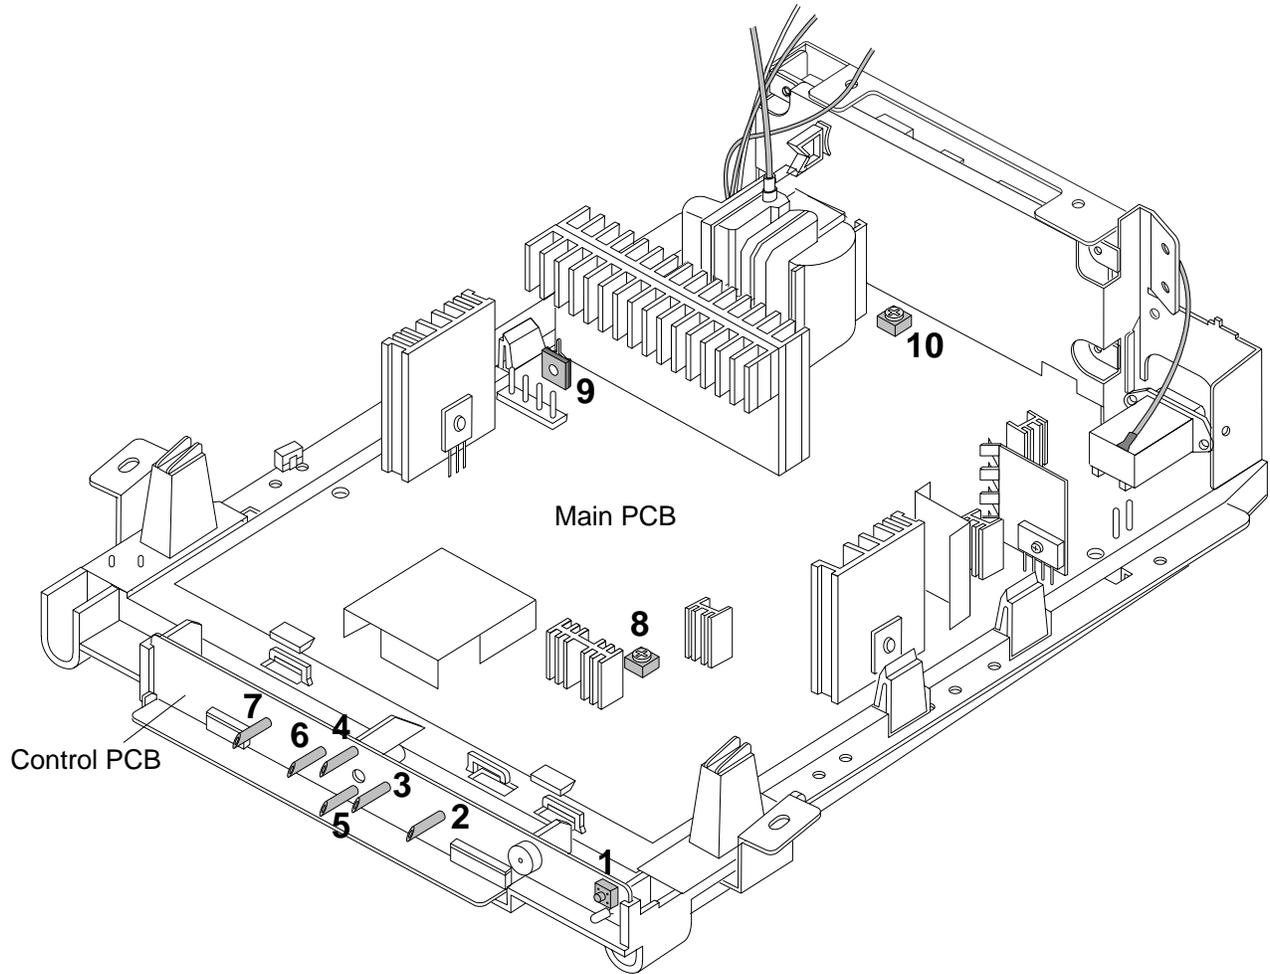

No.	Ref. No.	Control Function	No.	Ref. No.	Control Function
1	SW131	POWER SWITCH	6	P157	OSD SELECT/ADJUSTMENT (LEFT)
2	P155	SET BUTTON	7	P160	OSD BUTTON
3	P151	OSD SELECT/ADJUSTMENT (RIGHT)	8	VR901	B ⁺ ADJUSTMENT
4	P137	OSD SELECT/ADJUSTMENT (UP)	9	SC701	R-CENTER SELECT
5	P140	OSD SELECT/ADJUSTMENT (DOWN)	10	VR501	HIGH-VOLTAGE ADJUSTMENT