


DISASSEMBLY


1. TILT/SWIVEL REMOVAL

- 1) Set the monitor face downward.
- 2) Pressing the latch (a), carefully remove the Tilt/Swivel by pulling it upward.

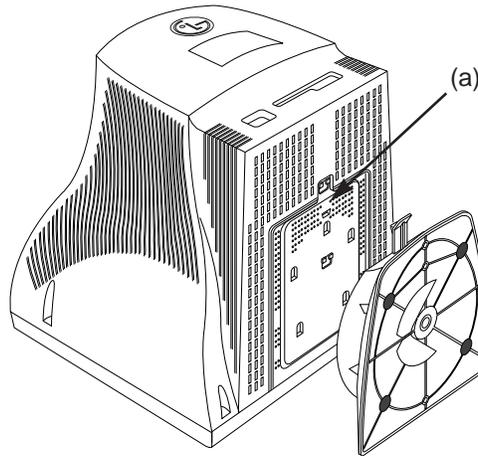


2. BACK COVER REMOVAL

- 1) Remove four screws (a) from the Back Cover.
- 2) Slide the Back Cover away from the Front Cabinet of the monitor.

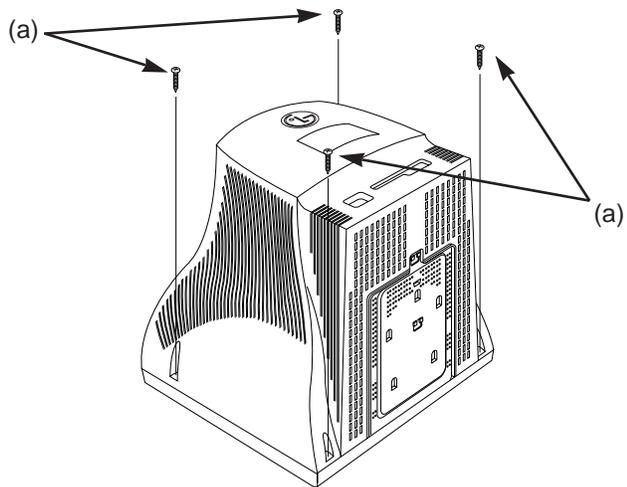


3. TOP SHIELD REMOVAL

- 1) Remove six screws (a).
- 2) Remove four screws (b).
- 3) Remove two screws (c).
- 4) Remove two screws (d).

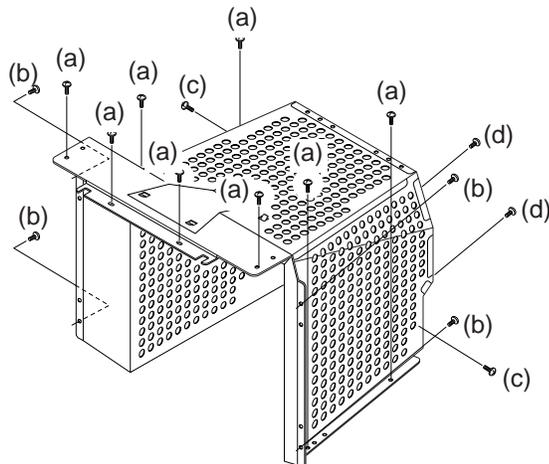


4. TOTAL CHASSIS ASSEMBLY REMOVAL

- 1) Disconnect P903 (Degaussing pin), P704 (DY pin), P609 (Tilt pin), and P610 (Purity pin) from the Main PCB.
- 2) Disconnect P306 (GND Wire), P304, P305 from the Video PCB.
- 3) Carefully separate the CDT Board Assembly from the CDT neck.
- 4) Discharge the remaining static electricity by shorting between the Anode Cap and the CDT ground.
- 5) Disconnect the Anode Cap from the CDT.
- 6) Remove four screws (a).
- 7) Remove the Total Chassis Assembly from the Main Frame.

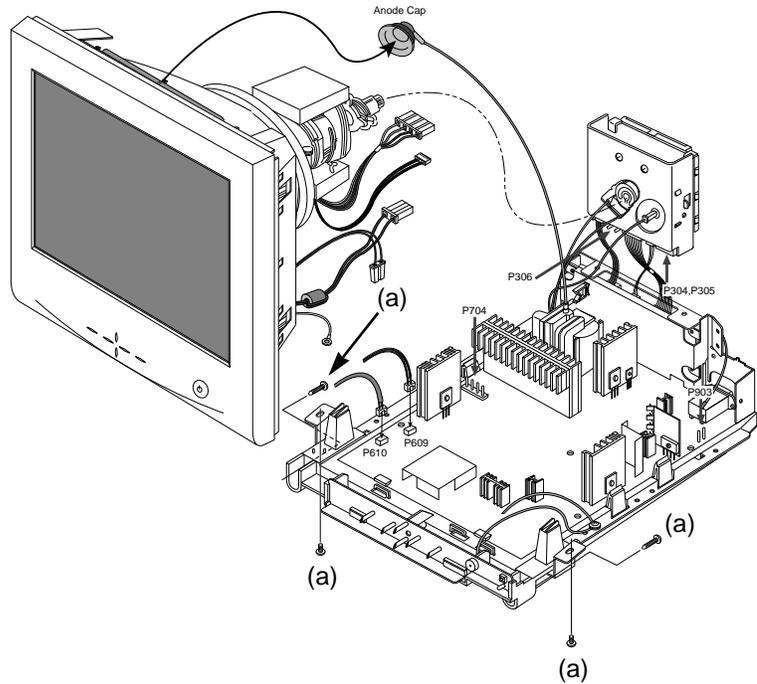


5. VIDEO PCB ASSEMBLY REMOVAL

- 1) Disconnect P301, P303, P310, and P319 from the Video PCB.
- 2) Remove the Video PCB Assembly from the Interface Assembly.

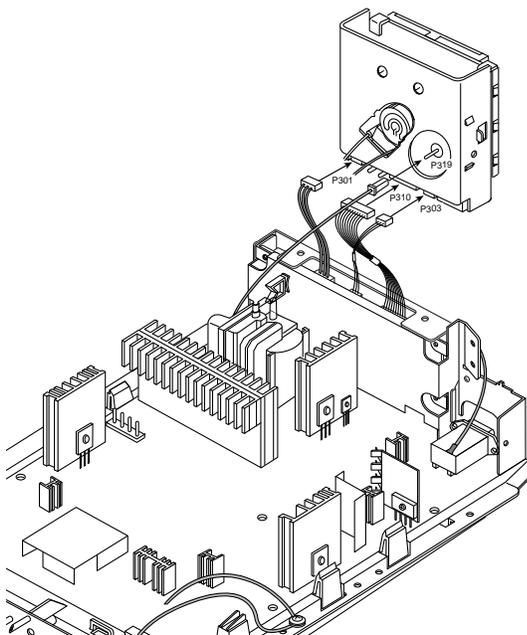


6. BOTTOM BRACKET REMOVAL

- 1) Remove five screws (a).
- 2) Remove the Bottom Bracket.

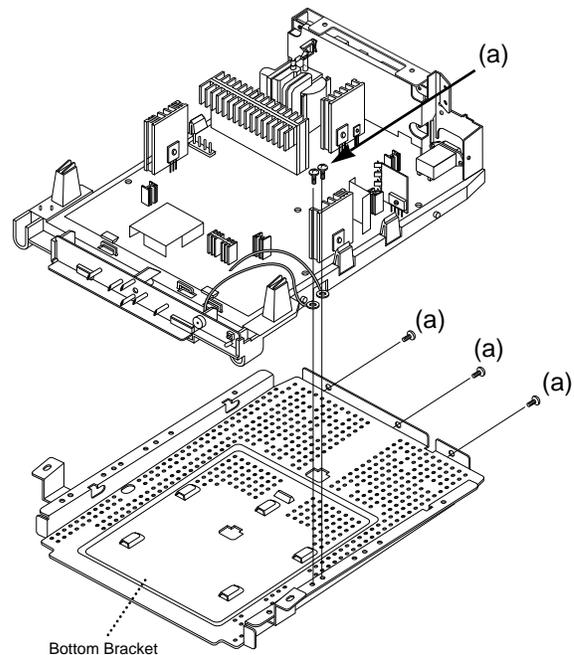

**7. MAIN BRACKET & CONTROL PCB ASS'Y
REMOVAL**

- 1) Remove nine screws (a).
- 2) Remove two screws (b).
- 3) Carefully remove the Interface Assembly from the Main PCB Board.
- 4) Remove the Control PCB Assembly from the Main Mrracket.
- 5) Release four latches (d) from the Main Board Assembly.
- 6) Remove the Bottom Bracket.

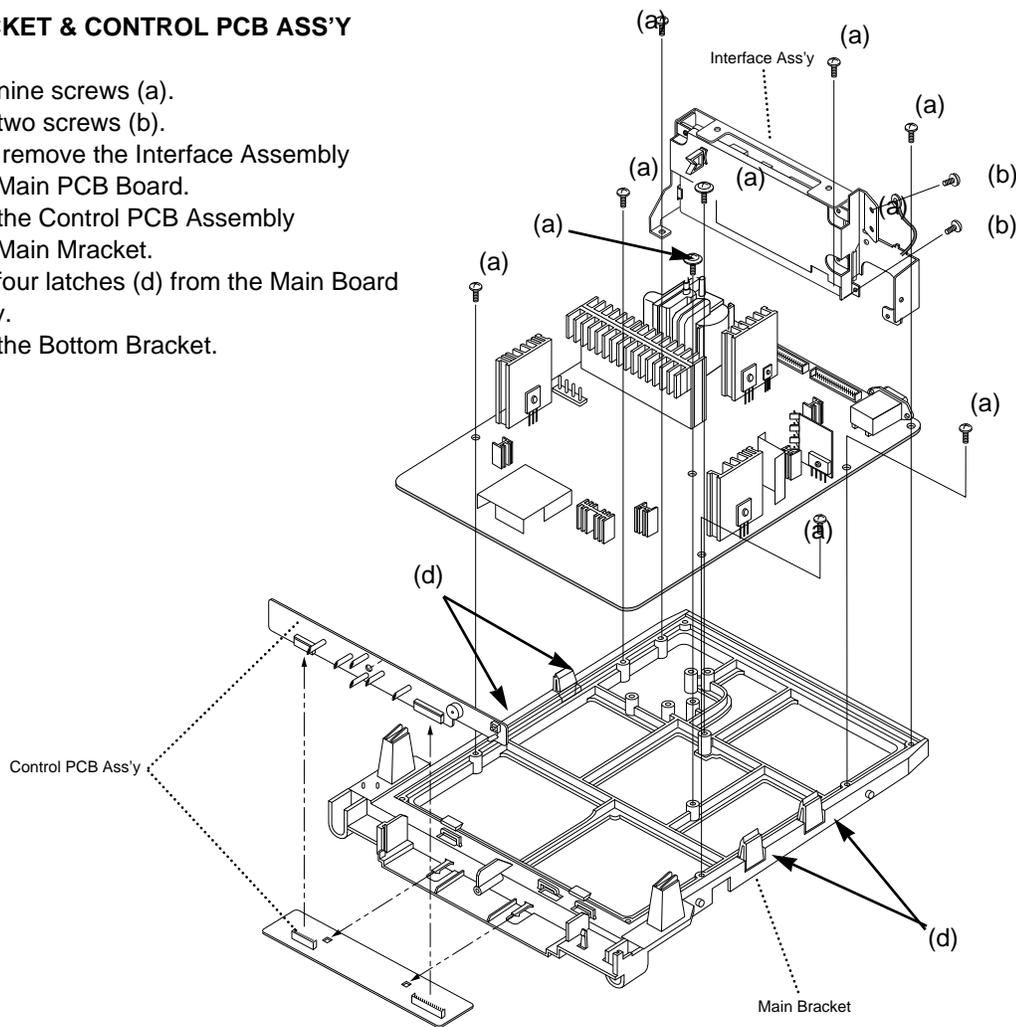

8. INTERFACE ASSEMBLY REMOVAL

- 1) Remove five screws (a).
- 2) Remove Interface Rear Shield.
- 3) Remove three screws (b).
- 4) Remove the Interface Front Shield and Interface PCB.

