

## 4-3 Head Switching Point Adjustment

- 1) Playback the alignment tape.
- 2) Press the "SW710 (TEST)" button on Function-Timer PCB to set the adjustment mode. (See Fig. 4-2)
- 3) Press the "SP/SLP" button of remote control then adjustment is operated automatically. (See Fig. 4-1)

## 4-4 NVRAM Option Setting

- 1) NVRAM Option is adjusted at production line basically.  
 2) In case VCR Main PCB Micom (IC601) and NVRAM (IC605 ; EEPROM) is replaced, be sure to set the corresponding option number of the required model. (If the option is not set, the unit is not operated.)

- 1) Press the "SW710 (TEST)" button on Function-Timer PCB to set the adjustment mode. (See Fig. 4-2)
- 2) Press the "VOL +" button on the remote control about 5 seconds then option setting is appeared. (See Fig. 4-4)
- 3) Select the option number (See table 4-1) of corresponding model with "SKIP/F.ADV", "MODE/REPEAT", "CLOCK/COUNTER" button on the remote control.
- 4) If selecting the option number is completed, press the "DISPLAY" button of remote control.  
 (If "DISPLAY" button is pressed, the selected number is changes reversed color. ; See Fig. 4-4)
- 5) Press the "SET UP/ENTER" button of remote control again to store the option number.  
 ("PLEASE WAIT" is displayed for a second as shown Fig. 4-5 and this setting is completed.)

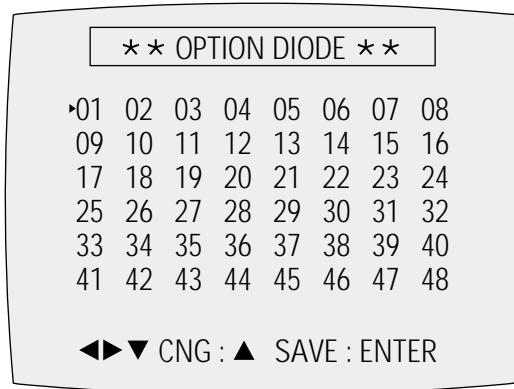


Fig.4-4

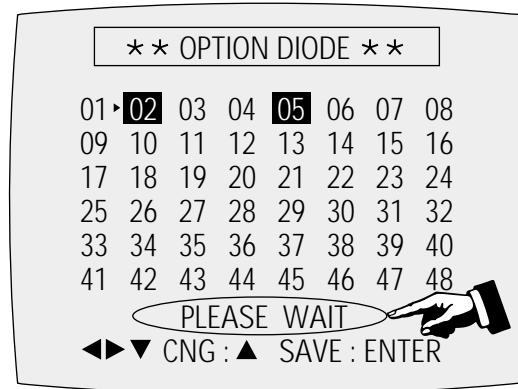


Fig. 4-5

&lt;Table 4-1 NVRAM Option Table&gt;

MODEL	OPTION NUMBER
DVD-V5000	2, 4, 10, 11, 17, 19, 23, 26, 27, 29, 30, 31