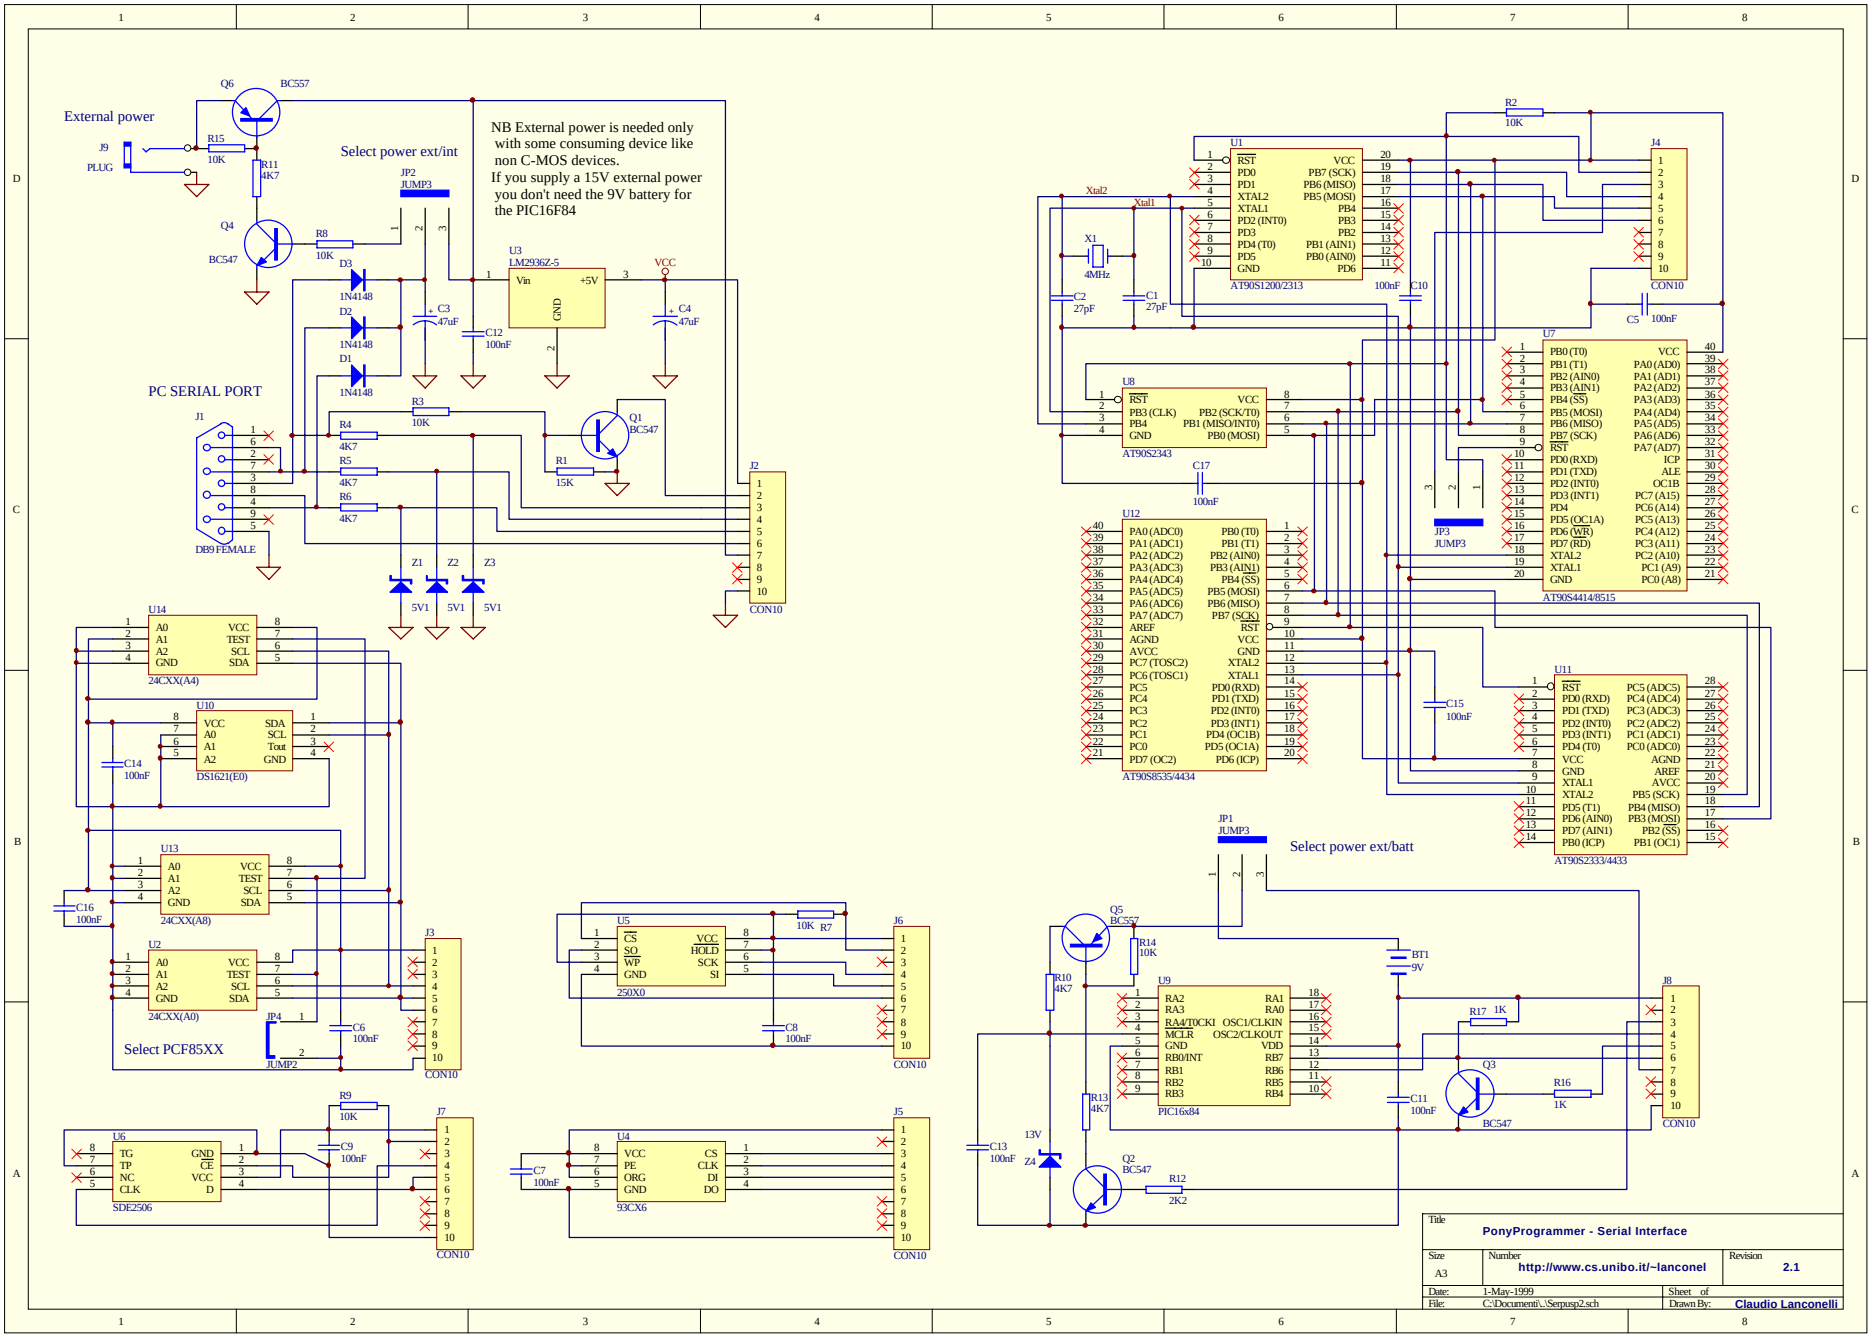
External power
Select power ext/int
NB External power is needed only with some consuming device like non C-MOS devices.
If you supply a 15V external power you don't need the 9V battery for the PIC16F84
PC SERIAL PORT
Select PCF85XX
Select power ext/batt
PonyProgrammer - Serial Interface
http://www.cs.unibo.it/~lanconel
2.1
1-May-1999
C:\Documenti\..\Serpusp2.sch
Claudio Lanconelli