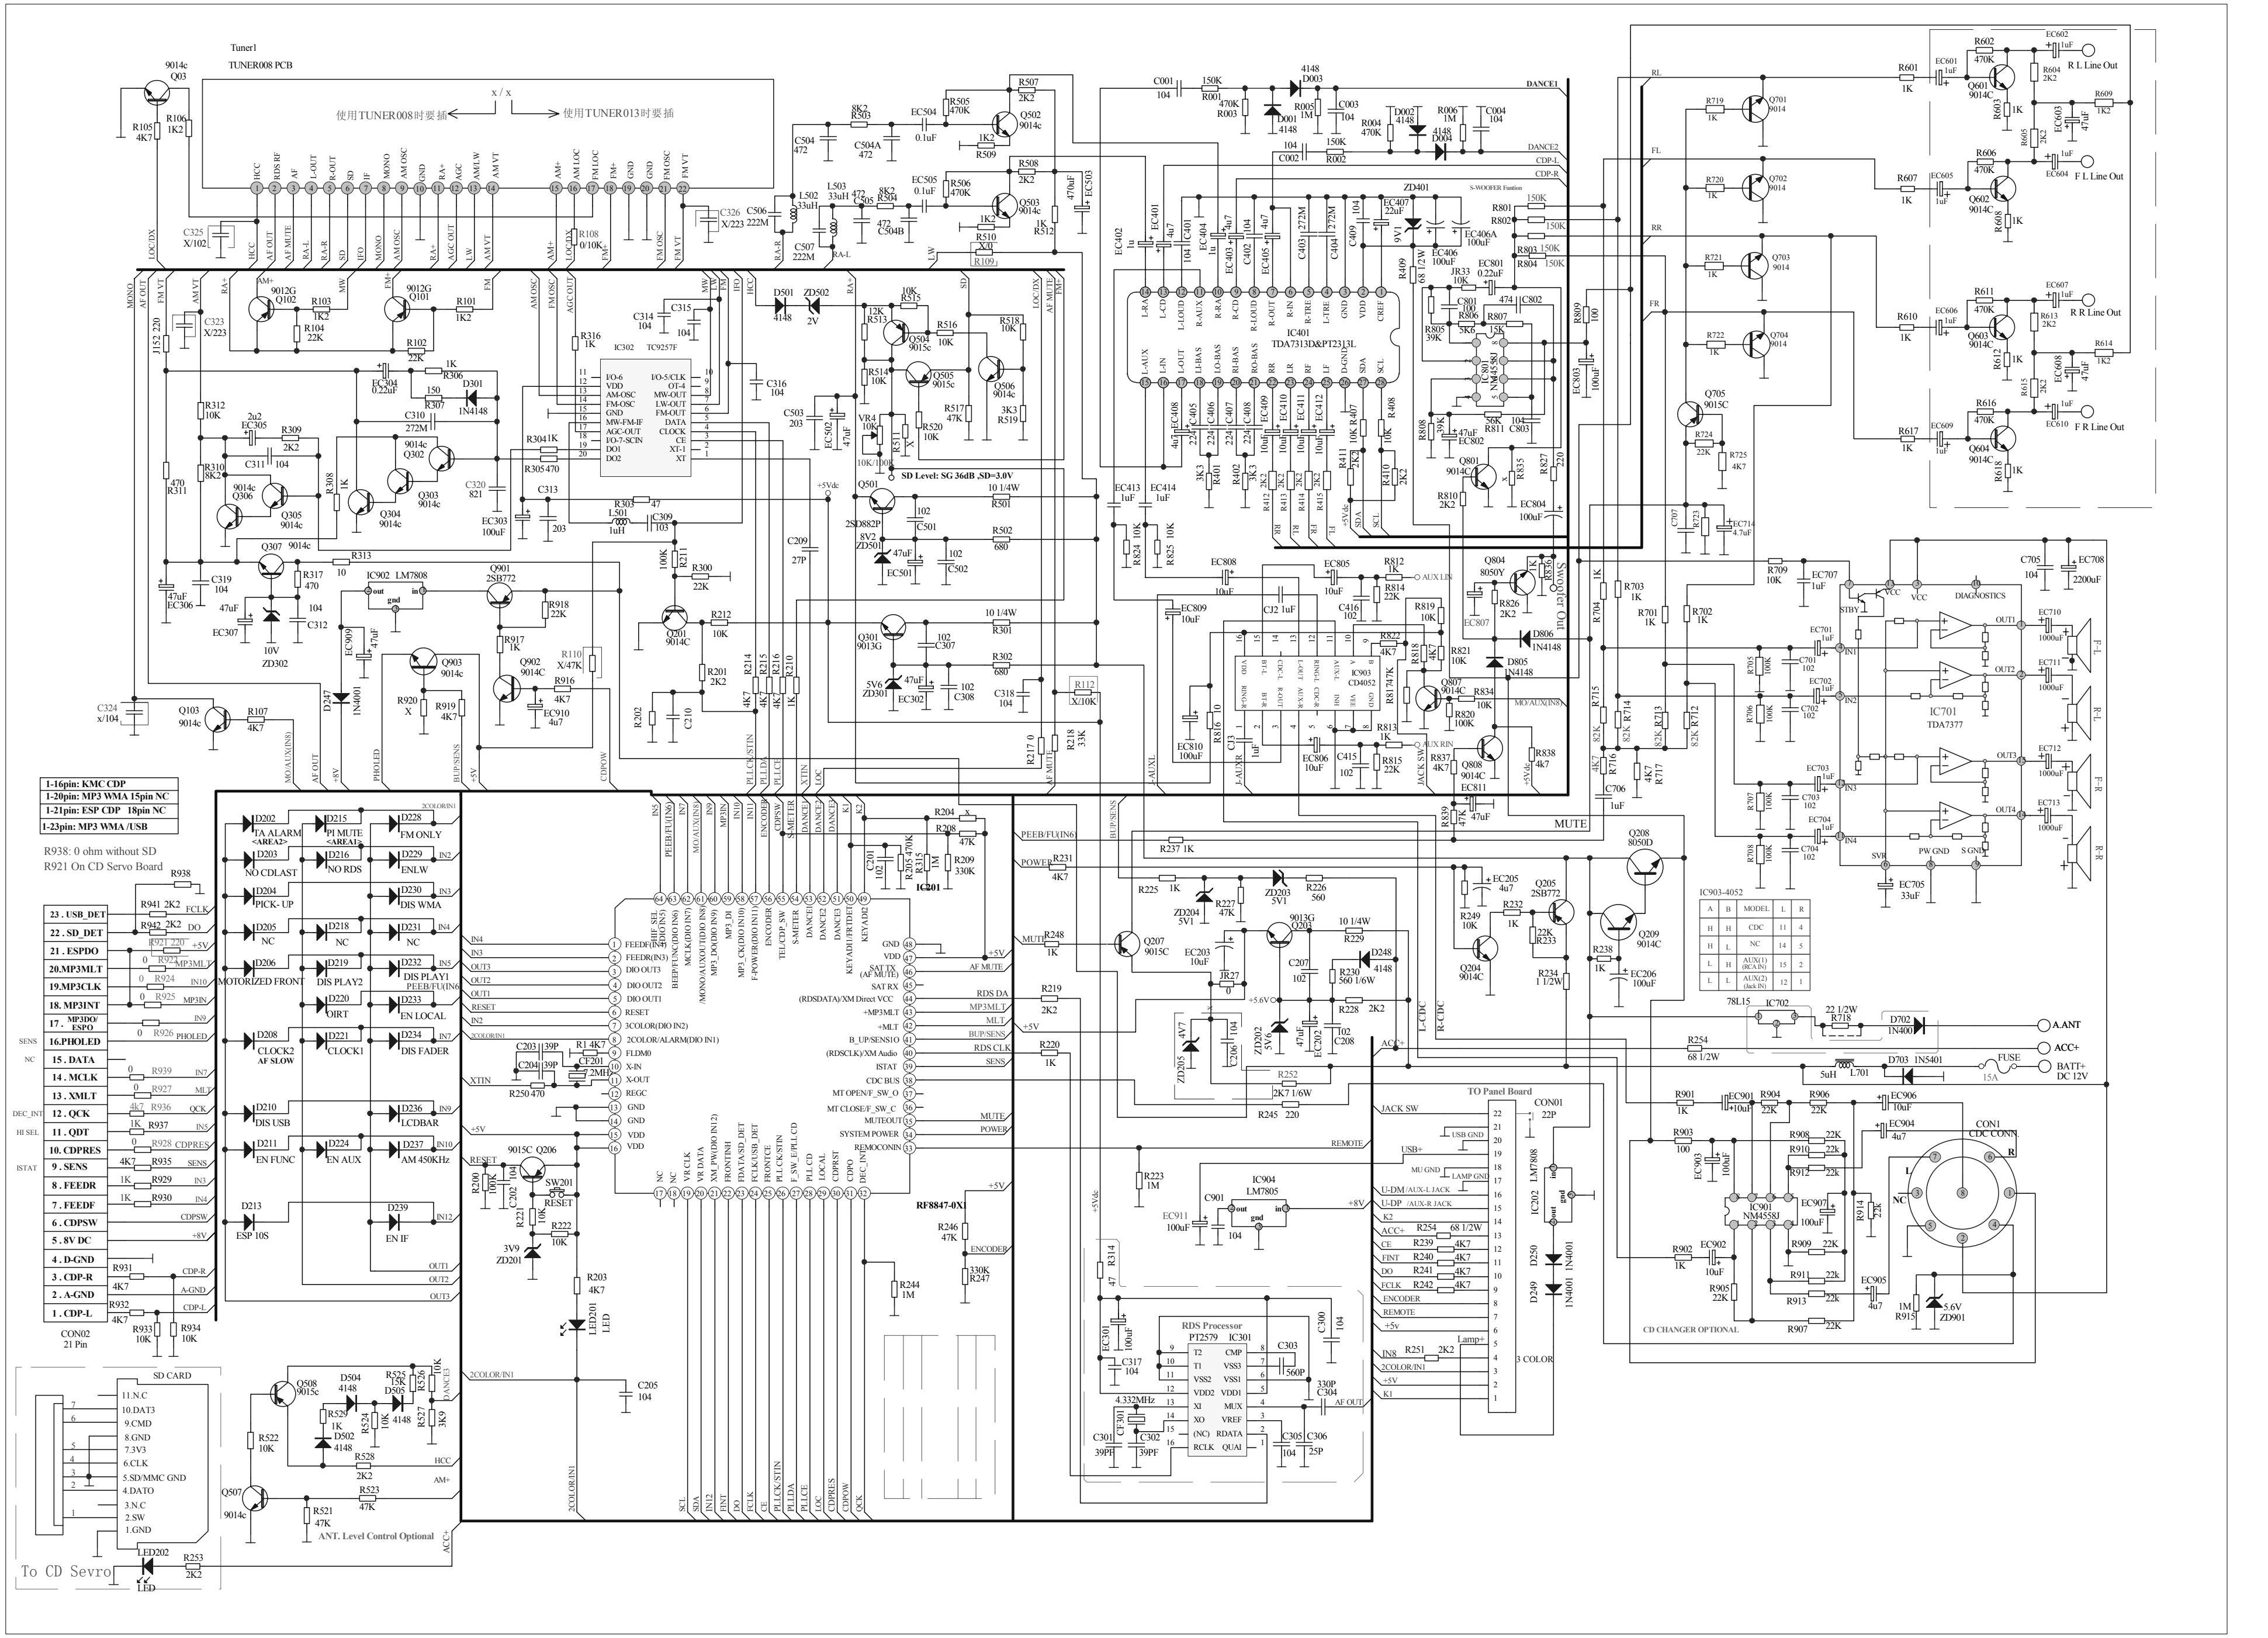

Tuner1
TUNER008 PCB
使用TUNER008时要插
使用TUNER013时要插
IC302 TC9257F
IC401 TDA7313D&PT2313L
IC903 CD4052
IC701 TDA7377
IC201
RF8847-0X1
1-16pin: KMC CDP
1-20pin: MP3 WMA 15pin NC
1-21pin: ESP CDP 18pin NC
1-23pin: MP3 WMA /USB
R938: 0 ohm without SD
R921 On CD Servo Board
CON02
21 Pin
SD CARD
To CD Sevro
ANT. Level Control Optional
SD Level: SG 36dB ,SD=3.0V
MUTE
TO Panel Board
CON01
RDS Processor
PT2579 IC301
IC904 LM7805
IC702 78L15
CD CHANGER OPTIONAL
CON1 CDC CONN
R L Line Out
F L Line Out
R R Line Out
F R Line Out
A.ANT
ACC+
BATT+
DC 12V
FUSE
15A