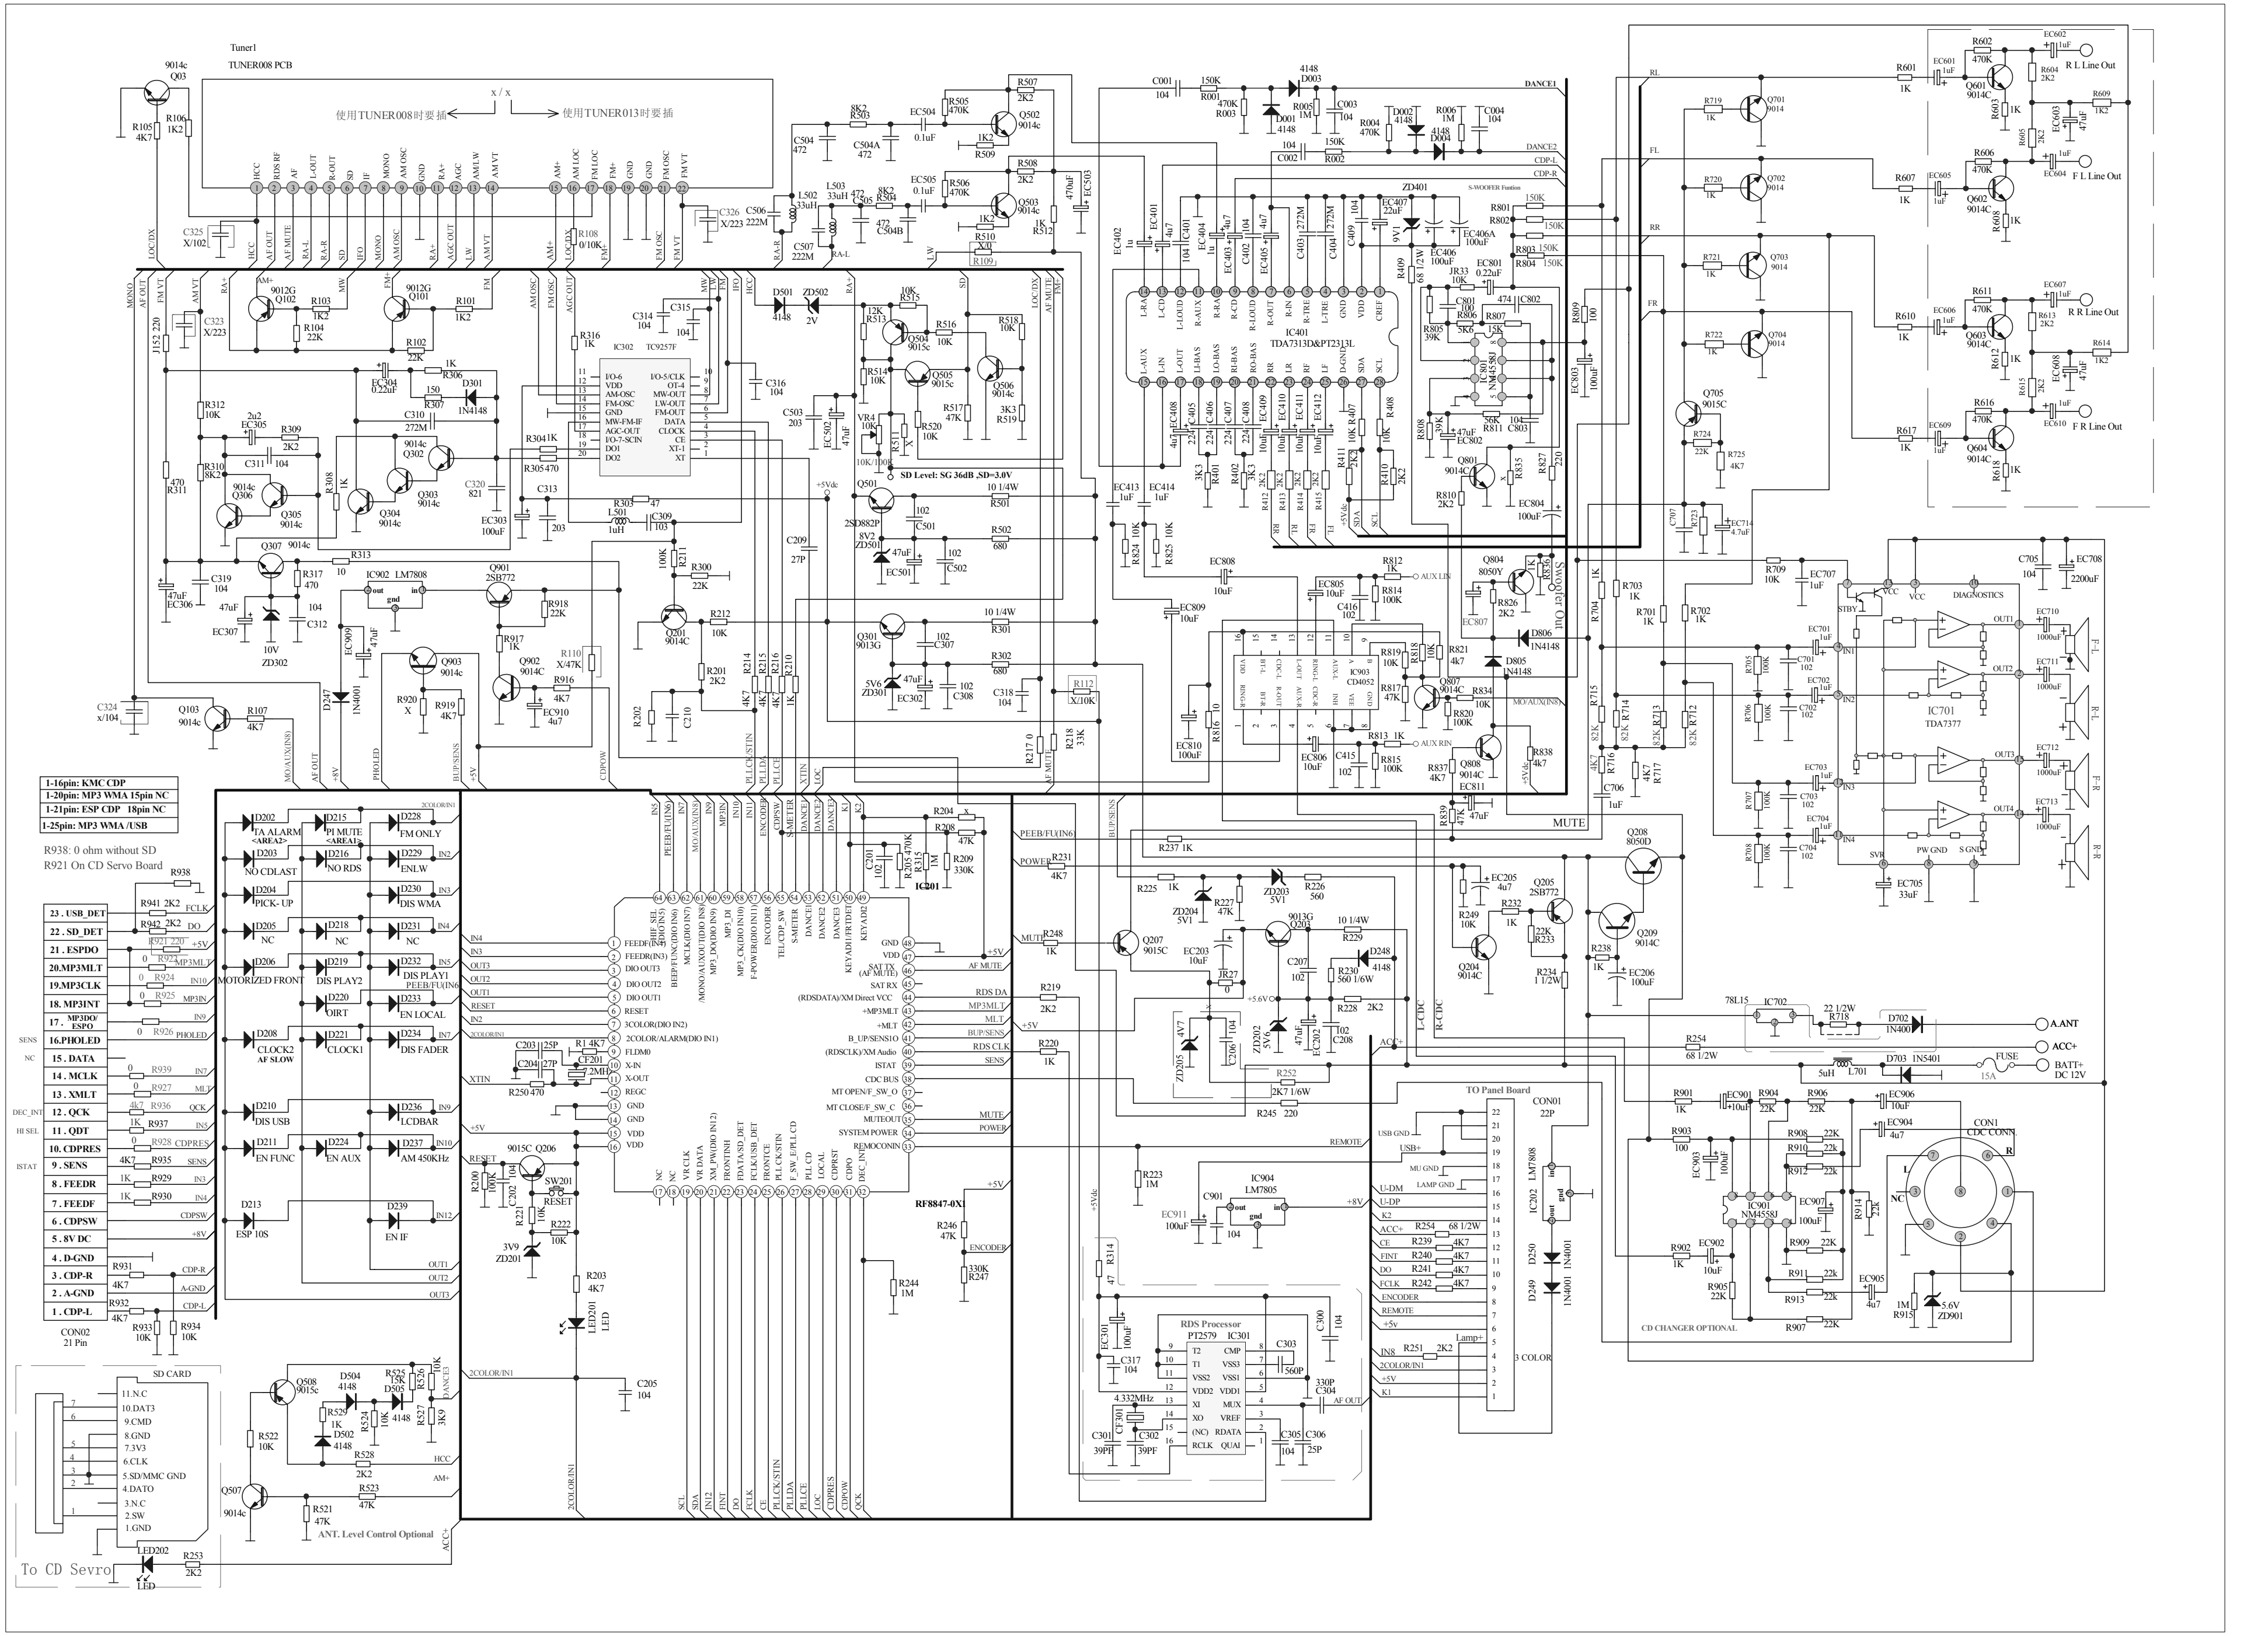

Tuner1
TUNER008 PCB
使用TUNER008时要插
使用TUNER013时要插
IC302 TC9257F
IC401 TDA7313D&PT2313L
IC903 CD4052
IC701 TDA7377
IC201
RF8847-0X1
IC904 LM7805
IC902 LM7808
IC301 PT2579
RDS Processor
IC901 NM4558
SD Level: SG 36dB ,SD=3.0V
S-WOOFER Fuction
R L Line Out
F L Line Out
R R Line Out
F R Line Out
MUTE
AUX LIN
AUX RIN
1-16pin: KMC CDP
1-20pin: MP3 WMA 15pin NC
1-21pin: ESP CDP 18pin NC
1-25pin: MP3 WMA /USB
R938: 0 ohm without SD
R921 On CD Servo Board
CON02
21 Pin
SD CARD
To CD Sevro
ANT. Level Control Optional
TO Panel Board
CON01
22P
CD CHANGER OPTIONAL
CON1
CDC CONN
A.ANT
ACC+
BATT+
DC 12V
FUSE
15A
3 COLOR