


# DosFlash Utility SOP

version 1.2

1. Copy all folders to USB Disk.

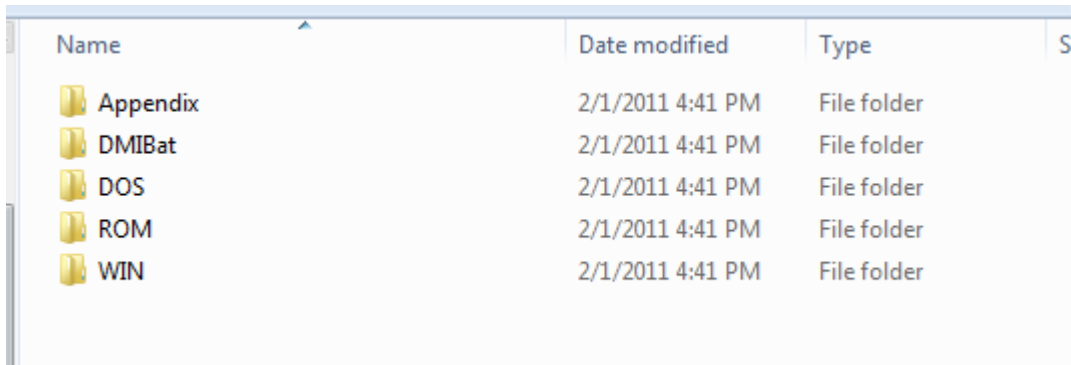

Name	Date modified	Type	S
Appendix	2/1/2011 4:41 PM	File folder	
DMIBat	2/1/2011 4:41 PM	File folder	
DOS	2/1/2011 4:41 PM	File folder	
ROM	2/1/2011 4:41 PM	File folder	
WIN	2/1/2011 4:41 PM	File folder	

2. Enter DOS mode



```
A:\>_
```

3. Please key in “cd DOS” to enter “DOS” folder.



```
A:\>cd DOS
A:\DOS>_
```

4. Please key in “Flash.bat” to execute flash procedure.



```
A:\>cd DOS
A:\DOS>FLASH.bat _
```

5. Process to flash BIOS

```
C:\>cd DOS
C:\DOS>FLASH.bat
+-----+
|               AMI Firmware Update Utility  v4.33               |
|   Copyright (C)2009 American Megatrends Inc. All Rights Reserved.   |
+-----+
- Boothlock checksum .... ok
- Module checksums ..... ok
- Erasing flash ..... done
- Writing flash ..... done
- Verifying flash ..... done
- Erasing NVRAM ..... done
- Writing NVRAM ..... done
- Verifying NVRAM ..... done
- ROM file Optimal CMOS defaults were loaded.
- Program ended normally.
```

6. Please restart your system after flashing BIOS completely
7. When you see the LOGO or hear one short beep, please press “Delete” to enter BIOS Setup Menu
8. Select “Load Default Setting” and press “Enter”
9. Select “OK” to load default setting



10. Select “Save & Exit Setup” and press “Enter”
11. Select “OK” to Restart

