

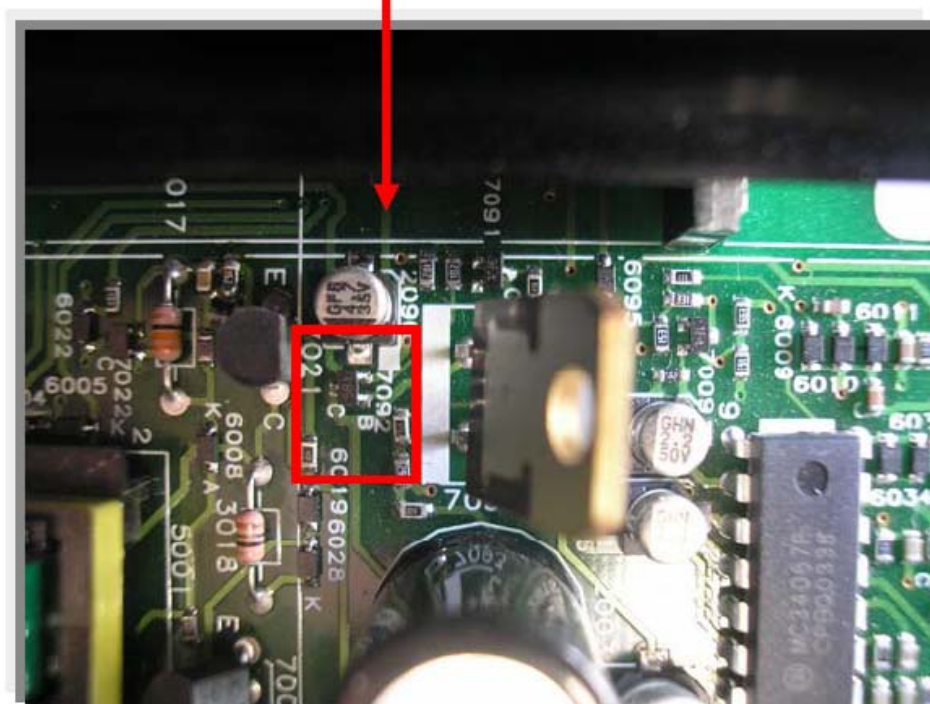


1. REPLACE T7092

SCC\_59761

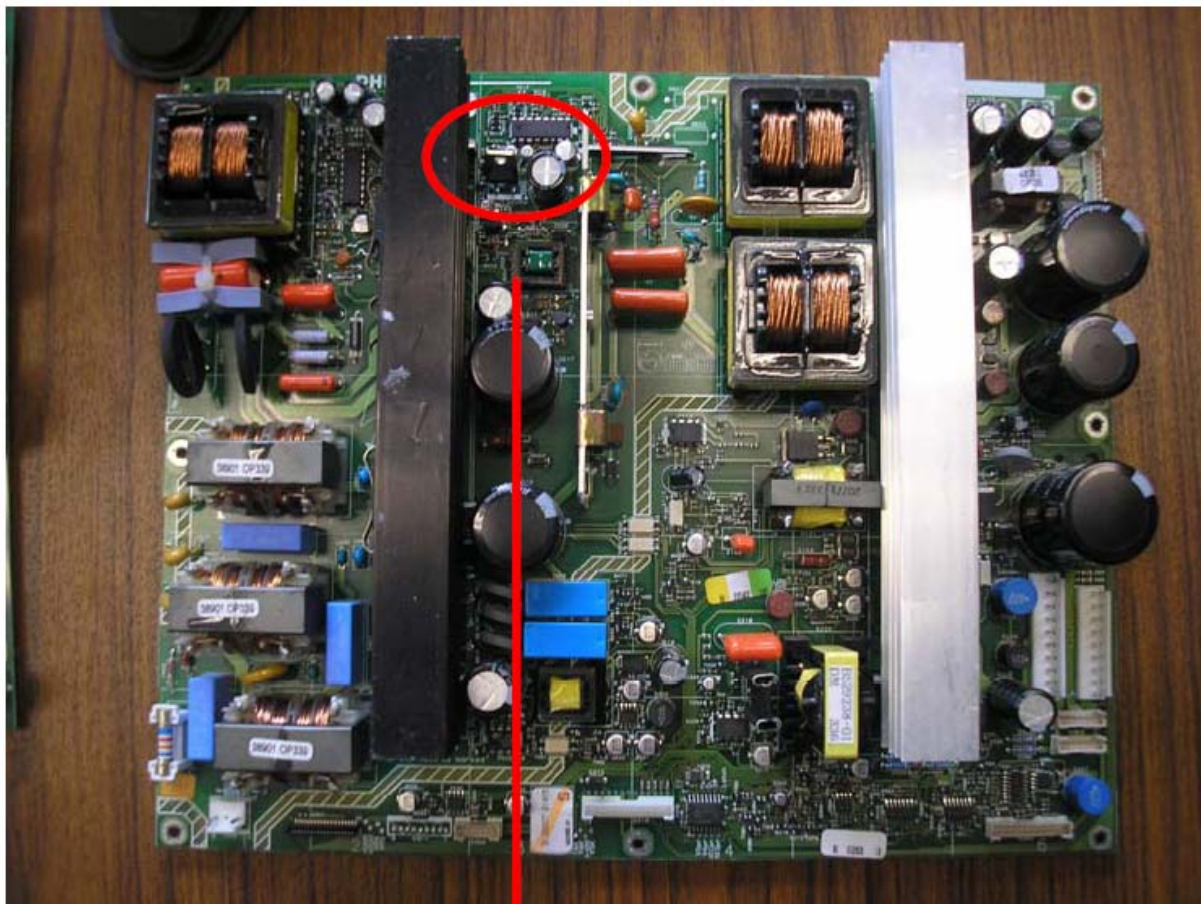

## **2. SCRATCH A TRACK ON BOTTOM OF THE FHP SUPPLY**

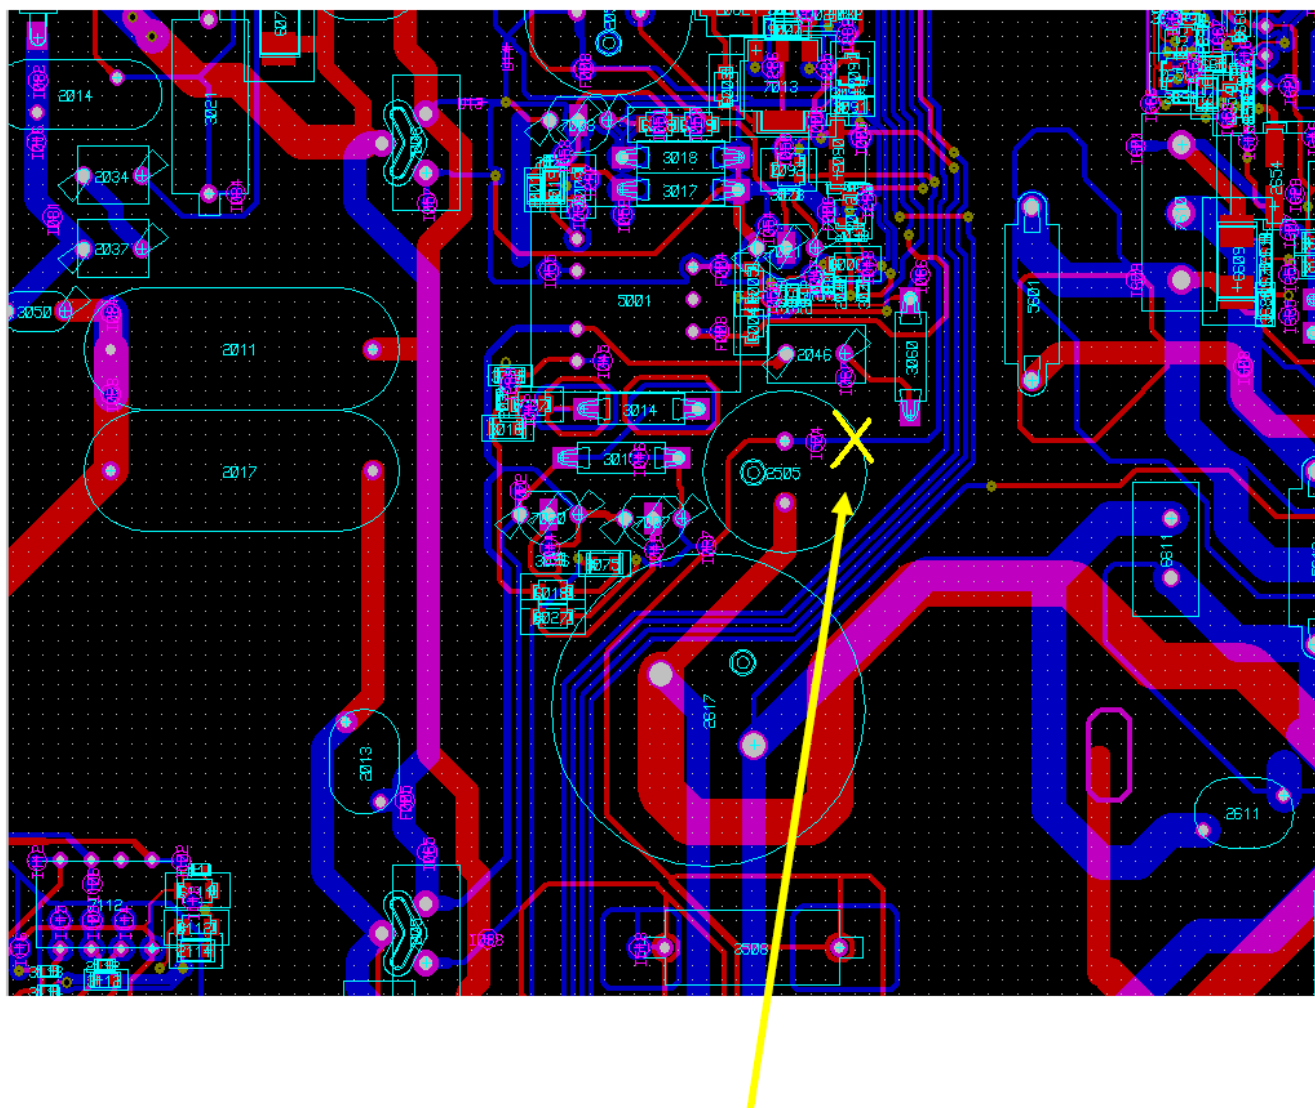

Cut the track  
near to  
component C2505



**3. ADD 10R WITH WIRE ON TOP OF THE FHP SUPPLY**

