HISTORY

Model Name : KDL-40/46/55X4500
SERVICE MANUAL

Click on Page Number to display detail of changes.

Date	Part Number	Description of Revisions	Version
2008.09	9-883-412-01	Original Manual.	1.0
2008.09	9-883-412-02	Add inverter board part number for 40 inches. (P.79)	2.0

Self Diagnosis Supported model

SERVICE MANUAL

EG1H CHASSIS

MODEL	DEST
KDL-40X4500	AEP/UK
KDL-46X4500	AEP/UK
KDL-55X4500	AEP/UK

RM-ED012

FLAT PANEL COLOR TV

SONY®

TABLE OF CONTENTS

Section	Title	Page
1.	**GENERAL**	3
	Caution	3
	Specifications	5
	Connectors	6
	Self Diagnosis	7
2.	**DISASSEMBLY**	
2-1.	Rear Cover Removal	9
2-2.	Stand Removal	9
2-3.	Speaker Box Removal	9
2-4.	Woofer Box Removal	9
2-5.	CB1 Board Removal(46/55 inches)	10
2-6.	D4 Board Removal (40 inches)	10
2-7.	FBA Board Removal	10
2-8.	G6 Board Board Removal	10
2-9.	G7 Board Removal(55 inches)	11
2-10.	GL Board Removal(46/55 inches)	11
2-11.	H1VM Board Removal	11
2-12.	H3VM Board Removal	11
2-13.	H4 Board Removal	12
2-14.	K2 Board Removal	12
2-15.	AE Board Removal	12
2-16.	Sensor Module Removal	12
3.	**SERVICE MENUS**	
3-1.	How to enter the Service Mode	13
3-2.	Changing TVM Data Settings	13
3-3.	Writing TVM Data	13
3-4.	Entering BEM Service Menu	13
3-5.	Changing BEM Data Settings	13
3-6.	Writing BEM Data	13
3-7.	Trouble Shooting	14
3-7-1.	No Power	14
3-7-2.	Set Reboots	14
3-7-3.	Power Error	14
3-7-4.	T-Con Error	14
3-7-5.	Back Light Error	14
3-7-6.	Temperature Error	14
3-7-7.	Audio Error	14
3-7-8.	Fan Error	14
3-7-9.	Balancer Error	14
3-8.	CB1 Board Replacement (46/55 inches)	14
3-8-1.	Copying data from Panel to CB1 Board	14
4.	**DIAGRAMS**	
4-1.	Block Diagram	20
4-2.	Circuit Board Location	21
4-3.	Schematic Diagrams and Printed Wiring Boards	21
	AE Board Schematic Diagram	22
	CB1 Board Schematic Diagram(46/55 inches)	31
	D4 Board Schematic Diagram(40 inches)	38
	FBA Board Schematic Diagram	39
	G6 Board Schematic Diagram	60
	G7 Board Schematic Diagram (55 inches)	62
	GL Board Schematic Diagram(46/55 inches)	63
	H1VM Board Schematic Diagram	65
	H3VM Board Schematic Diagram	65
	H4 Board Schematic Diagram	65
	K2 Board Schematic Diagram	66
	AE Printed Wiring Board	67
	CB1 Printed Wiring Board(46/55 inches)	69
	D4 Printed Wiring Board (40 inches)	70
	FBA Printed Wiring Board	71
	G6 Printed Wiring Board	73
	G7 Printed Wiring Board(55 inches)	75
	GL Printed Wiring Board(46/55 inches)	76
	H1VM Printed Wiring Board	78
	H3VM Printed Wiring Board	78
	H4 Printed Wiring Board	78
	K2 Printed Wiring Board	78
5.	**EXPLODED VIEWS**	
5-1.	Chassis	79
5-2.	Stand Assy & Speakers	80
5-3.	Bezel	81
5-4.	Rear Cover & Power Supply Cords	82
6.	**ELECTRICAL PARTS LIST**	83

WARNING !!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE WORK TO AVOID POSSIBLE SHOCK HAZARD DUE TO LIVE CHASSIS, THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE POWER LINE.

SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY SHADING AND MARKED ⚠ ON THE EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL FOR SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 GENERAL

CAUTION

Lead Free Soldered Boards

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation e.g. H1 etc [see example]. The servicing of these boards requires special precautions to be taken as outlined below.

example

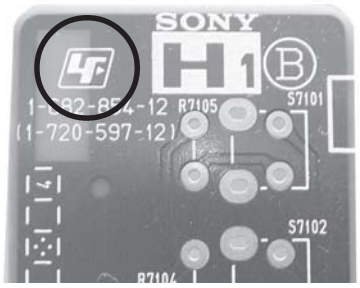

Lead Free Solder material must be used to comply with environmental requirements of new solder joints. Lead Free Solder is available under the following part numbers :

Partnumber	Diameter	Remarks
7-640-005-19	0.3mm	0.25Kg
7-640-005-20	0.4mm	0.50Kg
7-640-005-21	0.5mm	0.50Kg
7-640-005-22	0.6mm	0.25Kg
7-640-005-23	0.8mm	1.00Kg
7-640-005-24	1.0mm	1.00Kg
7-640-005-25	1.2mm	1.00Kg
7-640-005-26	1.6mm	1.00Kg

Due to the higher melting point of Lead Free Solder the soldering iron tip temperature needs to be set to 370 degrees centigrade. This requires soldering equipment capable of accurate temperature control coupled with a good heat recovery characteristics.

For more information on the use of Lead Free Solder, please refer to *http://www.sony-training.com*

UK PLUG WARNING

WARNING (UK Models only)

The flexible mains lead is supplied connected to a **B.S. 1363** fused plug having a fuse of the correct rating for the set. Should the fuse need to be replaced, use a fuse of the same rating approved by ASTA to **BS 1362**, ie one that carries the ASTA mark.

IF THE PLUG SUPPLIED WITH THIS APPLIANCE IS NOT SUITABLE FOR THE OUTLET SOCKETS IN YOUR HOME, IT SHOULD BE CUT OFF AND AN APPROPRIATE PLUG FITTED. THE PLUG SEVERED FROM THE MAINS LEAD MUST BE DESTROYED AS A PLUG WITH BARED WIRES IS DANGEROUS IF ENGAGED IN A LIVE SOCKET.

When an alternative type of plug is used, it should be fitted with the correct rating fuse, otherwise the circuit should be protected by the same rating fuse at the distribution board.

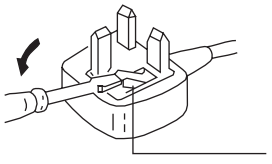

How to replace the fuse.
Open the fuse compartment with a screwdriver blade and replace the fuse.

Attachment of HIROSE MDF 61 connector

1. Insertion

(1) Hold the center of a connector → (2) Press the center of the connector to insert it → (3) Slide the slider to lock the connector

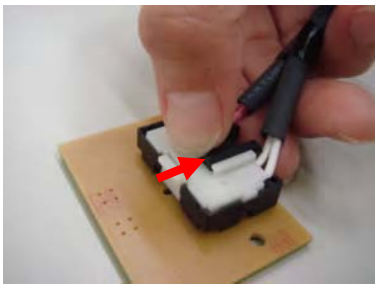

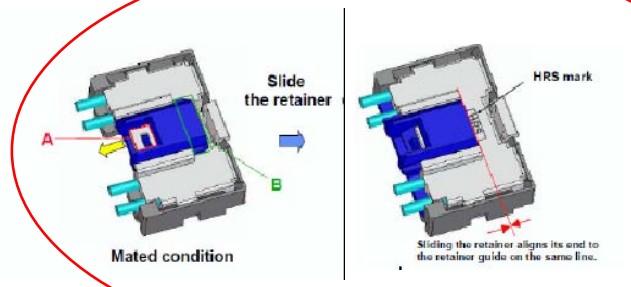

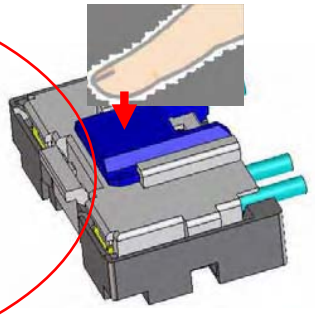
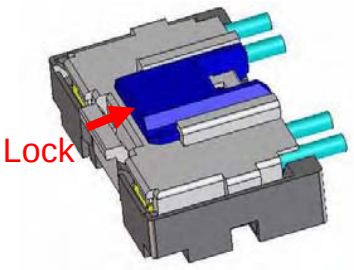

Detachment of HIROSE MDF61 connector

2. Detachment

(1) Slide the slider to release the slider lock → (2) Press the center lock tab to release the lock and pull the connector up →

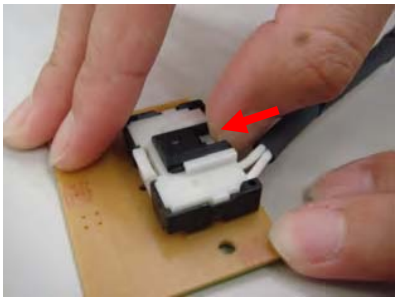
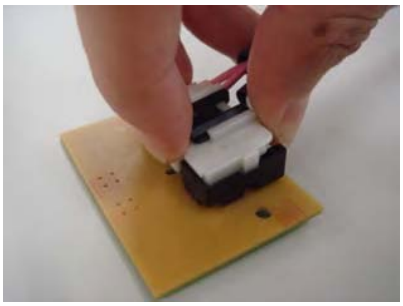
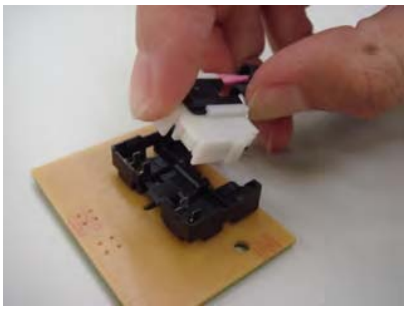

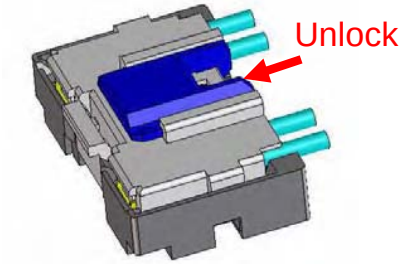

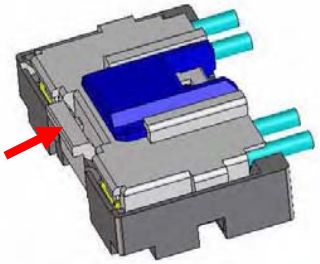
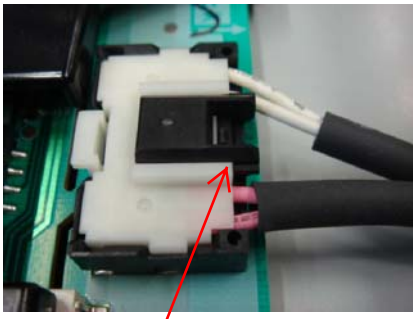

SPECIFICATIONS

Television System	Channel Coverage	Colour/Video System
Analogue: Depending on your country/region B/G/H, D/K, L, I Digital: Depending on model DVB-T/DVB-C	Analogue: VHF : E2-E12 UHF : E21-E69 CATV : S1-S20 HYPER : S21-S41 D/K: R1-R12, R21-R69 L: F2-F10, B-Q, F21-F69 I: UHF B21-B69 Digital: VHF/UHF	Analogue: PAL, PAL 60(VIDEO IN), SECAM NTSC 3.58, NTSC4.43(VIDEO IN) Digital: MPEG-2 MP@ML/HL, H.264/MPEG-4 AVC MP/HP@L4.0

Input/Output Terminals [REAR]		**General Specifications**	
1: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of TV Video and Audio signals.	Power Requirements	220 - 240V
		Power Consumption/ Standby	(40 inches): Approx 210W/0.2W (Home/Standard mode) Approx 230W/0.2W (Shop/Vivid mode) (46 inches): Approx 270W/0.5W (Home/Standard mode) Approx 350W/0.5W (Shop/Vivid mode) (55 inches): Approx 370W/0.6W (Home/Standard mode) Approx 480W/0.6W (Shop/Vivid mode)
2: 21-pin Euro connector (CENELEC standard)	Inputs for Audio and Video signals. Inputs for RGB. Outputs of Video and Audio signals (Selectable). SmartLink interface.	Dimensions	(40 inches): Approx 1128x655x279mm (With stand) Approx 1128x603x125mm (Without stand) (46 inches): Approx 1259x737x315mm (With stand) Approx 1259x685x144mm (Without stand) (55 inches): Approx 1486x855x356mm (With stand) Approx 1486x803x147mm (Without stand)
		Weight	Approx 27.0kg (40 inches with stand) Approx 23.5kg (40 inches without stand) Approx 38.0kg (46 inches with stand) Approx 33.0kg (46 inches without stand) Approx 54.0kg (55 inches with stand) Approx 47.5kg (55 inches without stand)
Component In	Supported formats: 1080p, 1080i, 720p, 576p, 576i, 480p, 480i Y: 1 Vp-p, 75 ohms, 0.3 negative sync PB/CB: 0.7 Vp-p, 75 ohms PR/CR: 0.7 Vp-p, 75 ohms Audio input: Phono jacks	Other Features	High Picture & Sound Quality, Bravia Sync, Full HD with 10bit panel, XMB, Live Colour Creation, 2CH speaker system, Illuminated logo, USB Input, 4 HDMI inputs, PC input, S-Force, Digital Media Port, Picture Frame Mode, 24P True Cinema, PAP, PIP Freeze, Photo Map, Swivel.
HDMI Inputs	Video: 1080/24p, 1080p, 1080i, 720p, 576p, 576i, 480p, 480i Audio: Two channel linear PCM 32, 44.1 and 48kHz, 16, 20 and 24 bits Analogue audio: Minijack (HDMI IN 1 only)		
PC Input	Video:15 Pin D Sub Connector Audio: Minijack	**Sound Output**	
DMPORT	Digital Media Port	Right and Left speaker	2 x 10W, 2 x 12W(Woofer)
Digital Audio Out	Digital Optical Jack		
LAN	10BASE-T/100BASE-TX connector		
CAM	Conditional Access Module Slot		
Input/Output Terminals [SIDE]		**Remote control system : Infrared control**	
Headphone jack	Stereo mini jack	Power requirements	3V dc 2 batteries IEC designation R06 (size AA)
Audio input	Phono jacks		
Video input	Phono jack		
S Video input	4-pin mini DIN		
USB input	USB port		
HDMI input	HDMI Connector		

Design and specifications are subject to change without notice.

CONNECTORS

21 Pin Connector (SCART)

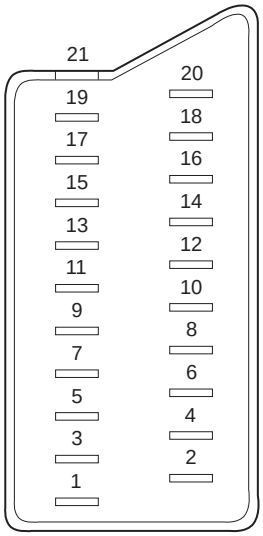

Pin No	1	2	Signal	Signal level
1	○	○	Audio output B (right)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
2	○	○	Audio input B (right)	Standard level : 0.5V rms Output impedence : More than 10kohm*
3	○	○	Audio output A (left)	Standard level : 0.5V rms Output impedence : Less than 1kohm*
4	○	○	Ground (audio)	
5	○	○	Ground (blue)	
6	○	○	Audio input A (left)	Standard level : 0.5V rms Output impedence : More than 10kohm*
7	○	○	Blue input	0.7 +/- 3dB, 75 ohms positive
8	○	○	Function select (AV control)	High state (9.5-12V) : Part mode Low state (0-2V) : TV mode Input impedence : More than 10K ohms Input capacitance : Less than 2nF
9	○	○	Ground (green)	
10	●	○	AVlink	
11	○	○	Green	Green signal : 0.7 +/- 3dB, 75 ohms, positive
12	●	●	Open	
13	○	○	Ground (red)	
14	○	○	Ground (blanking)	
15	○	○	Red input	0.7 +/- 3dB, 75 ohms, positive
	-	-	(S signal Chroma input)	0.3 +/- 3dB, 75 ohms, positive
16	○	○	Blanking input (Ys signal)	High state (1-3V) Low state (0-0.4V) Input impedence : 75 ohms
17	○	○	Ground (video output)	
18	○	○	Ground (video input)	
19	○	○	Video output	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
20	○	○	Video input	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
	-	-	Video input Y (S signal)	1V +/- 3dB, 75ohms, positive sync 0.3V (-3+10dB)
21	○	○	Common ground (plug, shield)	

○ Connected ● Not Connected (open) * at 20Hz - 20kHz

HDMI Connector

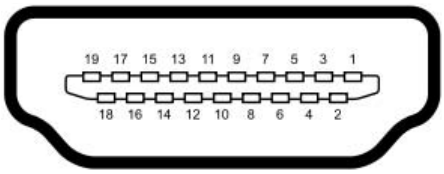

Pin No	Signal Assignment	Pin No	Signal Assignment
1	TMDS Data2+	11	TMDS Clock Shield
2	TMDS Data2 Shield	12	TMDS Clock-
3	TMDS Data2-	13	CEC
4	TMDS Data1+	14	Reserved (N.C. on device)
5	TMDS Data1 Shield	15	SCL
6	TMDS Data1-	16	SDA
7	TMDS Data0+	17	DDC/CEC Ground
8	TMDS Data0 Shield	18	+5V Power
9	TMDS Data0-	19	Hot Plug Detect
10	TMDS Clock+		

15 Pin D Sub Connector (PC)

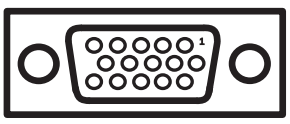

Pin No	Signal Assignment	Pin No	Signal Assignment
1	Red Out	9	+5V DC
2	Green Out	10	Sync Return (Ground)
3	Blue Out	11	Monitor ID0 in Display
4	Unused	12	DCC Serial Data
5	Ground	13	Horizontal Sync
6	Red Return	14	Vertical Sync
7	Green Return (Ground)	15	DCC Serial Clock
8	Blue Return (Ground)		

EG1H SELF DIAGNOSTIC SOFTWARE

The identification of errors within the EG1H chassis is triggered in one of two ways :- 1: Busy or 2: Device failure to respond to IIC. In the event of one of these situations arising the software will first try to release the bus if busy (Failure to do so will report with a continuous flashing LED) and then communicate with each device in turn to establish if a device is faulty. If a device is found to be faulty the relevant device number will be displayed through the LED (Series of flashes which must be counted).

LED Error Codes and Descriptions

Number of LED Flashes	Display	Error Description
02	POW ERR1	Power error (Watching 12v rail).
05	T_CON	T-CON error.
06	BACKLITE	[CCFL] Panel inverter error. [LED] GL board error.
07	PANEL TEMP	Panel temperature abnormal detection.
08	AUD_PROT	Audio abnormal detection.
09	FAN_ERR	Fan error
10	DTT ERR	EMMA WDT - Not detected (Reboot operation).
13	BALANCER	[CCFL] Panel balancer error. [LED-BL] SPI error(Babylon communication error).

DISPLAY OF STANDBY LIGHT FLASH COUNT

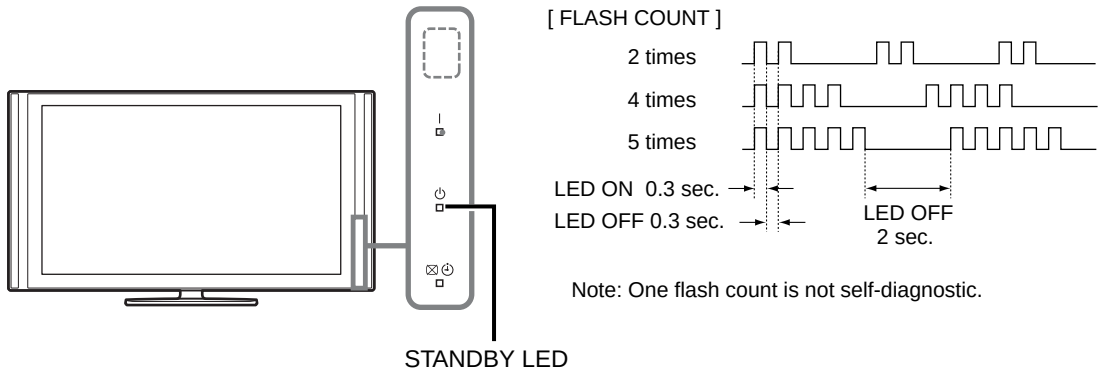

STOPPING THE STANDBY FLASH

Turn off the power switch on the TV main unit or unplug the power cord from the outlet to stop the STANDBY LED for flashing.

SELF-DIAGNOSTIC SCREEN DISPLAY

For errors with symptoms such as “power sometimes shuts off” or “screen sometimes goes out” that cannot be confirmed, it is possible to bring up past occurrences of failure for confirmation on the screen:

[To Bring Up Screen Test]

In standby mode, press buttons on the remote commander sequentially in rapid succession as shown below:

(Info/Text reveal) (Number button) * (Volume) (TV standby)

* : Note that this differs from entering the service mode (volume +)

[SELF-DIAGNOSTIC SCREEN DISPLAY]

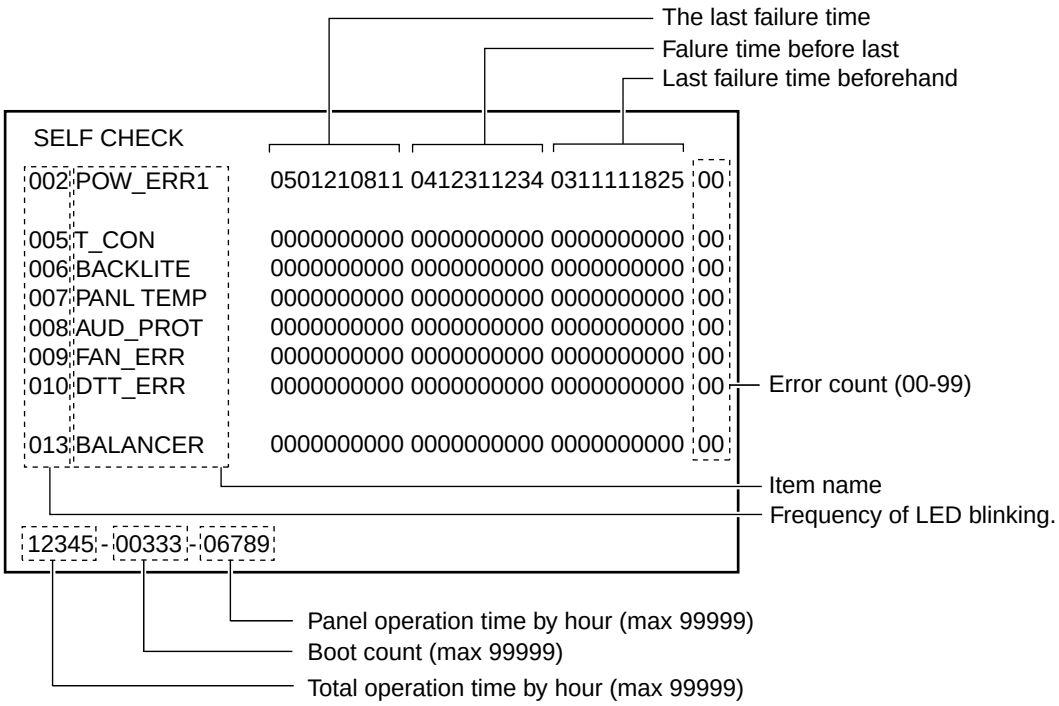

Since the diagnostic results displayed on the screen are not automatically cleared, always check the self-diagnostic screen
After you have completed the repairs, clear the result display to “0”.

Clearing the result display

To clear the result display to “0”, press button on the remote commander sequentially as shown below when the diagnostic screen is being displayed.

<Delection of Error Count and Error History>

Press “⑧” button ➡ Press “⓪” button

<Delection of Panel Operation Time>

Press “⑦” button ➡ Press “⓪” button

Quitting Self-diagnostic screen

To quit the entire self-diagnostic screen, turn off the power switch on the remote commander or the main unit.

SECTION 2 DISASSEMBLY

2-1. Rear Cover Removal

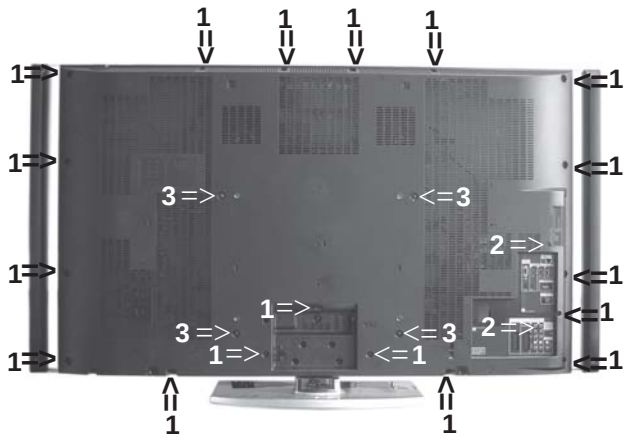

Remove the rear cover fixing screws indicated and pull the rear cover gently backwards away from the back of the TV set.

Screw Part number(s) and Description(s)

1) 2-580-640-01 SCREW, +BVTP2 4X16 (18 Screws)
2) 7-685-648-79 SCREW, +BVTP 3X12 TYPE2 IT-3 (2 Screws)
3) 2-580-608-01 SCREW, +PSW M5X16 (4 Screws)

2-2. Stand Removal

Remove the 4 stand fixing screws as indicated.

Screw Part number(s) and Description(s)

2-580-608-01 SCREW, +PSW M5X16 (4 Screws)

2-3. Speaker Box Removal

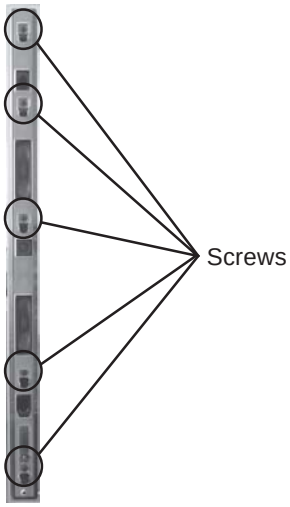

To remove the speaker box firstly remove the speaker grille by pushing the grille upwards, disconnect the speaker cable and then remove the 5 screws circled.

Screw Part number(s) and Description(s)

2-580-640-01 SCREW, +BVTP2 4X16 (5 Screws)

2-4. Woofer Box Removal

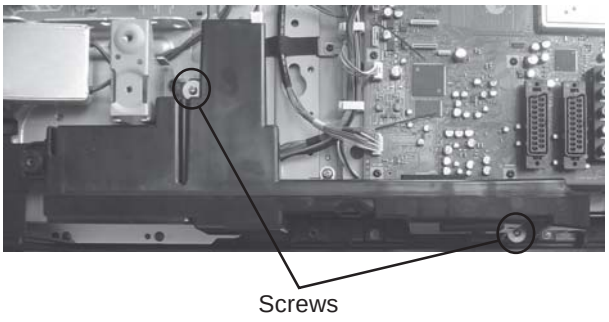

To remove the woofer box disconnect all connectors and then remove the 2 screws circled and ease the box gently away from the back of the TV set.

Screw Part number(s) and Description(s)

2-580-654-01 SCREW, +PWTP2 4X16 (2 Screws)

2-5. CB1 Board Removal

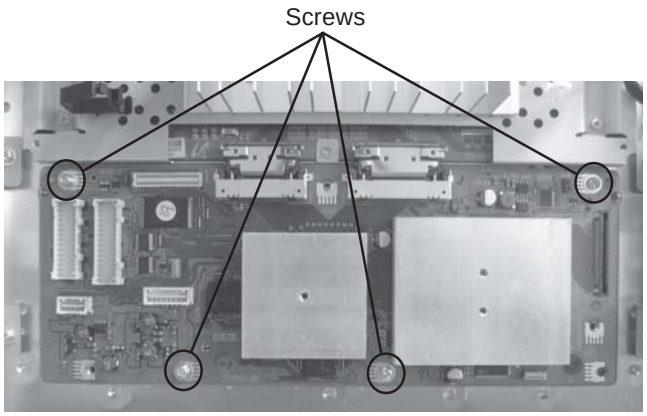

To remove the CB1 board disconnect all connectors and then remove the shield. Then remove the 4 screws circled and ease the board gently away from the back of the TV set.

Screw Part number(s) and Description(s)
7-682-948-01 SCREW, +PSW 3X8 (4 Screws)

2-6. D4 Board Removal (40 inches)

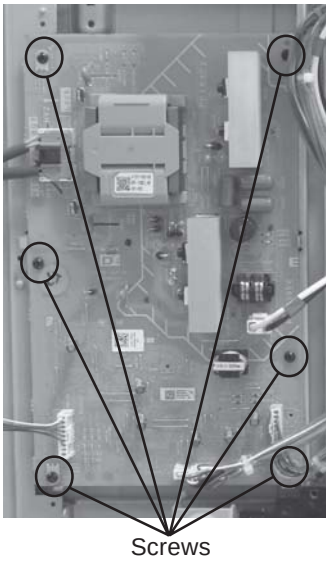

To remove the D4 board disconnect all connectors and then remove the 6 screws circled and ease the board gently away from the back of the TV set.

Note: Refer to page 4 - Hirose MDF61 connector.

Screw Part number(s) and Description(s)
2-674-965-51 SCREW, +PSW 3SG (6 Screws)

2-7. FBA Board Removal

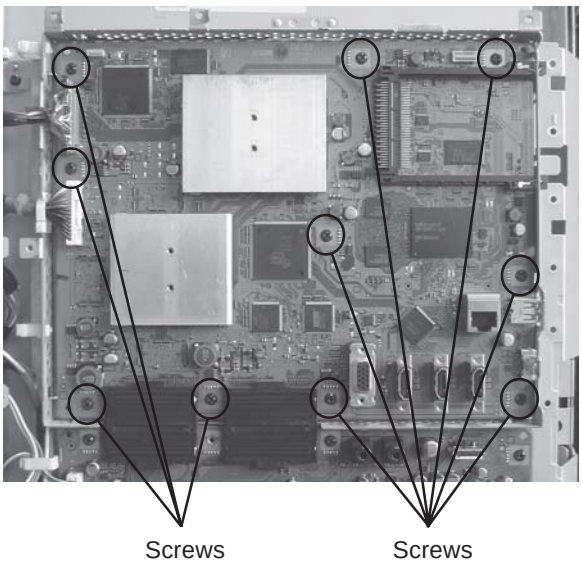

To remove the FBA board disconnect all connectors and then remove the 10 screws circled and ease the board gently away from the back of the TV set.

Screw Part number(s) and Description(s)
2-580-629-01 SCREW, +BVST 3X8 (10 Screws)

2-8. G6 Board Removal

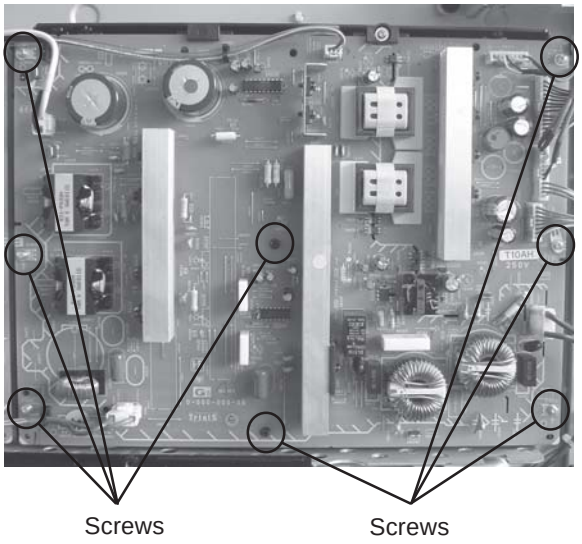

To remove the G6 board disconnect all connectors and then remove the 8 screws circled and ease the board gently away from the back of the TV set.

Screw Part number(s) and Description(s)
7-682-948-01 SCREW, +PSW 3X8 (8 Screws)

2-9. G7 Board Removal (55 inches)

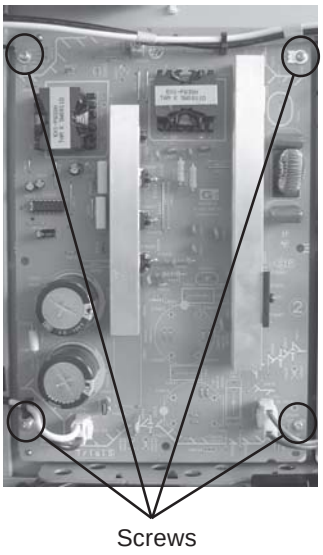

To remove the G7 board disconnect all connectors and then remove the 4 screws circled and ease the board gently away from the back of the TV set.

Screw Part number(s) and Description(s)
7-682-948-01 SCREW, +PSW 3X8 (4 Screws)

2-10. GL Board Removal (46 & 55 inches)

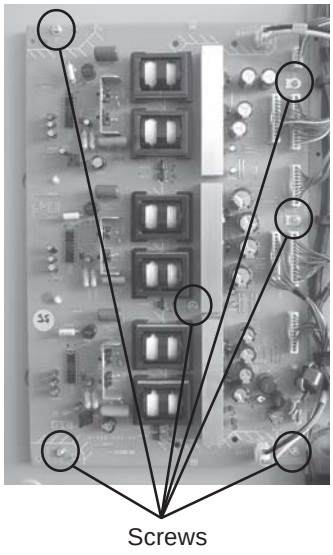

To remove the GL board disconnect all connectors and then remove the 6 screws circled and ease the board gently away from the back of the TV set.

Note: Refer to page 4 - Hirose MDF61 connector.

Screw Part number(s) and Description(s)
7-682-948-01 SCREW, +PSW 3X8 (6 Screws)

2-11. H1VM Board Removal

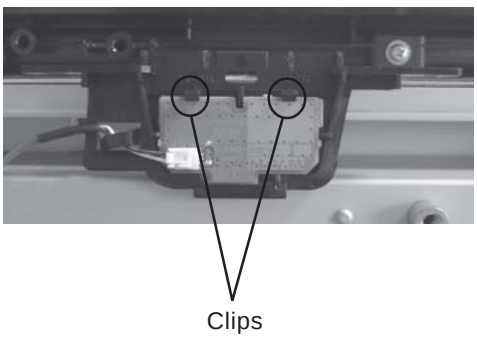

To remove the H1VM board firstly remove the power button assy away from the bezel assy, disconnect the connector and then release the 2 clips circled and ease the board gently of its housing.

2-12. H3VM Board Removal

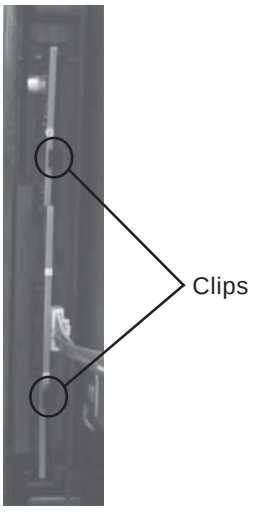

To remove the H3VM board disconnect the connector and then release the 2 clips circled and ease the board gently away from the back of the TV set.

2-13. H4 Board Removal

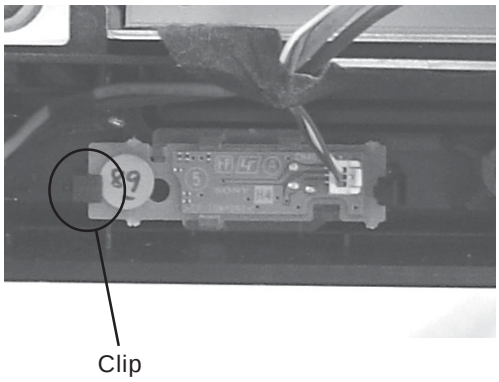

To remove the H4 board disconnect the connector and then release the clip circled and gently ease the board towards you and away from the back of the TV set.

2-14. K2 Board Removal

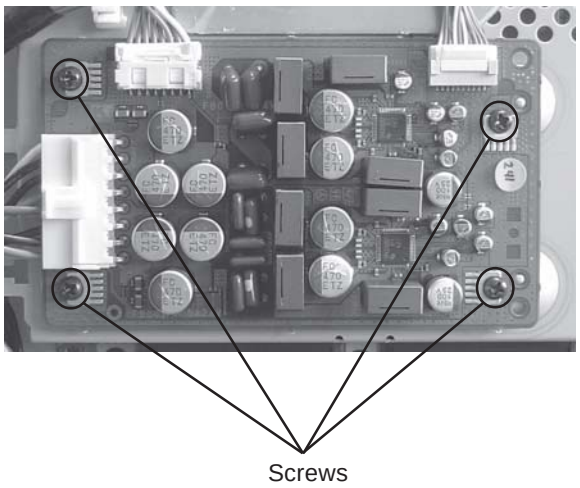

To remove the K2 board disconnect all connectors and then remove the 4 screws circled and ease the board gently away from the back of the TV set.

Screw Part number(s) and Description(s)
2-580-629-01 SCREW, +BVST 3X8 (4 Screws)

2-15. AE Board Removal

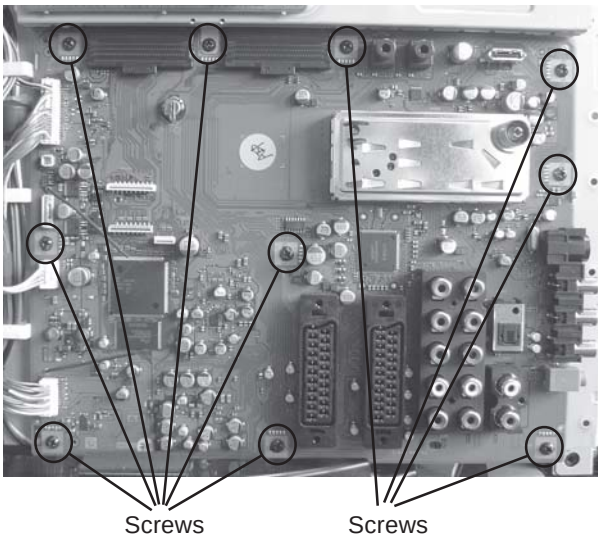

To remove the AE board disconnect all connectors and then remove the 10 screws circled and ease the board gently away from the back of the TV set.

Screw Part number(s) and Description(s)
2-580-629-01 SCREW, +BVST 3X8 (9 Screws)

2-16. Sensor Module Removal

Pic.1

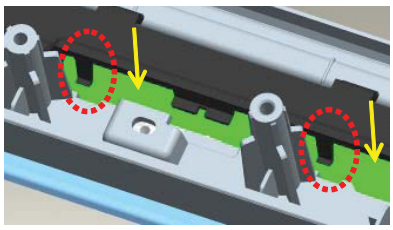

Pic.2

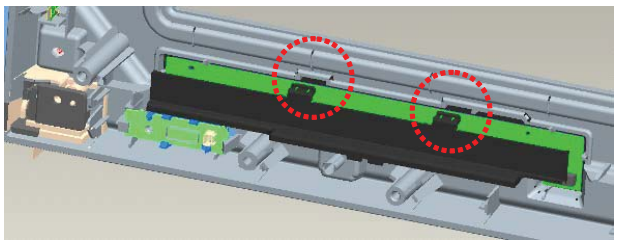

To remove the sensor module remove the connector. Then remove the 'holder, touch' by releasing the 2 clips circled in Pic.1and then releasing the 2 clips circled in Pic.2, you can then remove the the sensor module.

SECTION 3 SERVICE MENUS

3-1. How to enter Service Mode

Service adjustments to this model can be performed using the supplied remote Commander RM-ED012.

1. Turn on the power to the TV set and enter into the stand-by mode.
2. Press the following sequence of buttons on the Remote Commander.

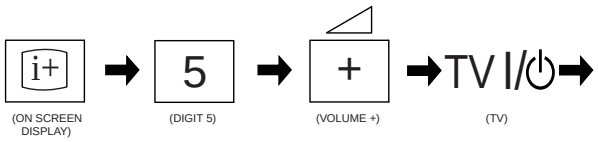

3. The TVM Service Menu appears on the screen (See Pic.1).

Pic.1

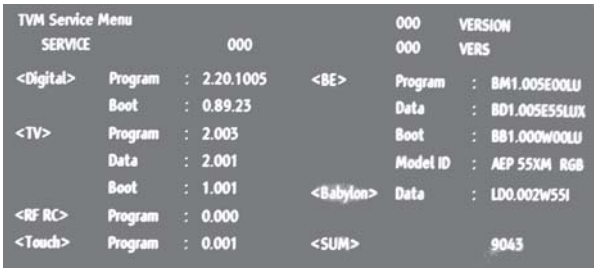

Note :

- After carrying out the service adjustments, to prevent the customer accessing the 'Service Menu' switch the TV set OFF and then ON.

3-2. Changing TVM Data Settings

1. Press "2 / 5" on the remote commander to select (up / down) category (See Pic.2).
2. Press "1 / 4" on the remote commander to select (up / down) item (See Pic.2).
3. Press "3 / 6" on the remote commander to select (up / down) data (See Pic.2).

Pic.2

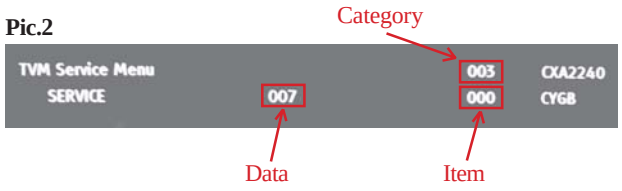

3-3. Writing TVM Data

1. Press "Mute" on the remote commander. The word "SERVICE" changes to "WRITE" (See Pic.3).
2. Press "0" on the remote commander.
3. After approximately 1 minute, "WRITE" changes to "SERVICE". This indicates writing is complete.

Pic.3

3-4. Entering BEM Service Menu

1. Press "Previous channel ⟲" on the remote commander and the BEM menu appears (See Pic.4)

Pic.4

3-5. Changing BEM Data Settings

1. Press "2 / 5" on the remote commander to select (up / down) category (See Pic.5).
2. Press "1 / 4" on the remote commander to select (up / down) item (See Pic.5).
3. Press "3 / 6" on the remote commander to select (up / down) data (See Pic.5).

Pic.5

3-6. Writing BEM Data

1. Press "Mute" on the remote commander. The word "SERVICE" in green changes to "WRITE" (See Pic.6).
2. Press "0" on the remote commander. The word "WRITE" in green changes to red. This indicates writing is in progress (See Pic.6).
3. When "WRITE" changes to green "SERVICE". This indicates writing is complete.

Pic.6

3-7. Trouble Shooting

3-7-1. No Power

When the TV Set has no power please see flowchart [A].

3-7-2. Set Reboots

When the TV Set tries to restart please check the following:-

1. FBA board.
   - CN2800 12v power and harness to G6.
   - F4100, F4101, F4102, F5400, F7800, F7801 for conduction .
2. If no problems are found with the power rail replace the FBA board.

3-7-3. Power Error

When the TV Set indicates a power error please check the following:-

1. Check the TV micro pin 79 and 138 on the AE board.
2. Check 12V at CN1000 and F1001 on the AE board.
3. Check the G6 board.

3-7-4. T-Con Error

When the TV Set has a T-Con error please check the following:-

1. Check the BE micro pin 128 on the FBA board.
2. Replace the panel module.

3-7-5. Back Light Error

When the TV Set has a Back Light error please check the following:-

1. Check the BE micro pin 78 on the FBA board.
2. Replace the D4 board in CCFL model and GL board in LED models.

3-7-6. Temperature Error

When the TV Set temperature is high please check the following:-

1. Check IC1000 on the AE board and replace the AE board if the temperature monitoring circuit has a problem.
2. Check the panel.

3-7-7. Audio Error

When the TV Set has an audio error please check the following:-

1. Check IC1800 on AE board. The audio amp detects over current, thermal shutdown and/or low voltage.
2. Check voltage at CN1002 pin 20 on the AE board.
3. Replace the AE board.

3-7-8. Fan Error

When the TV Set has a fan error please check the following:-

1. Check the BE micro pin 154 on the FBA board.
2. Check fan harness connection.
3. Check the voltage on CN1301 the AE board.
4. Replace the fan.

3-7-9. Balancer Error

When the TV Set has a Balancer board error please check the following:-

1. Check the BE micro pin 163 on the FBA board.
2. Check harness connection CN6700 on the D4 board and CN104 on tne balancer board of panel module (40 inches).
3. Check harness connection CN9700, CN9701 on the CB1 board and panel module (46/55 inches).
4. Replace the panel module.
5. Replace CB1 board (46/55 inches).

3-8. CB1 Board Replacement (46/55 inches)

When replacing the CB1 board adjustment data held in the backlight NVM of the panel can be copied to the CB1 board. Data held on the CB1 board can also be copied to the panel in the case of panel replacement.

3-8-1. Copying data from Panel to CB1 Board

1. Enter Service Mode (See 3-1).
2. Go in to BEM Service Mode (See 3-4) and go to 'DATA_COPY' (See Pic.7).

Pic.7

3. Change 'COPY_SW1' to 1 and wait until the message " COPIED NVM TO FLASH" appears (See Pic.8). At this point make sure the TV set is not powered off until this message appears.

Pic.8

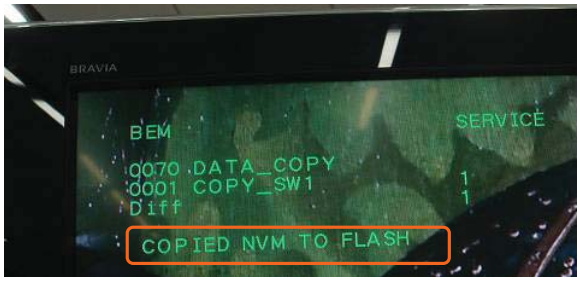

4. Software has now been copied. Switch AC off and back on again to confirm.

EG1H Trouble Shooting

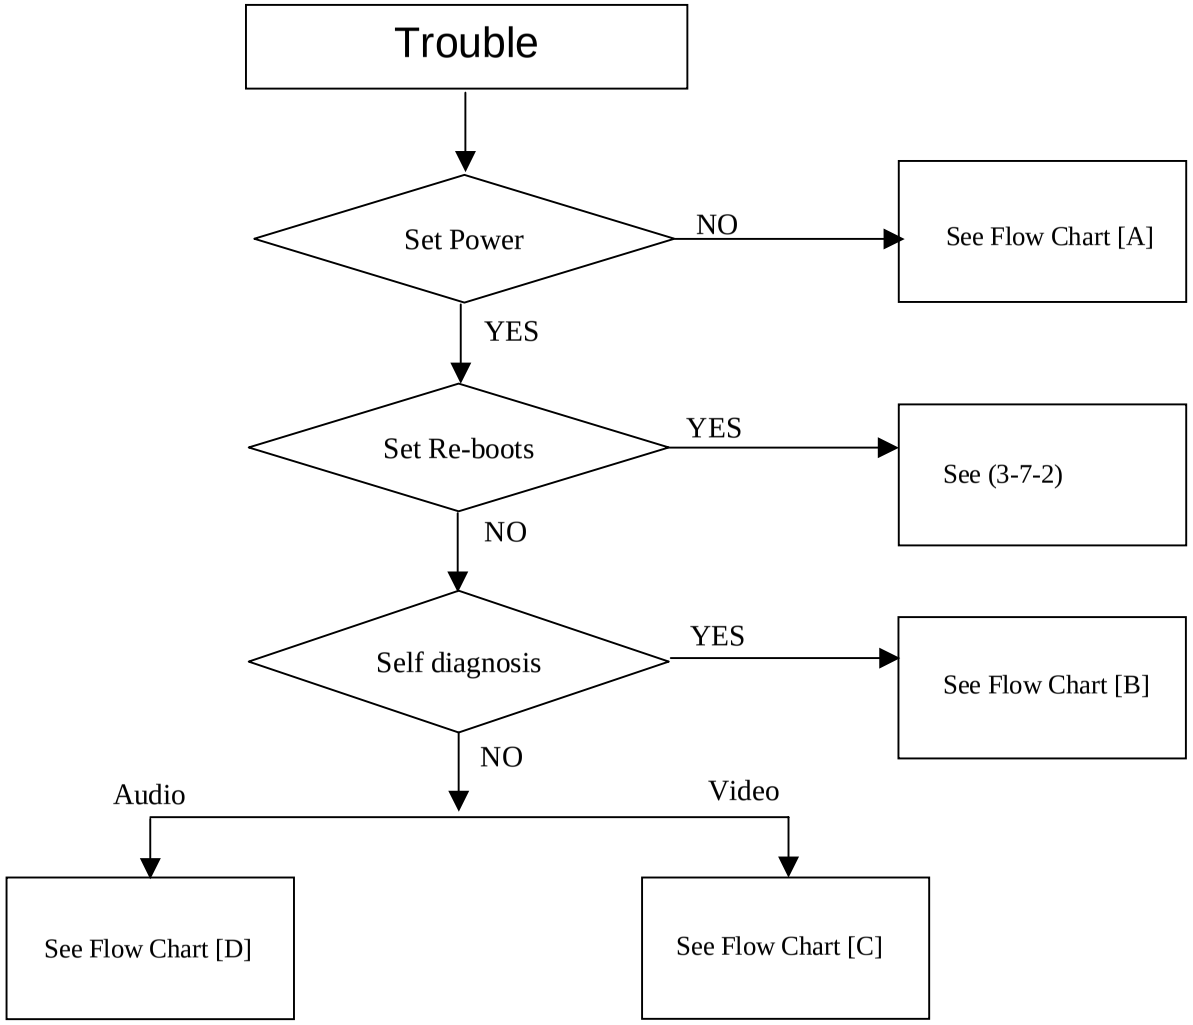

Flow Chart [A]

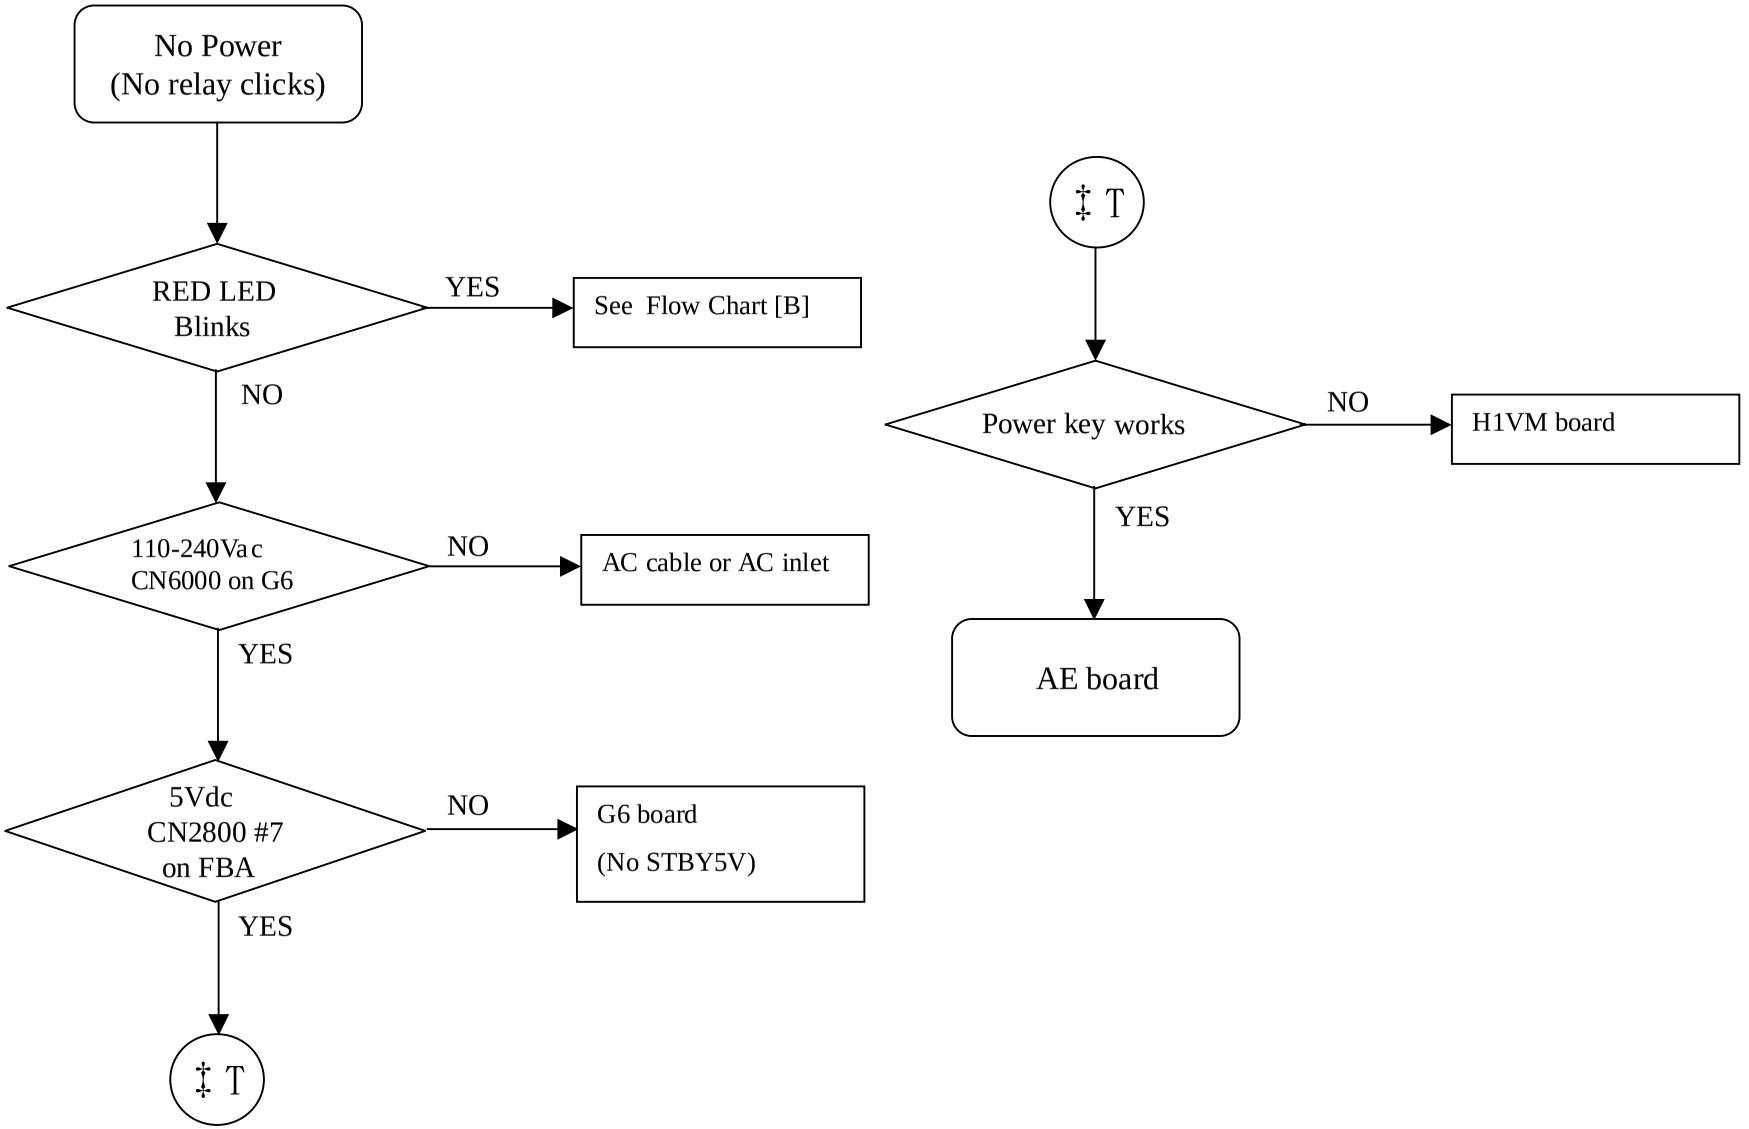
No Power
(No relay clicks)
RED LED
Blinks
YES
See Flow Chart [B]
NO
110-240Vac
CN6000 on G6
NO
AC cable or AC inlet
YES
5Vdc
CN2800 #7
on FBA
NO
G6 board
(No STBY5V)
YES
T
T
Power key works
NO
H1VM board
YES
AE board

Flow Chart [B]

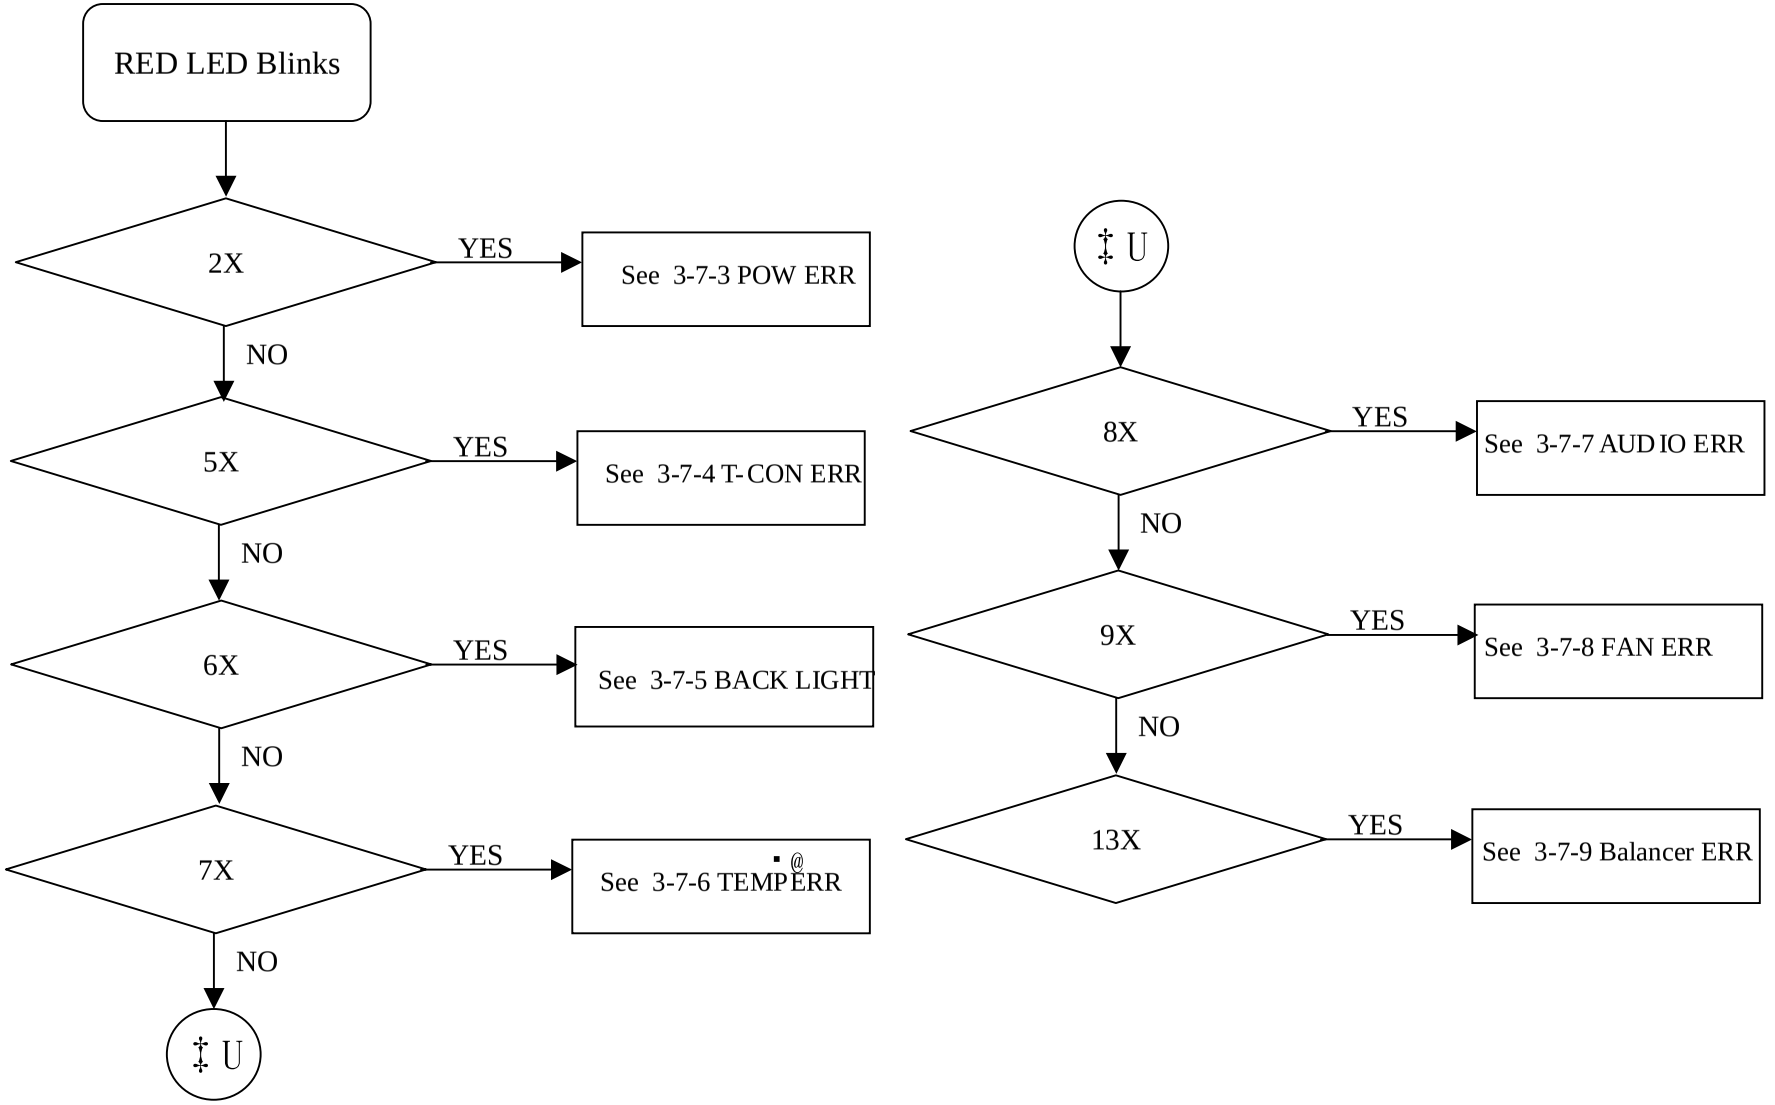
RED LED Blinks
2X
YES
See 3-7-3 POW ERR
NO
5X
YES
See 3-7-4 T-CON ERR
NO
6X
YES
See 3-7-5 BACK LIGHT
NO
7X
YES
See 3-7-6 TEMP ERR
NO
U
U
8X
YES
See 3-7-7 AUD IO ERR
NO
9X
YES
See 3-7-8 FAN ERR
NO
13X
YES
See 3-7-9 Balancer ERR

Flow Chart [C]

Here is trouble shooting flow related Video

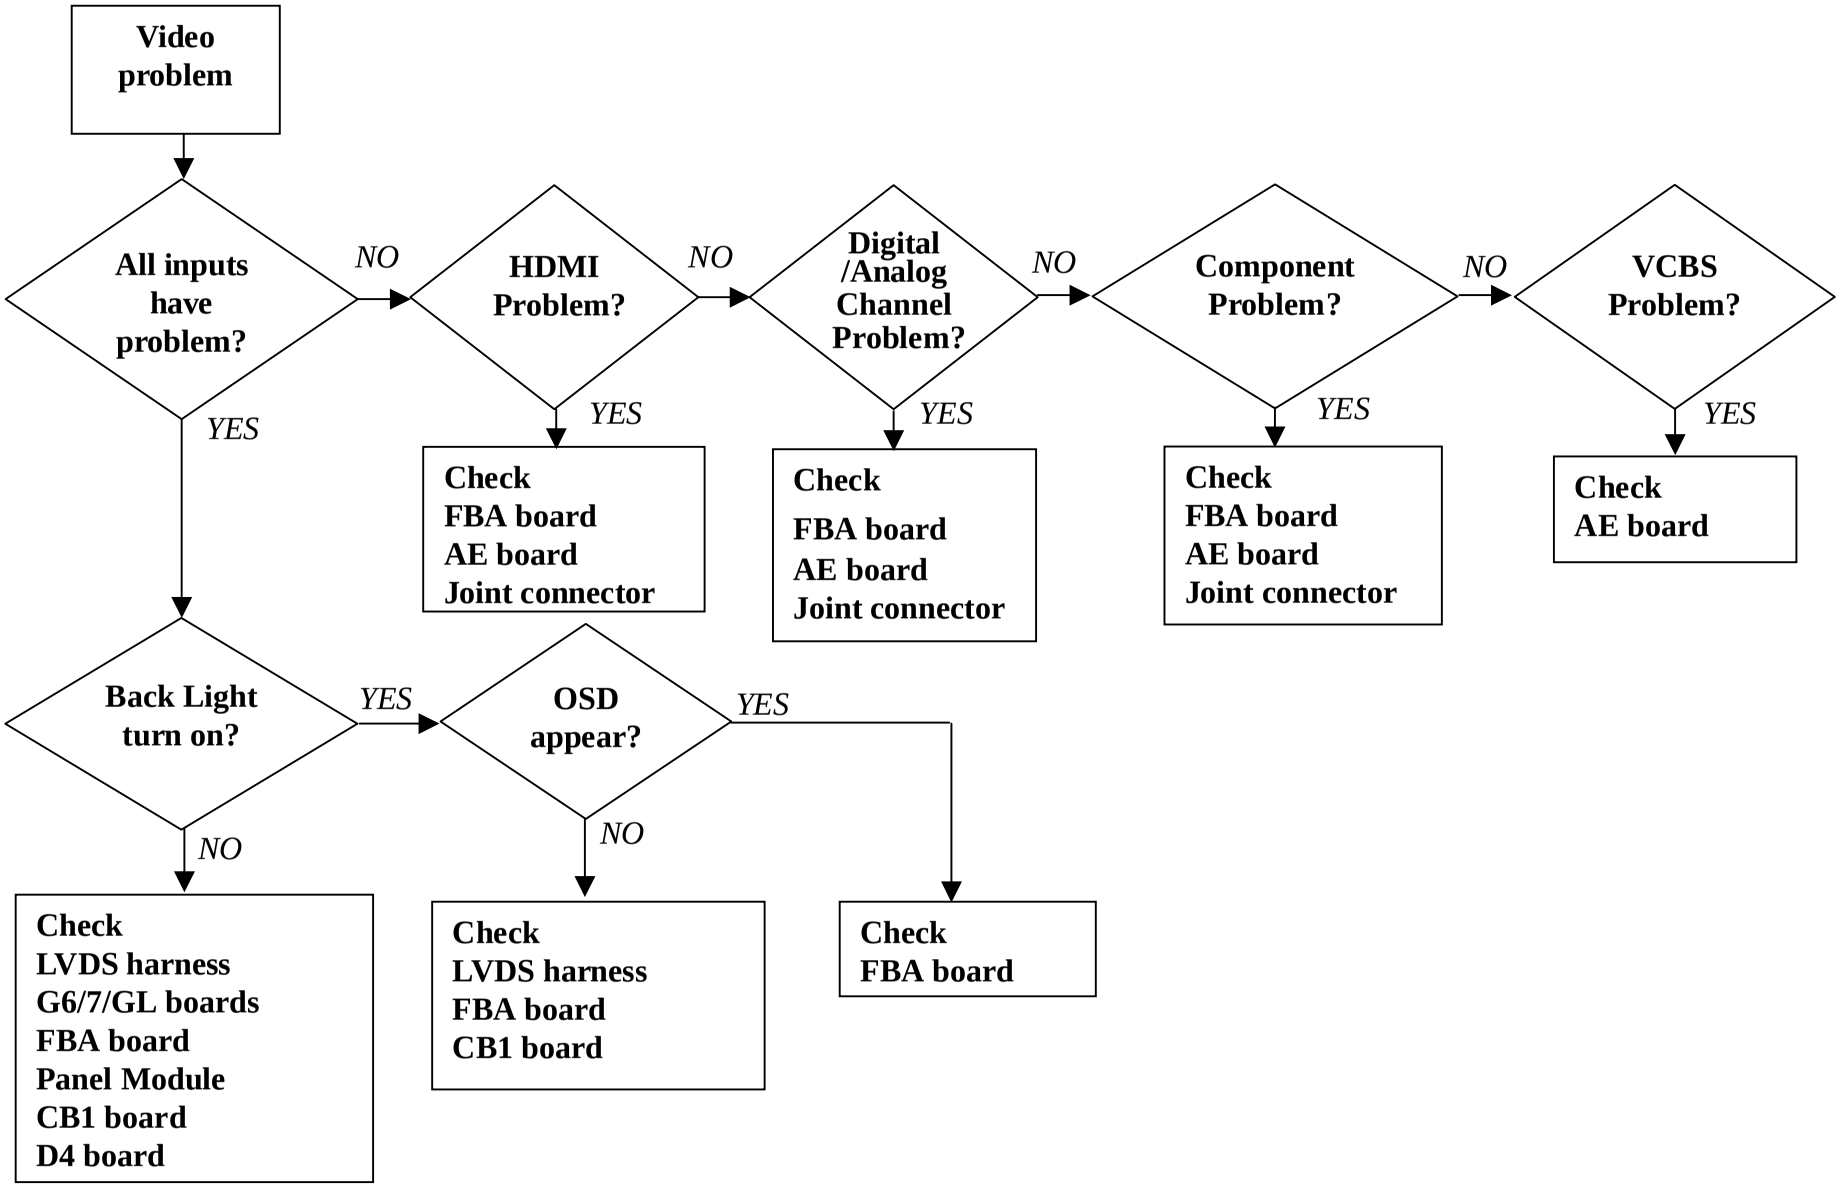

Flow Chart [D]

Here is trouble shooting flow related audio

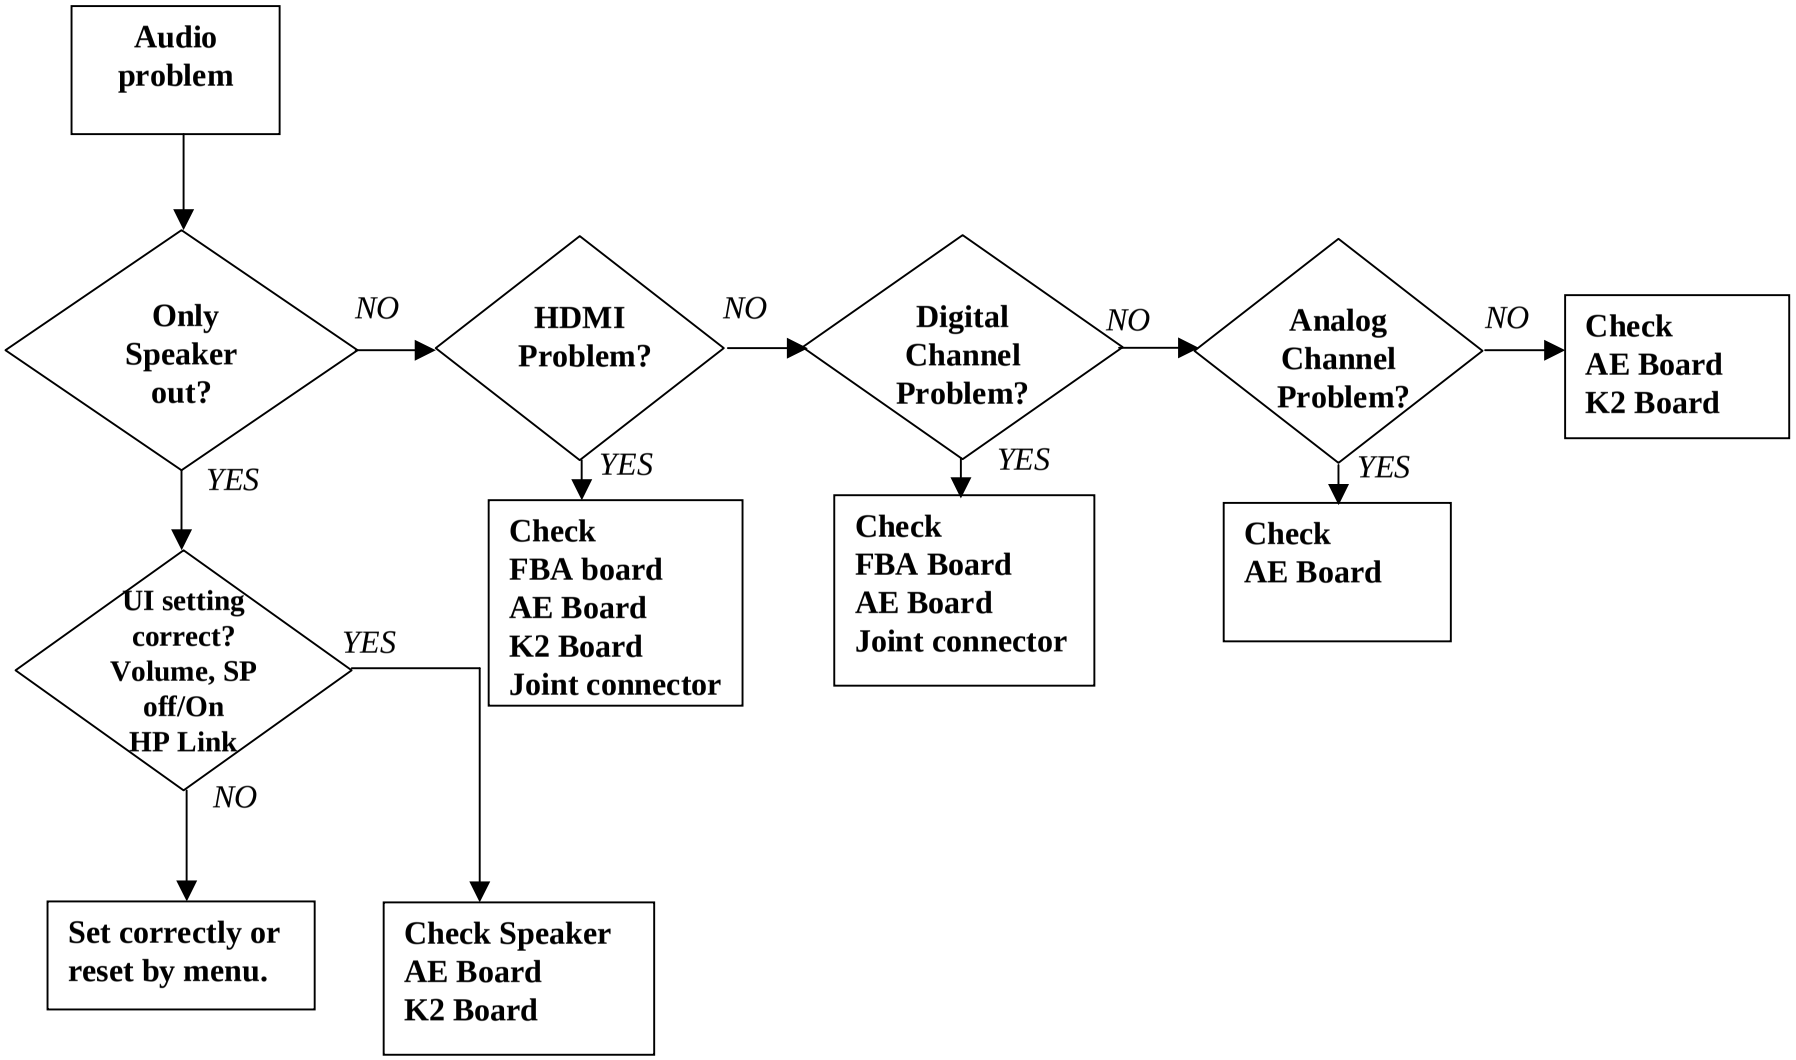

EG-1H Block Diagram

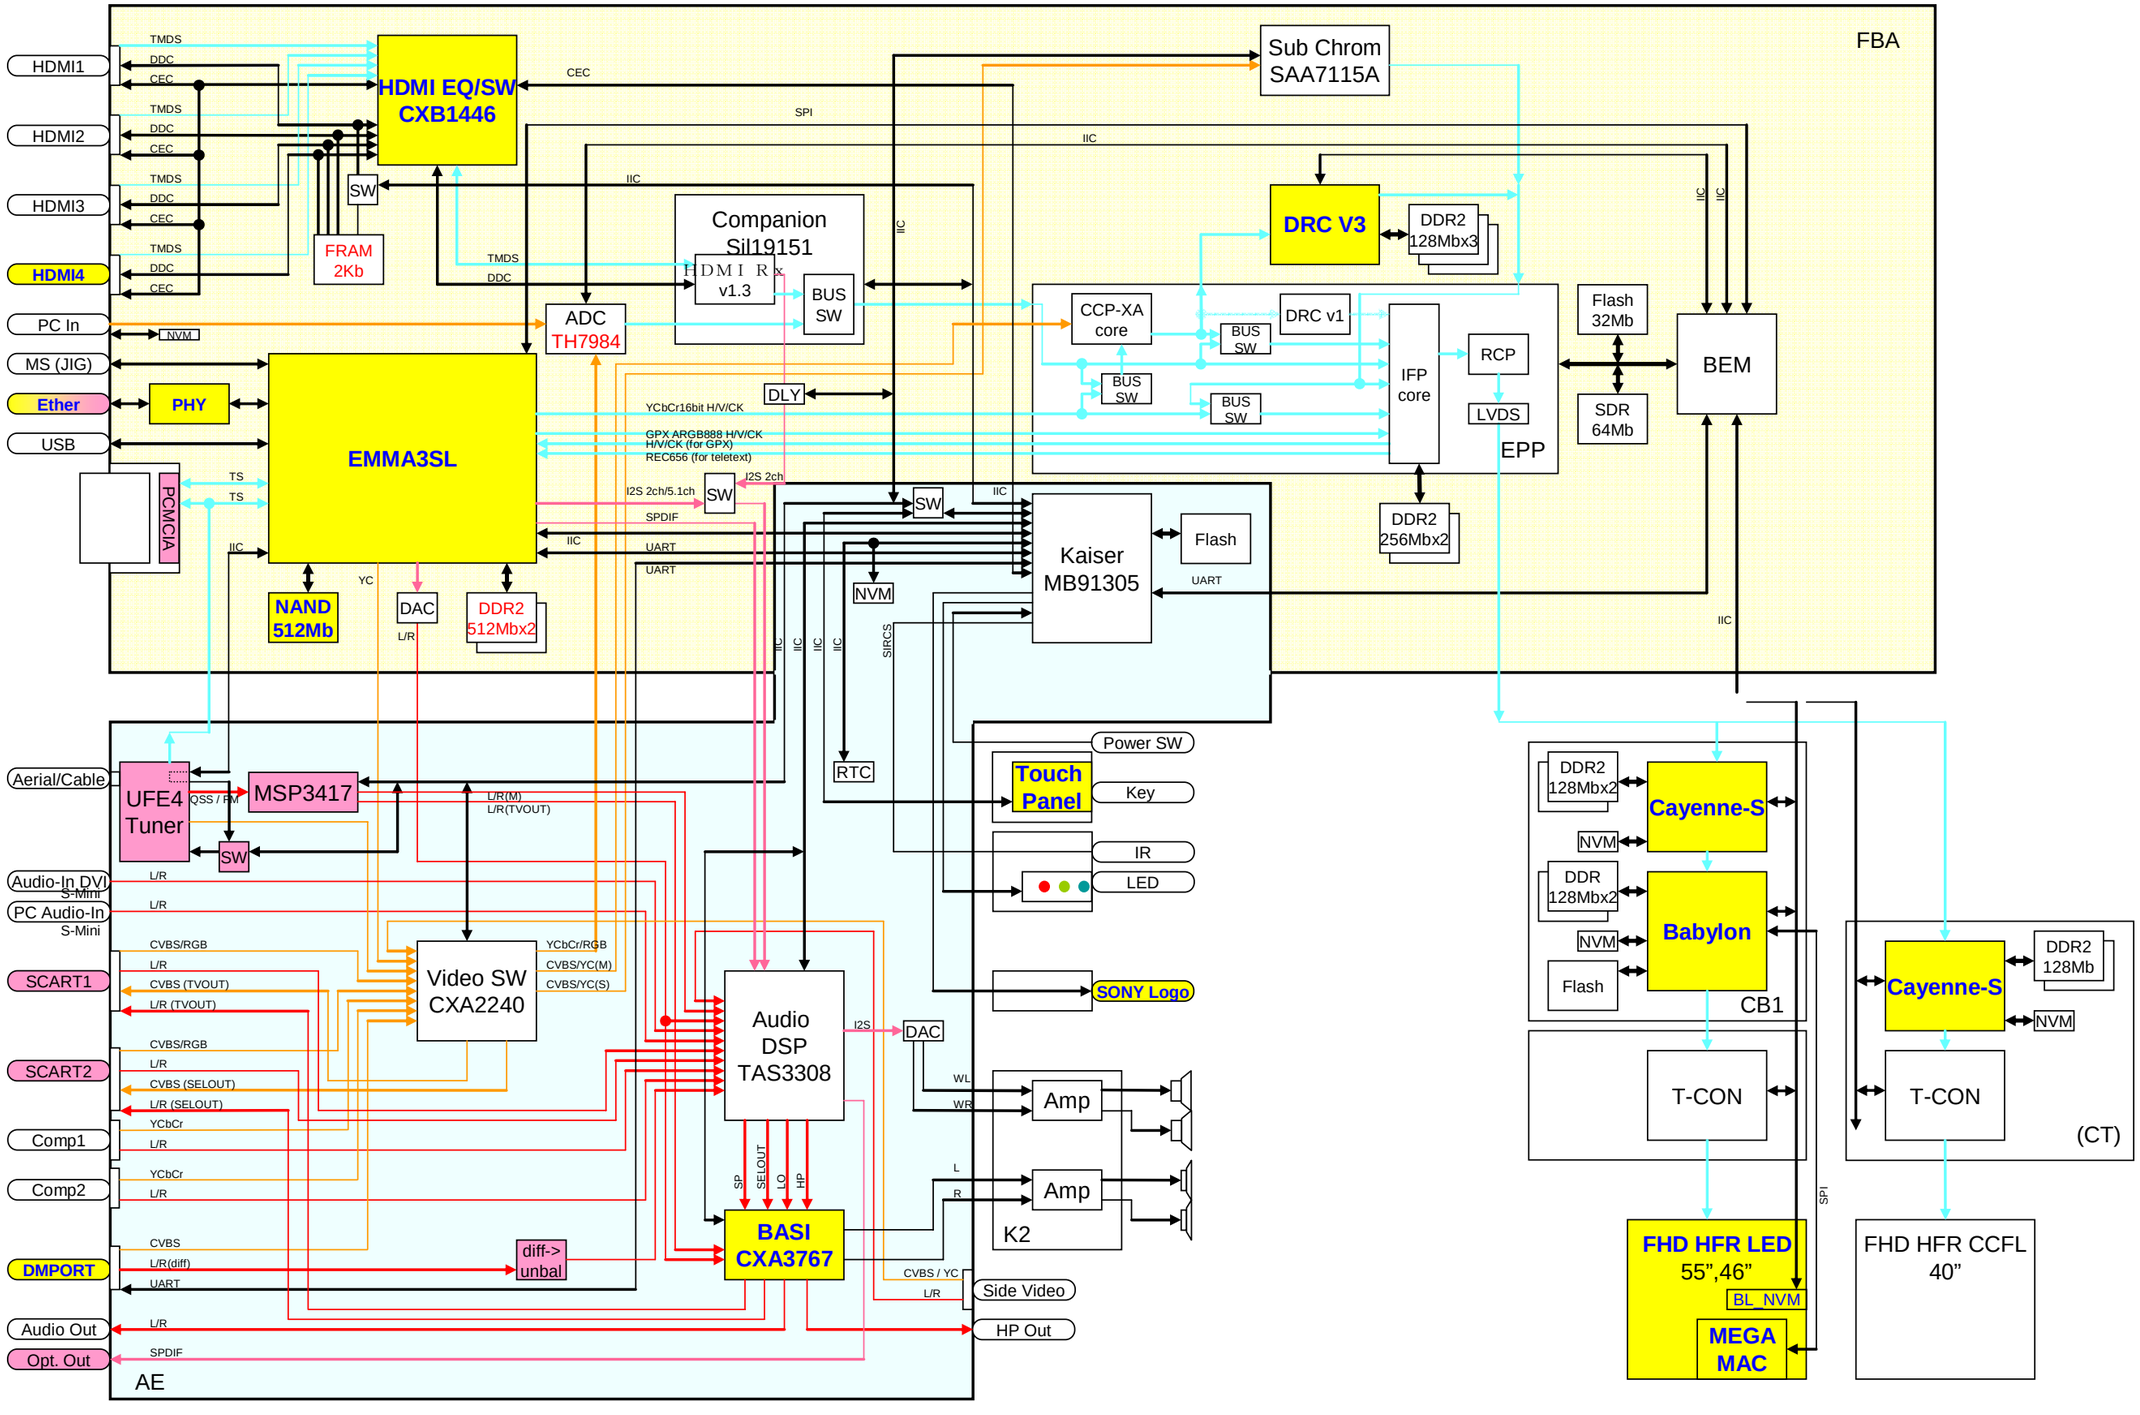

4-2. CIRCUIT BOARD LOCATION

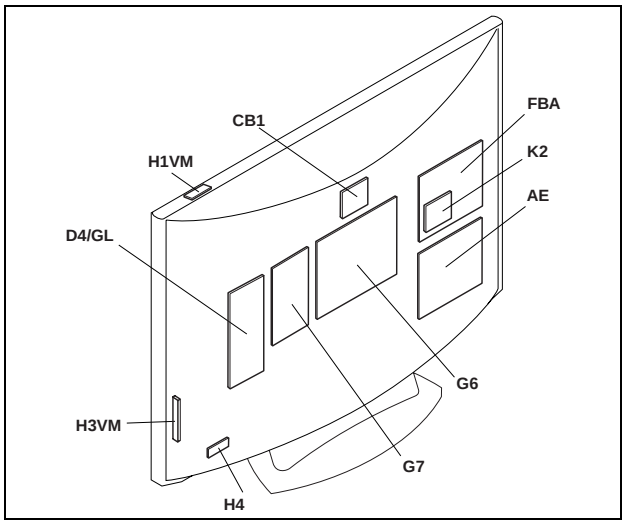

4-3. SCHEMATIC DIAGRAMS AND PRINTED WIRING BOARDS

Note :

- All capacitors are in µF unless otherwise noted.
- pF : µµF 50WV or less are not indicated except for electrolytic types.
- Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch : 5mm
Electrical power rating : 1/4W

- Chip resistors are 1/10W
- All resistors are in ohms.
  k = 1000 ohms, M = 1000,000 ohms
- : nonflammable resistor.
- : fusible resistor.
- : internal component.
- : panel designation or adjustment for repair.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- All voltages are in Volts.
- Readings are taken with a 10Mohm digital mutimeter.
- Readings are taken with a color bar input signal.
- Voltage variations may be noted due to normal production tolerences.
- : B + bus.
- : B - bus.
- : RF signal path.
- : earth - ground.
- : earth - chassis.

Reference Information

RESISTOR	**RN**	: METAL FILM
	RC	: SOLID
	FPRD	: NON FLAMMABLE CARBON
	FUSE	: NON FLAMMABLE FUSIBLE
	RS	: NON FLAMMABLE METAL OXIDE
	RB	: NON FLAMMABLE CEMENT
	RW	: NON FLAMMABLE WIREWOUND
		: ADJUSTMENT RESISTOR
COIL	**LF-8L**	: MICRO INDUCTOR
CAPACITOR	**TA**	: TANTALUM
	PS	: STYROL
	PP	: POLYPROPYLENE
	PT	: MYLAR
	MPS	: METALIZED POLYESTER
	MPP	: METALIZED POLYPROPYLENE
	ALB	: BIPOLAR
	ALT	: HIGH TEMPERATURE
	ALR	: HIGH RIPPLE

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

Note : Les composants identifiés par une trame et par une marque ⚠ sont d'une importance critique pour la sécurité. Ne les remplacer que par des pièces de numéro spécifié. specified.

Note : The components identified by mark 🔒 contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.

Note: Schematic diagrams are for reference only. Please refer to the electrical parts list for the correct value and part number of components.

AE - EG1H

TEMP SENSOR/MECHA/POWER CONNECTOR

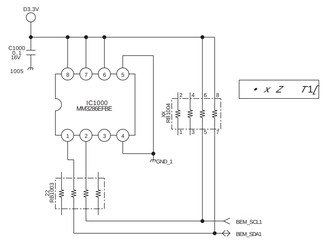







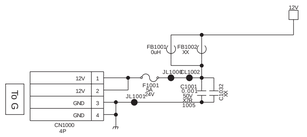



AUDIO PIN JACK/K CONNECTOR

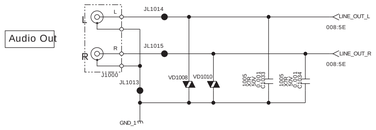

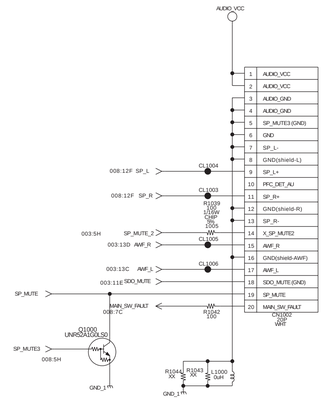

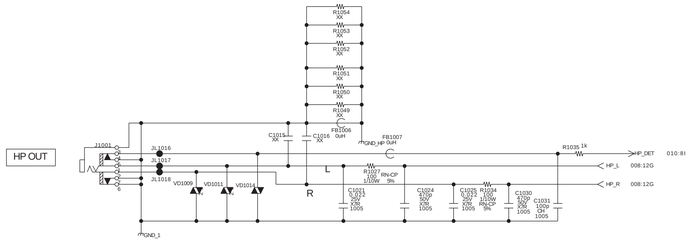

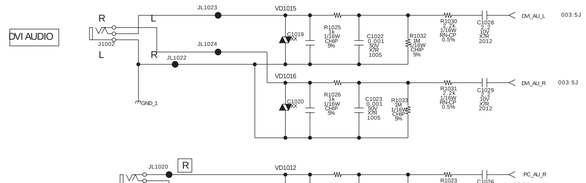

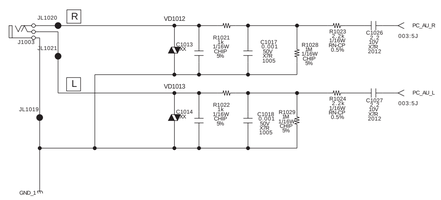

DIGITAL MEDIA PORT

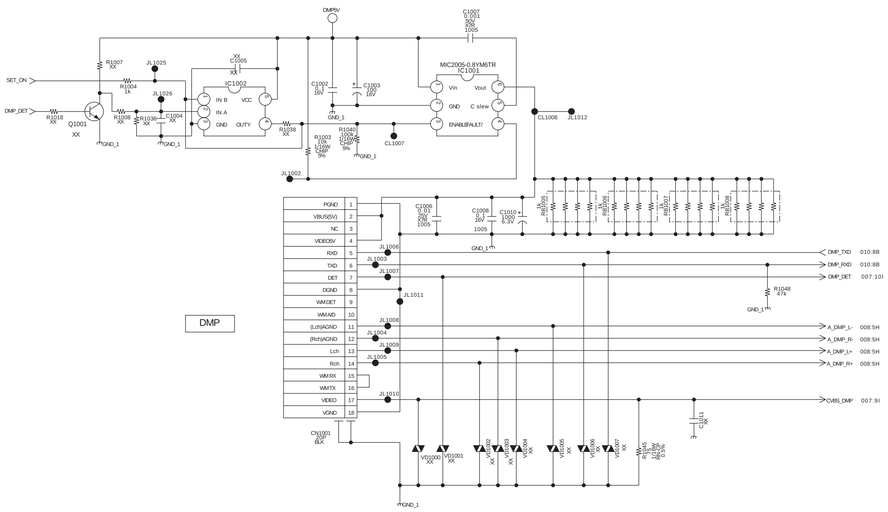

AE 1/9 TUNER, ANALOGUE SWITCH, AUDIO, I/O TERMINAL

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

DD-CON/REGULATOR/FAN

AE 2/9

DMP5V

A_TAS3.3V

D3.3V

6.1V

TUNER_5V

V5V

TUNER_5V

A9V

Put the circuit near CN1000

Invalid Fan Error

AE - EG1H

ASSIST WOOFER

AE 3/9

TAS DSP

PCM1754EBKR IC1701

Digital Block

PWM Block

Analog Block

Xtal

APLL

DPLL

TC7SET32FU(TSRSOJF) IC1709

CXD9564ATQ IC1700

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

AE - EG1H

AE 4/9

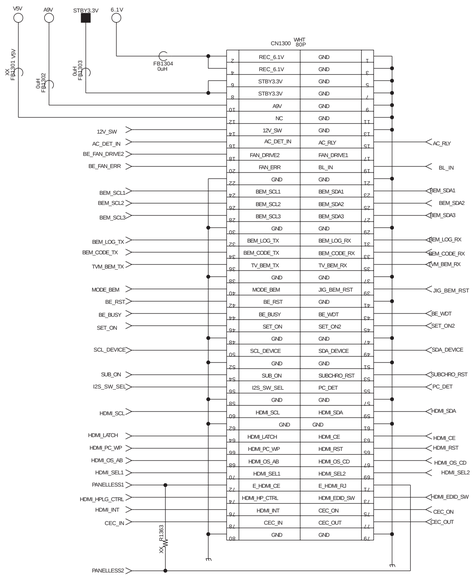

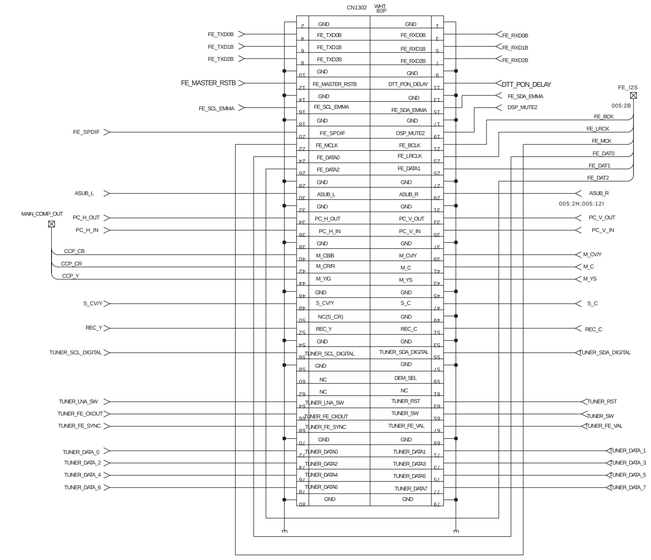

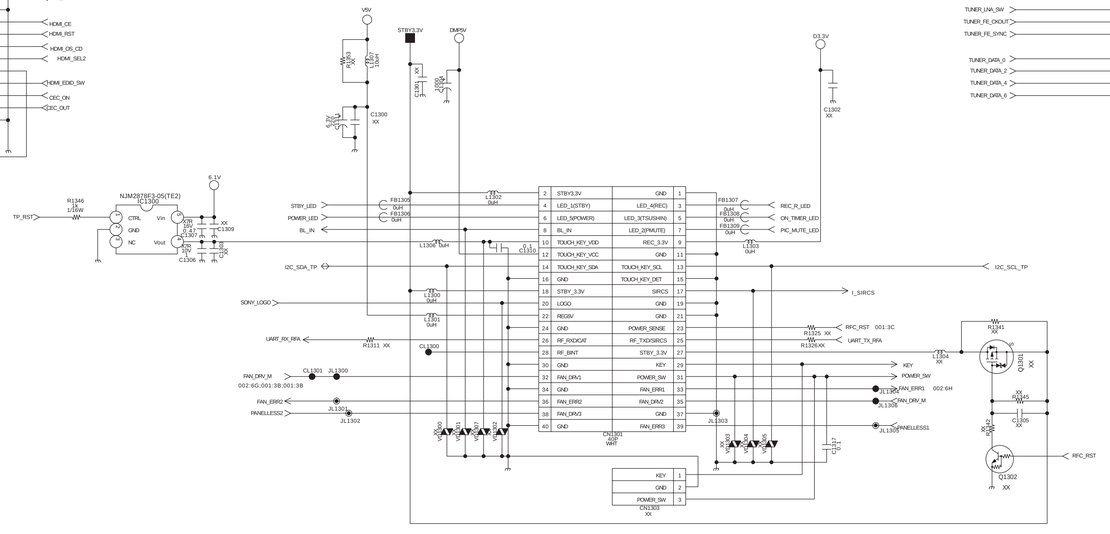

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

AE 5/9

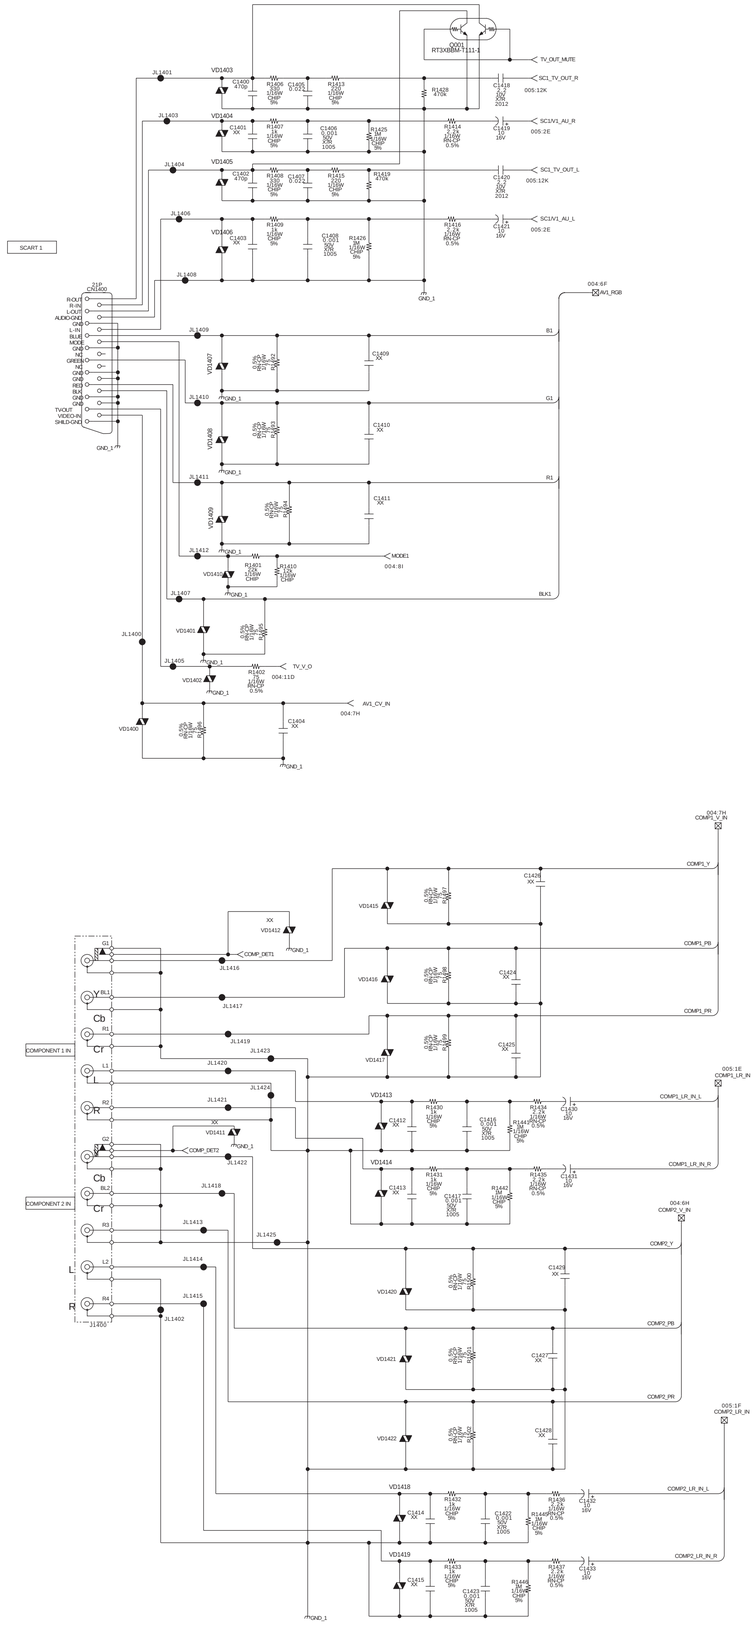

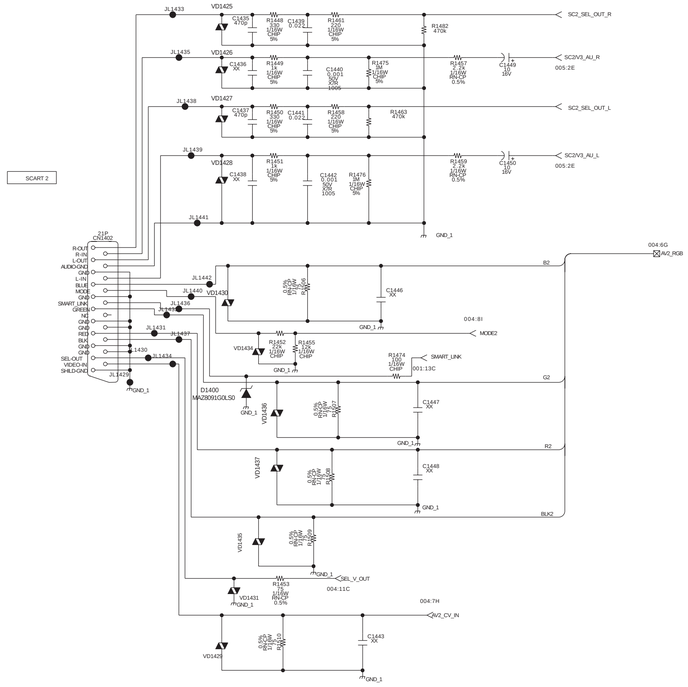

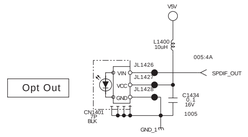

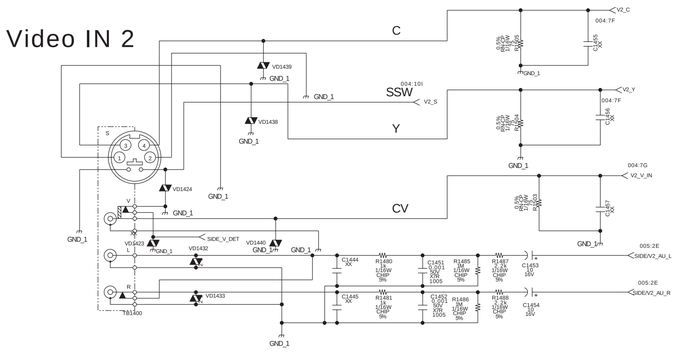

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

AE - EG1H

MAIN VIDEO

SUB VIDEO

AE 6/9

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

AE - EG1H

AE 7/9

MSP

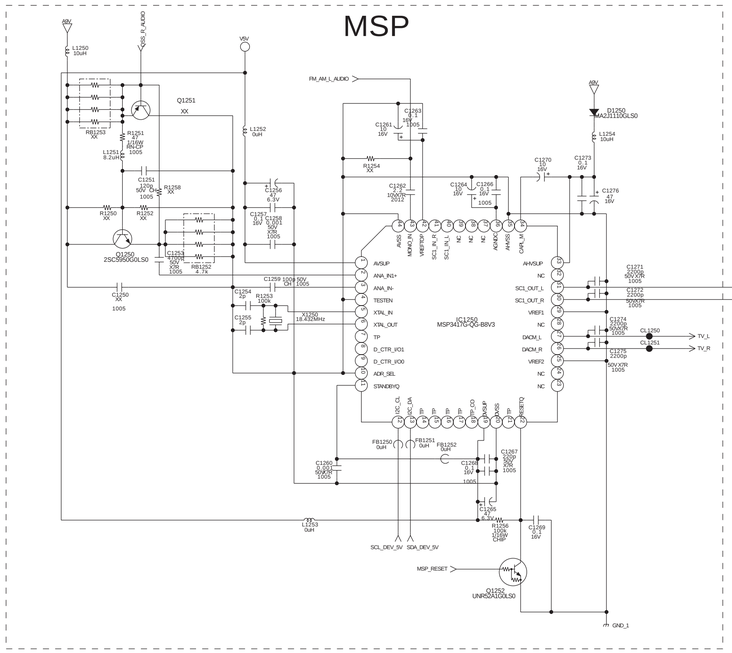

LINE_OUT

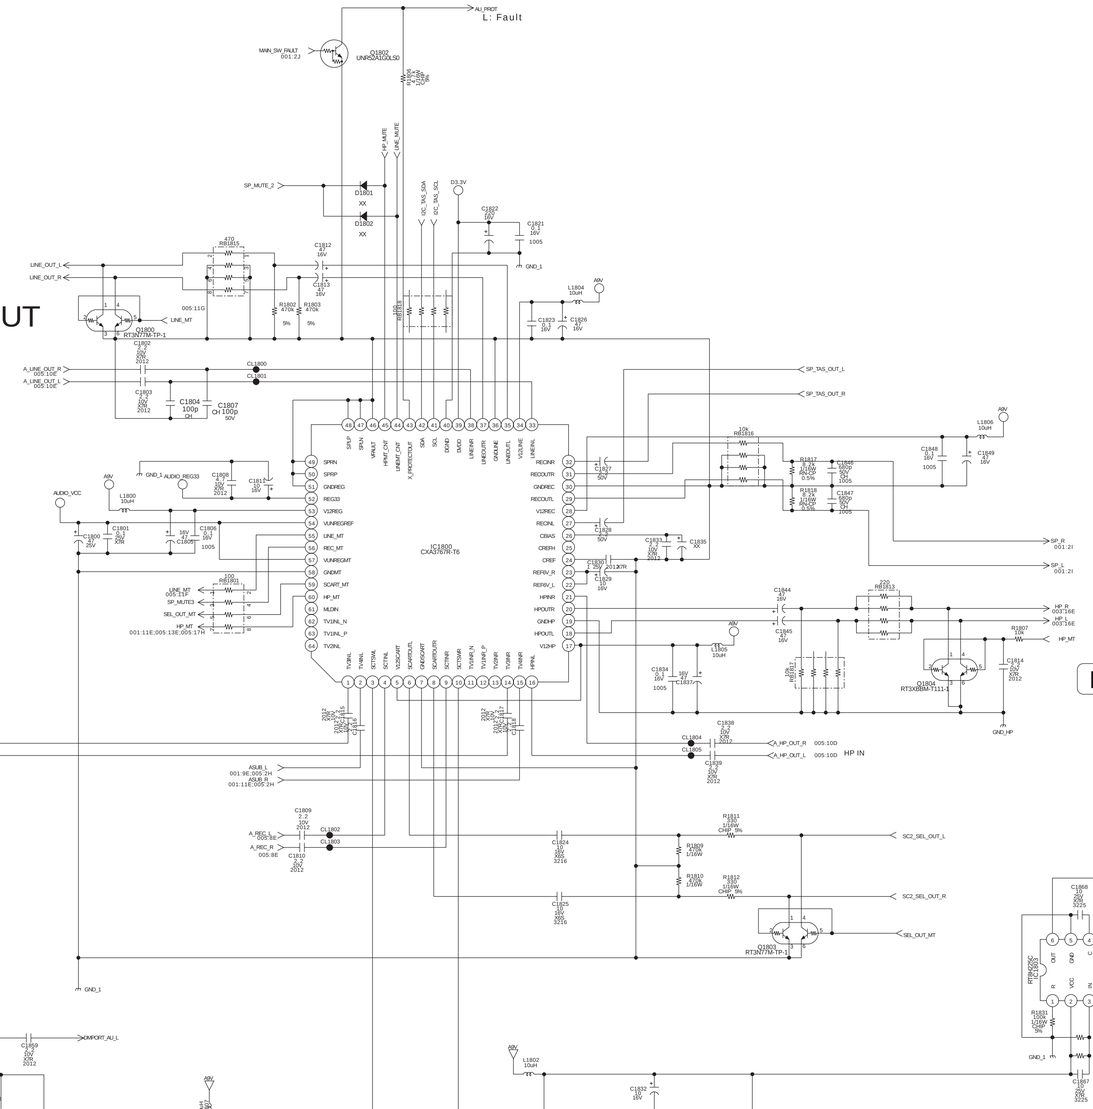

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

AE - EG1H

3.3V LINEAR REGULATOR

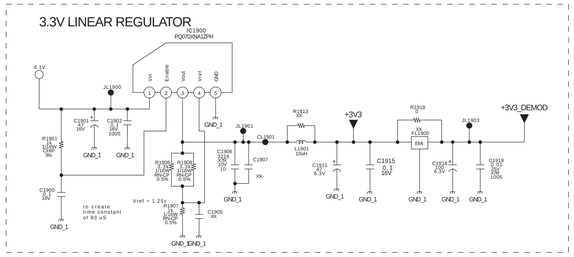

31V_TUNER BOOST REGULATOR

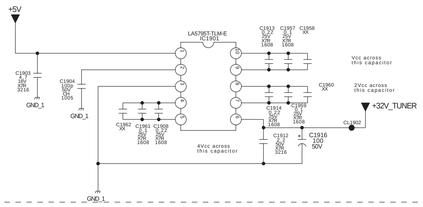

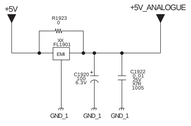

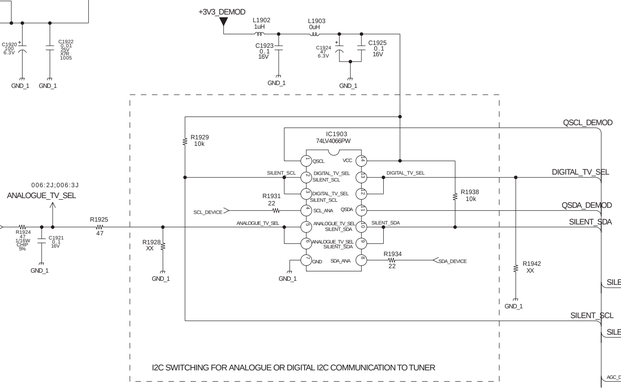

TUNER_LNA_SW Pin3 UFE-4 Reception

HIGH	GND	COFDM DIGITAL
LOW	5V	QAM / ANALOGUE

AT POWER ON LNA NORMALLY LOW

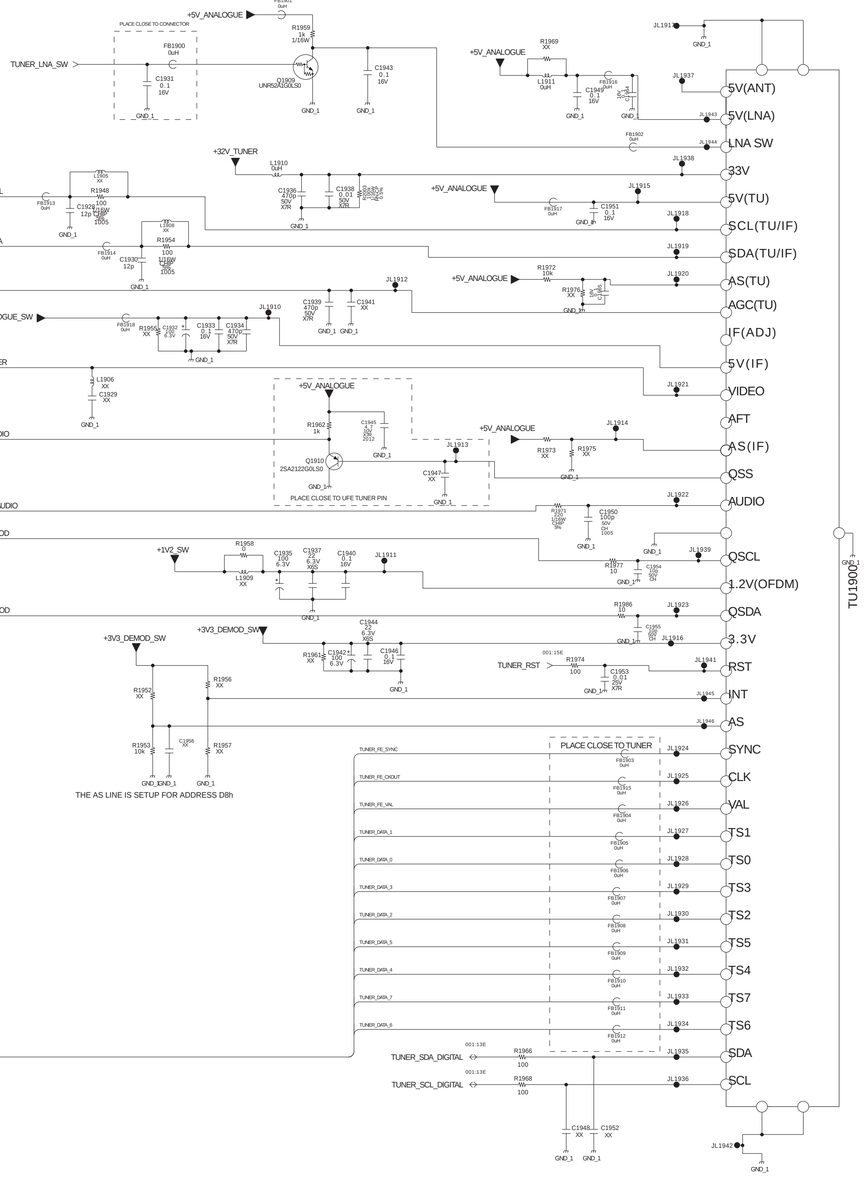

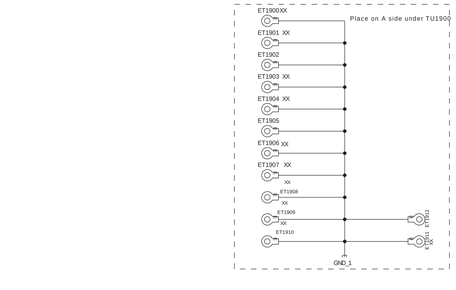

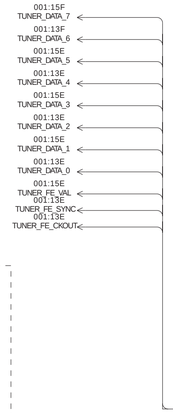

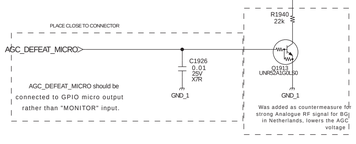

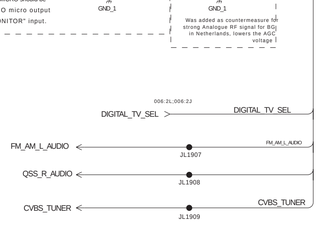

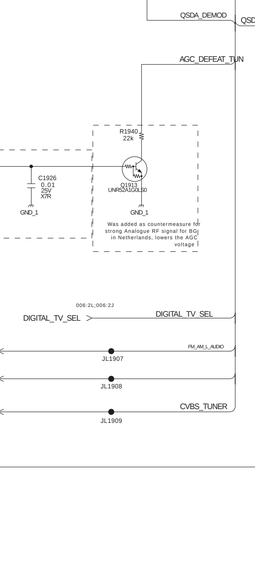

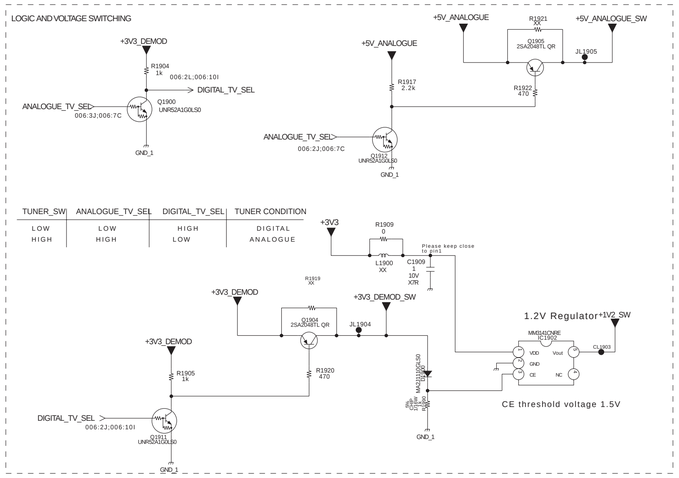

AE 8/9

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

AE - EG1H

IC2103 S-35390A-I8T1G
D2105 1SS388(TPL3)
ONLY AEP
IC2100 S-1132818-M5T1
IC2104 M89J305
<< STBY3.3V >>
Near Tuner
To JIG
To JIG
IC2109 74LV4066PW
IC2108 LM393DT (A)
M24256-BWMN6TP(A) IC2106 EEPROM
S29AL016D70TFI010-0BHAE010 IC2107
I2C 3-5
AE 9/9
COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

CB1 - EG1H

CB1 1/7 HFR FILM HC

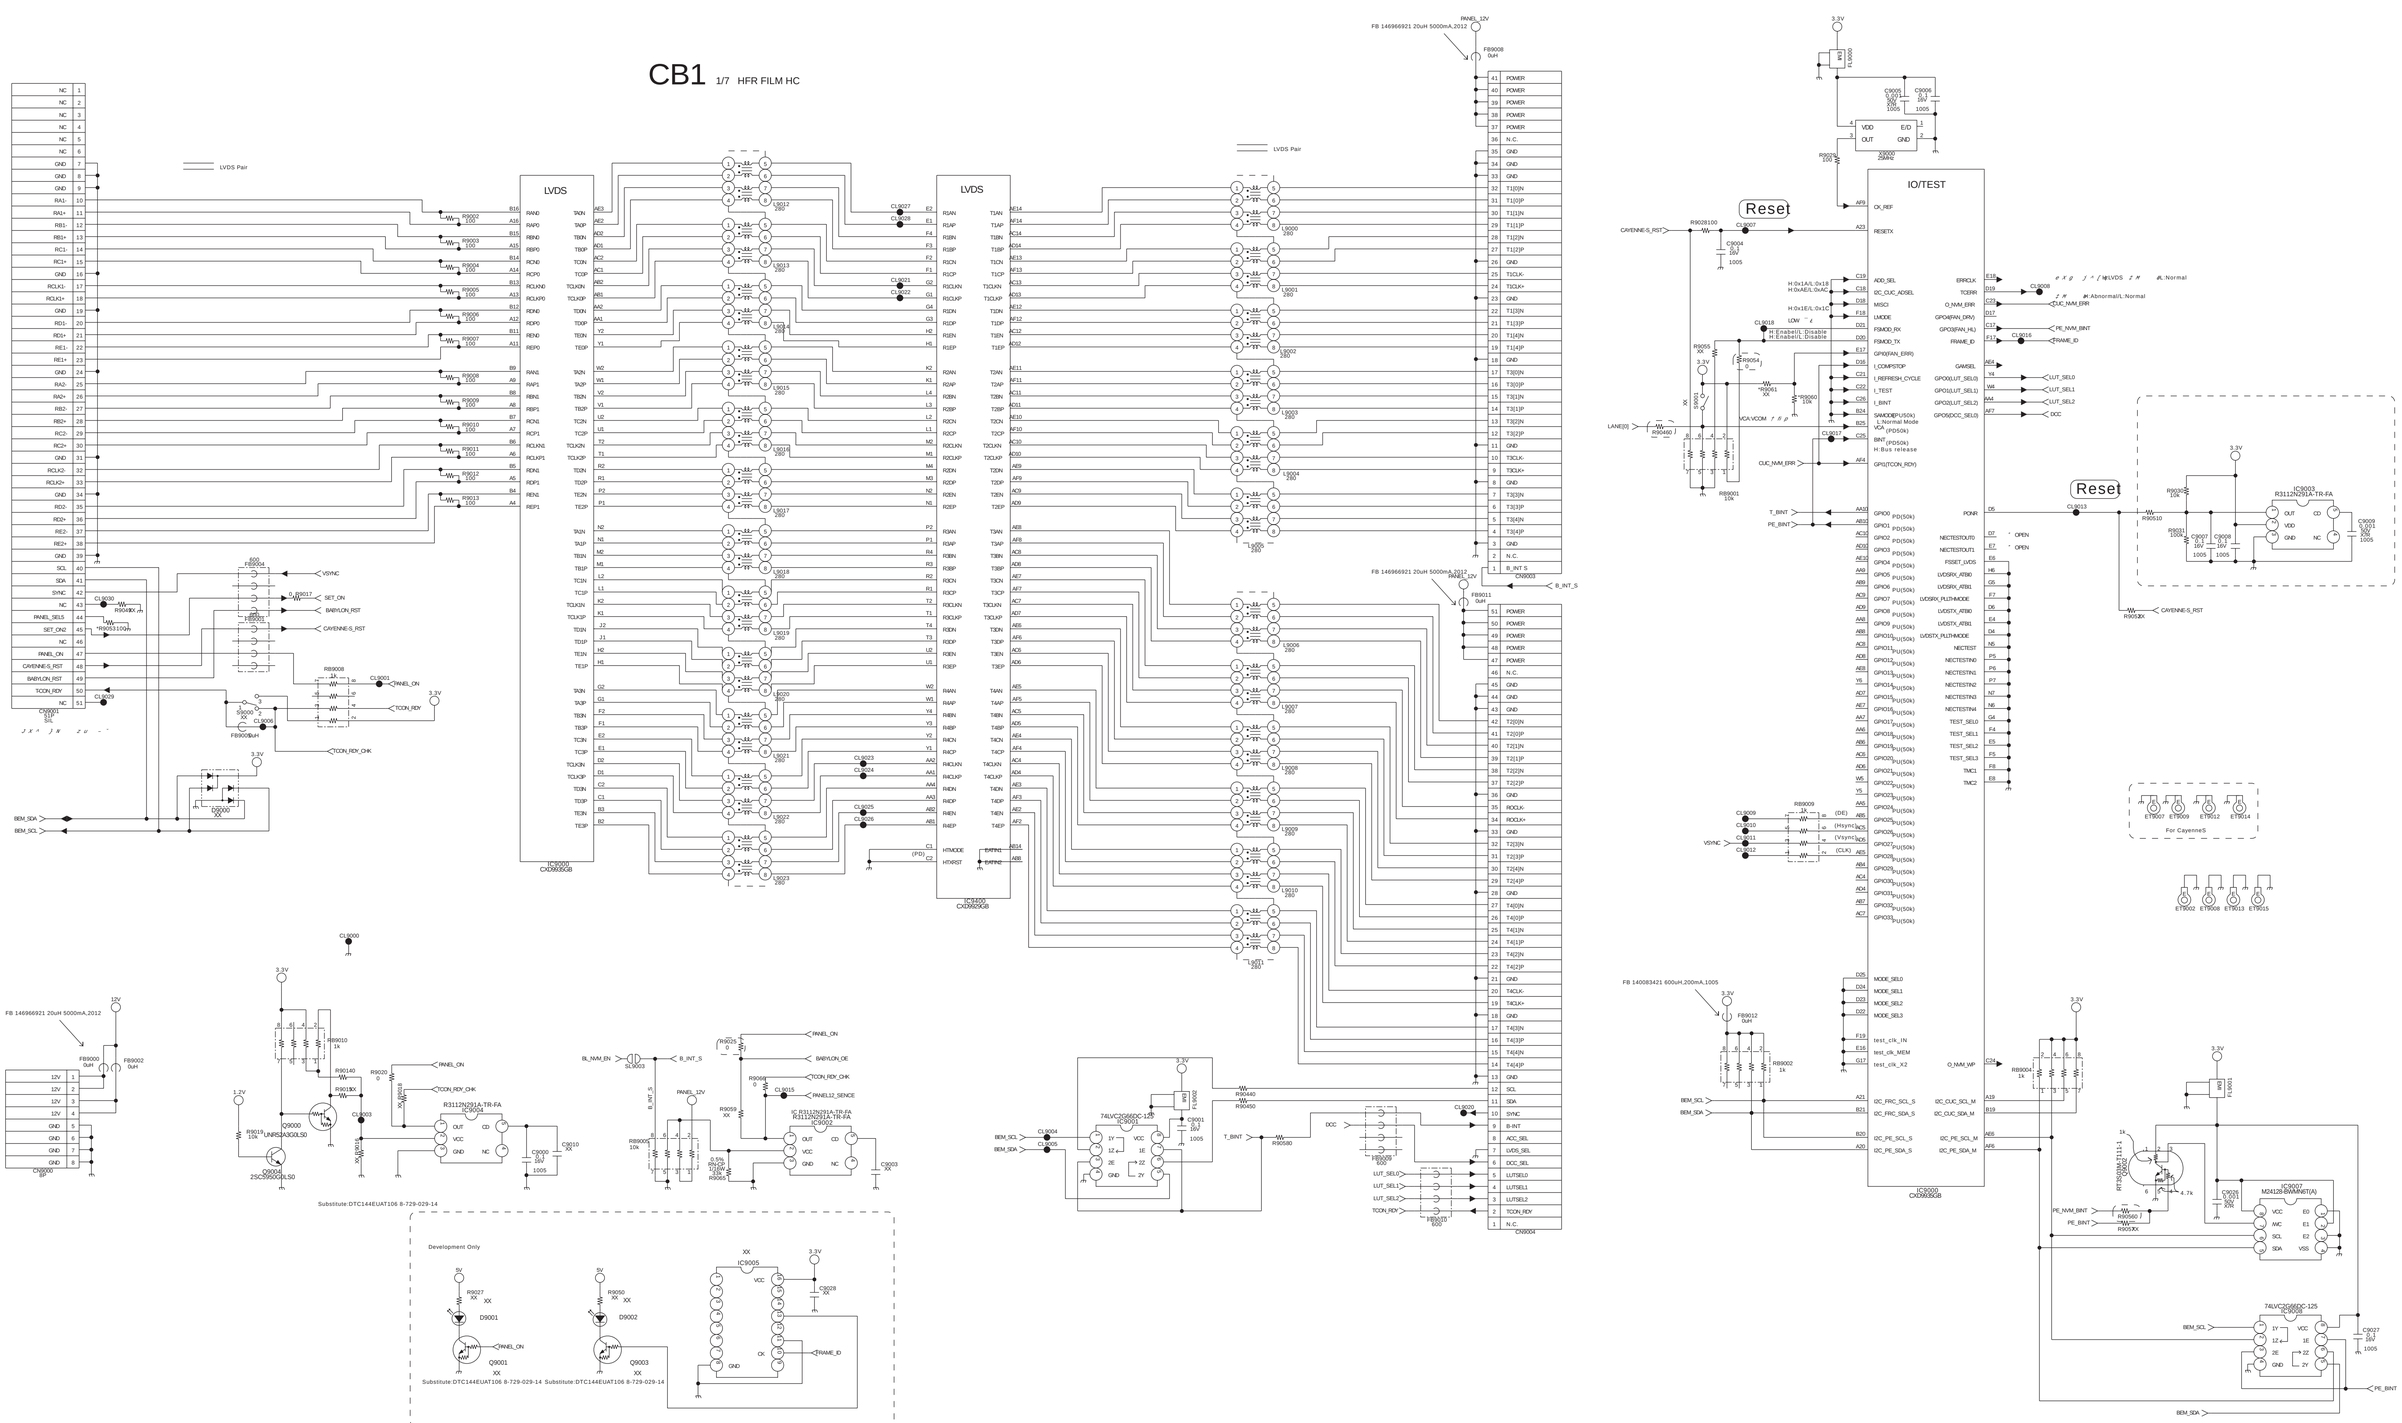

CB1 - EG1H

CB1 2/7

UM

DDR2

$1.74

5V

Reg 12V

IC9100 SN0606006PWPR

IC9101 TC7SET08FU(TE85R,SOJF)

Substitute:74AHCT1G08GW-125 671240901

IC9000 CXD9850GB

IC9102 HYB18TC256160BF-3S

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

CB1 - EG1H

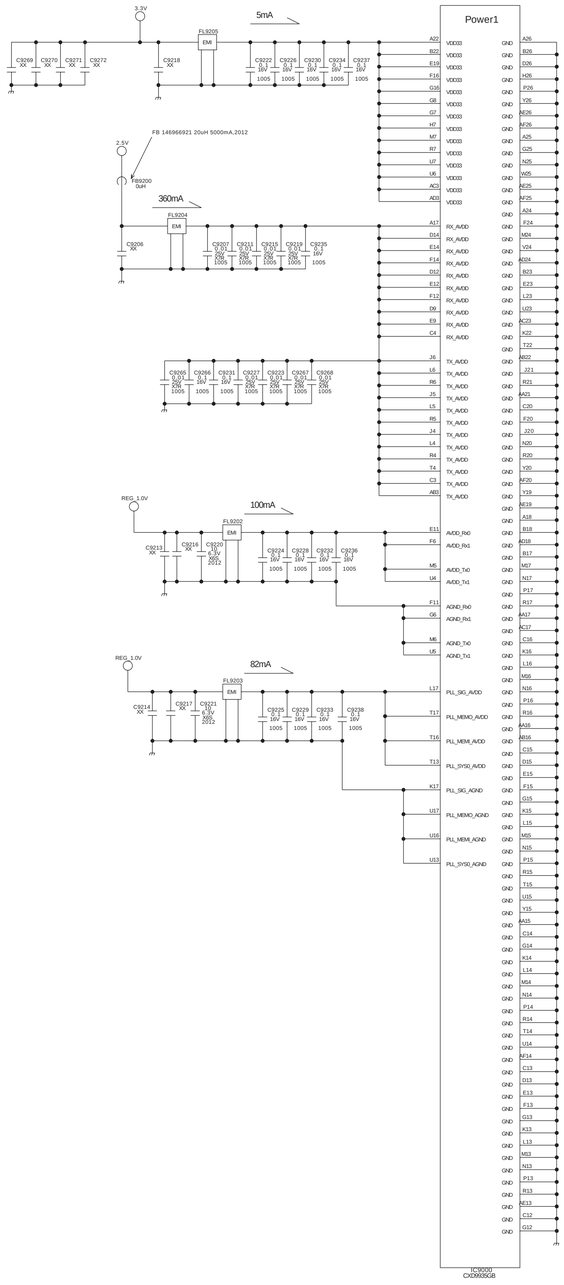

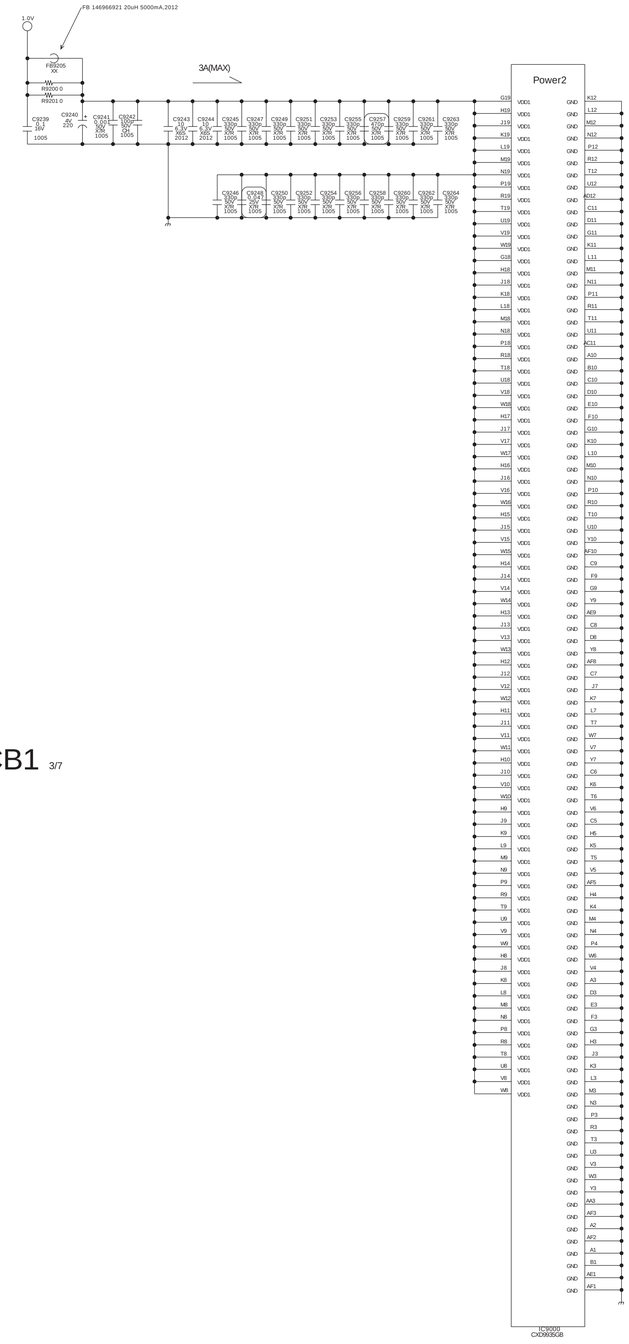

CB1 3/7

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

CB1 - EG1H

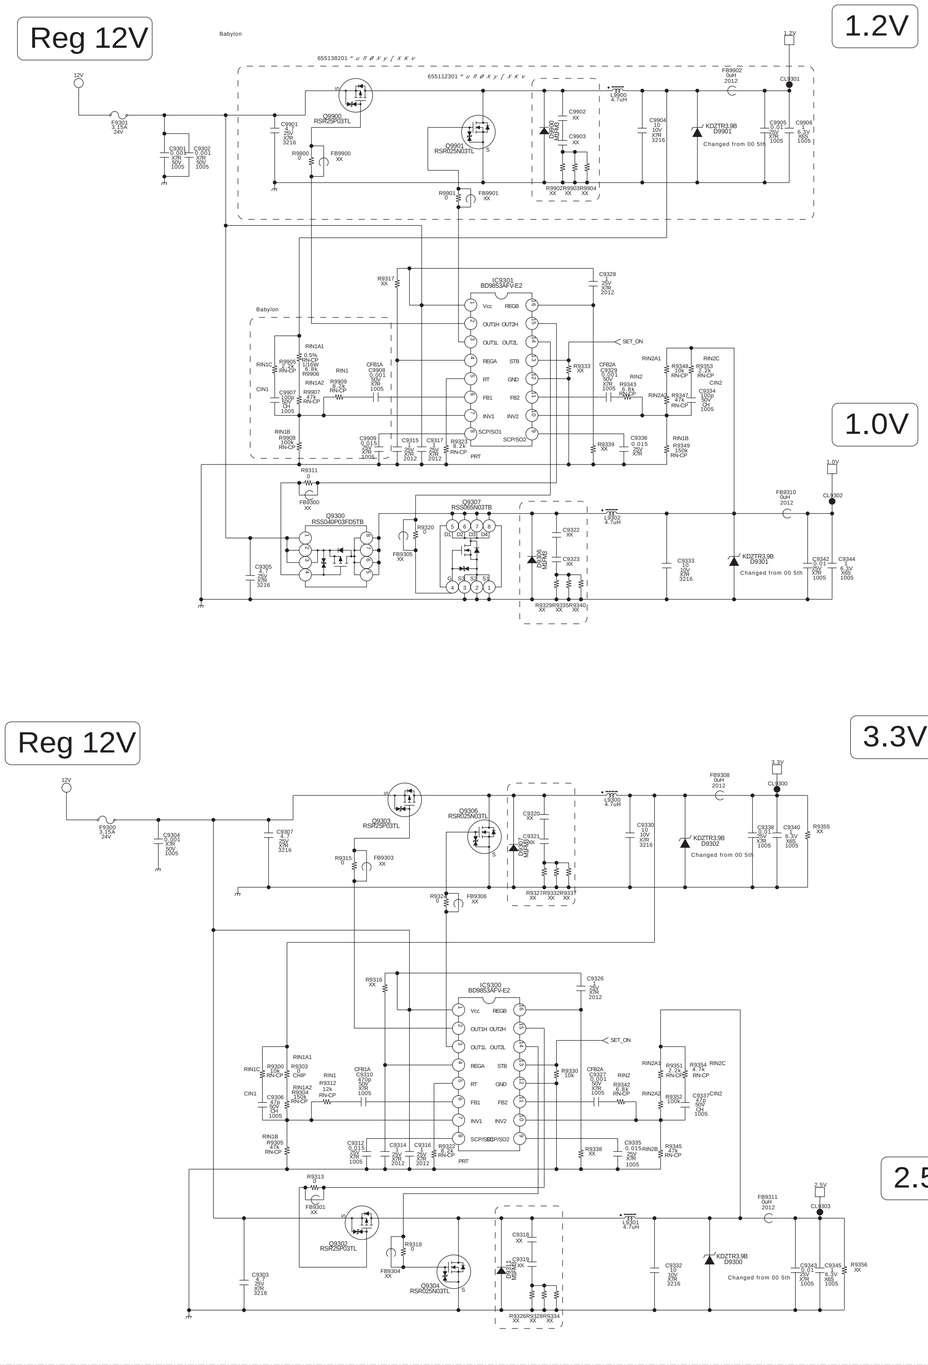
Reg 12V
1.2V
1.0V
3.3V
2.5V
Reg 12V
Panel12V
CB1 4/7
1V
Babylon
IC9301
BD9853AFV-E2
IC9300
BD9853AFV-E2
Q9307
RSS040P03FD5TB
Q9300
RSS040P03FD5TB
Q9306
RSH025N03TL
Q9301
RSH025N03TL
Q9302
RSH025N03TL
Q9304
RSH025N03TL
D9301
D9302
D9303
D9304
KDZTR3.9B
Changed from 00 5th
IC9302
TPC8109(TE12L)
Q9308
Q9309
TH UNRS2A30G,LM
IC9303
BD00KA5MFP-E2
SET_ON
PANEL_ON
REG_1.0V
PANEL_12V
COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

CB1 - EG1H

CB1 5/7

EDD1232ABBH-5C-E-TR
IC9402

M13

DDR

IC9400
CXD90090GB

FB 140083421 600uH,200mA,1005

DDR2.5V

VREF1.25V_2

VREF1.25V_1

DDR_MCLK1
DDR_MCLK1B
DDR_CKE
DDR_MCSB
DDR_MRASB
DDR_MCASB
DDR_MWEB

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

CB1 - EG1H

CB1 6/7

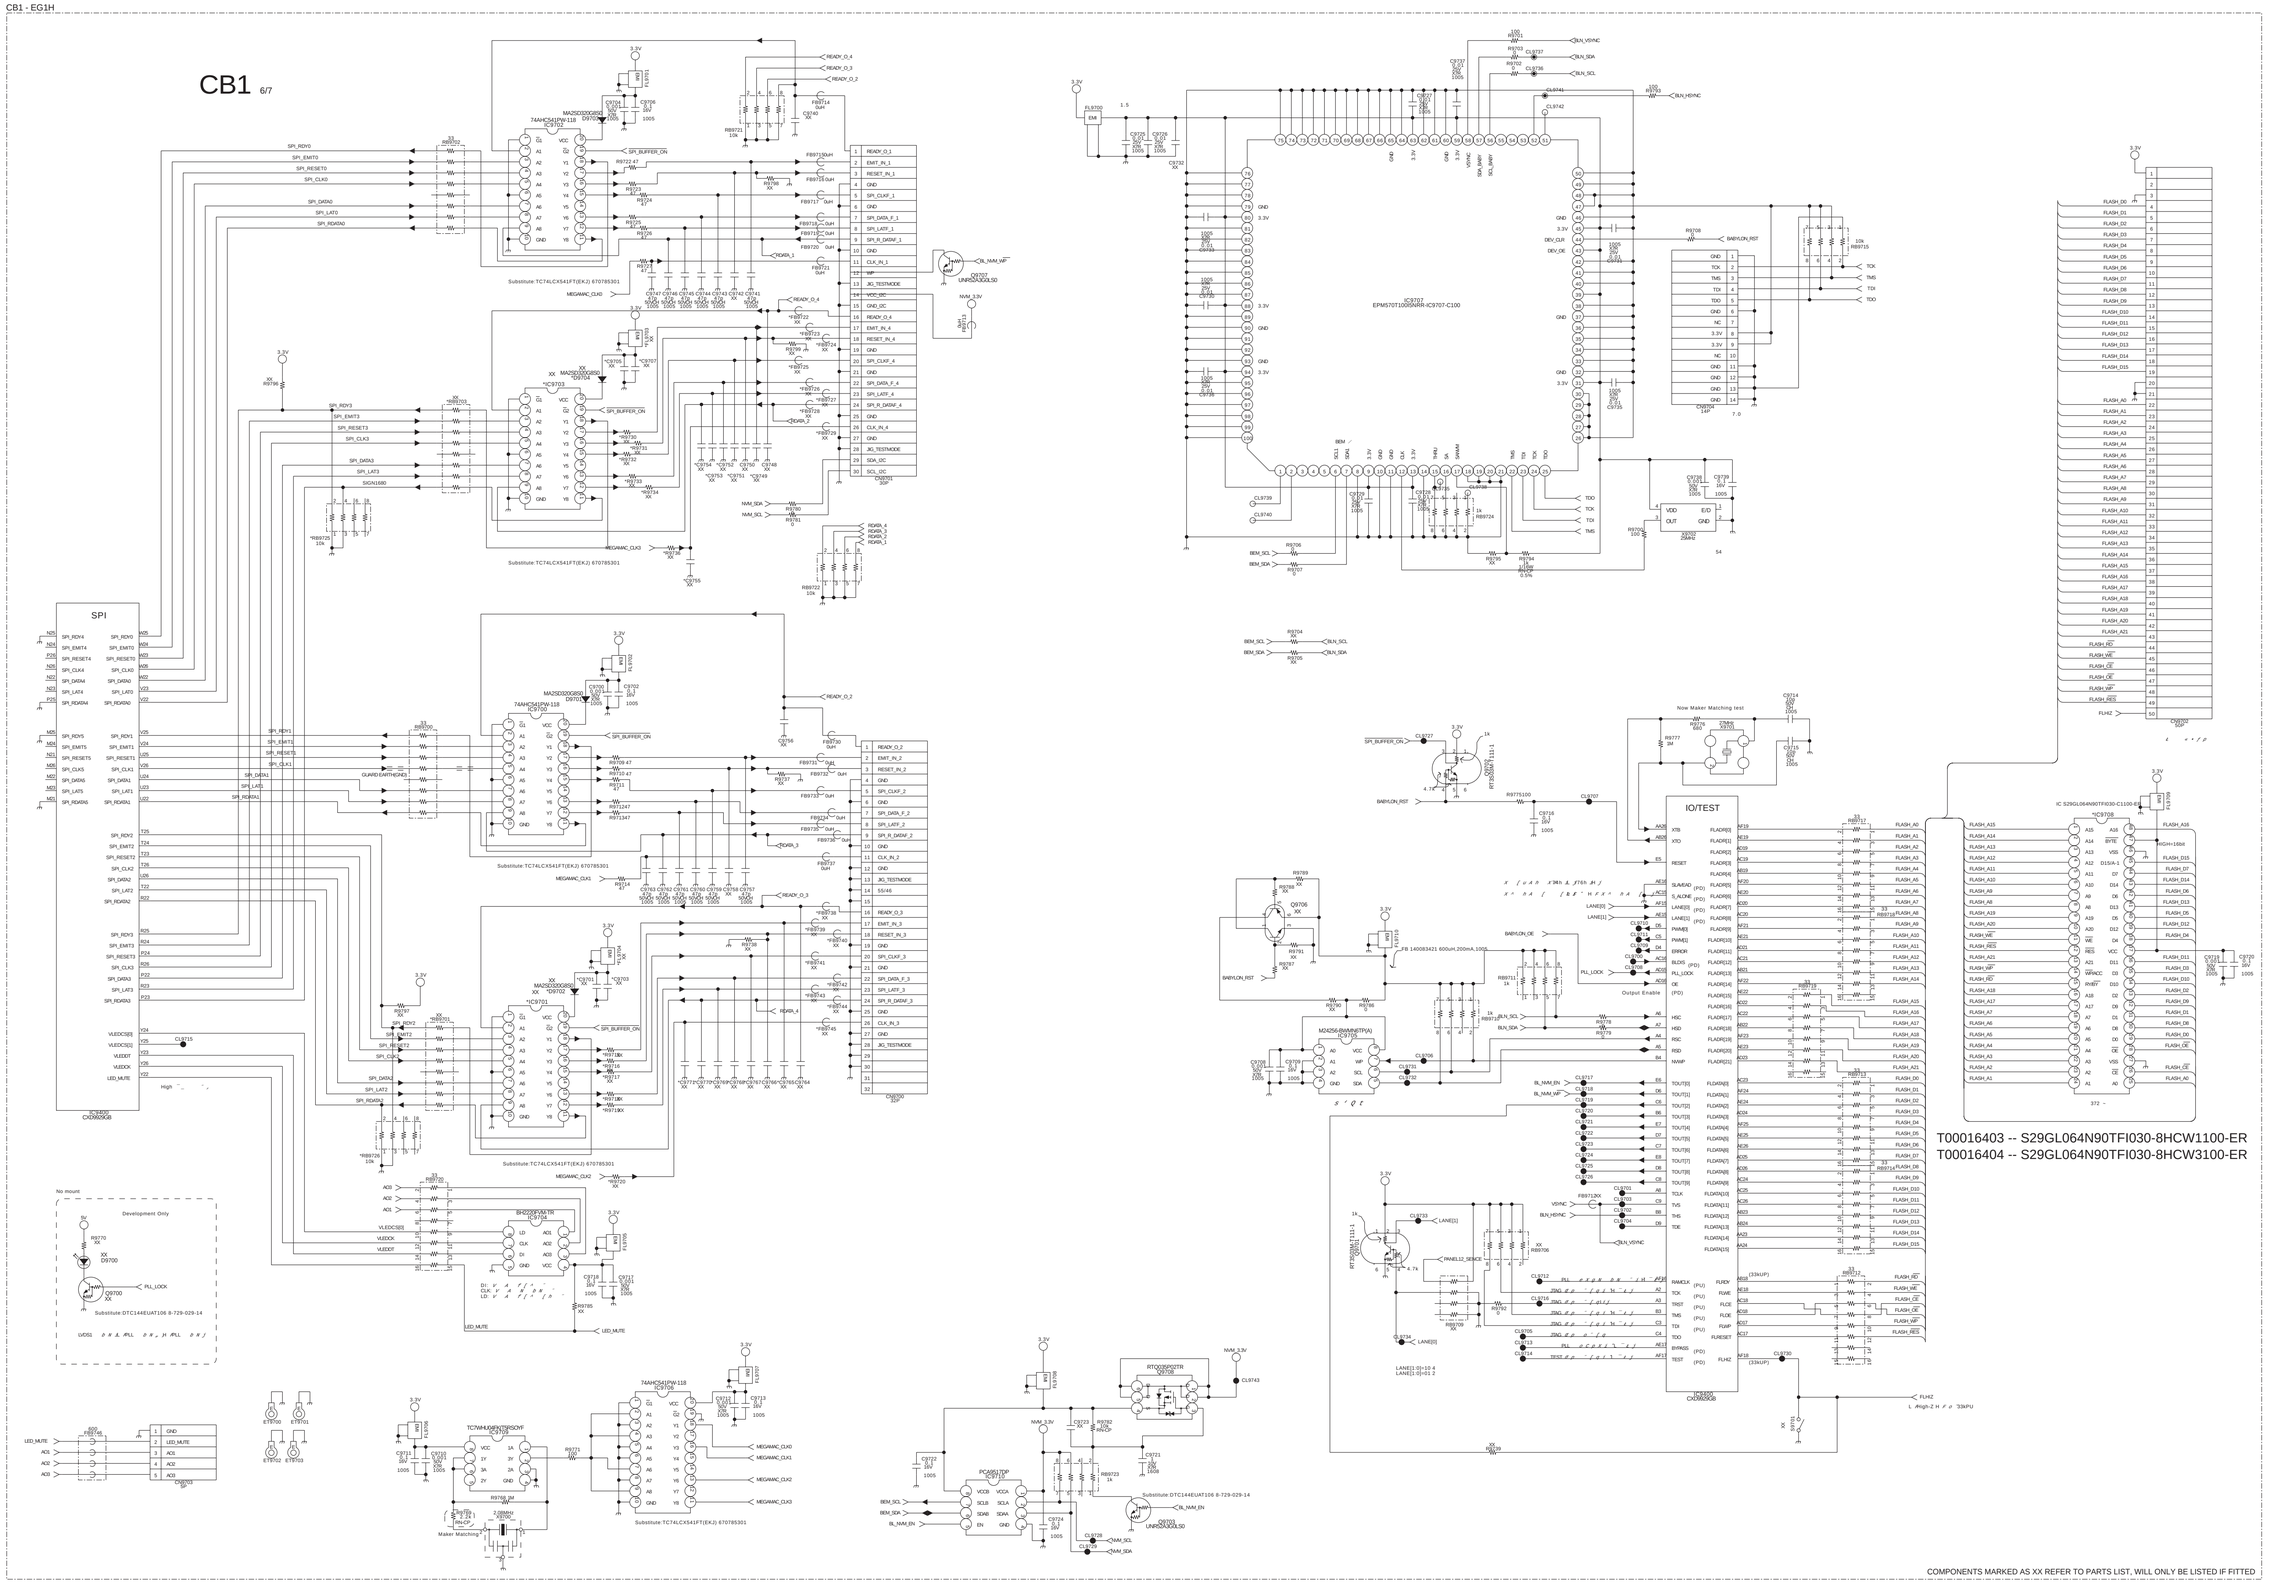
SPI
IC9400
CXD9929GB
SPI_RDY0
SPI_EMIT0
SPI_RESET0
SPI_CLK0
SPI_DATA0
SPI_LAT0
SPI_RDATA0
SPI_RDY1
SPI_EMIT1
SPI_RESET1
SPI_CLK1
SPI_DATA1
SPI_LAT1
SPI_RDATA1
SPI_RDY2
SPI_EMIT2
SPI_RESET2
SPI_CLK2
SPI_DATA2
SPI_LAT2
SPI_RDATA2
SPI_RDY3
SPI_EMIT3
SPI_RESET3
SPI_CLK3
SPI_DATA3
SPI_LAT3
SPI_RDATA3
VLEDCSEL
VLEDCSEL
VLEDCK
VLEDDT
LED_MUTE
IC9702
74AHC541PW-118
IC9703
74AHC541PW-118
IC9704
74AHC541PW-118
MAZSD3200GR50
D9702
D9703
D9704
Substitute:TC74LCX541FT(EKJ) 670785301
MEGAMAC_CLK0
MEGAMAC_CLK1
MEGAMAC_CLK2
MEGAMAC_CLK3
READY_0_1
EMIT_IN_1
RESET_IN_1
SPI_CLKF_1
SPI_DATA_F_1
SPI_LATF_1
SPI_R_DATAF_1
CLK_IN_1
JIG_TESTMODE
SDA_I2C
SCL_I2C
READY_0_2
EMIT_IN_2
RESET_IN_2
SPI_CLKF_2
SPI_DATA_F_2
SPI_LATF_2
SPI_R_DATAF_2
CLK_IN_2
READY_0_3
EMIT_IN_3
RESET_IN_3
SPI_CLKF_3
SPI_DATA_F_3
SPI_LATF_3
SPI_R_DATAF_3
CLK_IN_3
READY_0_4
EMIT_IN_4
RESET_IN_4
SPI_CLKF_4
SPI_DATA_F_4
SPI_LATF_4
SPI_R_DATAF_4
CLK_IN_4
SPI_BUFFER_ON
SPI_BUFFER_ON
SPI_BUFFER_ON
SPI_BUFFER_ON
GUARD EARTHGND
IC9701
EPM570T100I5N
IC9707
EPM570T100I5NRR-IC9707-C100
IC9708
IC S29GL064N90TFI030-C1100-ES
T00016403 -- S29GL064N90TFI030-8HCW1100-ER
T00016404 -- S29GL064N90TFI030-8HCW3100-ER
IO/TEST
IC9200
CXD9929GB
Q9700
Q9703
Q9706
Q9708
Q9709
Q9710
Q9711
Q9712
Q9713
Q9714
Q9715
Q9716
Q9717
Q9718
Q9719
Q9720
Q9721
Q9722
Q9723
Q9724
Q9725
Q9726
Q9727
Q9728
Q9729
Q9730
Q9731
Q9732
Q9733
Q9734
Q9735
Q9736
Q9737
Q9738
Q9739
Q9740
Q9741
Q9742
Q9743
Q9744
Q9745
Q9746
Q9747

CB1 - EG1H

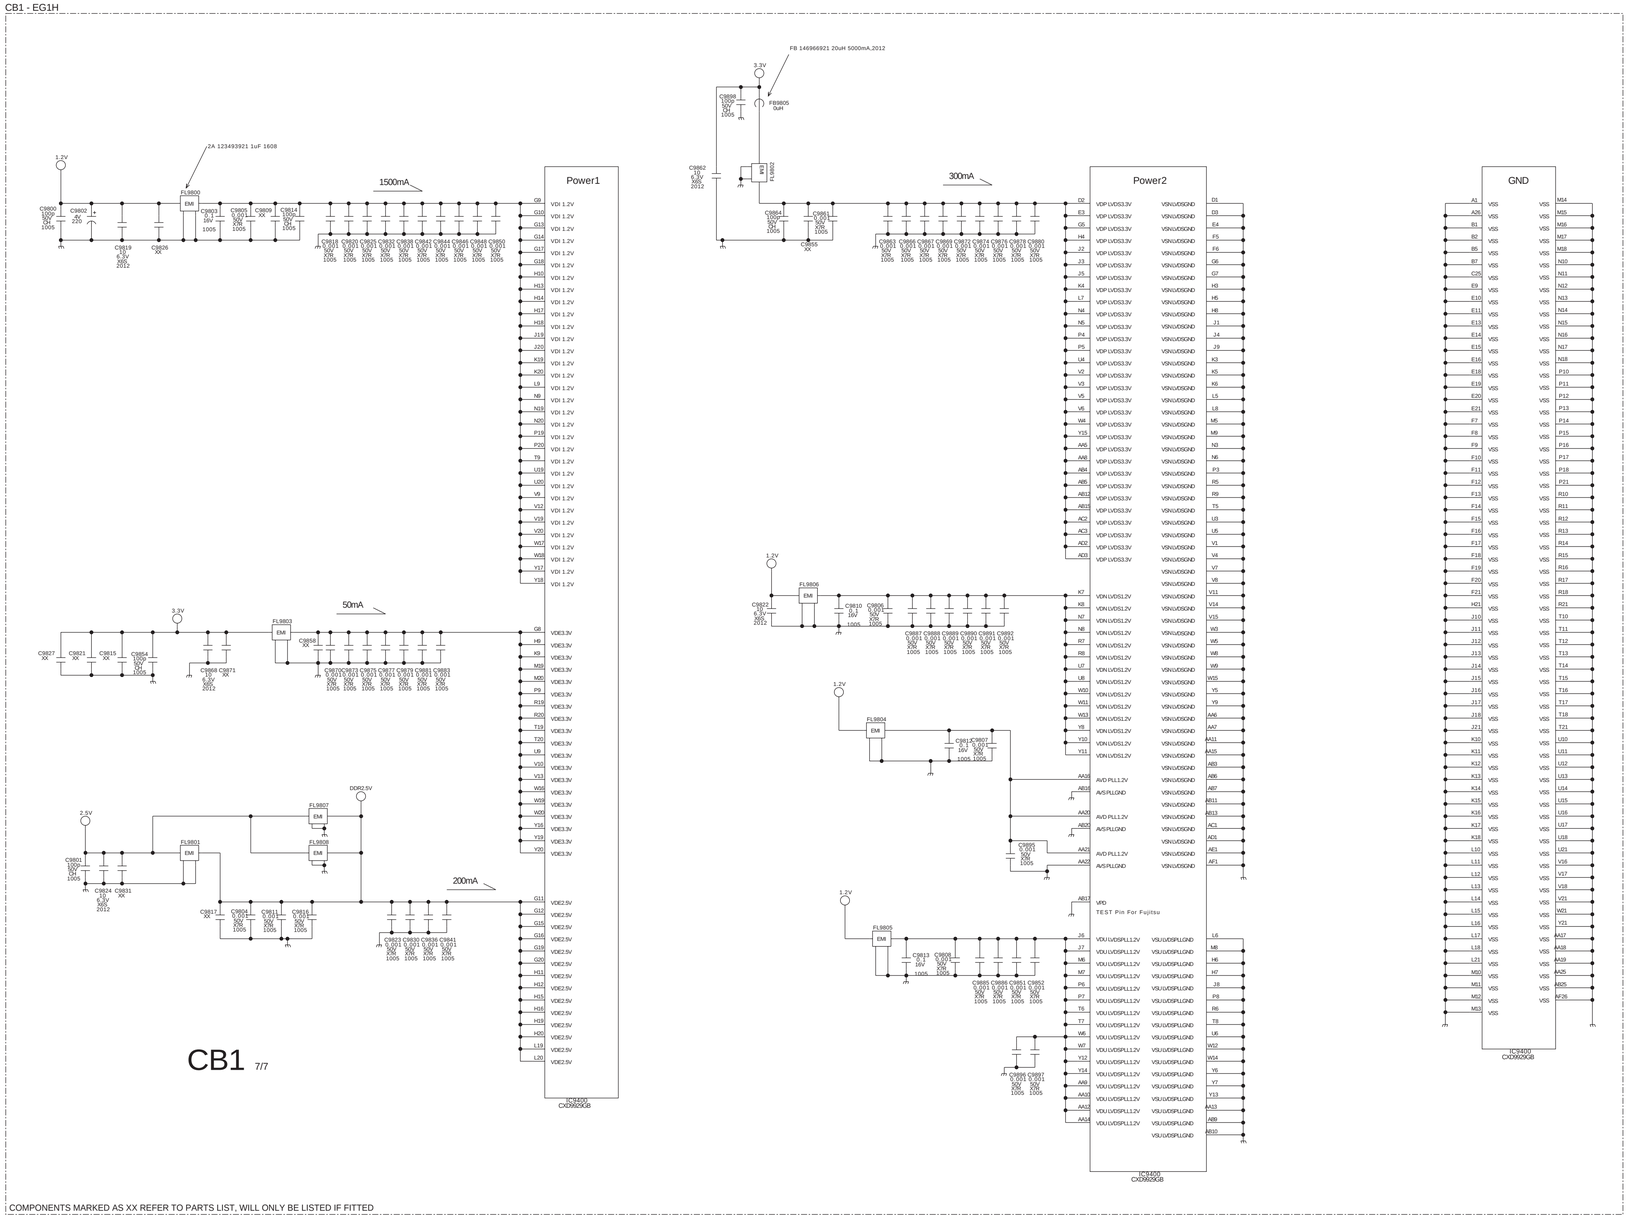

CB1 7/7

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

D4 - EG1H (40 inches only)

D4 INVERTER POWER SUPPLY

NEW HIT-1300 TYPE

40" HIT-1300
46" HIT-1301
52" HIT-1302

HIROSE MDF61

HIGH VOLTAGE OUTPUT

SUFFIX
40INCH
46INCH
52INCH

52" ONLY

FROM G BOARD

FOR 40"

FOR 46"..52"

TO BALANCER

To D5

40" FDK NEW Drive Trans
46" SANKEN NEW Drive Trans
52" SANKEN NEW Drive Trans

Y CAP
MURATA TYPE:KX
TDK TYPE:CD

Mount Mecha A6607	263406661	D6604,Q6602

Mount Mecha A6608	263406661	D6605,Q6603

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

~ D4 Board Schematic Diagram [Inverter Power Supply] ~

FBA - EG1H

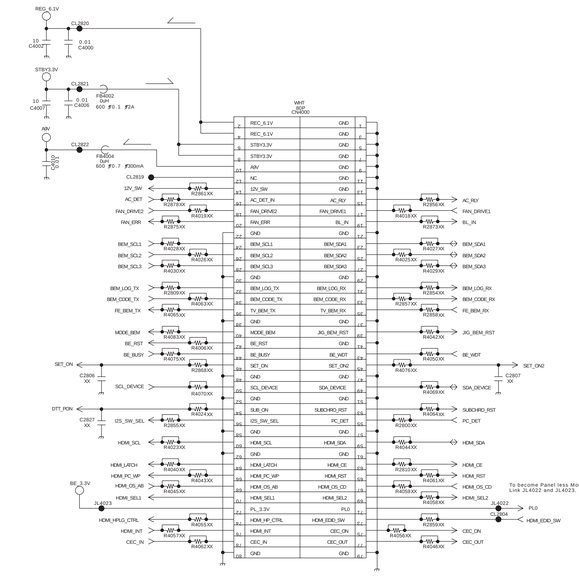

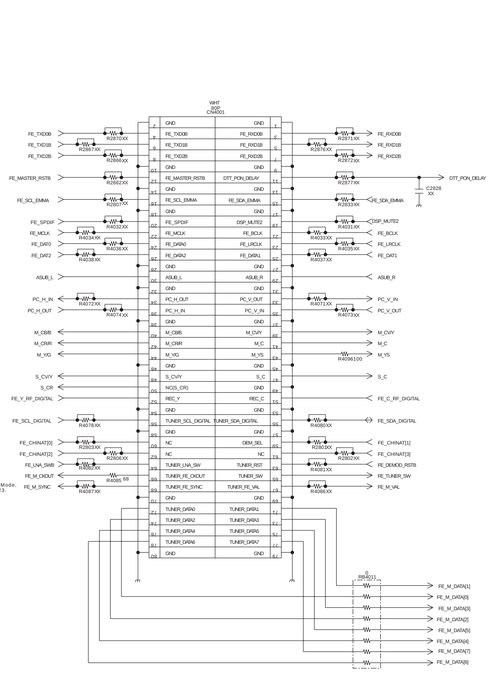

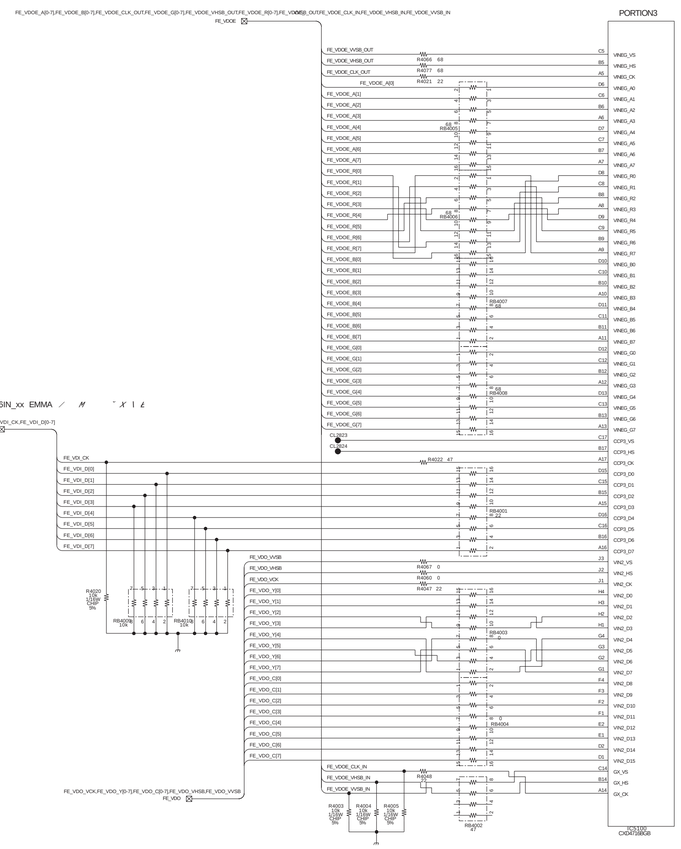

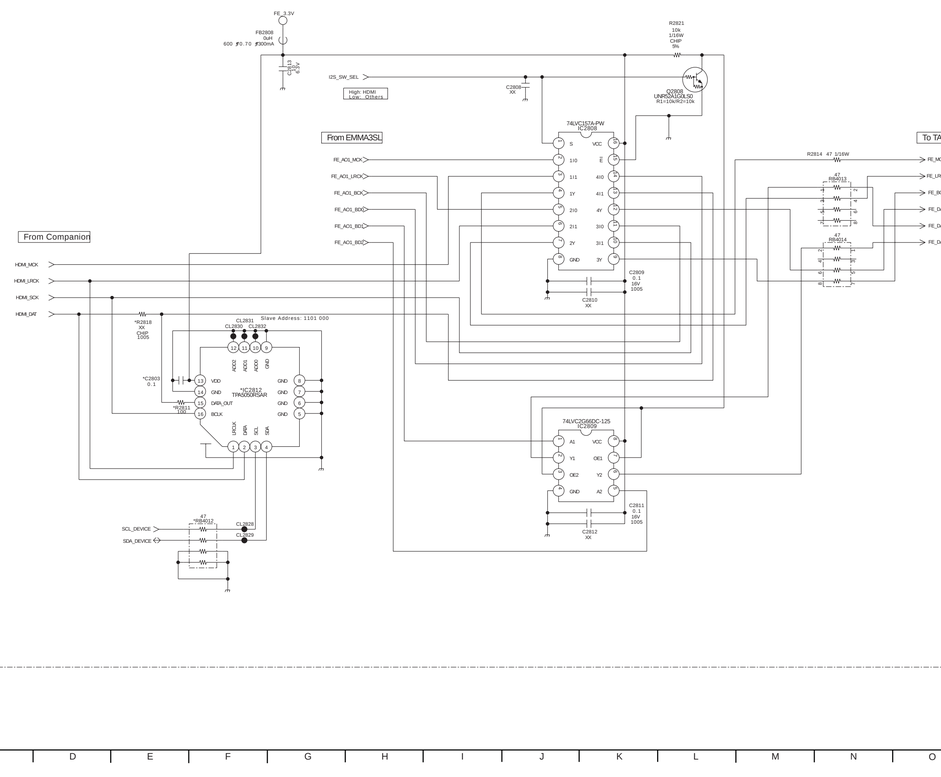

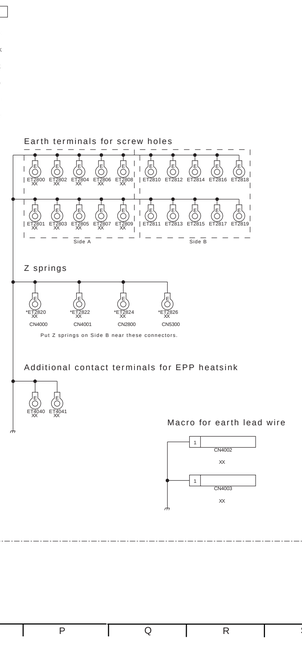

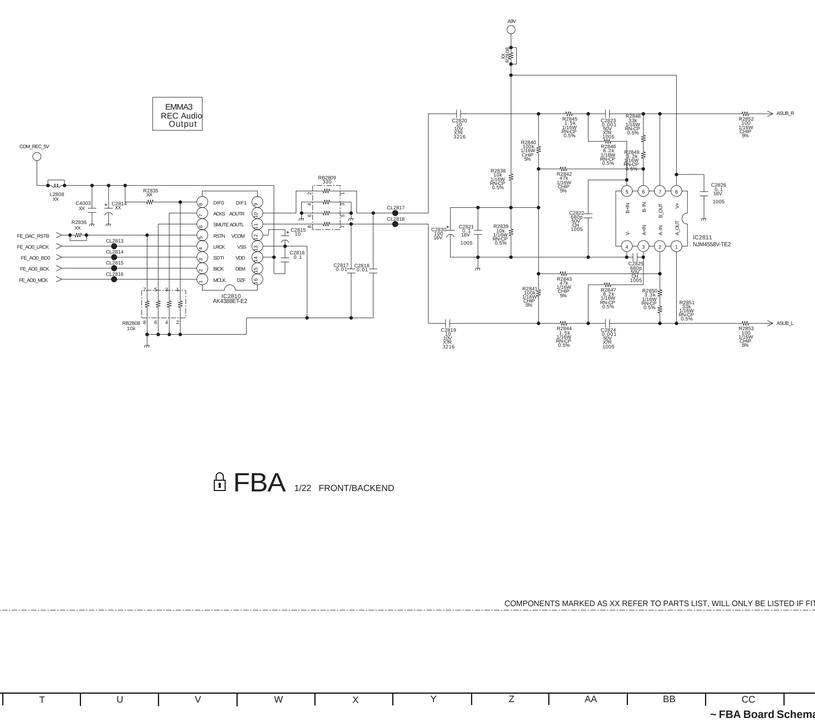

FBA 1/22 FRONT/BACKEND

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

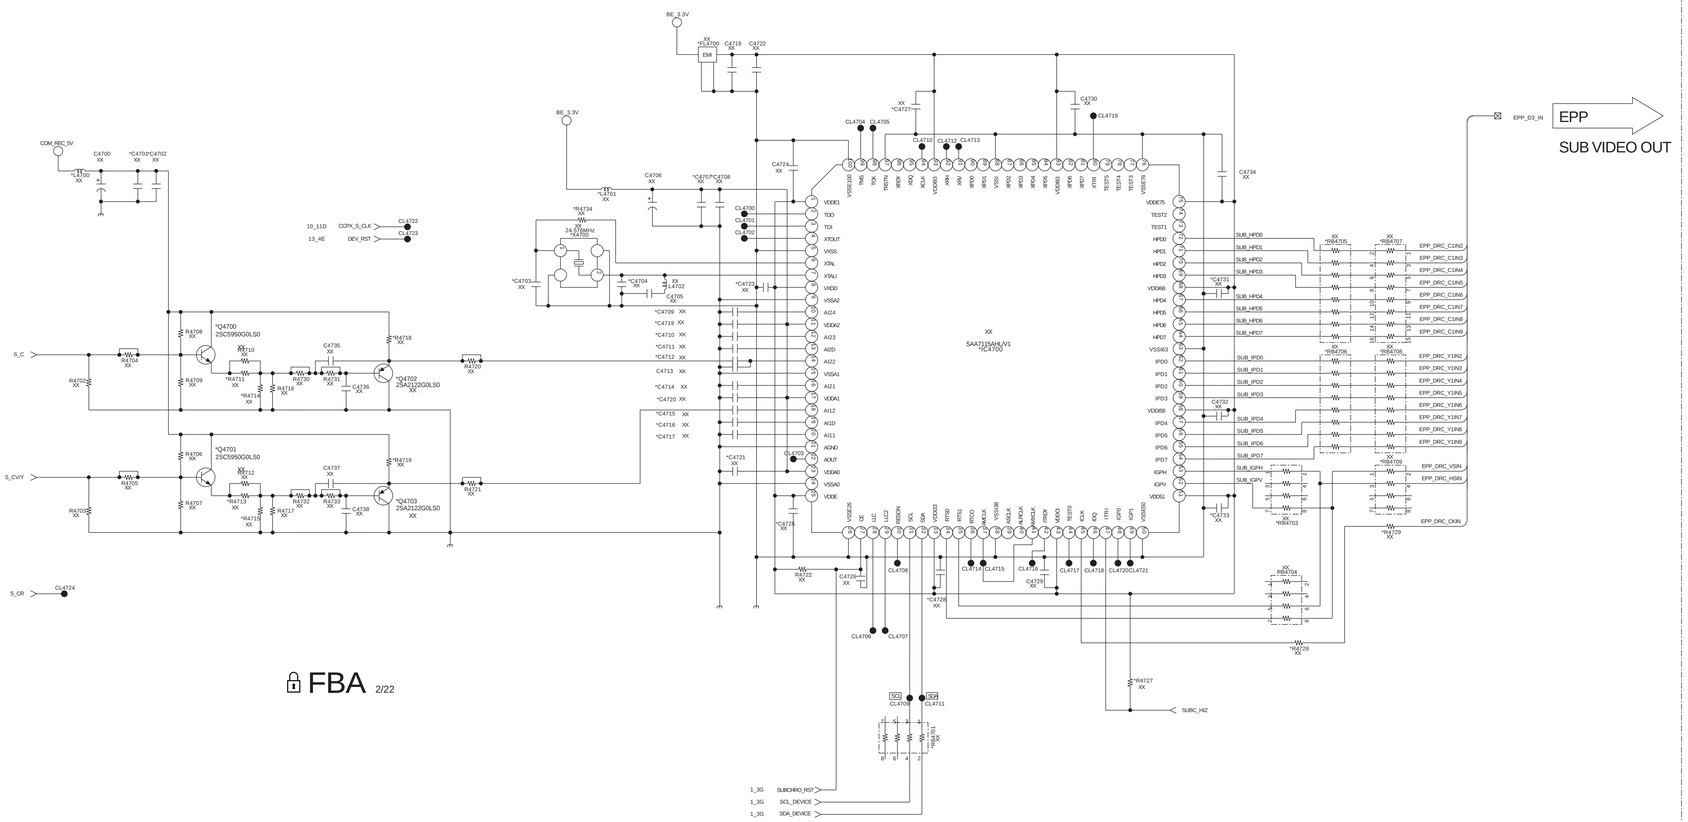

COMPONENTS MARKED AS XX REFER TO PARTS LIST. WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 3/22

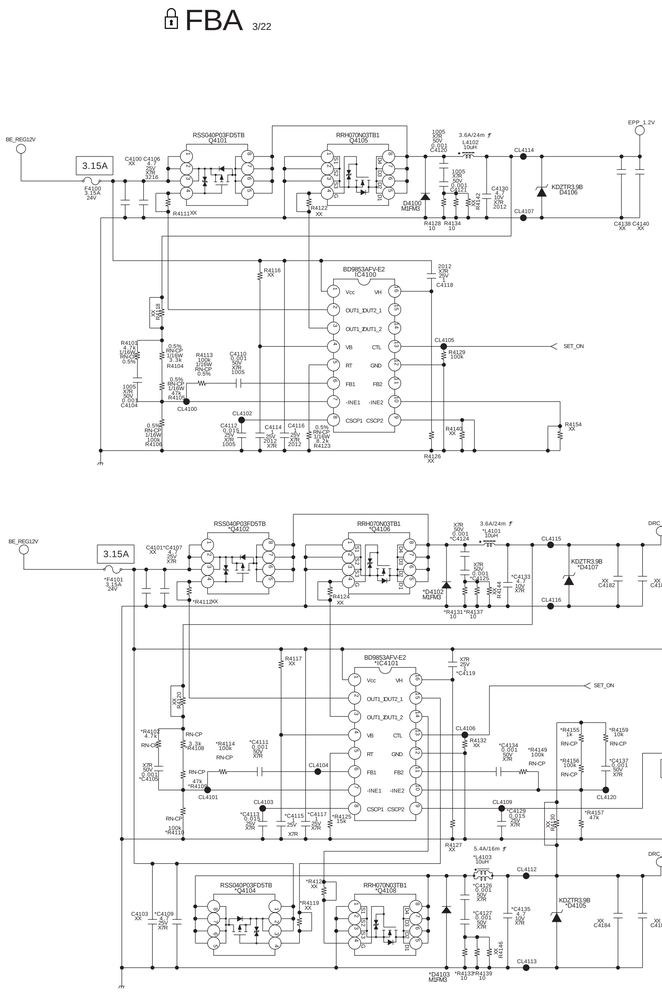

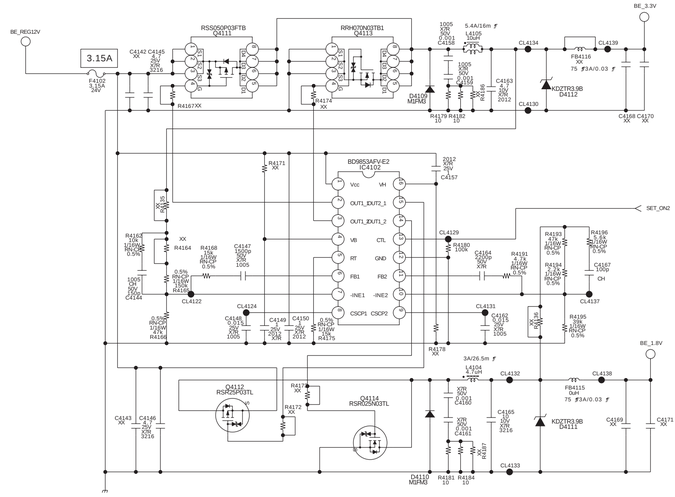

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

VD4304-VD4306, VD4310-VD4314 1pin 10pin, 2pin 9pin, 4pin 7pin, 5pin 6pin

FBA 4/22

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA 5/22

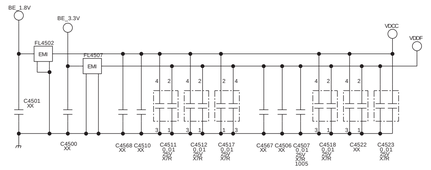

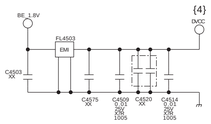









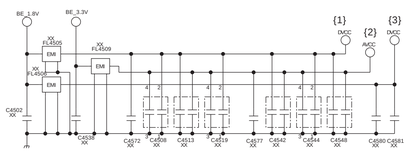

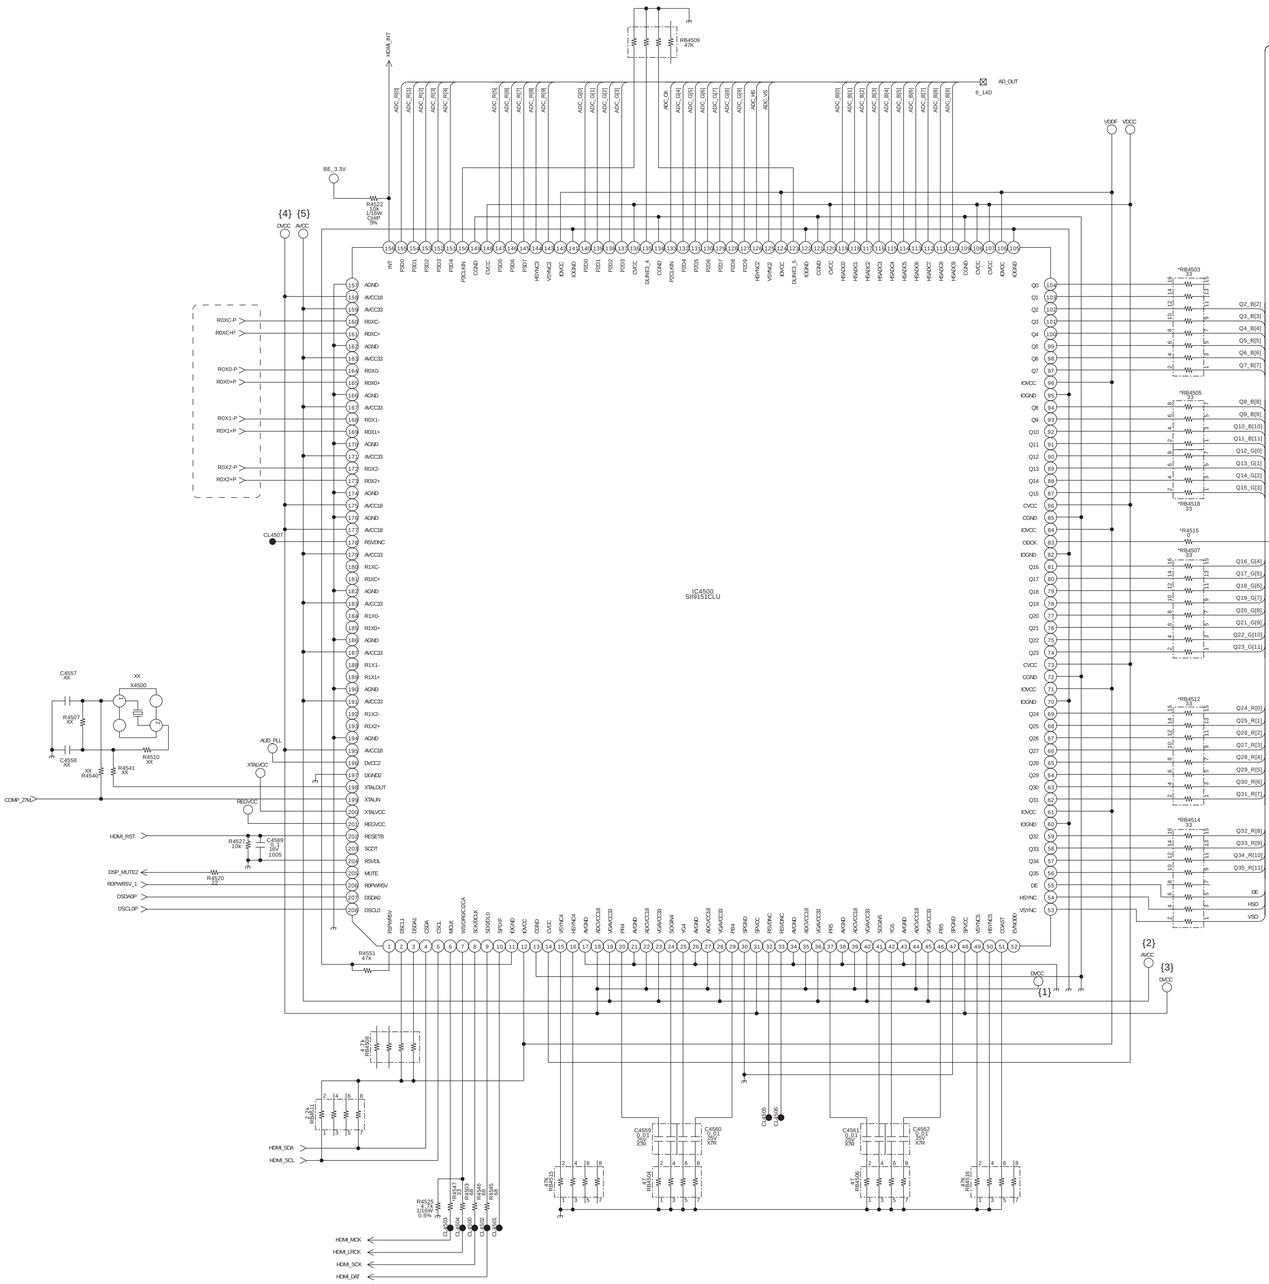

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 6/22

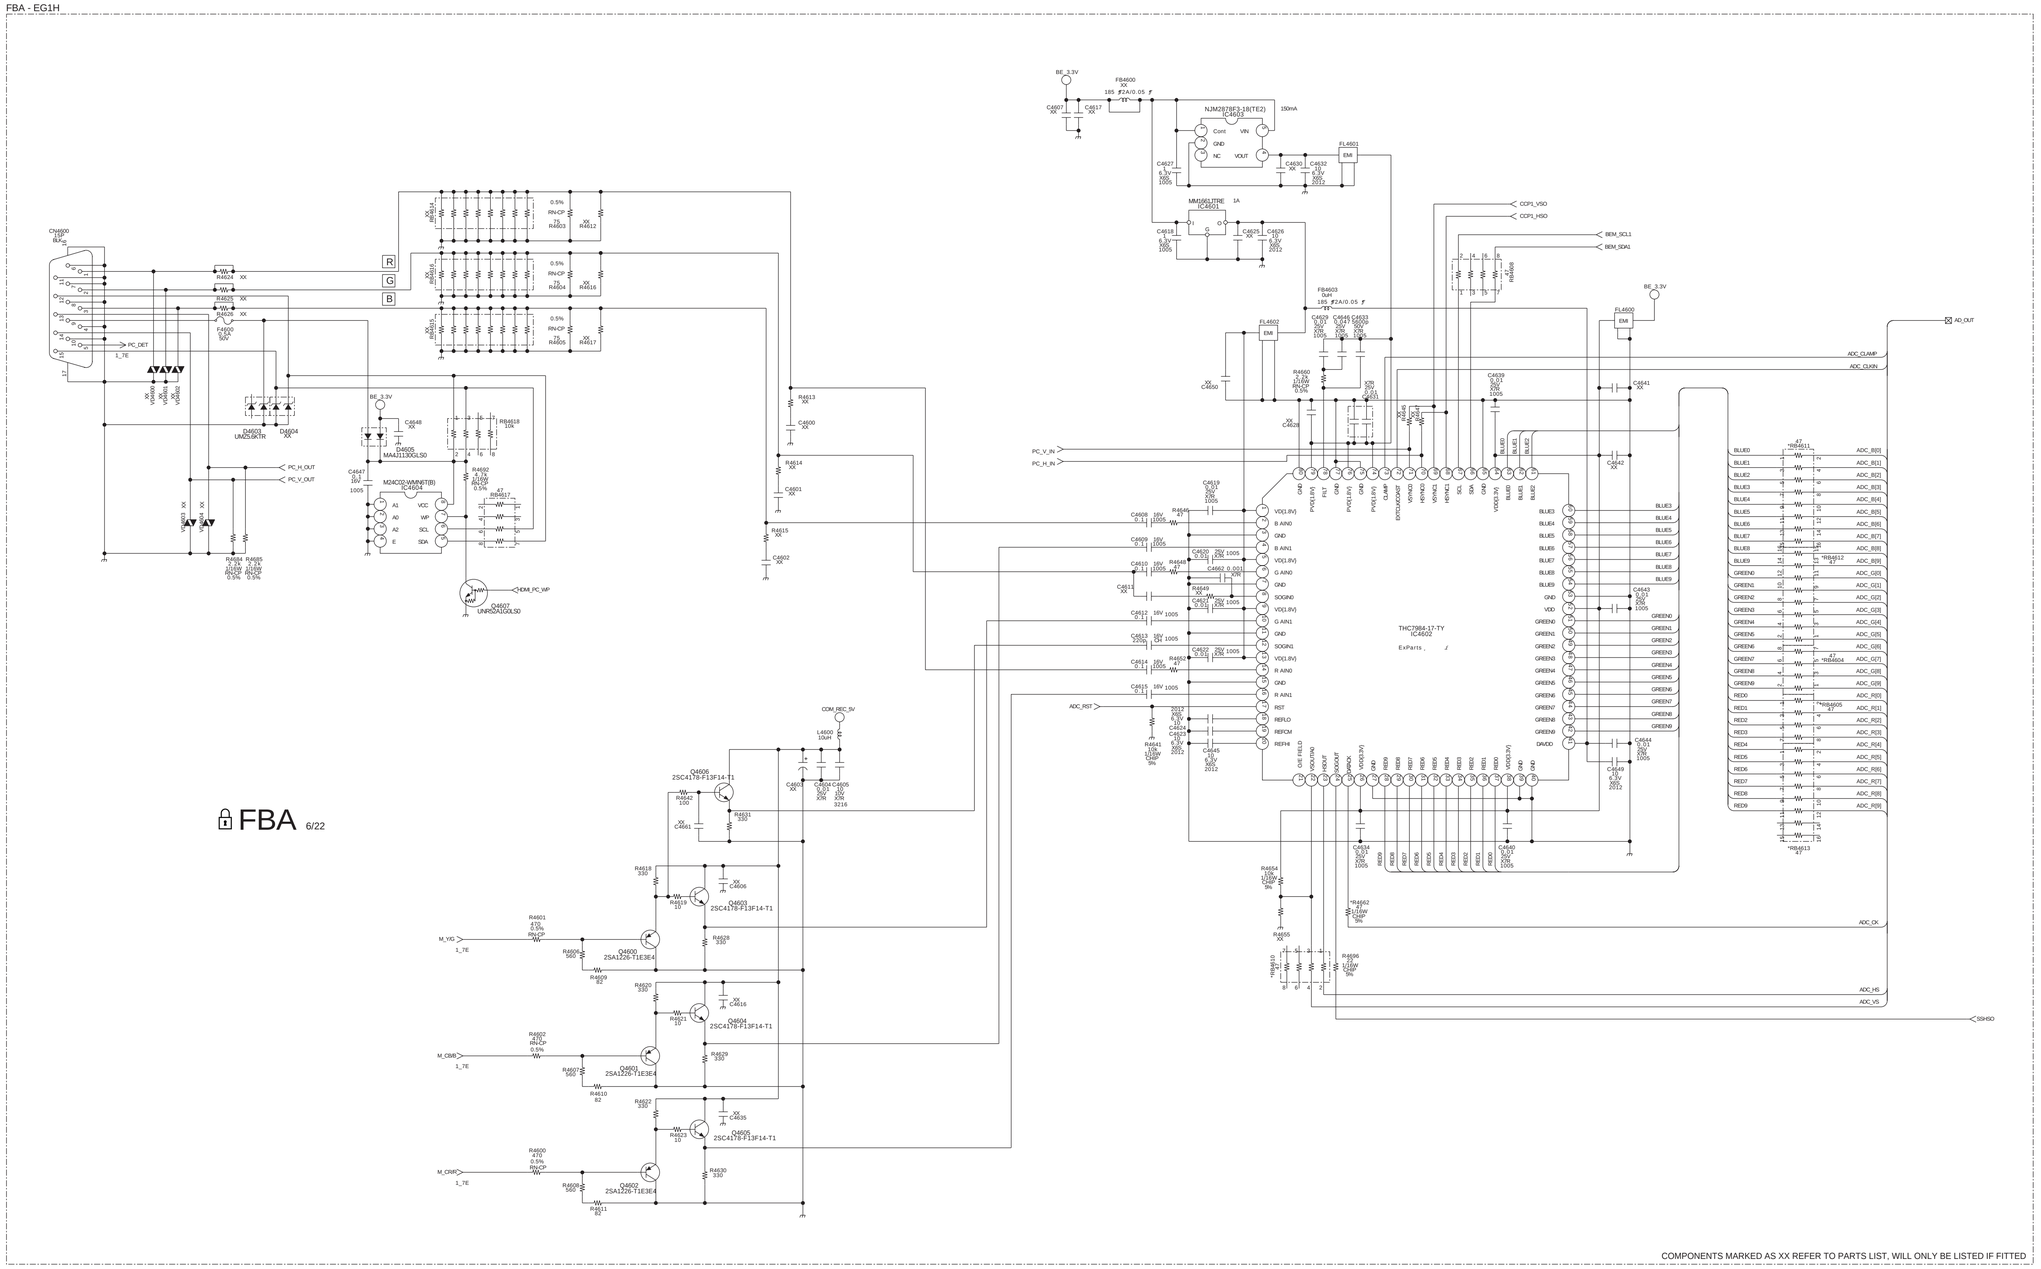

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 7/22

Portion1

*RB4807 22
*RB4808 22
*RB4822 22
*RB4820 22
*RB4821 22
*RB4809 22
*RB4810 22
*RB4831 22
*RB4901 33
*RB4900 33
*RB4903 47
*RB4902 47
*RB4805 33
*RB4804 33
*RB4807 47
*RB4806 47
*RB4800 33
*RB4811
*RB4802 33
*RB4813
*RB4814
*RB4827 10K
*C4812 0.1
*RB4805 0
*RB4826 0
*RB4830 22
*RB4850 XX
*RB4851 XX
*RB4848 XX
*RB4849 XX
*RB4809 XX
*RB4810 XX
*RB4811 XX
*RB4812 XX
*RB4813 XX
*RB4814 XX
*RB4815 XX
*RB4816 XX
*RB4817 XX
*RB4818 XX
*RB4819 XX
*RB4820 XX
*RB4821 XX
*RB4822 XX
*RB4823 XX
*RB4824 XX
*RB4825 XX
*RB4826 XX
*RB4827 XX
*RB4828 XX

FBA - EG1H

Portion2

Portion4

Portion3

EDD1232ABBH-5C-E-TR
*IC4900

EDD1232ABBH-5C-E-TR
*IC4902

EDD1232ABBH-5C-E-TR
*IC4901

EDD1232ABBH-5C-E-TR
*IC4903

CXD5602GB
*IC4800

CXD5602GB
*IC4801

CXD5602GB
*IC4802

TPS51100DGQR
*IC4902

TPS51100DGQR
*IC4905

FBA 8/22

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

Portion9

Portion10

Portion11

Portion12

Portion13

FBA 9/22

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 10/22

Mount Mecha A5100	339854001	

*ETS100 ETS101 ETS102 ETS103 ETS104 ETS105 XX

PORTION12

PORTION13

PORTION14

PORTION1

PORTION7

PORTION9

PORTION8

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 11/22

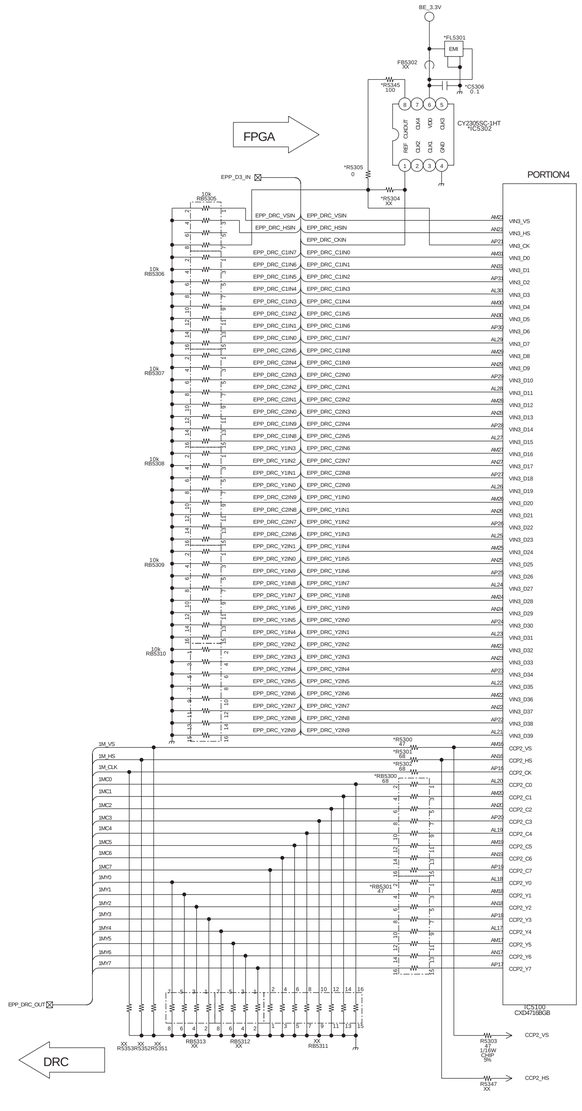

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 12/22

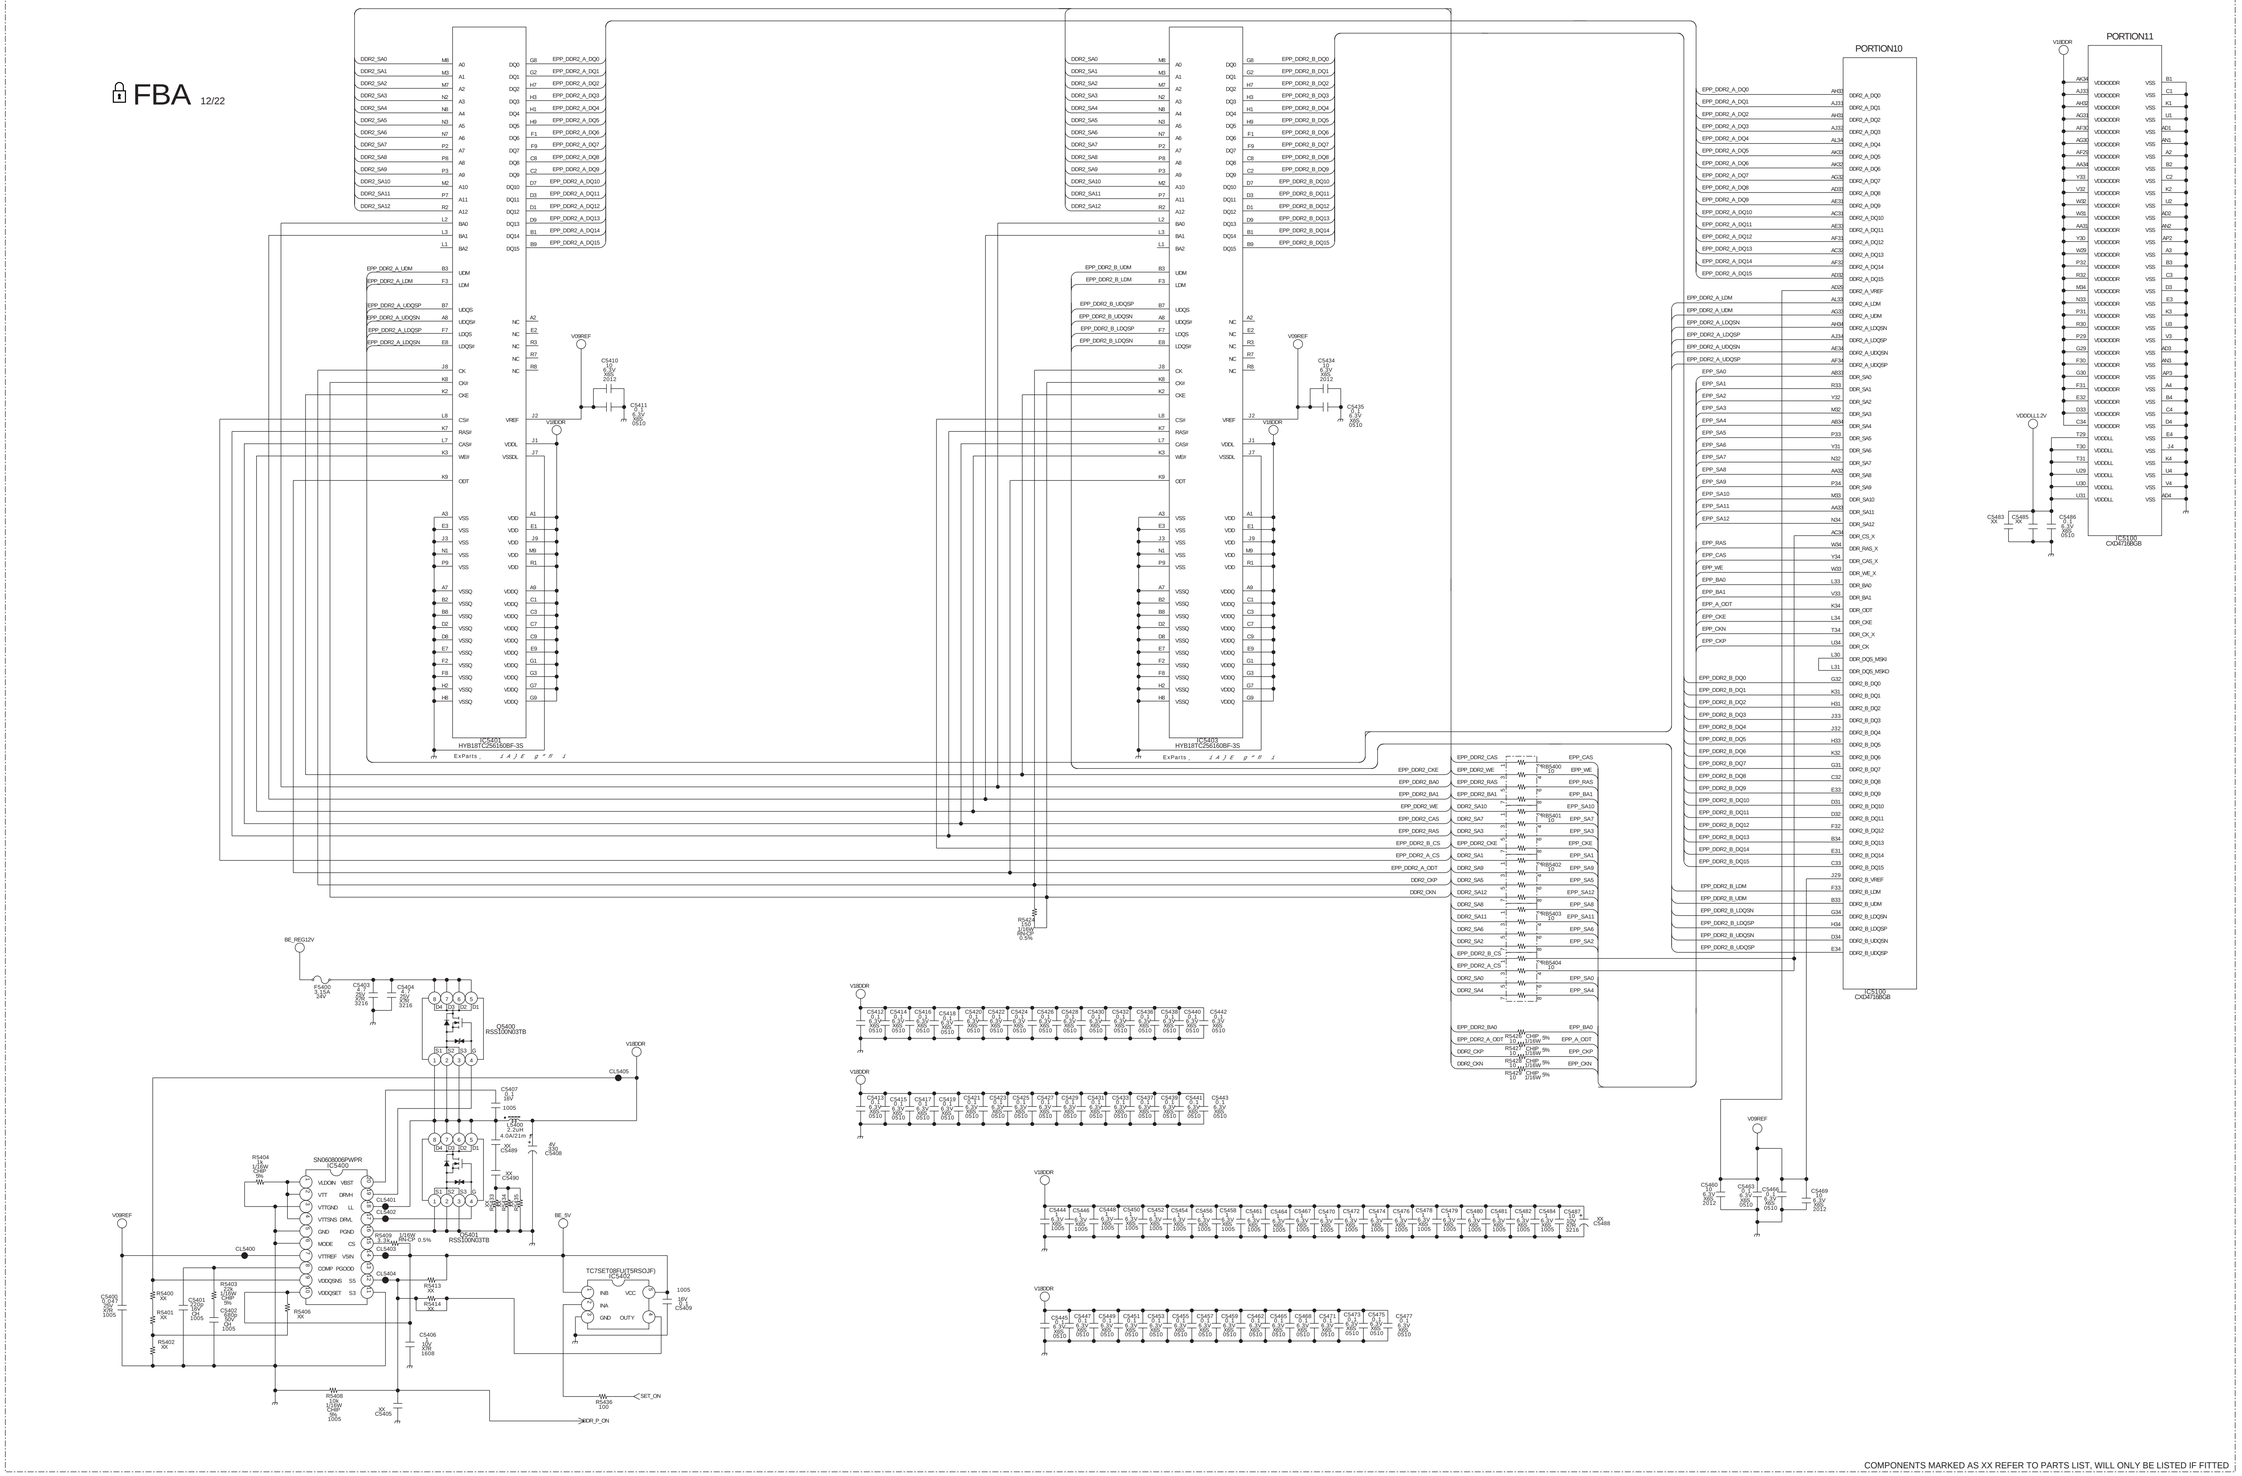

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 13/22

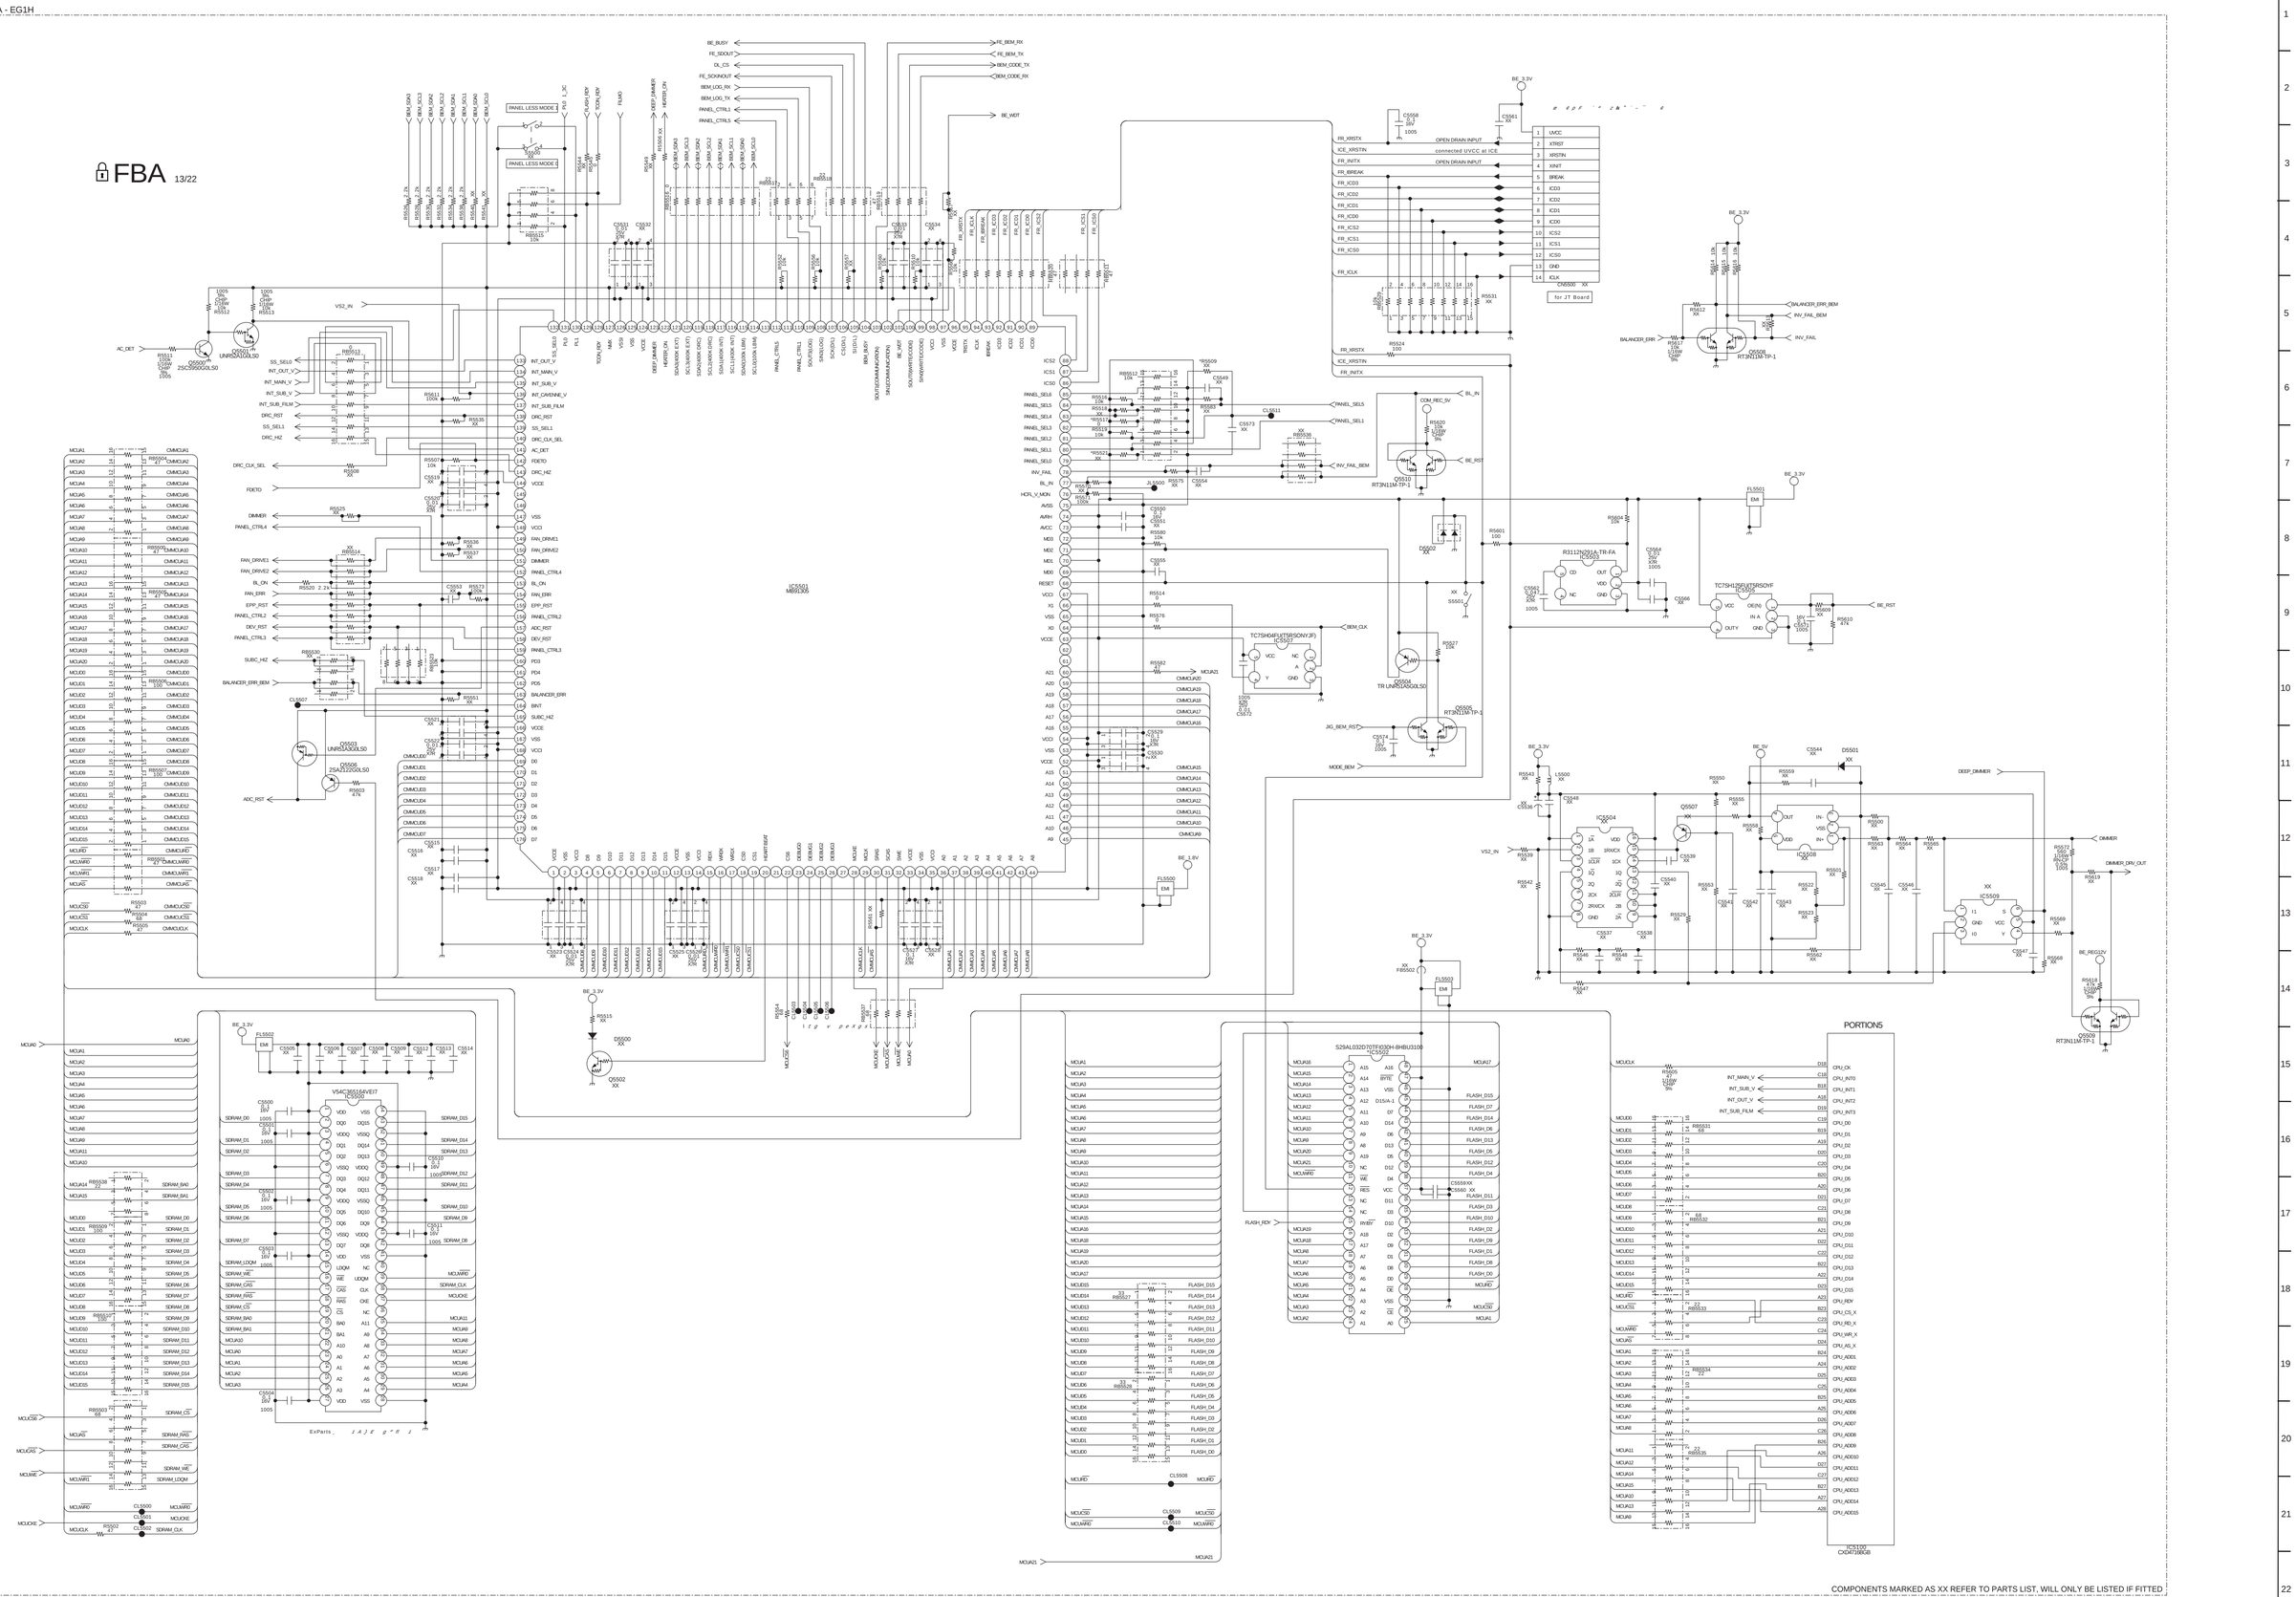

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

Unreg12V Input

FE_12V
12V_MAIN
CL7800
F7800 1.6A 36V
12V_SUB
CL7801
F7801 1.6A 36V
C7801 10V 3216
C7802 10V 3216
C7804 0.022 25V X5R 1005
C7810 10V 1005
MP2303DN-LF-Z IC7801
BS SS
IN EN
SW COMP
GND FB
DTT_PON_DELAY
C7813 0.022 25V X5R 1005
R7802 51k 1/10W 0.5%
R7803 22k 1/10W 0.5%
R7806 100 1/10W 0.5%
R7810 82k 1/10W 0.5%
L7802 10uH
UDZSTE-176.2B D7802
CI/USB 5V
FE_5V
CL7802
Q7808 RTR040N03TL
R7876 330
C7814 330 6.3V

DDR2 0.9V
JL7800
R7812 XX
C7824 XX
C7825 XX
R7823 XX
Q7800 XX
C7835 XX
L7804 XX
R7836 XX
R7837 XX
C7836 XX
C7837 XX
IC7802
VLDOIN/BST
VTT DRVH
VTTGND LL
VTTSNS/DRVL
GND PGND
MODE CS
VTTREFVSIN
COMPGOOD
VDDQSNS/S3
VDDQSET/S3
R7817 XX
R7824 XX
R7825 XX
R7826 XX
R7827 XX
R7828 XX
R7829 XX
R7813 XX
R7814 XX
R7815 XX
R7816 XX
C7819 XX
C7820 XX
C7821 XX
R7818 XX
R7869 XX
C7828 XX
R7875 XX
DTT_PON_DELAY
DD_5V

EMMA/DDR2 1.8V
FE_1.8V
CL7805
D7807 1SMA5915BT
L7805 2.2uH
C7840 330 4V
Q7802 RTR040N03TL
Q7803 RTR040N03TL
C7842 4.7 16V 3216
C7844 0.1 16V
C7845 XX
R7845 1.8k 0.5%
R7849 12k 0.5%
R7850 10k 0.5%
C7850 XX
R7855 10k 0.5%
R7856 560 0.5%
R7859 3.3k 0.5%
R7860 100 0.5%
R7841 XX
R7854 XX
IC7806 TPS51124IPWPRG4
VO2 VREF2 TONSEL GND VREF1 VO1
PGOOD2 EN2 VBST2 DRVH2 LL2 DRVL2
PGOOD1 EN1 VBST1 DRVH1 LL1 DRVL1
GND2 TRIP2 VSFLT VSN TRIP1 GND1
C7849 0.1 16V
R7853 4.7k 0.5%
C7846 4.7 10V 2012
C7847 10V 1608
R7852 3.3 1/10W 1608
R7846 10k
R7851 10k
DTT_PON_DELAY
DD_5V
Q7804 RSS100N03TB
Q7805 RSS100N03TB
C7852 16V 3216
C7853 16V 3216
R7881 1/10W 0.5%
SENSE_LINE
FE_1.05V
1.05V Output (without PLL)
C7854 330 4V
L7806 4.7uH
D7808 1SMA5915BT

FE 3.3V
FE_3.3V
Q7806 RTR020P02TR
CL7807
C7856 4.7 10V 1005
R7867 10k
R7866 1k
Q7807 RTR021P01C-TP-1
DTT_PON_DELAY

EMMA PLL 1.05V Output
IC7807 MM3141ZNRE(1.07V)
VDD VOUT
GND
CE NC
C7859 1u 10V 1608
C7857 XX
C7858 1u 6.3V X5R 2012
FE_PLL_1.05V
CL7808
DTT_PON

IC7803 MP1415DSE-LF-Z
BS SS
IN EN
OUT COMP
GND FB
C7822 0.01 25V X7R
C7826 0.01 25V X7R
R7831 1/10W 0.5%
R7832 1/10W 1% 5W
Q7809 XX
R7878 XX
C7816 4.7 16V 3216 X7R
C7818 4.7 16V 3216
D7803 MBR40
R7819 1/10W 0.5%
R7828 10k 1/10W 0.5%
R7820 1/10W 0.5%
R7834 1/10W 0.5%
C7831 470/10 25V X5R 1005
L7802 15uH
D7805 XX
C7829 6.3V X5R 2012
C7832 6.3V X5R 2012
D7809 XX
R7877 XX
Q7810 XX

IC7808 NJM2831F05(TE1)
CONT VIN
GND
NP VOUT
DTT_PON
R7864 10k
DD_5V
CL7803
C7806 10u 10V X5R 3216
C7808 1 10V X5R 1608

IC7804
CONT VIN
GND
NP VOUT
DTT_PON
FE_A_5V
CL7804
XX C7802
XX C7805

FBA 14/22

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

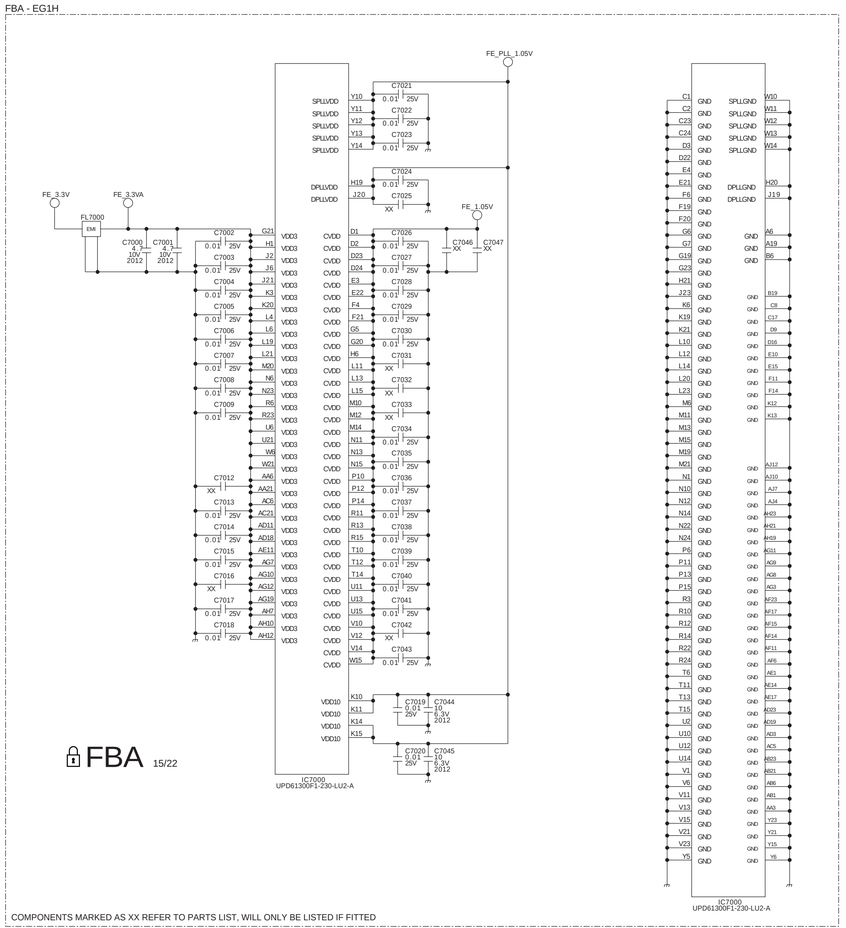

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

~ FBA Board Schematic Diagram [Front/Backend] Page 15/22 ~

FBA - EG1H

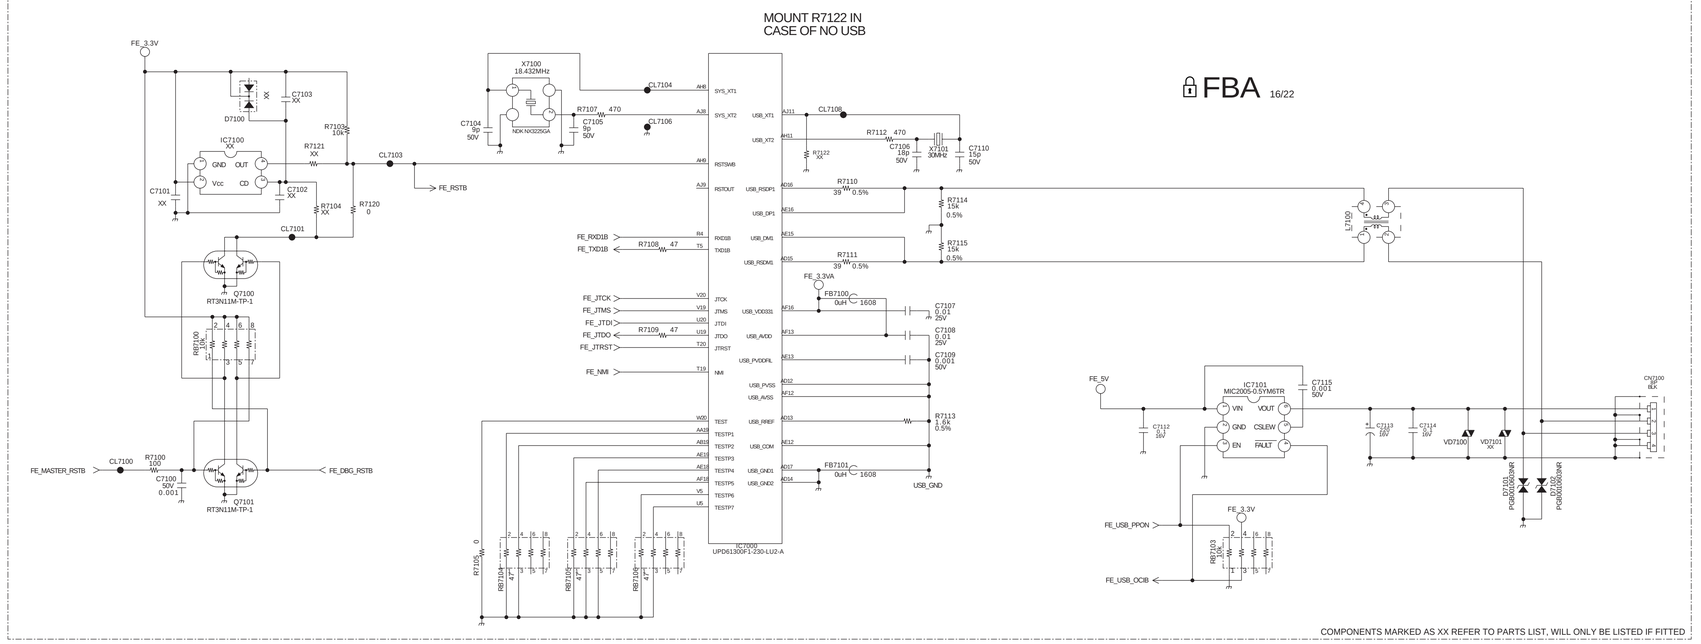

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

~ FBA Board Schematic Diagram [Front/Backend] Page 16/22 ~

FBA - EG1H

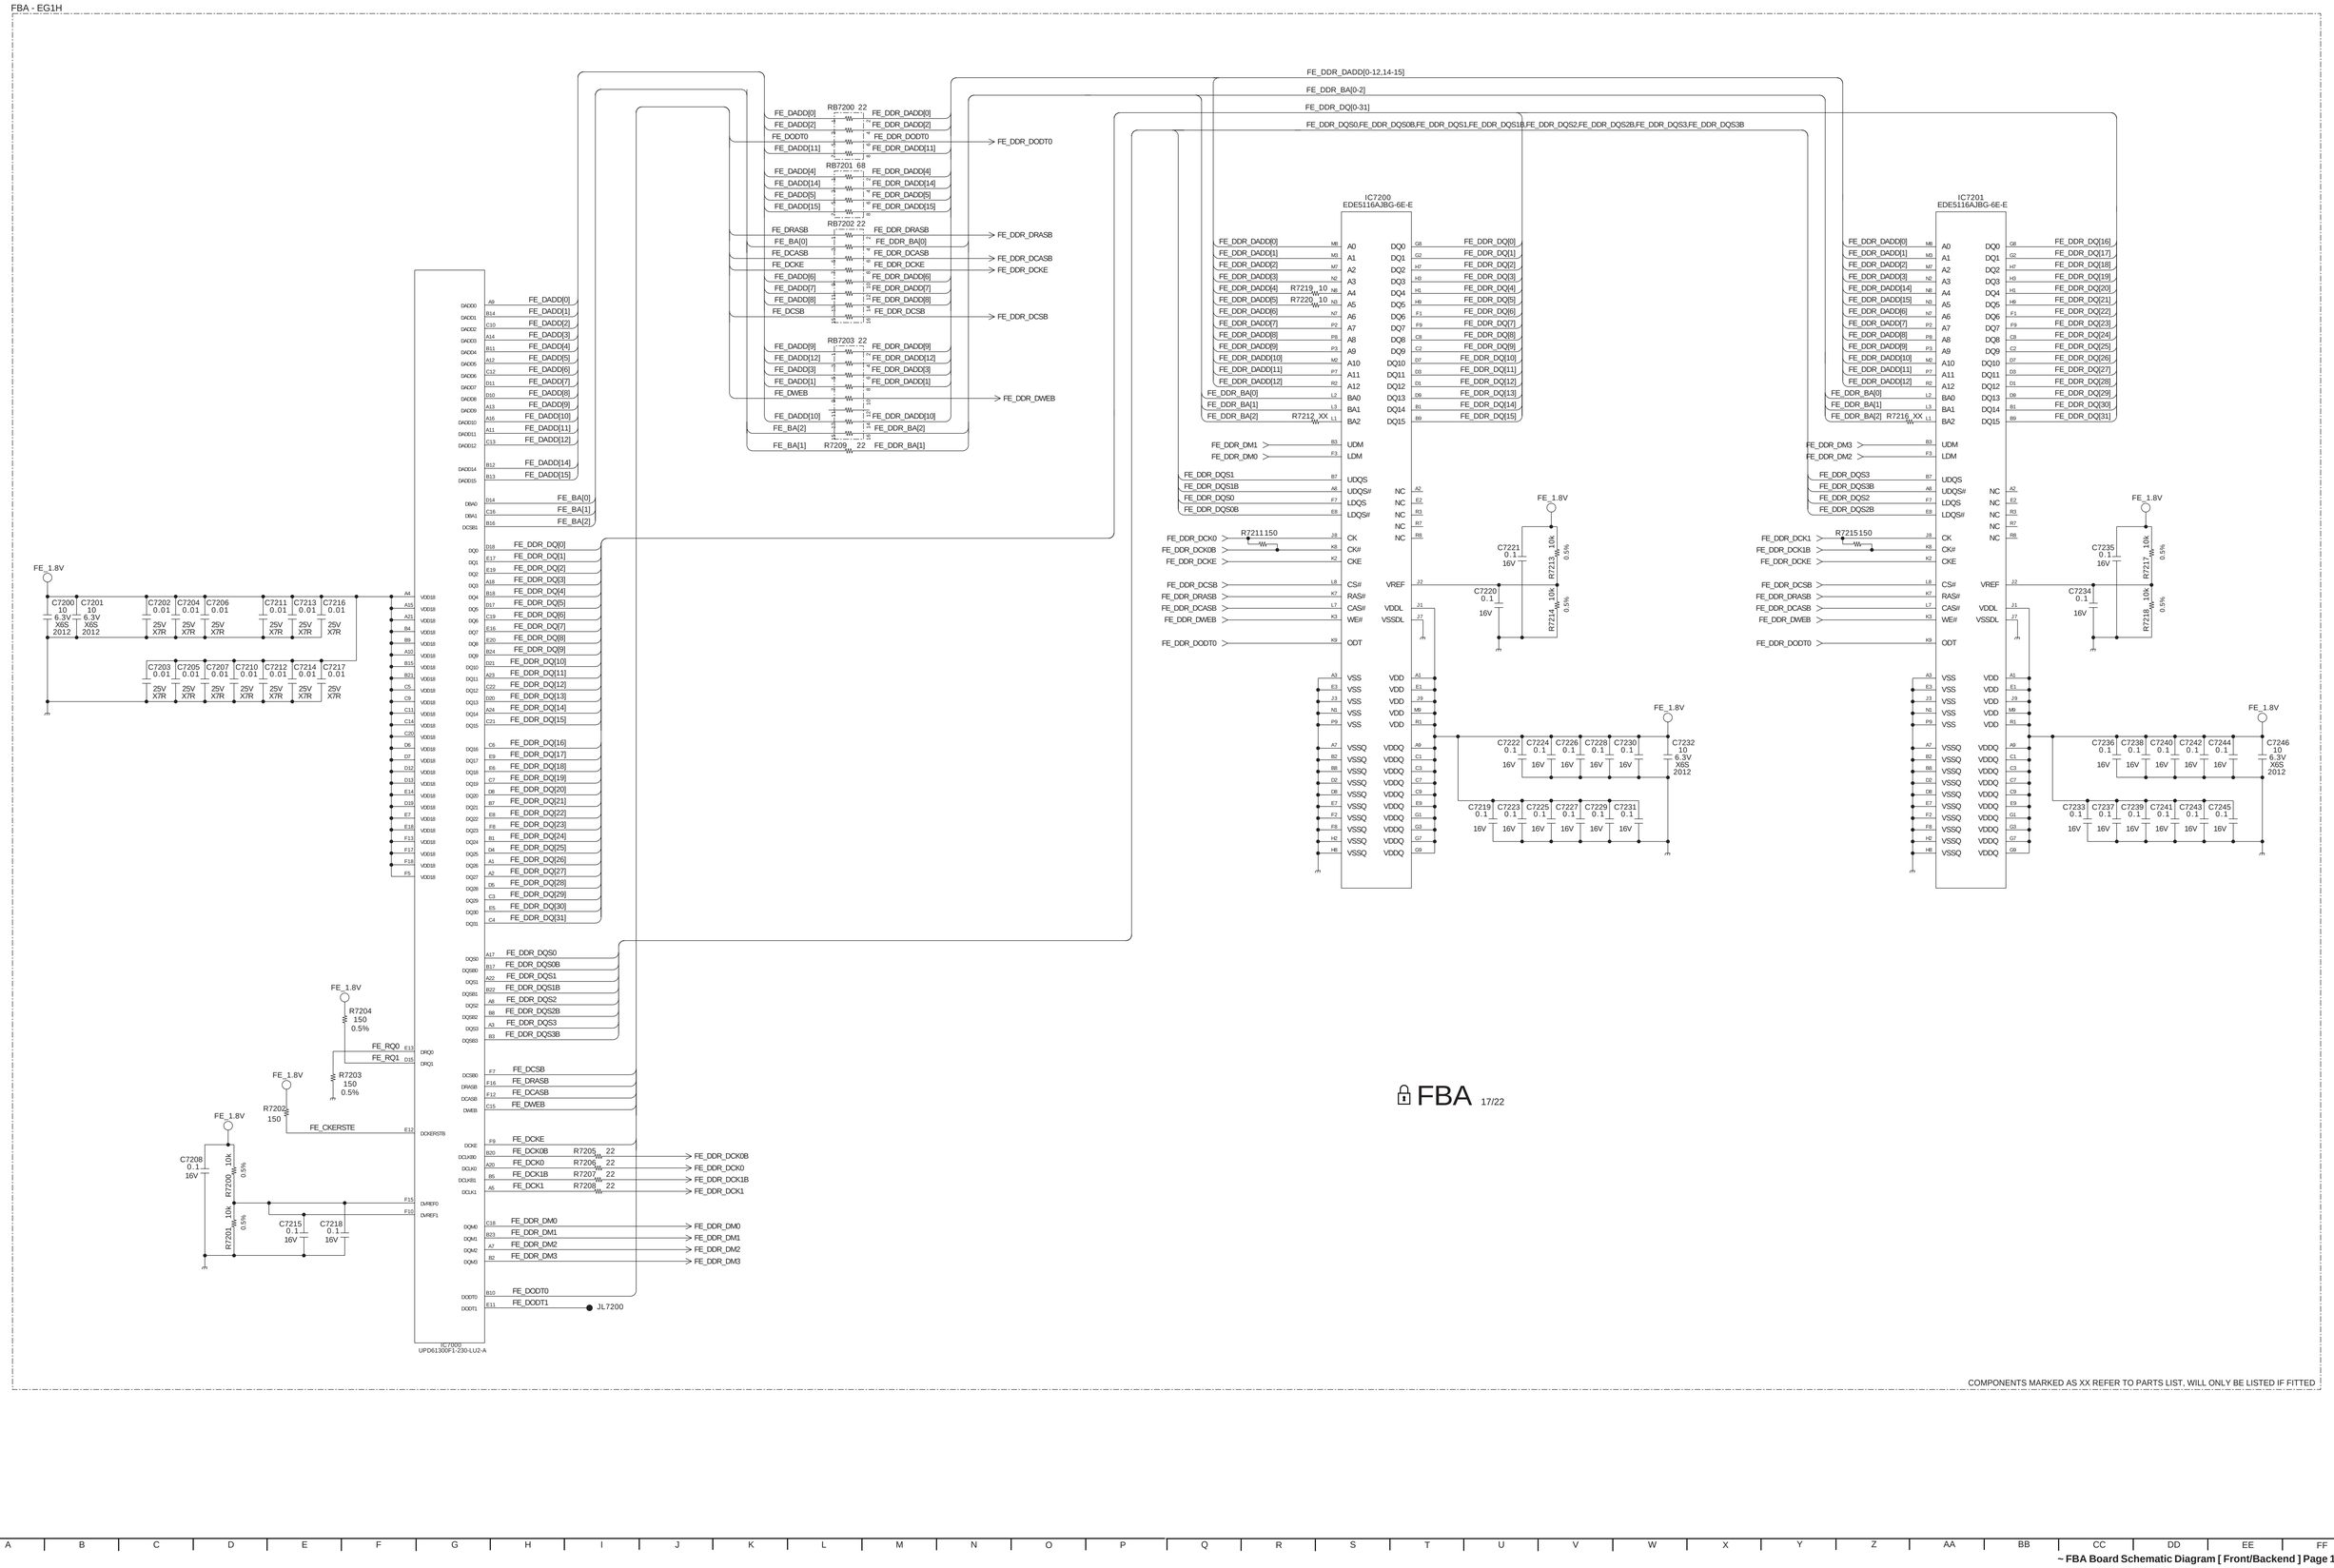

FBA 17/22

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 18/22

PWB LAYOUT NOTE:
Pin-swap allowed on
these resistor arrays
for optimal PWB layout

IC7000
UPD61300F1-230-LU2-A

RADD0 AE5 FE_RADD[0]
RADD1 AF4 FE_RADD[1]
RADD2 AG4 FE_RADD[2]
RADD3 AH4 FE_RADD[3]
RADD4 AJ3 FE_RADD[4]
RADD5 AH3 FE_RADD[5]
RADD6 AJ2 FE_RADD[6]
RADD7 AH2 FE_RADD[7]
RADD8 AJ1 FE_RADD[8]
RADD9 AH1 FE_RADD[9]
RADD10 AG2 FE_RADD[10]
RADD11 AG1 FE_RADD[11]
RADD12 AF3 FE_RADD[12]
RADD13 AF2 FE_RADD[13]
RADD14 AF1 FE_RADD[14]
HSDCLK/RADD15 AE4 FE_RADD[15]
HSDE/RADD16 AE3 FE_RADD[16]
PKTSTRT/RADD17 AE2 FE_RADD[17]
HSD0/RADD18 AD5 FE_RADD[18]
HSD1/RADD19 AD4 FE_RADD[19]
HSD2/RADD20 AD2
HSD3/RADD21 AD1
HSD4/RADD22 AC4
HSD5/RADD23 AC3
HSD6/RADD24 AC2
HSD7/RADD25 AC1

RDATA0 AB4 FE_RDAT[0]
RDATA1 AB3 FE_RDAT[1]
RDATA2 AB2 FE_RDAT[2]
RDATA3 AA5 FE_RDAT[3]
RDATA4 AA4 FE_RDAT[4]
RDATA5 AA2 FE_RDAT[5]
RDATA6 AA1 FE_RDAT[6]
RDATA7 Y4 FE_RDAT[7]
STPDDATA0/RDATA8 Y3 FE_RDAT[8]
STPDDATA1/RDATA9 Y2 FE_RDAT[9]
STPDDATA2/RDATA10 Y1 FE_RDAT[10]
STPDDATA3/RDATA11 W5 FE_RDAT[11]
STPDDATA4/RDATA12 W4 FE_RDAT[12]
STPDDATA5/RDATA13 W3 FE_RDAT[13]
STPDDATA6/RDATA14 W2 FE_RDAT[14]
STPDDATA7/RDATA15 W1 FE_RDAT[15]

FOEB AF5 FE_FOEB
FWEB NH5 FE_FWEB
FCSB0 AJ5 FE_FCS0B
FCSB1 AJ6
GCSB0 NH5 FE_GCS0B
GCSB1 AD5
GRDY AG6 FE_CI_WAITB

RB7300 47R: FE_RADD[3] → FE_RADD[3]; FE_RADD[4] → FE_RADD[4]
RB7301 47R: FE_RADD[5] → FE_RADD[5]; FE_RADD[6] → FE_RADD[6]; FE_RADD[2] → FE_RADD[2]; FE_RADD[0] → FE_RADD[0]; FE_RADD[1] → FE_RADD[1]; FE_RADD[15] → FE_RADD[15]; FE_RADD[7] → FE_RADD[7]; FE_RADD[8] → FE_RADD[8]; FE_RADD[12] → FE_RADD[12]
RB7302 47R: FE_RADD[9] → FE_RADD[9]; FE_RADD[10] → FE_RADD[10]; FE_RADD[11] → FE_RADD[11]; FE_RADD[13] → FE_RADD[13]; FE_RADD[14] → FE_RADD[14]
RB7305 47R: FE_RADD[16] → FE_RADD[16]; FE_RADD[17] → FE_RADD[17]; FE_RADD[19] → FE_RADD[19]; FE_RADD[18] → FE_RADD[18]
RB7303 47R: FE_RDAT[12] → FE_CI_TSD[4]; FE_RDAT[11] → FE_CI_TSD[3]; FE_RDAT[7] → FE_RDAT[7]; FE_RDAT[3] → FE_RDAT[3]; FE_RDAT[4] → FE_RDAT[4]; FE_RDAT[0] → FE_RDAT[0]; FE_RDAT[1] → FE_RDAT[1]; FE_RDAT[2] → FE_RDAT[2]; FE_RDAT[5] → FE_RDAT[5]
RB7304 47R: FE_RDAT[6] → FE_RDAT[6]; FE_RDAT[8] → FE_CI_TSD[0]; FE_RDAT[9] → FE_CI_TSD[1]; FE_RDAT[10] → FE_CI_TSD[2]; FE_RDAT[13] → FE_CI_TSD[5]; FE_RDAT[14] → FE_CI_TSD[6]; FE_RDAT[15] → FE_CI_TSD[7]
RB7306 47R: FE_FOEB → FE_FOEB; FE_FWEB → FE_FWEB; FE_GCS0B → FE_CI_CE1B; FE_FCS0B → FE_FCS0B

FE_RADD[0-14] ⊠ FE_RADD[0-14]
FE_RADD[15-19]

STRAP SETTINGS

FE_3.3V
R7320 10K
R7330 XX
R7321 XX
R7331 10K
R7322 XX
R7332 XX
R7323 XX
R7333 XX
R7324 10K
R7334 10K
R7325 XX
R7335 10K
R7326 XX
R7336 XX
R7327 XX
R7337 XX
R7328 XX
R7338 XX
R7329 XX
R7339 XX

FE_RADD[0] … FE_RADD[19]

R7341 470 CL7302 2.5mm JL7300
R7338 470 CL7303 2.5mm JL7301

To force Boot from MS:
connect (short) together
CL7302 & CL7303

Place CLs together and
in accessible location

PWB LAYOUT NOTE:
Place fitted strap resistors in groups
of 4 or 8 to allow replacement by
resistor arrays during later trial

STRAP SETTINGS

RADD[0]	= CPU_ENDIAN	= 1 = Big
RADD[1]	= test	= 0
RADD[2]	= test	= 0
RADD[4: 3]	= CPUCLK_SEL[1:0]	= 01 = 262.144MHz
RADD[5]	= MCLK_SEL	= 0 = 327.680MHz
RADD[6]	= ROM_ENDIAN	= 1 = Big
RADD[7]	= ROM_BWSEL	= 1 = 8-bit
RADD[10: 8]	= BOOT_MODE[2:0]	= 011 = NAND, then MS
RADD[12:11]	= BOOT_NAND_SEL[1:0]	= 01 = >=512Mb
RADD[13]	= NAND_CS	= 0 = CS0
RADD[14]	= test	= 0
RADD[15]	= test	= 0
RADD[16]	= test	= 0
RADD[17]	= EJTAG_MODE	= 1 = EJTAG
RADD[18]	= DINT_EN	= 0 = Disable
RADD[19]	= DSYSELB	= 1 = Only Main CPU

FE_3.3V
IC7300
K9F1208U0C-PCB0T
C7301 10V 1608
R7313 470
FE_NRBB
FE_FOEB
FE_FCS0B
R7342 CHIP
C7303 XX
C7300 0.01 25V X7R
C7302 0.01 25V X7R
FE_3.3V
R7308 10K
FE_NCLE
FE_NALE
FE_FWEB
FE_NWPB
R7303 XX
FE_RSTB
R7314 XX
R7304 XX

N.C 1 2 N.C
N.C 3 4 N.C
N.C 5 6 N.C
N.C 7 8 N.C
N.C 9 10 IO8 → FE_RDAT[7]
N.C 11 12 IO7 → FE_RDAT[6]
RY_BY 13 14 IO6 → FE_RDAT[5]
RE 15 16 IO5 → FE_RDAT[4]
CE 17 18 N.C
N.C 19 20 N.C
N.C 21 22 N.C
VCC 23 24 VCC
GND 25 26 GND
N.C 27 28 N.C
N.C 29 30 N.C
CLE 31 32 N.C
ALE 33 34 IO4 → FE_RDAT[3]
WE 35 36 IO3 → FE_RDAT[2]
WP 37 38 IO2 → FE_RDAT[1]
N.C 39 40 IO1 → FE_RDAT[0]
N.C 41 42 N.C
N.C 43 44 N.C
N.C 45 46 N.C
N.C 47 48 N.C

PWB LAYOUT NOTE:
Place NAND-FLASH with consideration
for changing from TSOP to FBGA package

FE_CI_TSD[0-7],FE_RDAT[0-7]
⊠ FE_CI_TSD[0-7],FE_RDAT[0-7]

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 19/22

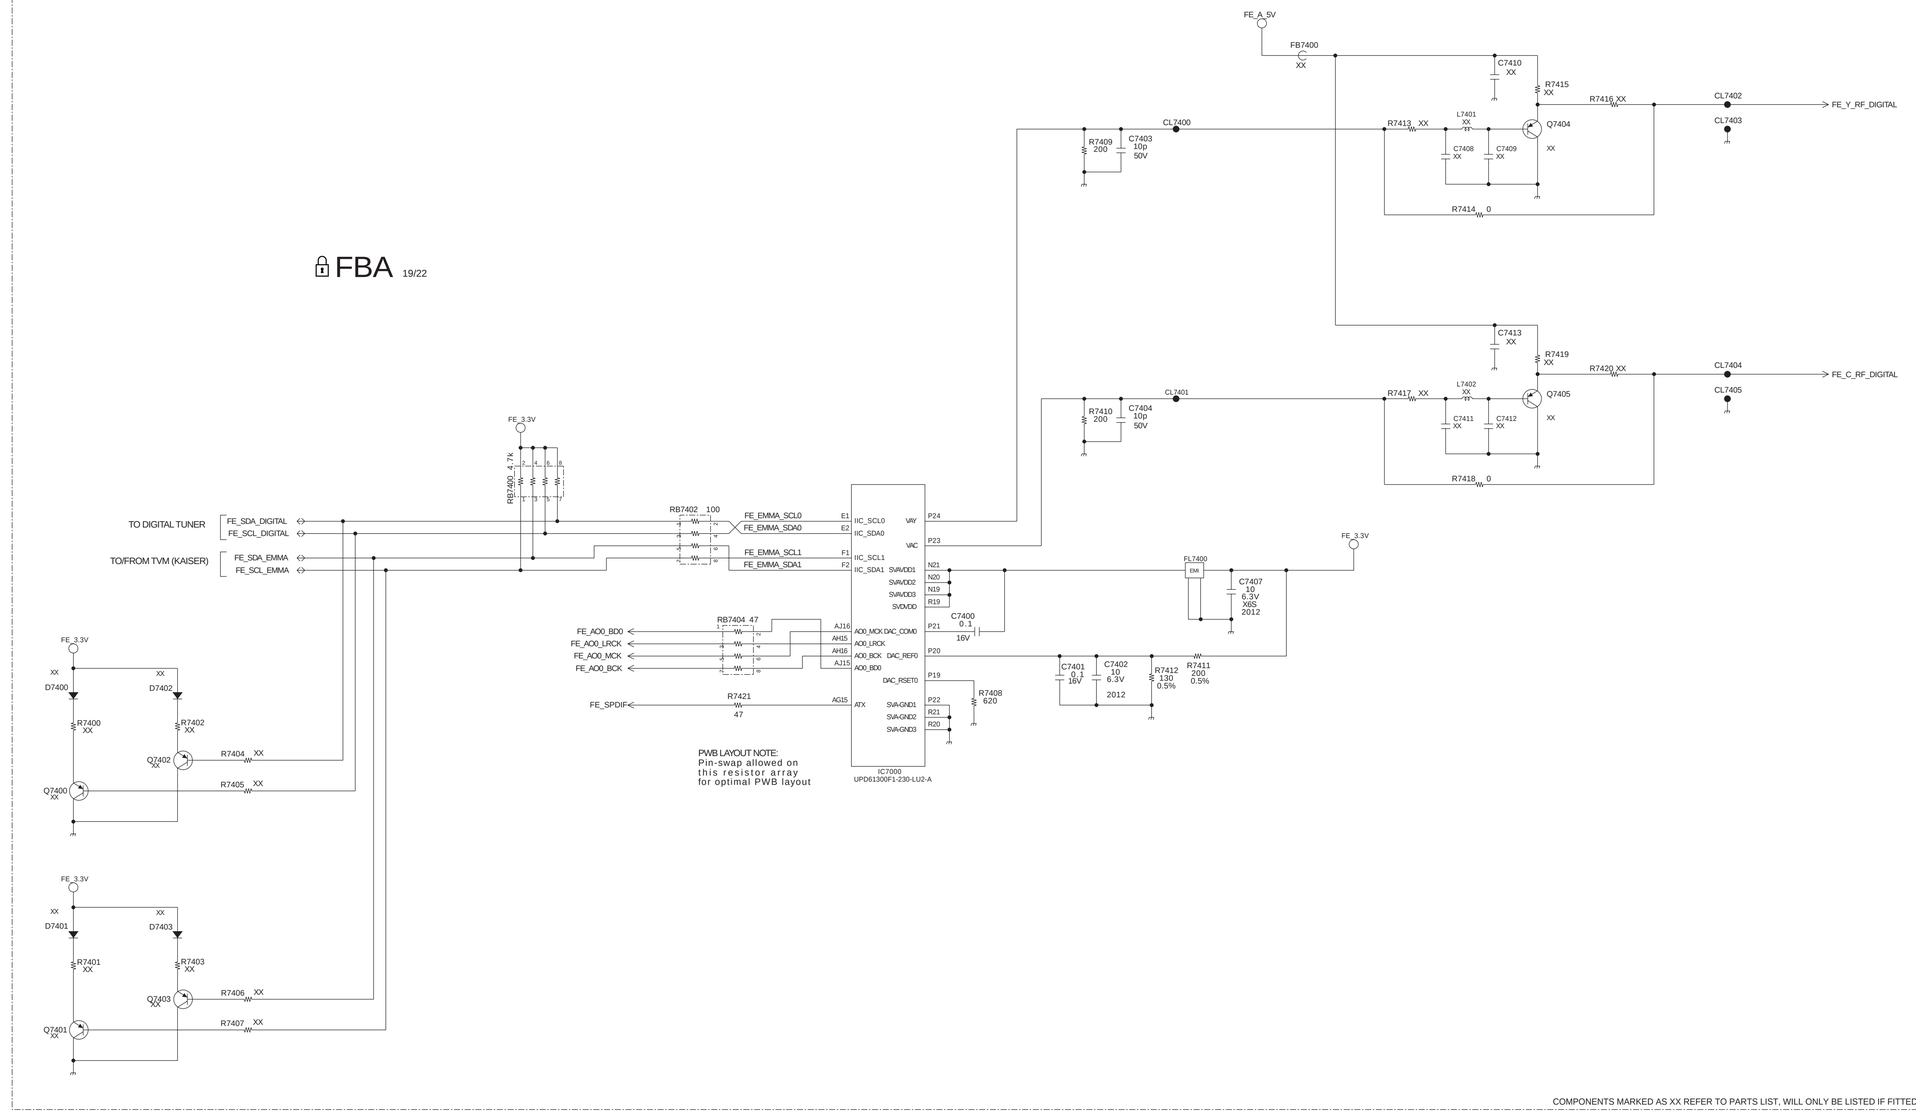

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 20/22

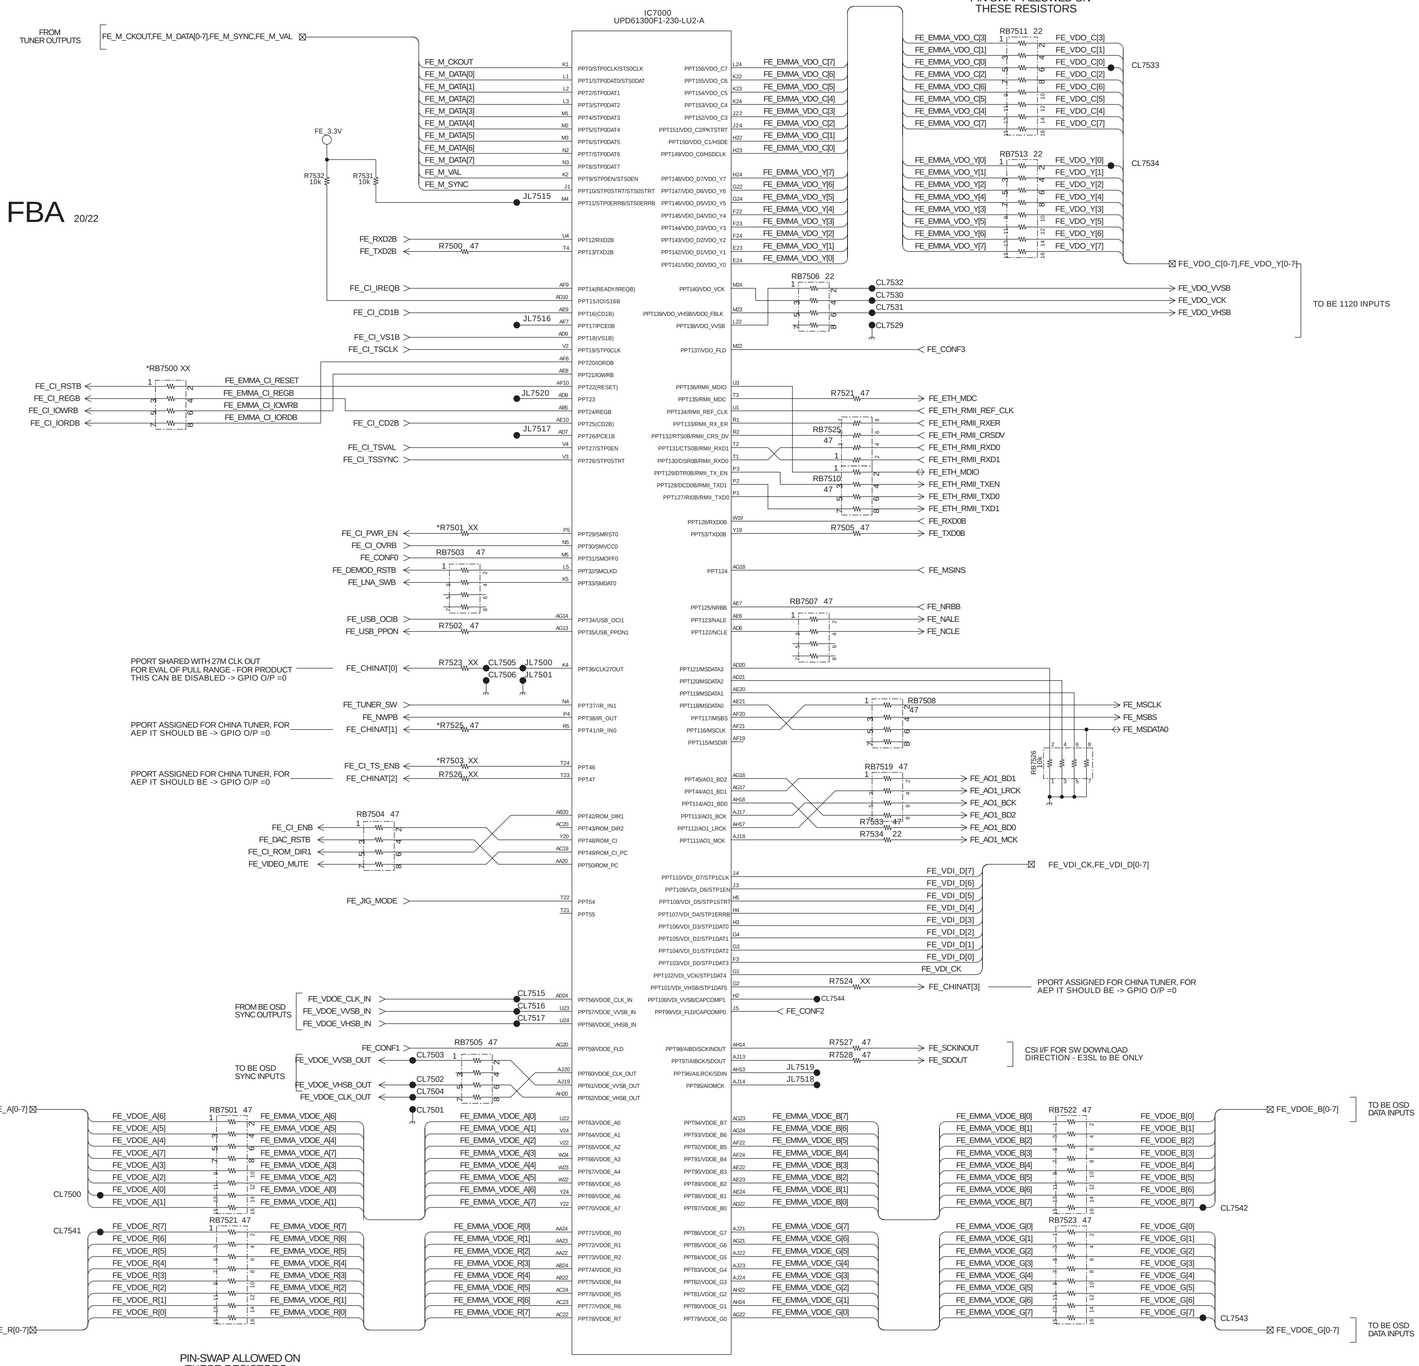

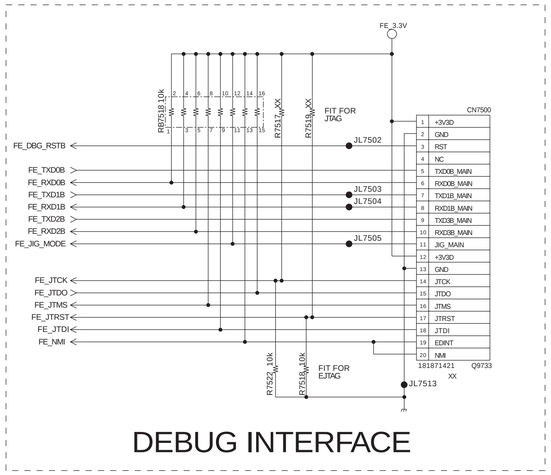

DEBUG INTERFACE

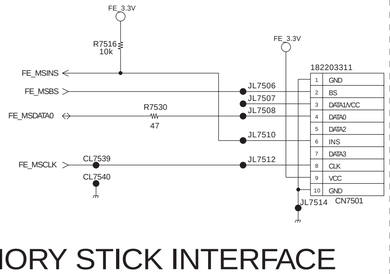

MEMORY STICK INTERFACE

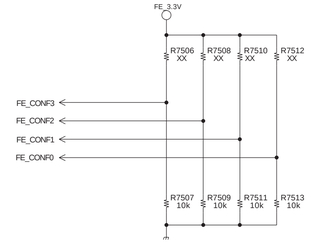

		EG1H PROTO 1			
FE_CONF3	PPORT137	0			
FE_CONF2	PPORT99	0			
FE_CONF1	PPORT59	0			
FE_CONF0	PPORT31	0			

S/W OPTION SELECT RESISTORS

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 21/22

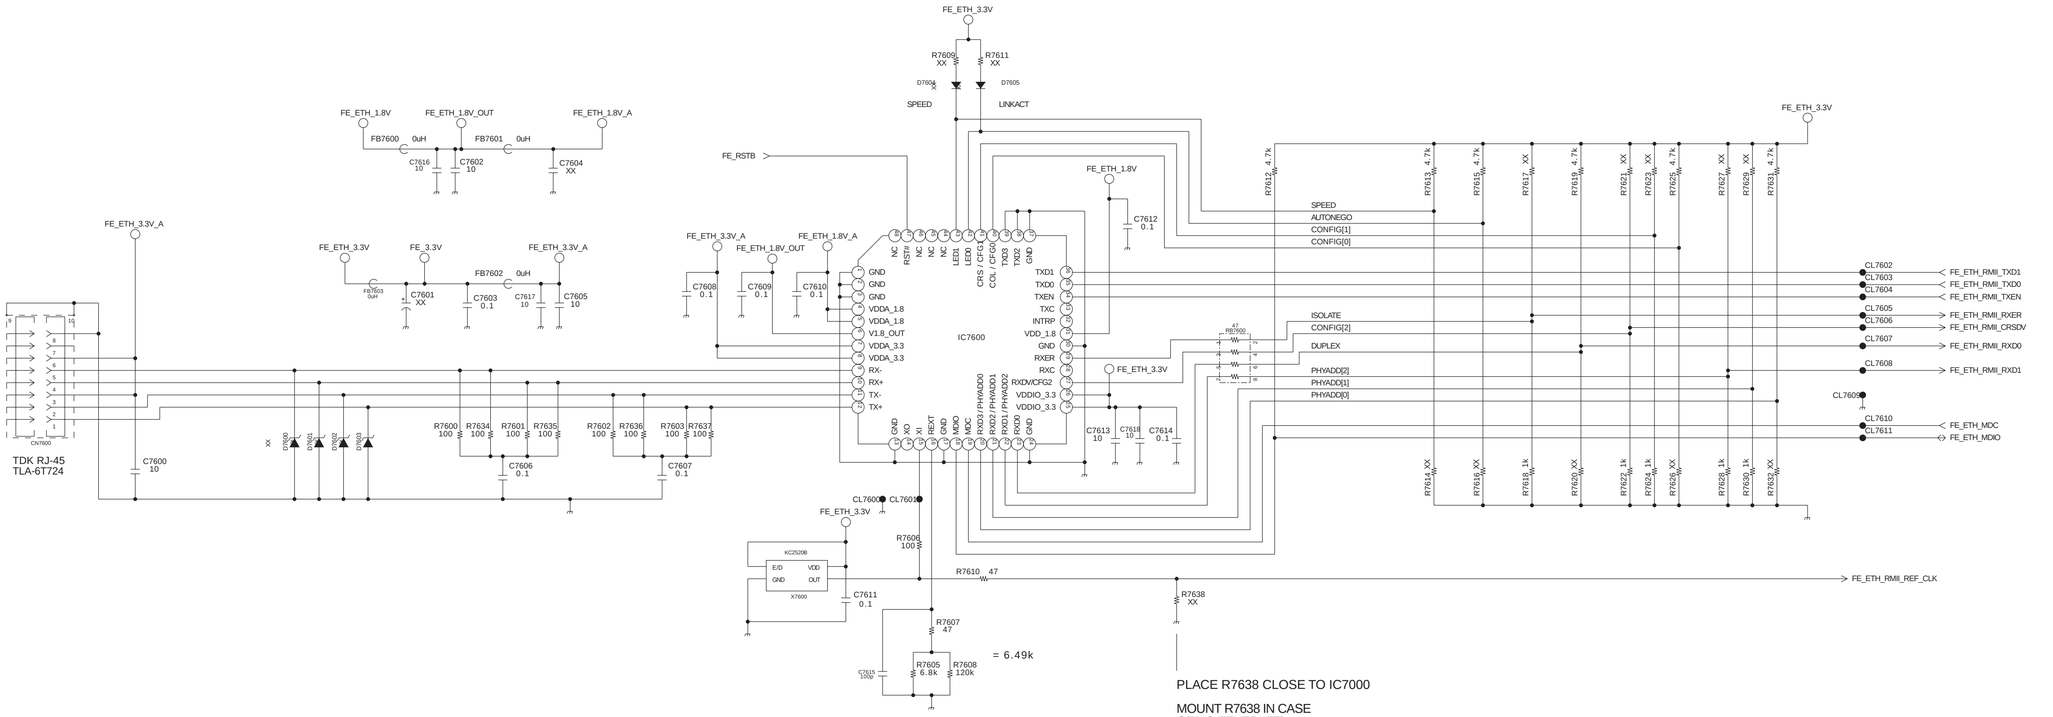

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

FBA - EG1H

FBA 22/22

TS from CAM

TS to CAM

TS to CAM

TS to EMMA

CTRL to/from CAM

ADDR to CAM

DATA to/from CAM

All JL's are 0.6mm unless otherwise stated
All R's & C's are size 1005 unless otherwise stated

PLACE CLOSE TO IC7704

PLACE CLOSE TO IC7705

PLACE CLOSE TO IC7707

PLACE CLOSE TO IC7709

PCMCIA DVB-CI CONNECTOR

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

Mount Mecha			
	A6001	411285321	D6000

H=26.5mm
L=165mm
Hole: 7

Mount Mecha *A6015	411285311	XX	Q6500,Q6501,TH6300,D6502

Hi=26.5mm
L=120mm
Hole: 9

Mount Mecha *A6007	411285321	Q6500,Q6501,TH6300,D6502

Hi=26.5mm
L=165mm
Hole: 7

Mount Mecha *A6014	411285311	Q6508,Q6509,TH6301,D6512

Hi=26.5mm
L=120mm
Hole: 9

Mount Mecha	A6016	404240802	XX
Mount Mecha *A6013	345213401	XX	
Mount Mecha *A6000	410314301	XX	
Mount Mecha	A6004	410314301	
Mount Mecha	A6005	410314301	
Mount Mecha *A6008	345213401	XX	
Mount Mecha *A6010	410314301	XX	
Mount Mecha *A6006	410314301		
Mount Mecha *A6009	345213401	XX	
Mount Mecha *A6011	410314301	XX	
Mount Mecha *A6012	410314301	XX	

A6000/EA6013d,ux

A6010/EA6008d,ux

A6011/EA6009d,ux

JW6078 XX	Mount ID JW for (SS)
JW6072 XX	Mount ID JW for (S)
JW6073 XX	Mount ID JW for (M)
JW6074 XX	Mount ID JW for (L)
JW6091 XX	Destination-ID JW for J
JW6079 XX	Destination-ID JW for C

SLAVE

MASTER

SLAVE OPEN

PFC@ OVP

PFC DET

PFC| OTP

POWER ON

AC DET

PFC_DET

Vcc2_SW

STBY FB

2 th

G6 1/2 POWER SUPPLY

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

G6 - EG1H

Mount Mecha | A6003 | 411285311 | D6150,D6151,D6152,D6153,D6154

H=26.5mm
L=120mm
Hole: 9

G7 PVcc

12V 1.1A

AUDIO 9.9A

MAIN FB

Mount Mecha | A6002 | 234989211 | Q6100,Q6101

SS-reset: 269V

G6 2/2

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

G7 - EG1H

G7 POWER SUPPLY

Mount Mecha	A6604	411285311	Q6605,Q6606,TH6600,D6608

H=26.5mm
L=120mm
Hole: 9

Mount Mecha	A6601	411285321	XX	Q6605,Q6606,TH6600,D6608

H=26.5mm
L=165mm
Hole: 7

Mount Mecha			
	A6600	411285321	D6600

H=26.5mm
L=165mm
Hole: 7

Mount Mecha	A6602	410314301	

Mount Mecha	A6603	410314301	

Mount Mecha	A6605	410314301	XX	

SLAVE OPEN

PFC /OTP

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

GL - EG1H

G_Conv.

5V_DD

1.5V_Reg

Mount Mecha *A6750	263406621 XX	D1250,D1251

Mount Mecha *A6751	263406601	D1250,D1251

Mount Mecha A6700	234989201	Q1700,Q1701

GL 1/2 INVERTER POWER SUPPLY

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

B_Conv.

R_Conv.

Mount Mecha *A6850	263406621	XX	D1350,D1351

Mount Mecha *A6851	263406601		D1350,D1351

Mount Mecha *A6950	263406621	XX	D1150,D1151

Mount Mecha *A6951	263406601		D1150,D1151

Mount Mecha A6800	234989201		Q1300,Q1301

Mount Mecha A6900	234989201		Q1100,Q1101

GL 2/2

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

H3VM - EG1H

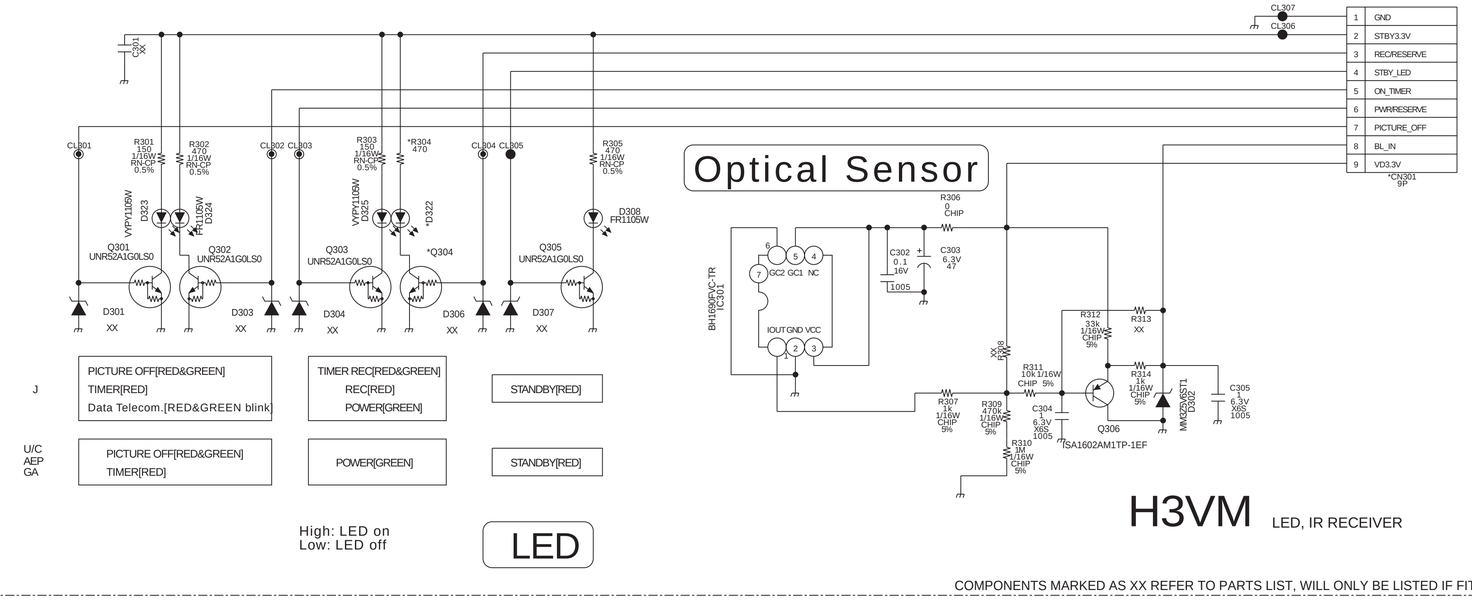

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

~ H3VM Board Schematic Diagram [LED, IR Receiver] ~

H4 - EG1H

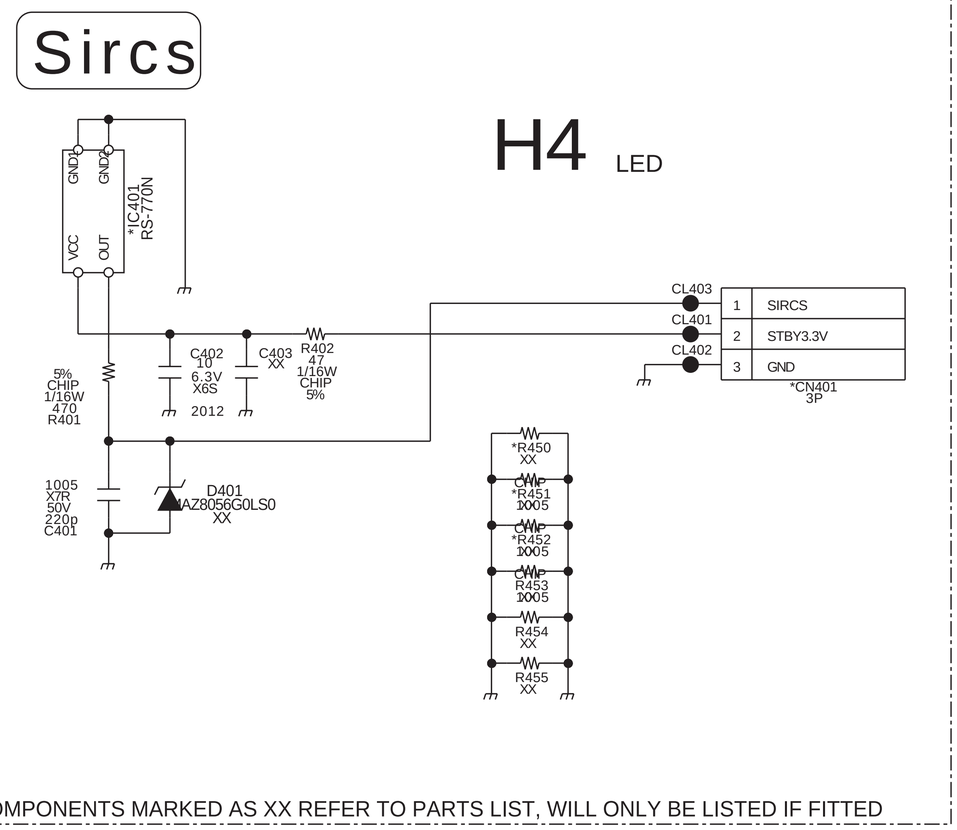

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

~ H4 Board Schematic Diagram [LED] ~

H1VM - EG1H

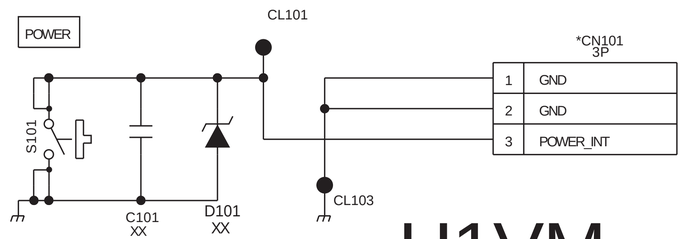

COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

~ H1VM Board Schematic Diagram [Key Switch] ~

K2 - EG1H

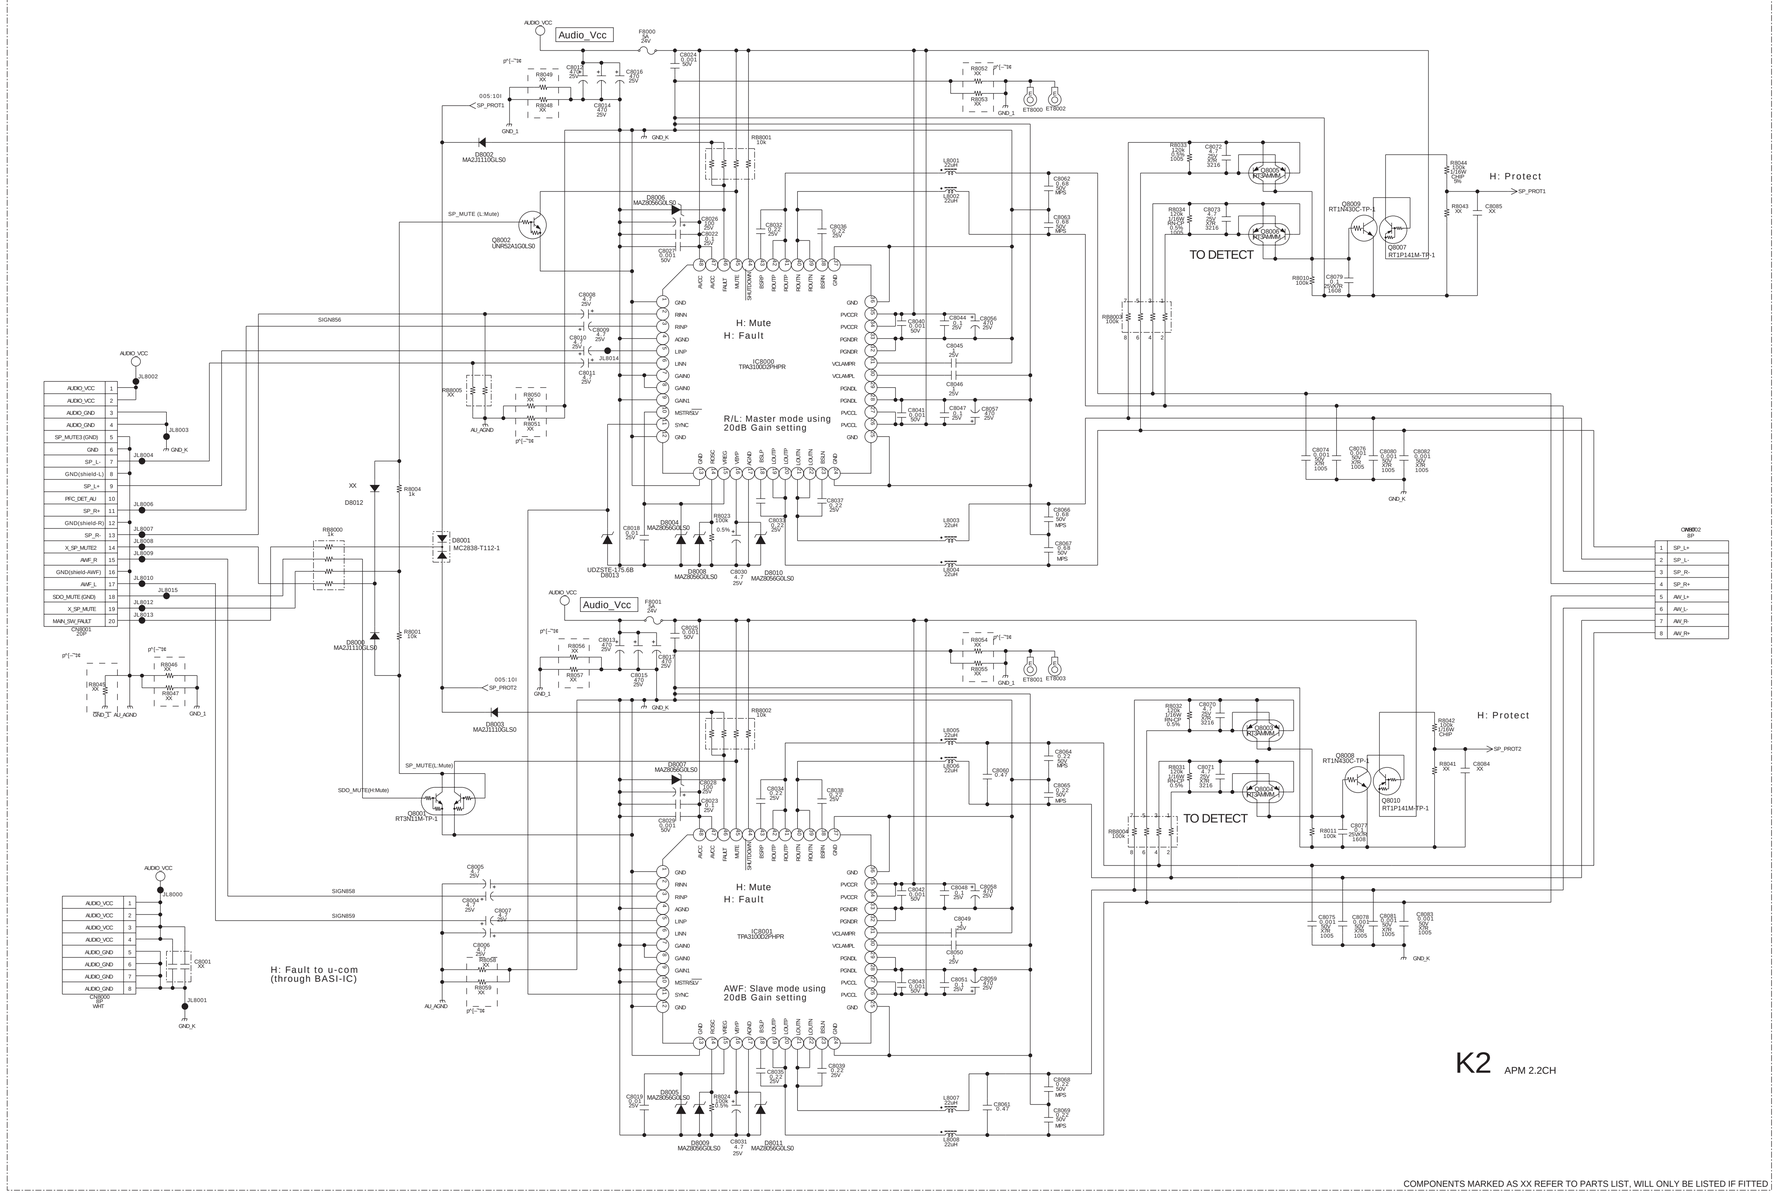
Audio_Vcc
IC8000
TPA3100D2PHPR
H: Mute
H: Fault
R/L: Master mode using
20dB Gain setting
IC8001
TPA3100D2PHPR
H: Mute
H: Fault
AWF: Slave mode using
20dB Gain setting
TO DETECT
H: Protect
H: Fault to u-com
(through BASI-IC)
K2
APM 2.2CH
COMPONENTS MARKED AS XX REFER TO PARTS LIST, WILL ONLY BE LISTED IF FITTED

Text Search

~ AE Printed Wiring Board Side A ~

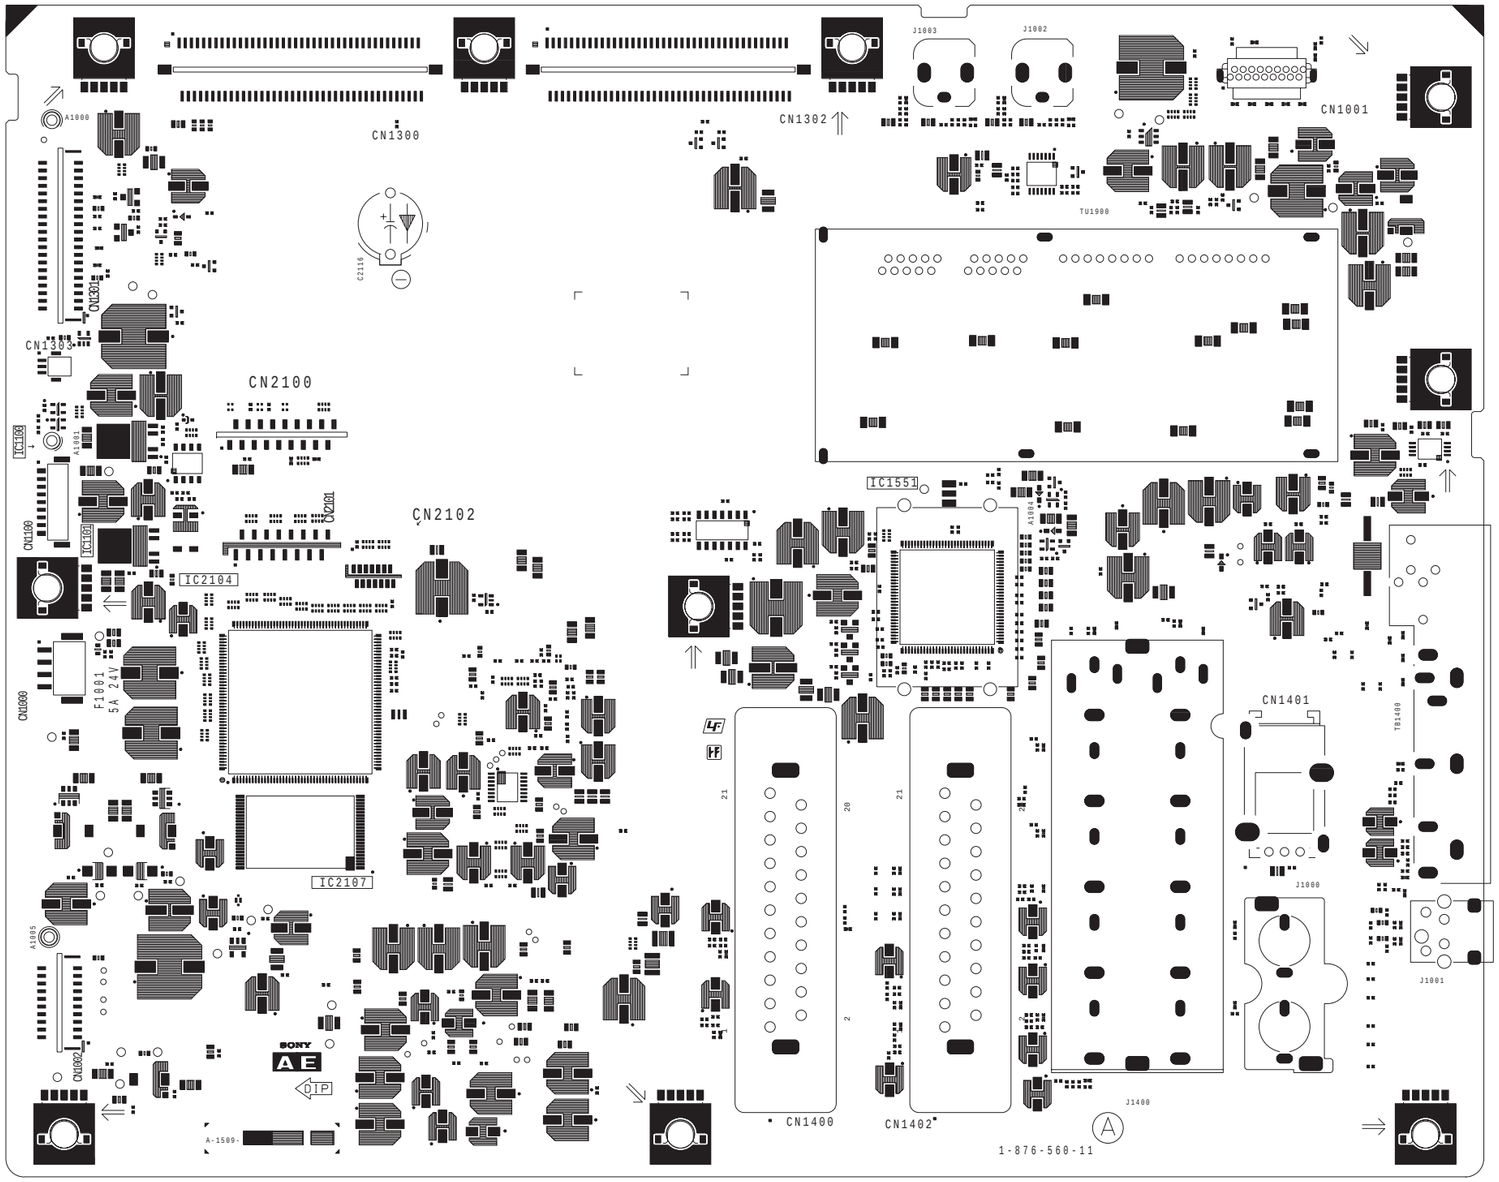

Text Search

~ AE Printed Wiring Board Side B ~

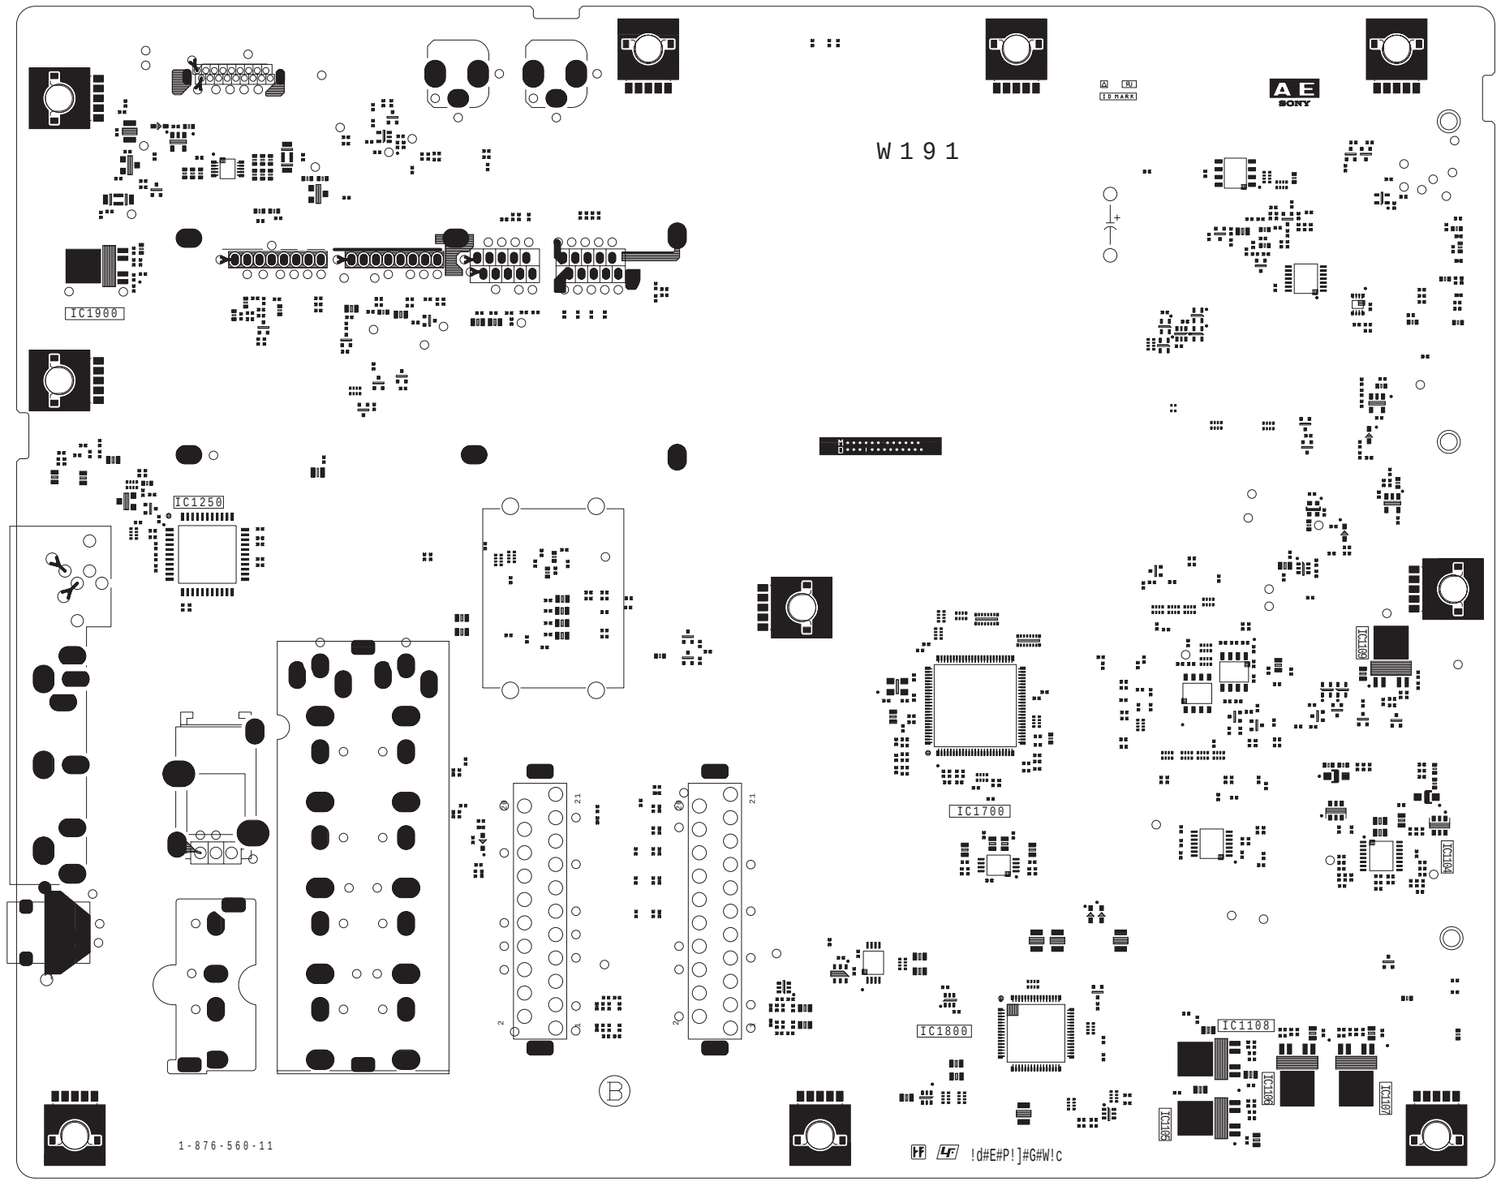

Text Search

~ CB1 Printed Wiring Board ~

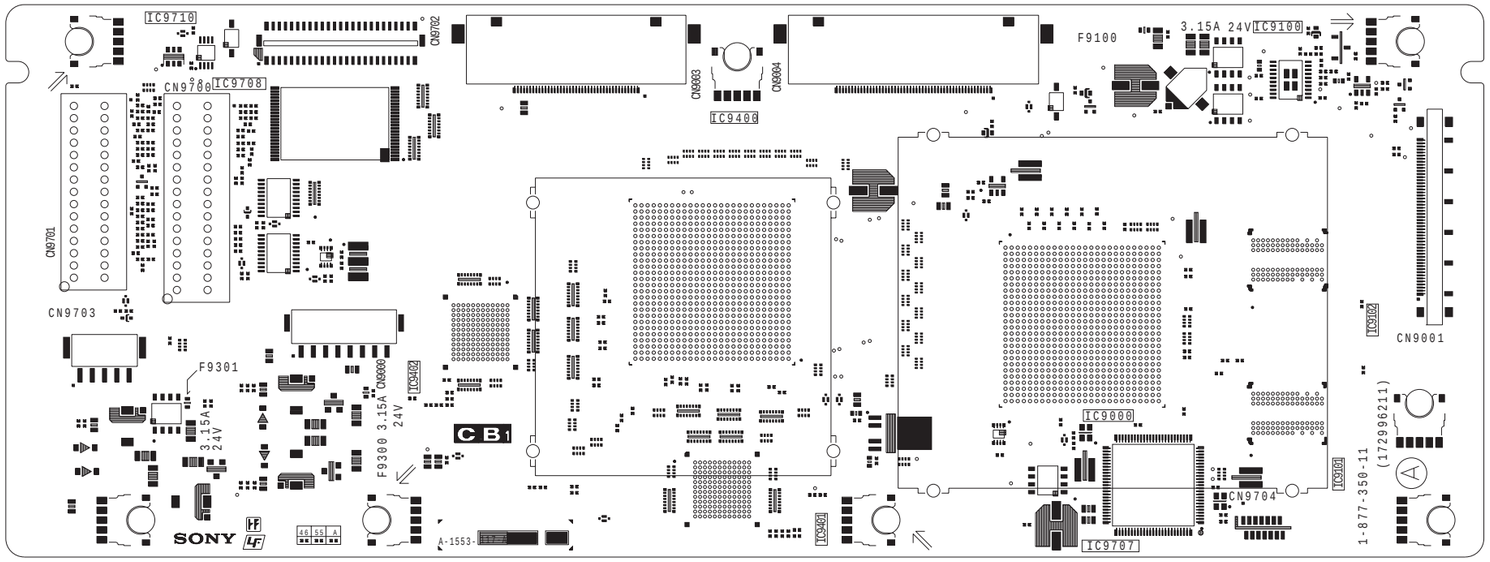

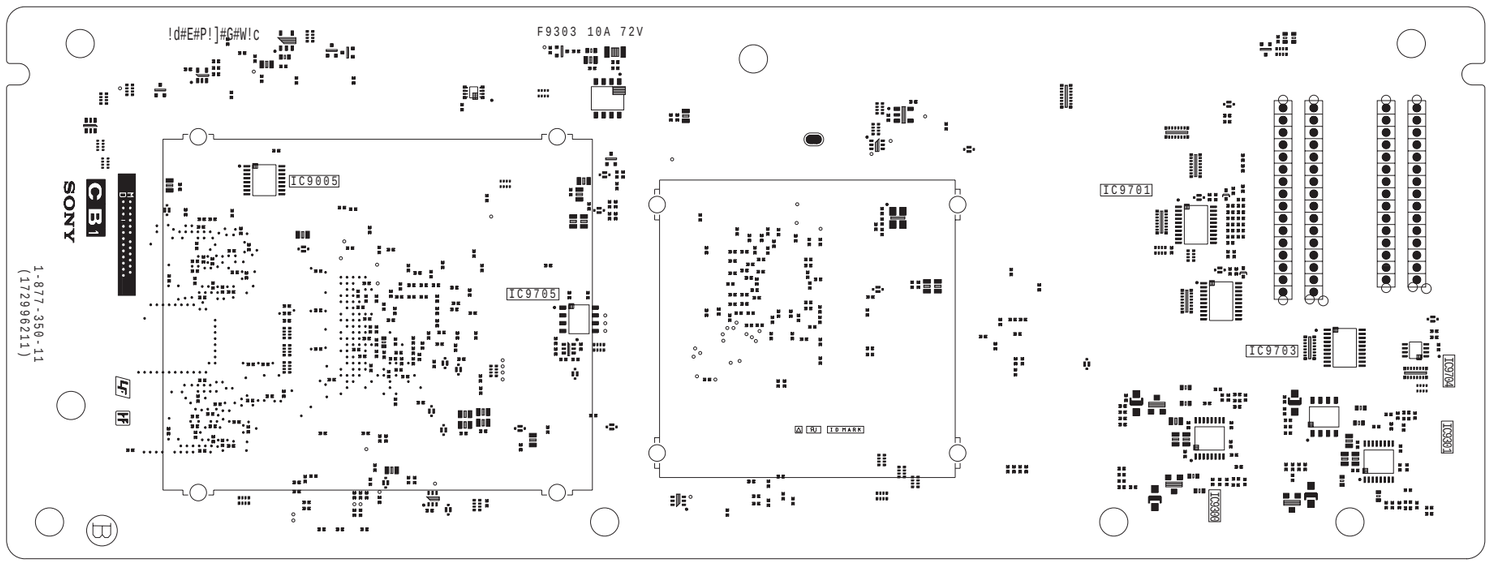

~ D4 Printed Wiring Board ~

Text Search

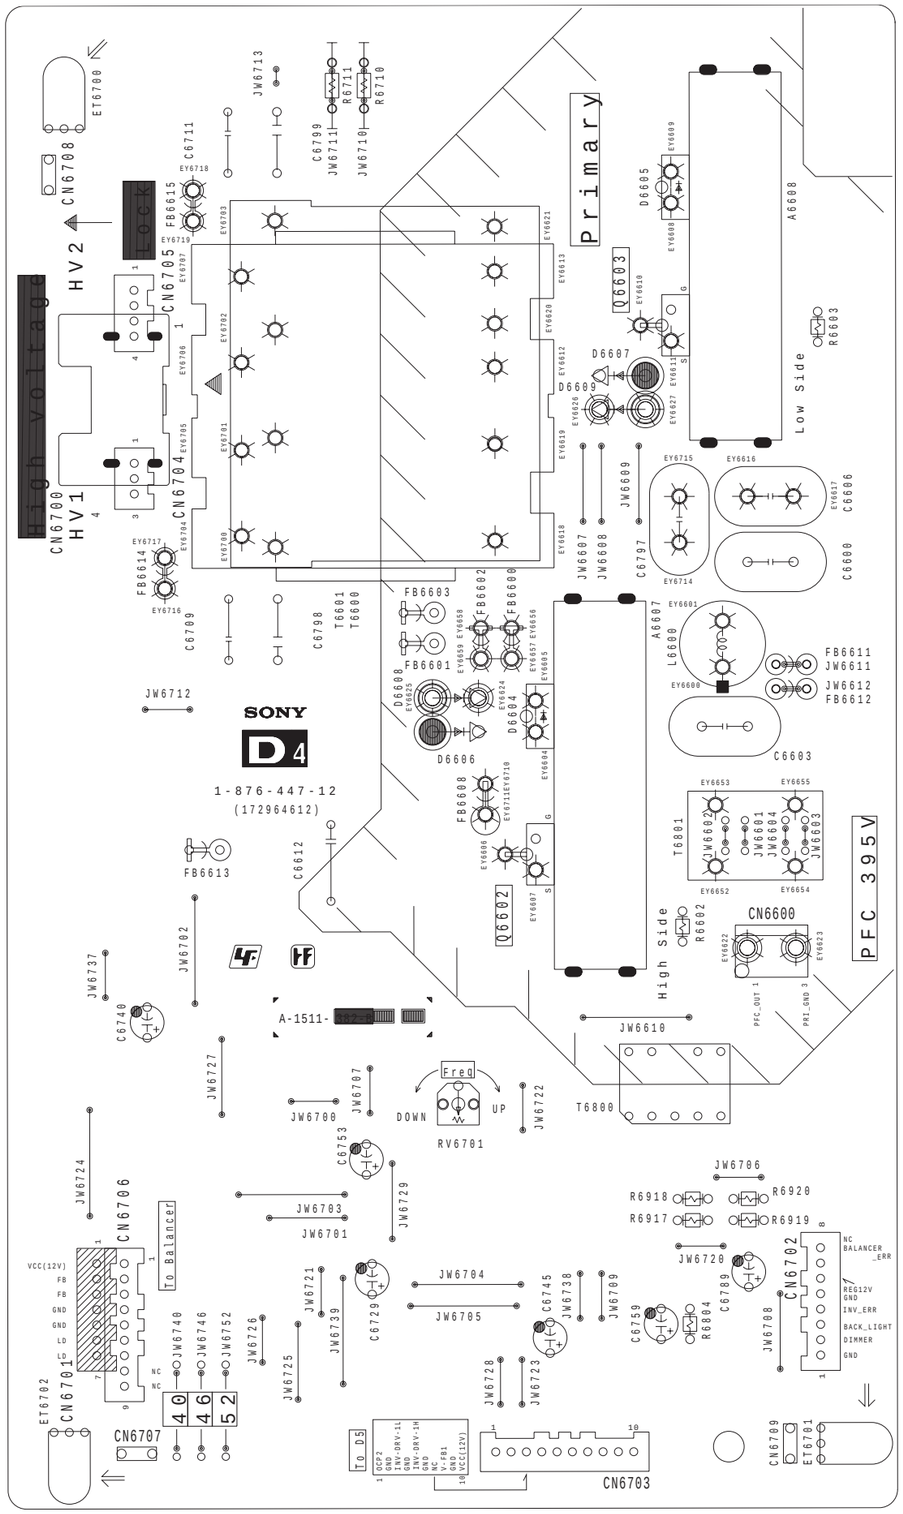

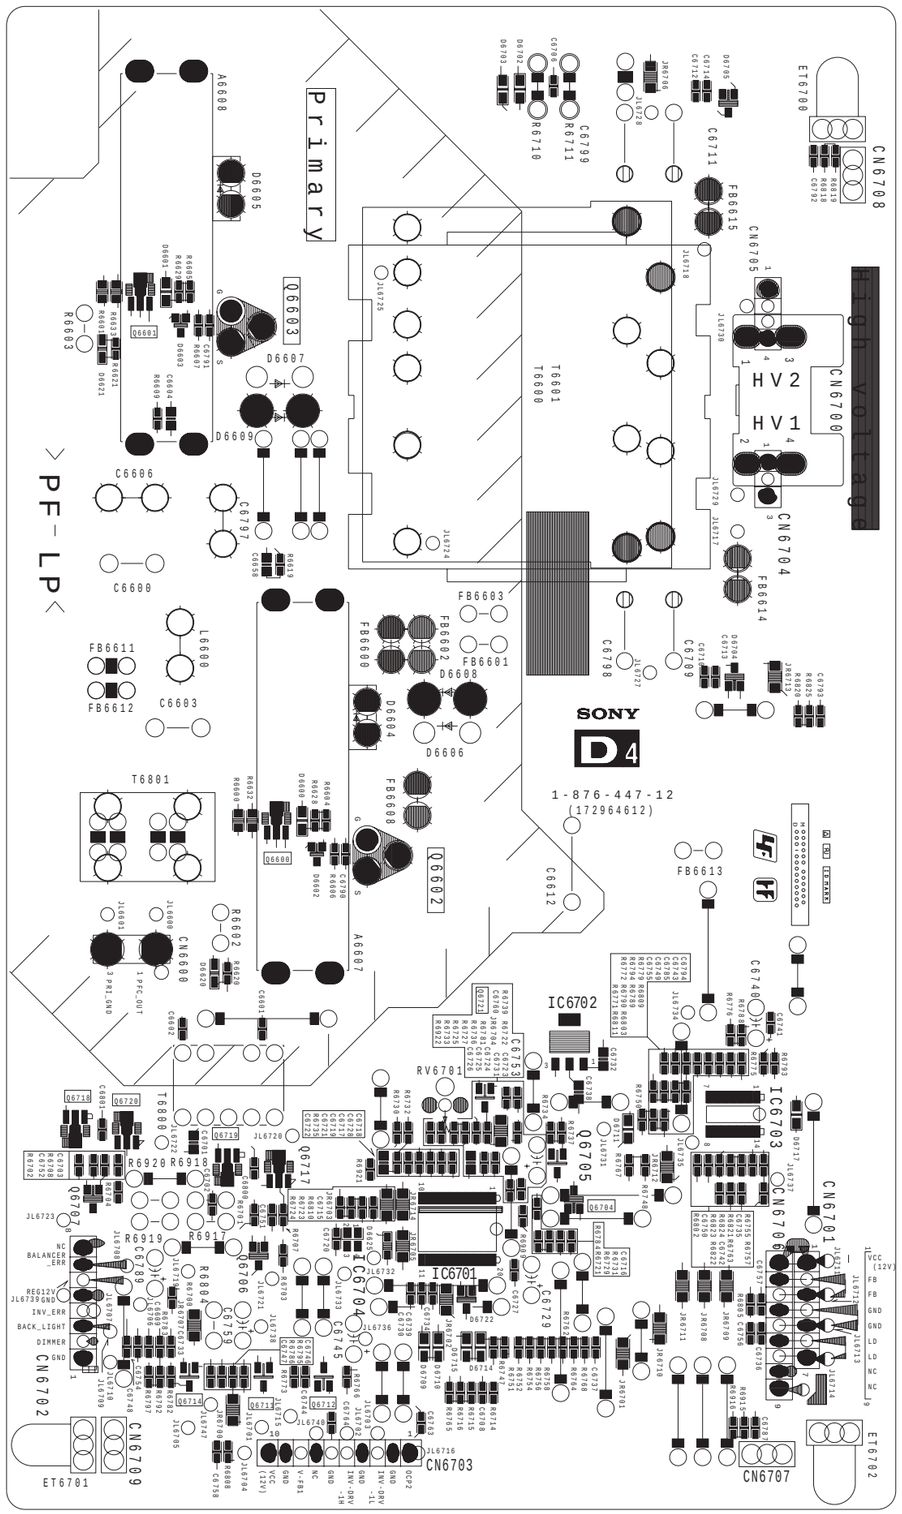

Text Search

~ FBA Printed Wiring Board Side A ~

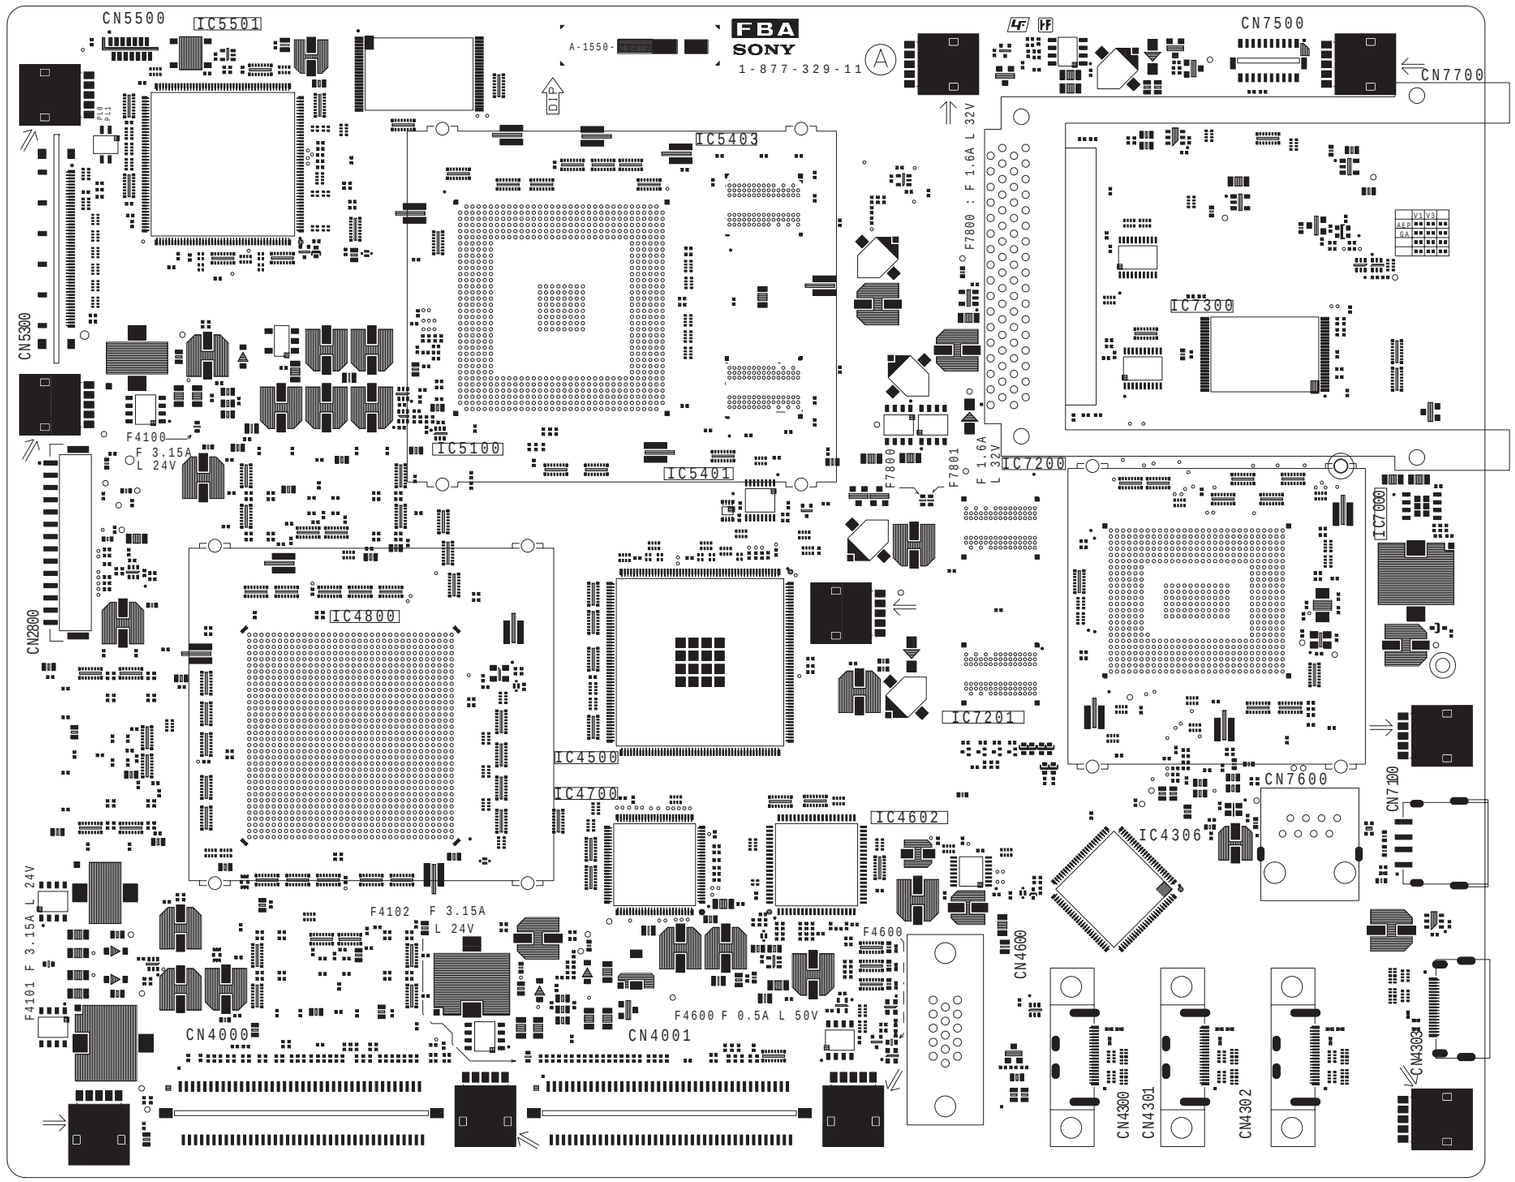

Text Search

~ FBA Printed Wiring Board Side B ~

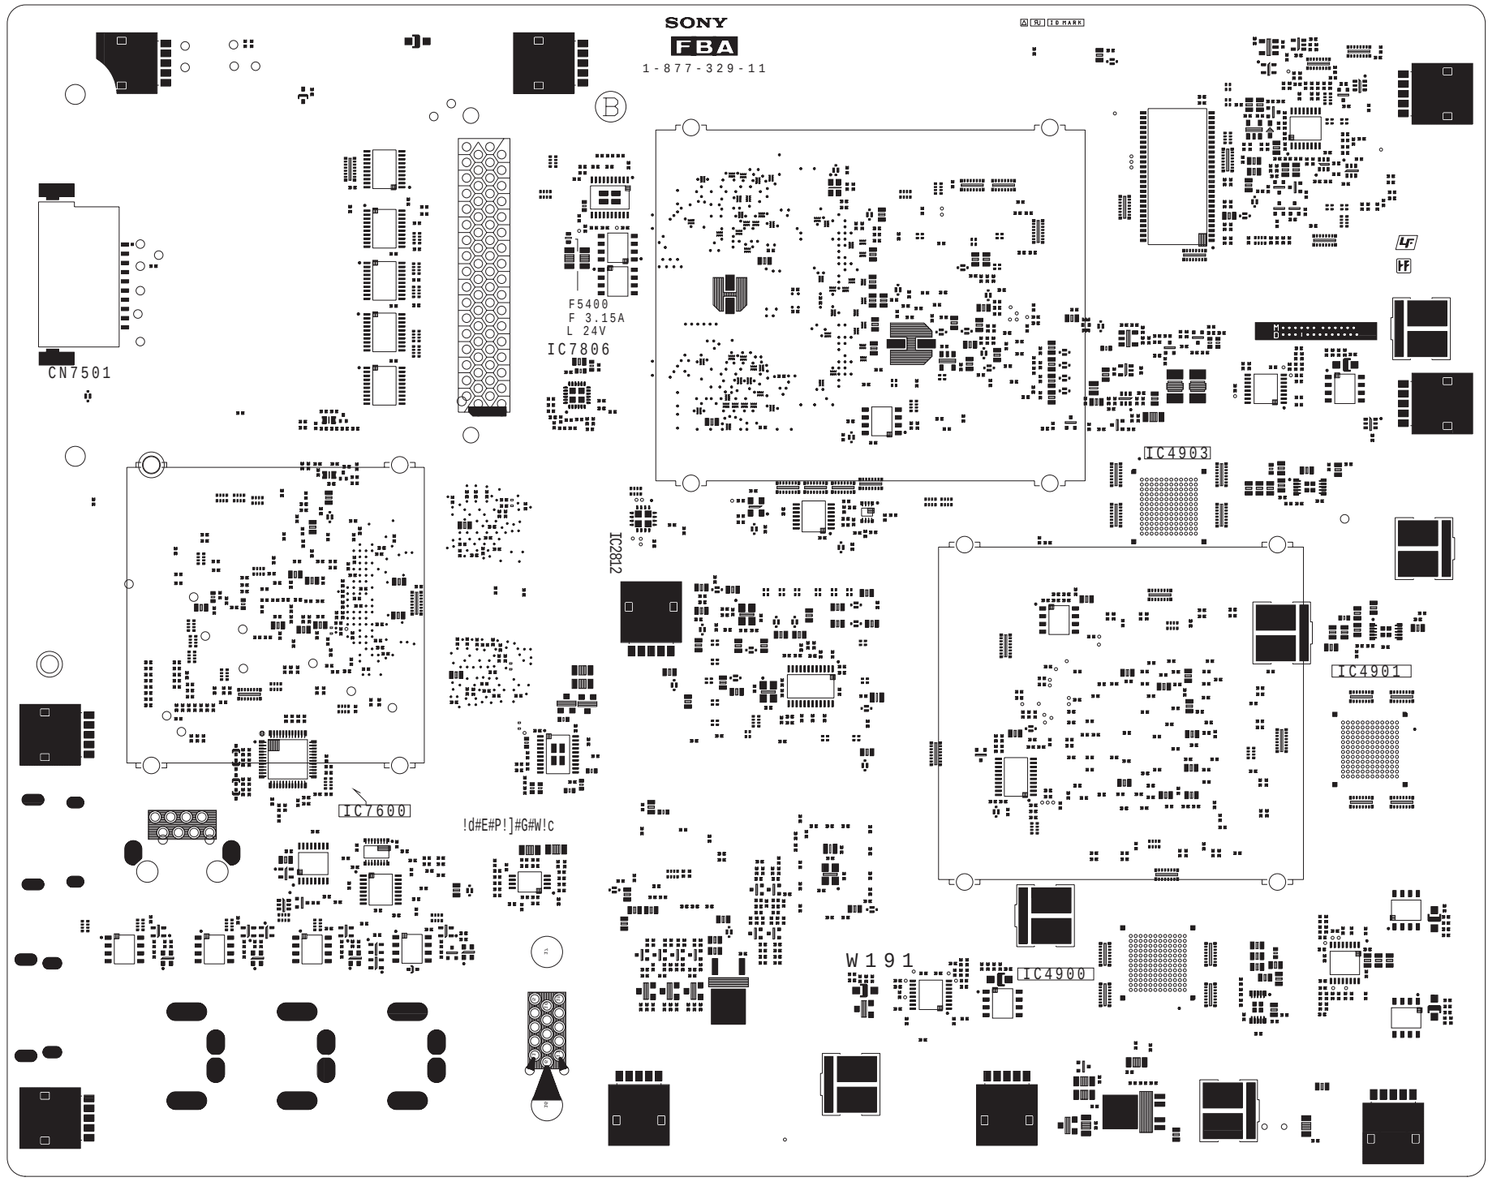

Text Search

~ G6 Printed Wiring Board Side A ~

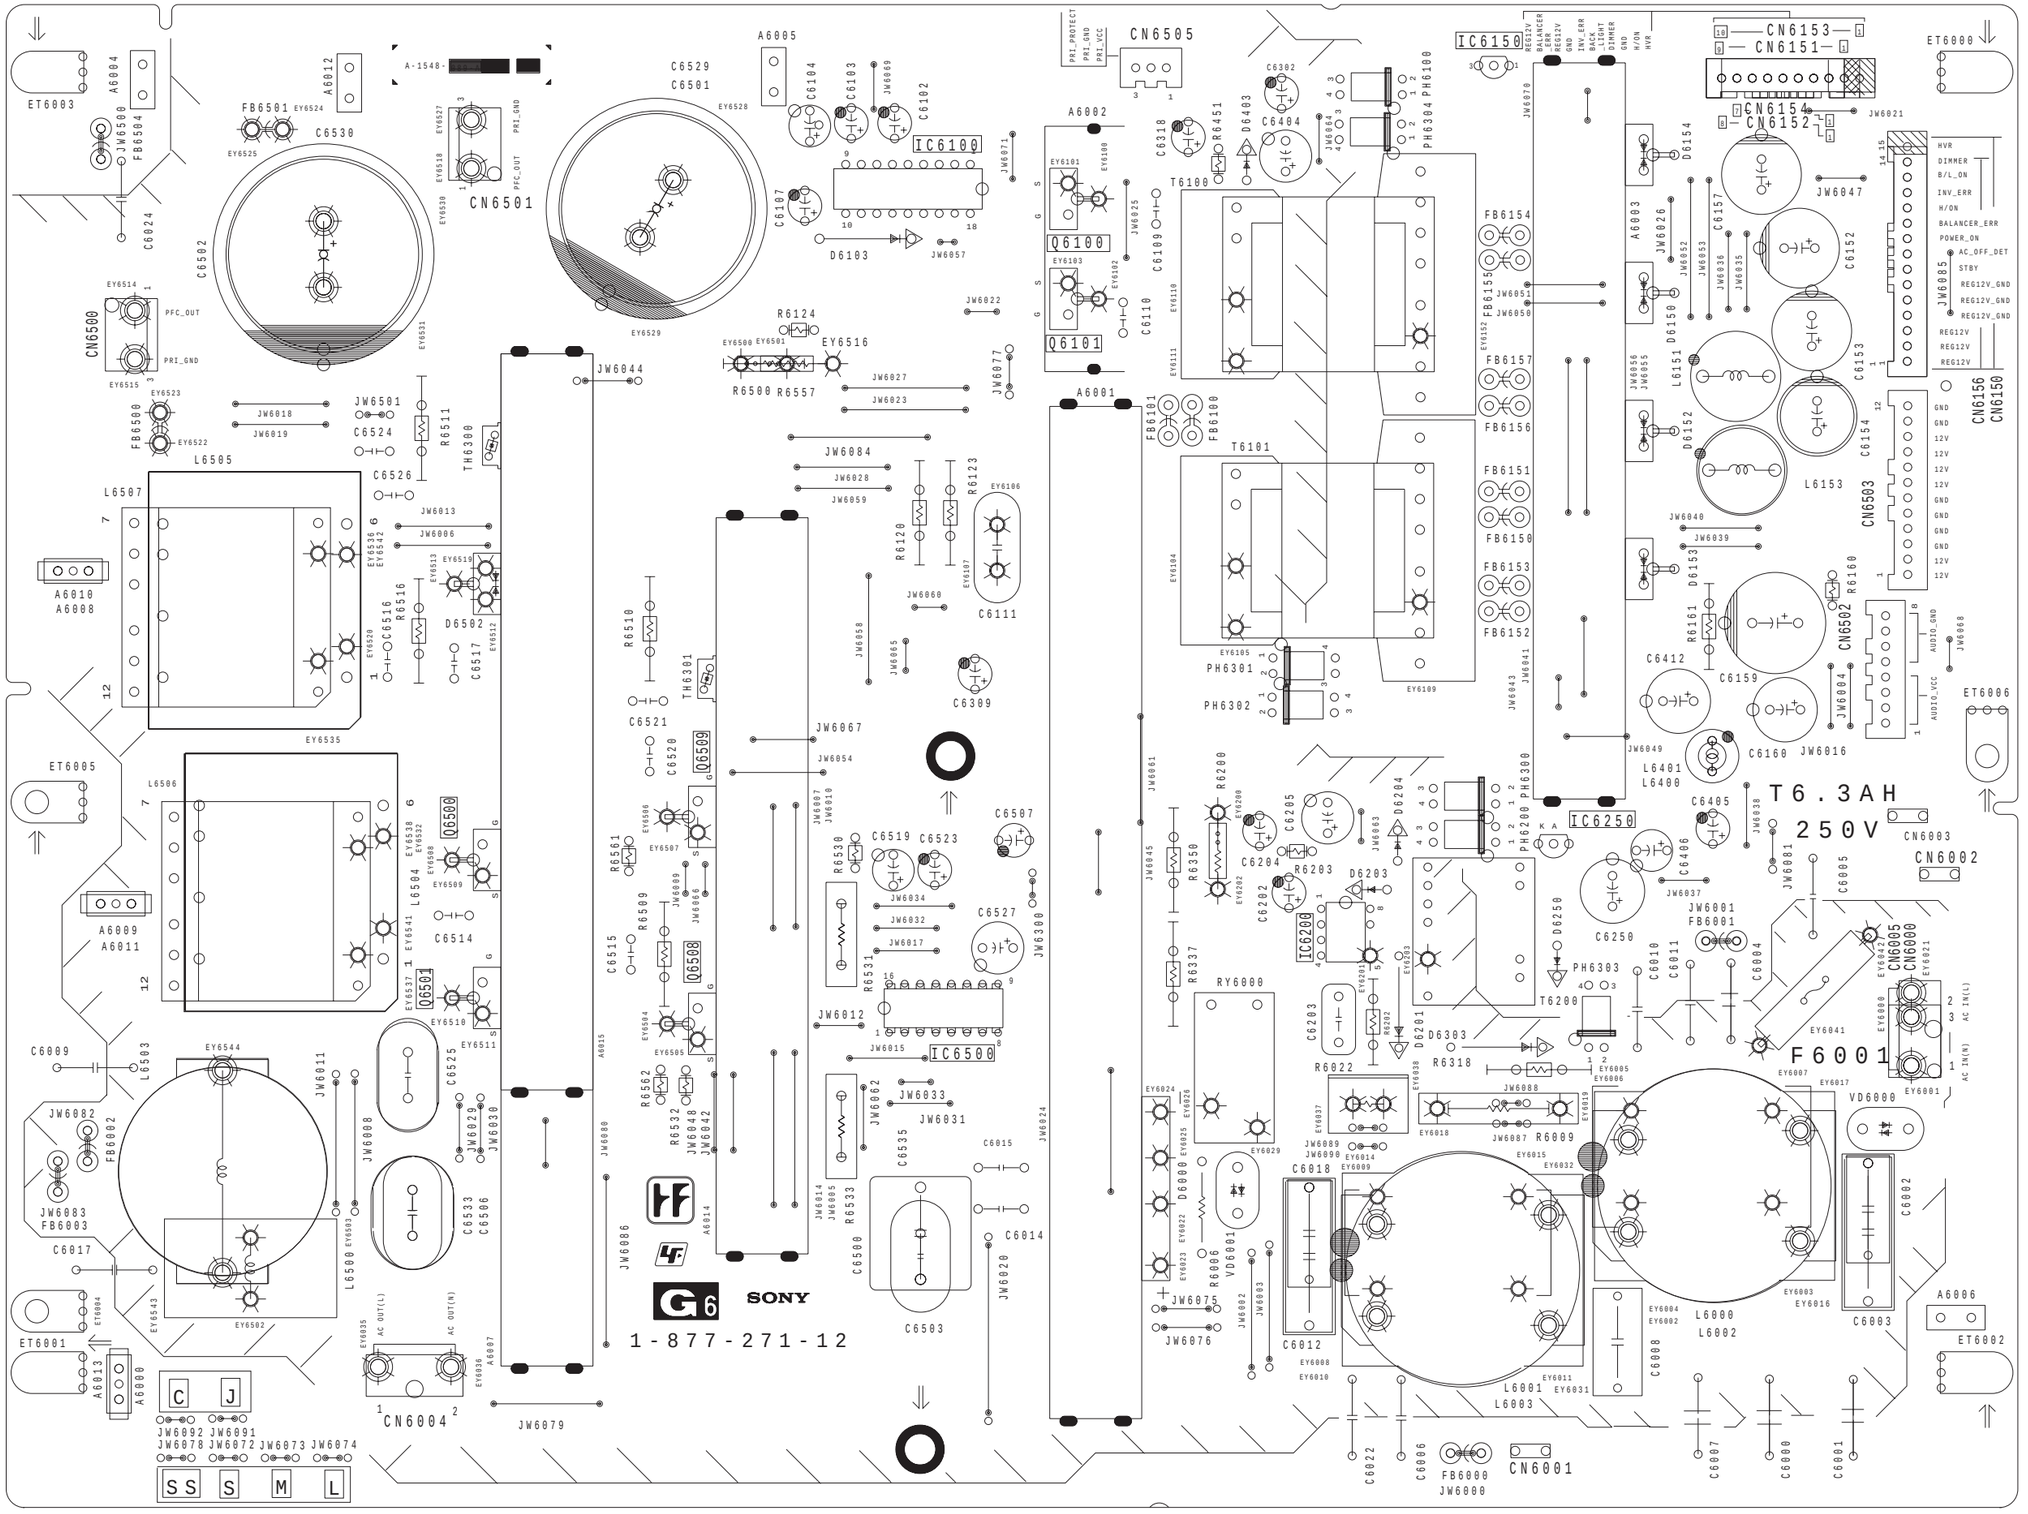

Text Search

~ G6 Printed Wiring Board Side B ~

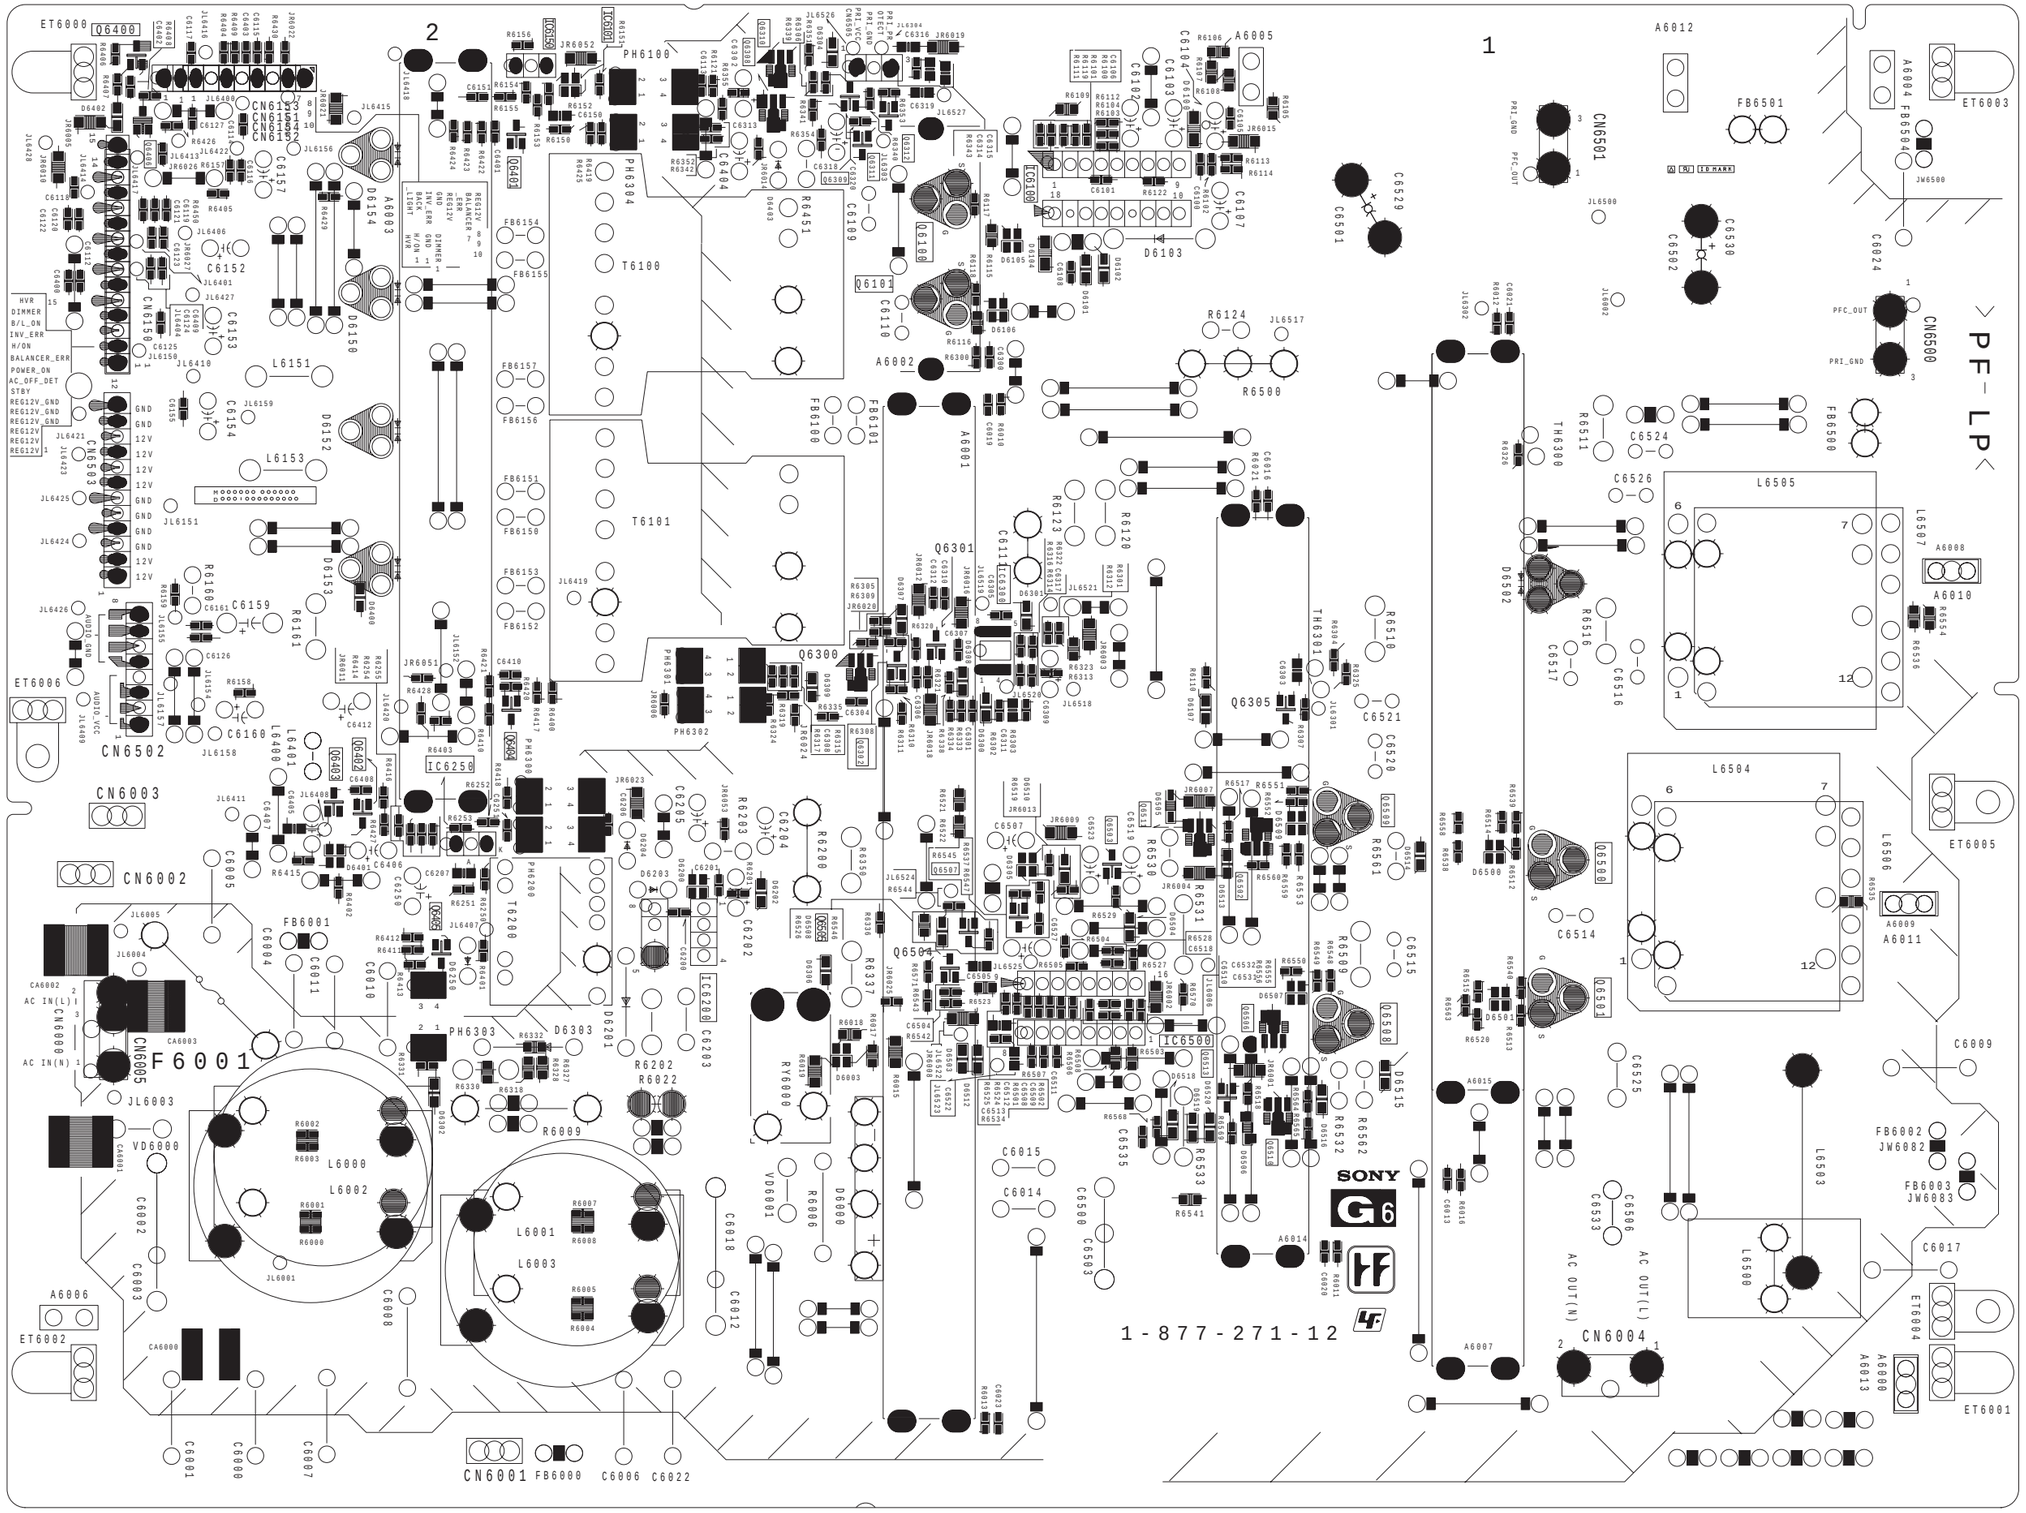

~ G7 Printed Wiring Board ~

Text Search

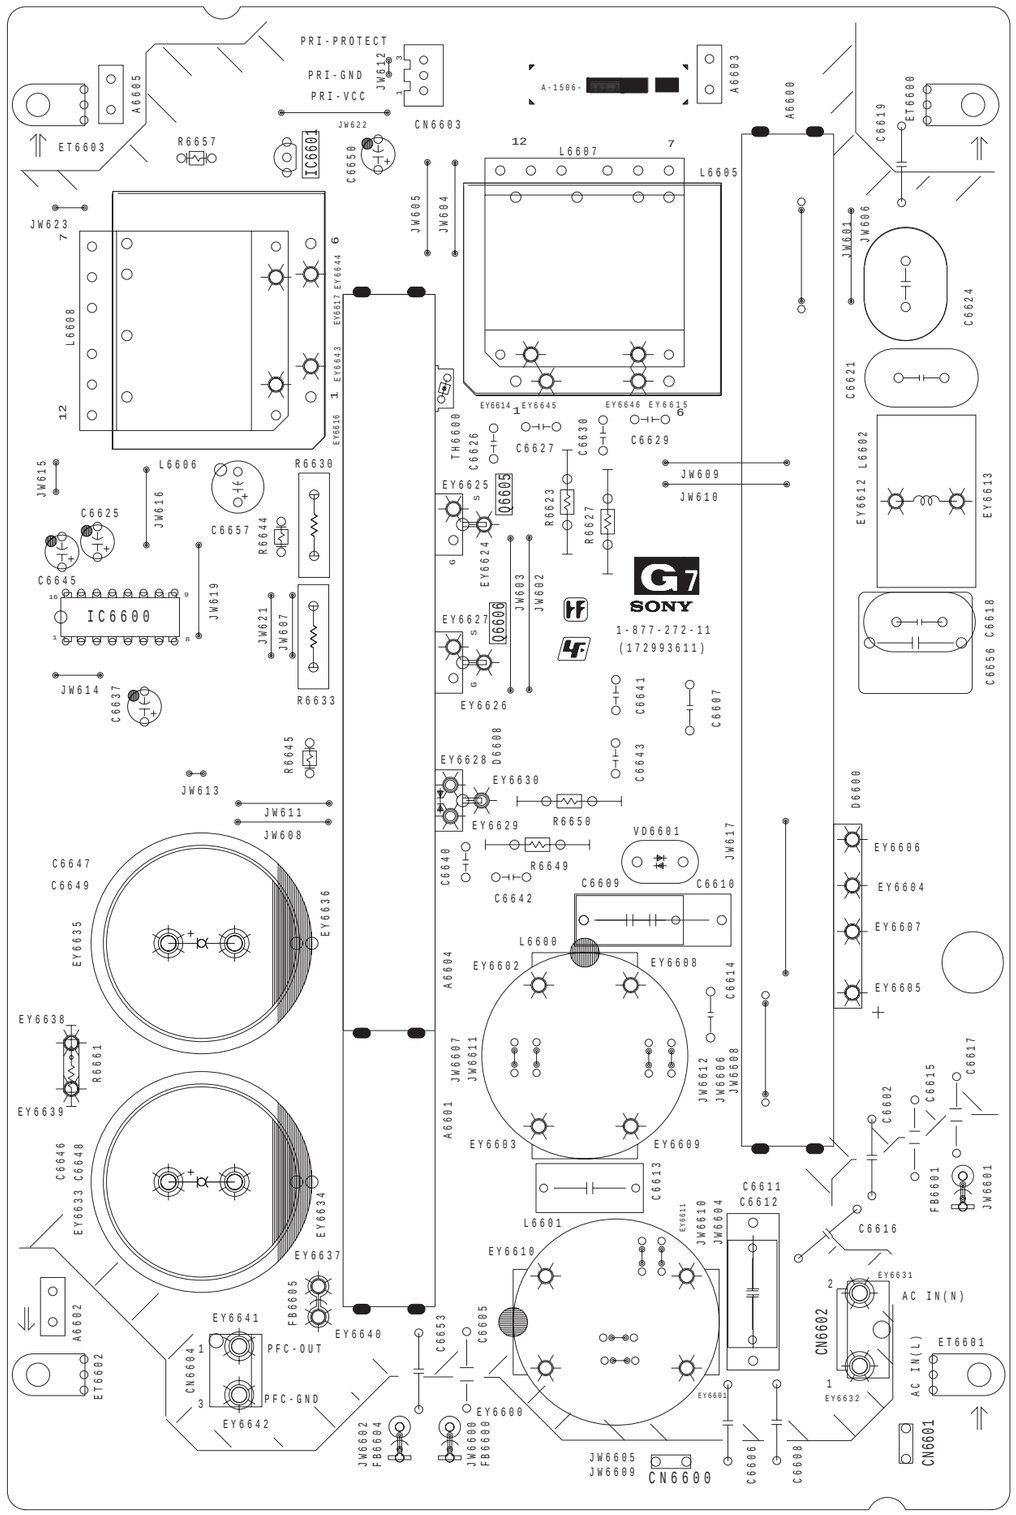

Text Search

~ GL Printed Wiring Board Side A ~

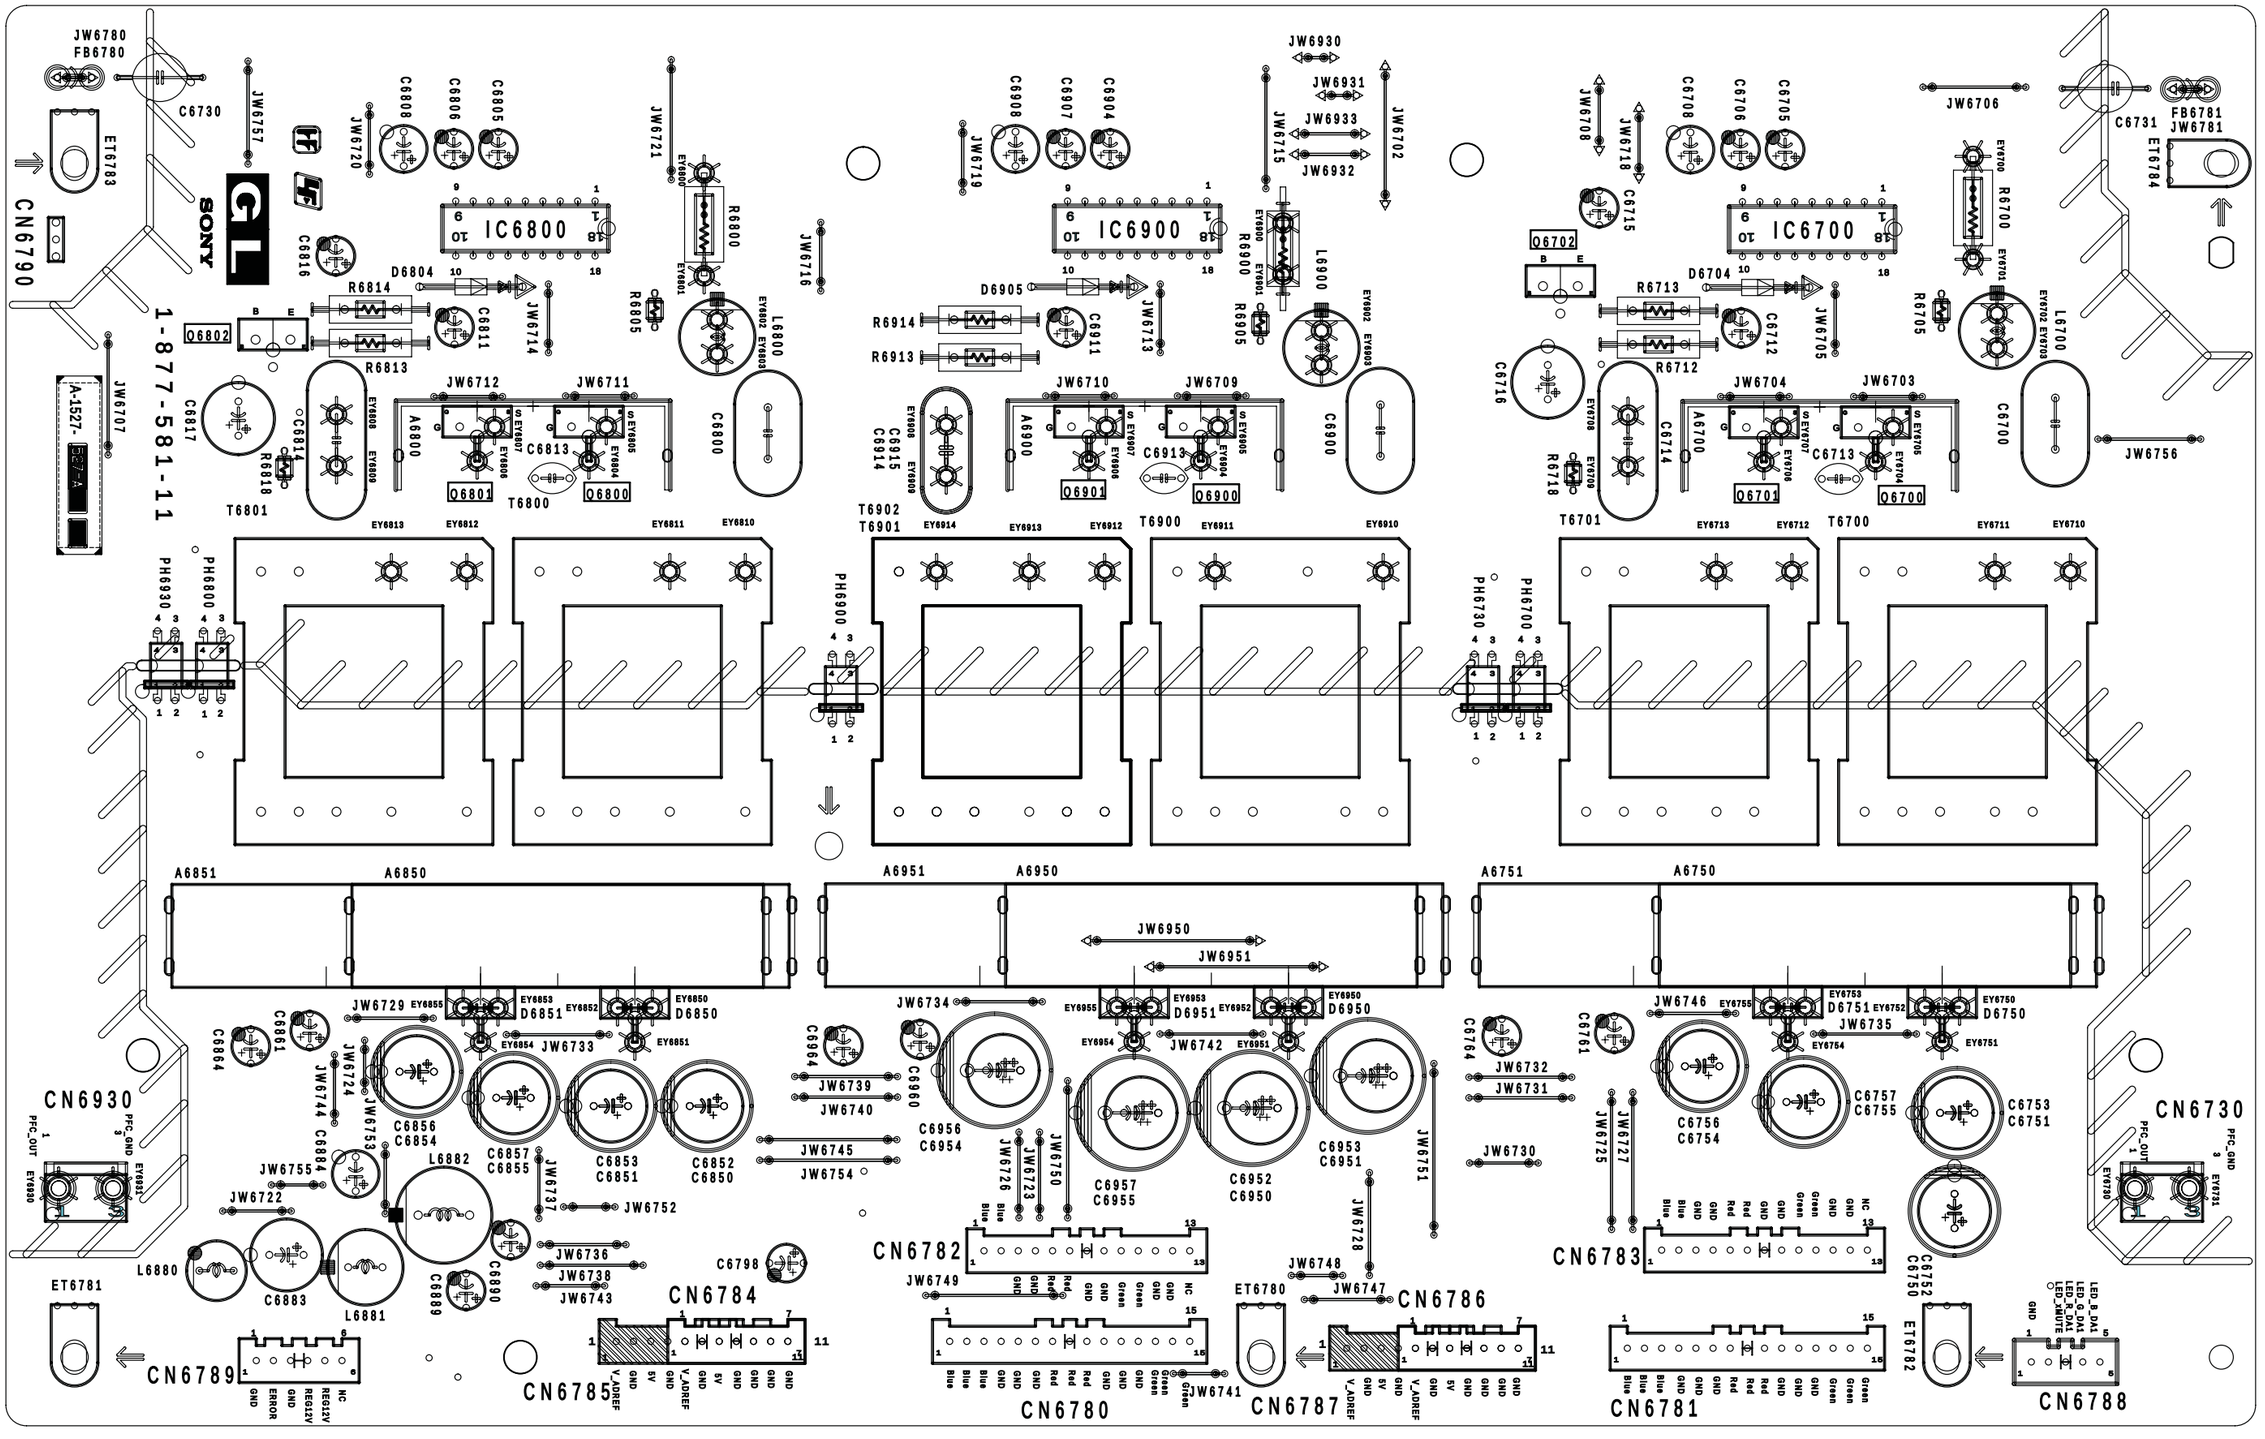

Text Search

~ GL Printed Wiring Board Side B ~

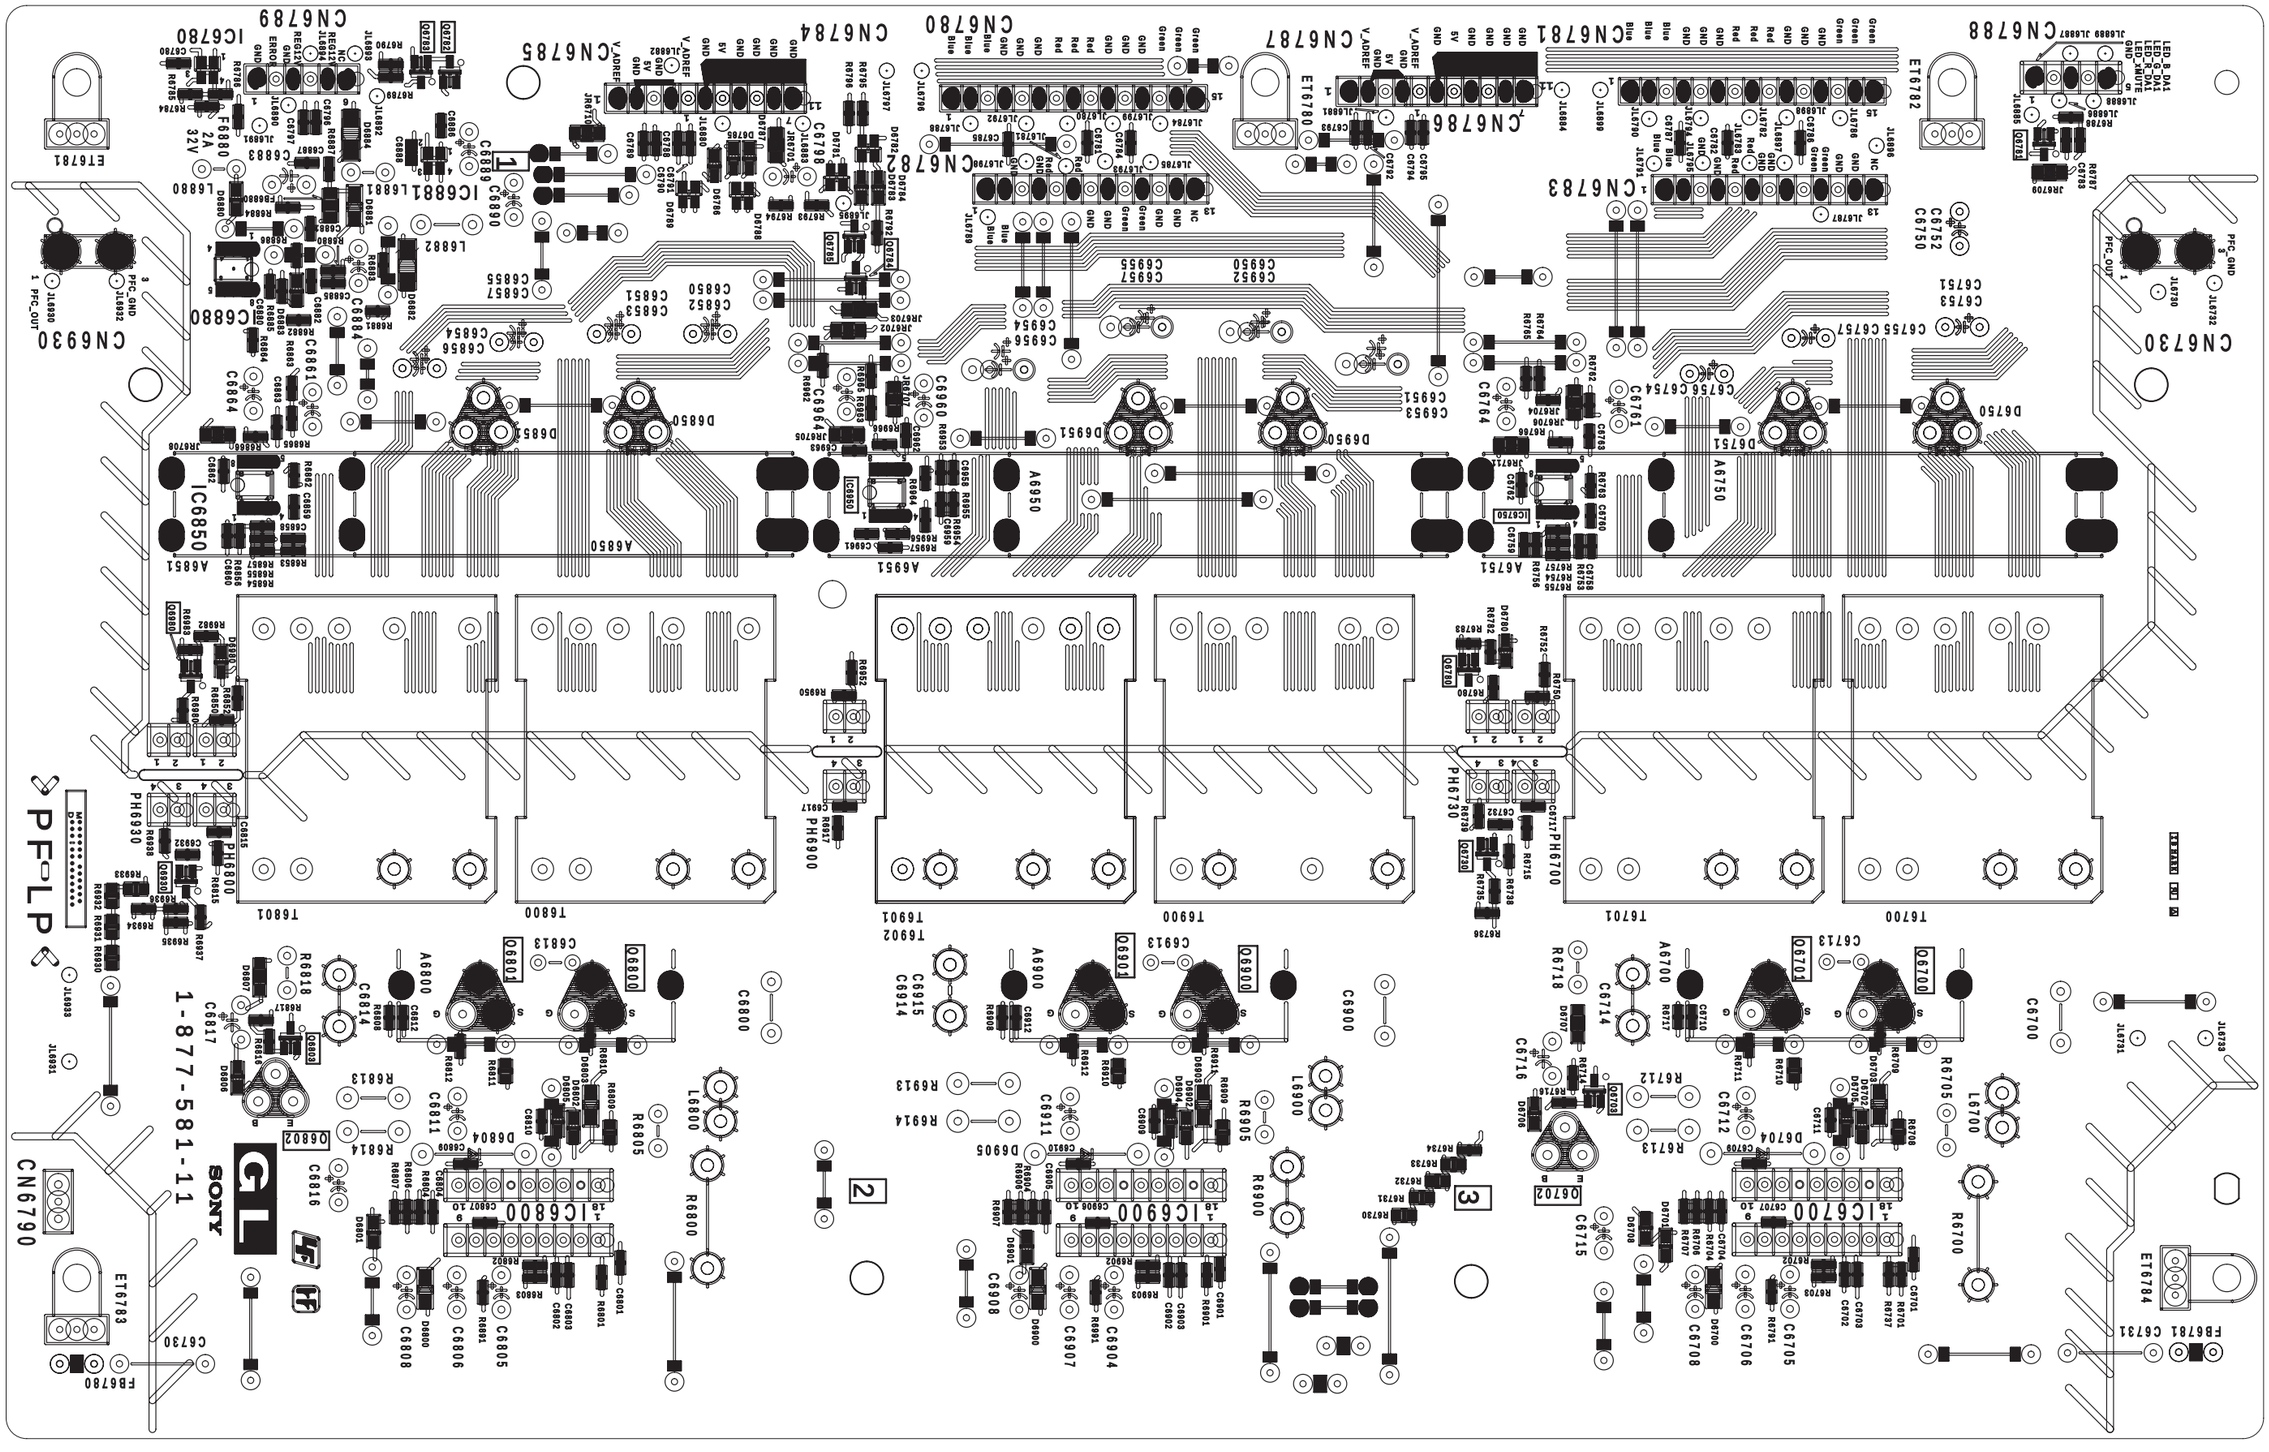

~ H1VM Printed Wiring Board Side A ~

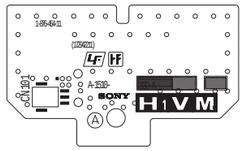

~ H1VM Printed Wiring Board Side B ~

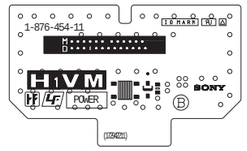

Text Search

~ H3VM Printed Wiring Board Side A ~

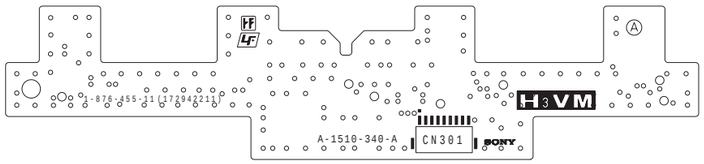

~ H3VM Printed Wiring Board Side B ~

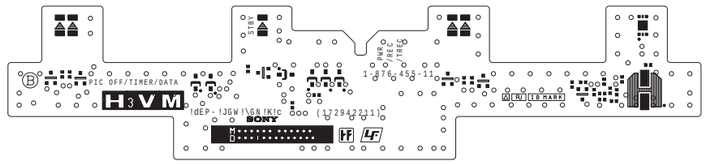

~ H4 Printed Wiring Board Side A ~



~ H4 Printed Wiring Board Side B ~



~ K2 Printed Wiring Board Side A ~

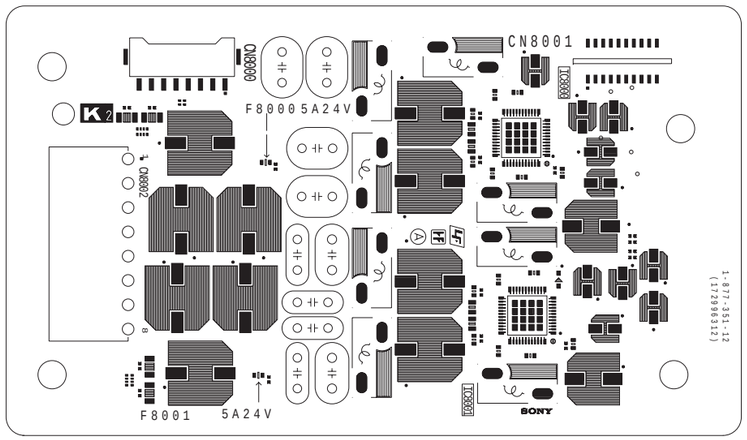

~ K2 Printed Wiring Board Side B ~

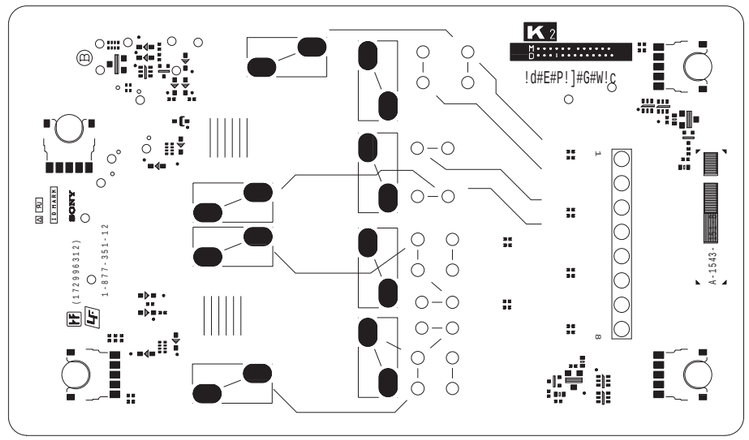

SECTION 5
EXPLODED VIEWS

NOTE :

- Non-serviceable items with no part number and no description are not stocked because they are not required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remarks column.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

5-1. CHASSIS

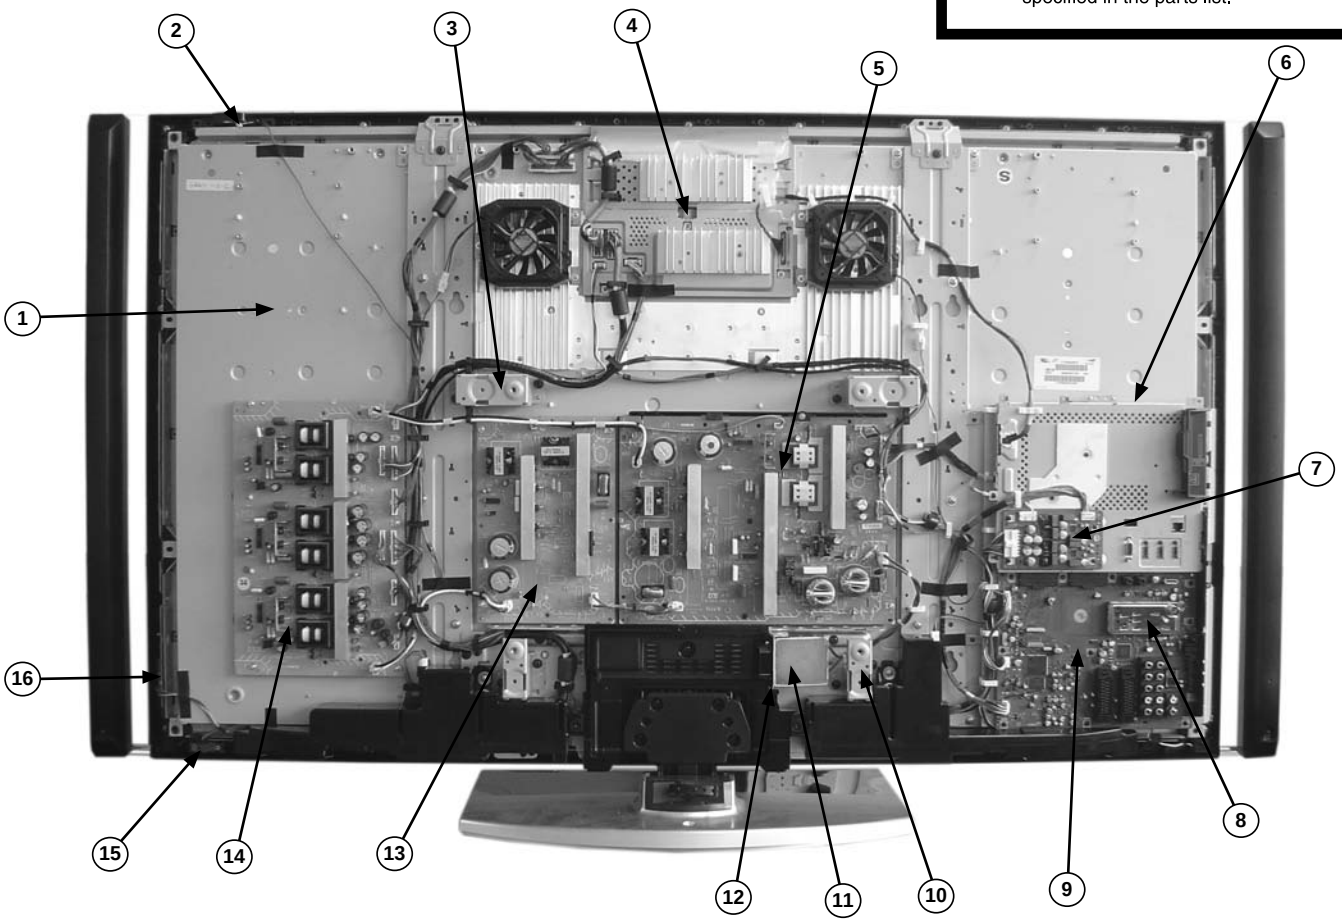

Note : **The components identified by mark 🔒 contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.**

REF.NO.		PART.NO	DESCRIPTION	REMARK
1	⚠	1-802-778-11	LCD PANEL (40 INCH FHD TFT) 40 inches	
	⚠	A-1568-135-A	LCD PANEL (46 INCH FHD TFT) 46 inches	
	⚠	A-1568-136-A	LCD PANEL (55 INCH FHD TFT) 55 inches	
2		*A-1557-912-A	H1VM BOARD, COMPLETE	
3		3-293-119-01	FRAME, VESA (TOP) 40 inches	
		X-2319-353-2	FRAME, VESA (TOP) (46Z) ASSY 46 inches	
		X-2319-354-1	FRAME, VESA (TOP) (55Z) ASSY 55 inches	
4		*A-1557-693-A	CB1 BOARD, COMPLETE 46 inches	
		*A-1557-695-A	CB1 BOARD, COMPLETE 55 inches	
5		*A-1552-097-A	G6 BOARD, COMPLETE 40 inches	
		*A-1552-101-A	G6 BOARD, COMPLETE 46 inches	
		*A-1552-103-A	G6 BOARD, COMPLETE 55 inches	
6	🔒	*A-1568-320-A	FBA BOARD, COMPLETE	
7		*A-1558-281-A	K2 BOARD, COMPLETE	
8		8-597-641-00	TUNER UNIT, DIGITAL BTD-HF411T	
9	🔒	*A-1568-315-A	AE BOARD, COMPLETE	
10		3-293-121-01	FRAME, VESA (BOTTOM) 40 inches	
		X-2319-984-1	FRAME, VESA(BTM) (46/55) ASSY 46/55 inches	
11	⚠	1-822-147-11	AC INLET 40/46 inches	
	⚠	1-822-096-11	AC INLET (WITH NOISE FILTER) 55 inches	
12	⚠	3-298-060-01	BRACKET, AC INLET 40/46 inches	
	⚠	X-2319-297-1	BRACKET, AC ASSY 55 inches	
13		*A-1553-205-A	D4 BOARD, COMPLETE 40 inches	
		*A-1552-105-A	G7 BOARD, COMPLETE 55 inches	
14		*A-1553-199-A	GL BOARD, COMPLETE 46 inches	
		*A-1553-201-A	GL BOARD, COMPLETE 55 inches	
15		*A-1557-911-A	H4 BOARD, COMPLETE	
16		*A-1557-910-A	H3VM BOARD, COMPLETE	
Ver 2.0		1-857-046-12	ETC-INVERTER MT BOARD 40 inches(Not shown)	

5-2. STAND ASSY & SPEAKERS.

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

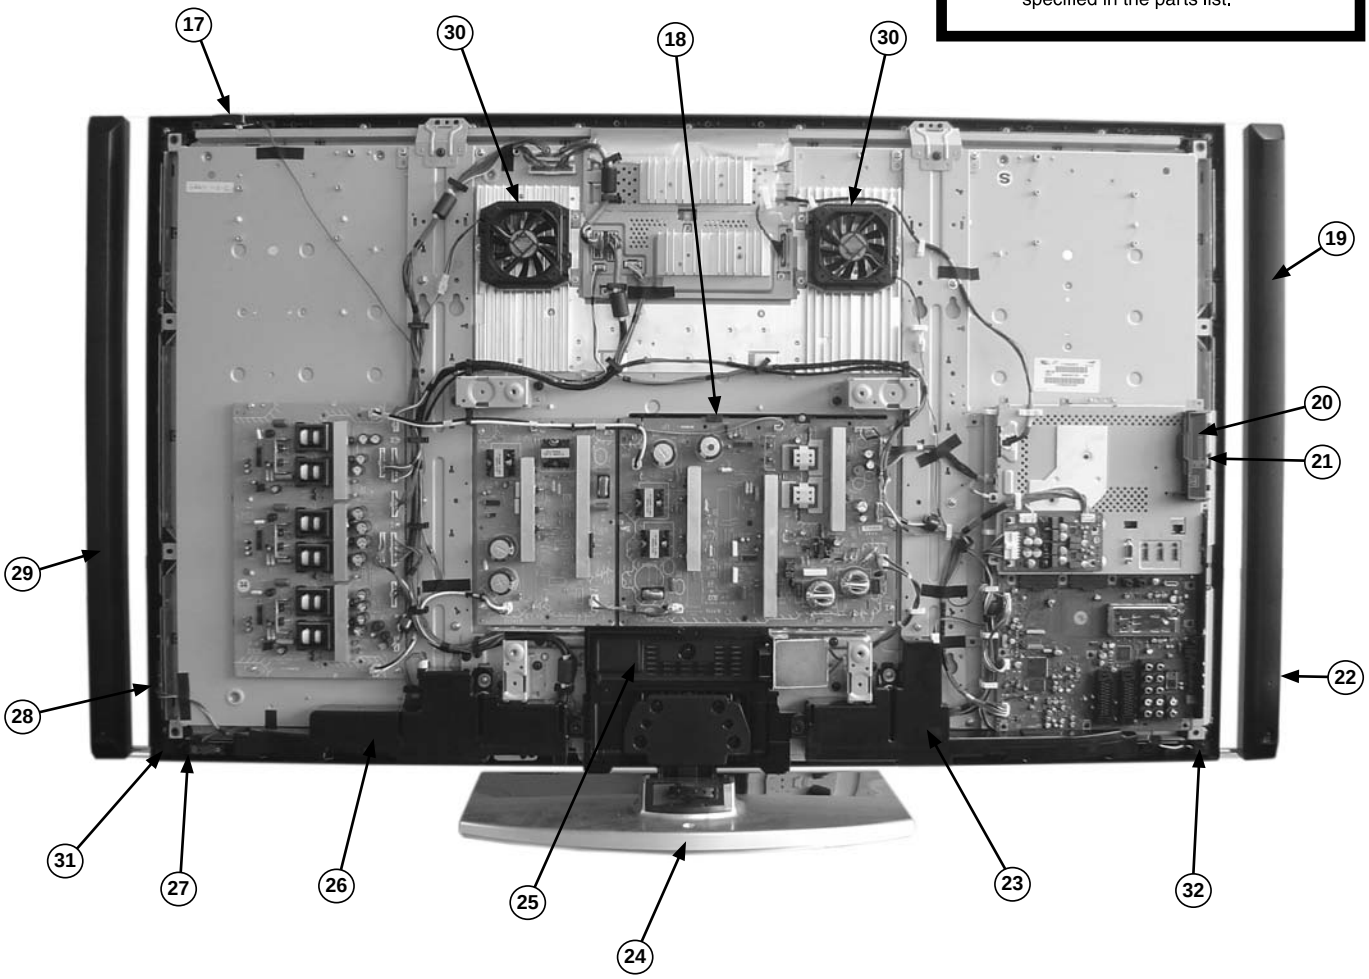

NOTE :

If ordering item 19 (SP Box Assy) please order item 22 (Label, HDMI) as well.

REF.NO.	PART.NO	DESCRIPTION	REMARK
17	X-2318-866-1	BUTTON, POWER ASSY	
18	*3-299-091-11	BRACKET, G6	
19	1-826-969-11	SP BOX ASSY (L) 40 inches	
	1-826-967-11	SP BOX ASSY (L) 46 inches	
	1-826-966-11	SP BOX ASSY (L) 55 inches	
20	3-299-089-01	BRACKET, CARD	
21	*4-101-356-02	CARD, DUMMY	
22	3-300-711-22	LABEL,HDMI	
23	1-826-965-11	SP BOX ASSY WOOFER (L) 40 inches	
	1-826-964-11	SP BOX ASSY WOOFER (L) 46/55 inches	
24	X-2319-235-1	STAND ASSY (ML-4) 40 inches	
	X-2319-236-1	STAND ASSY (L-4) 46 inches	
	X-2319-237-1	STAND ASSY (LL-3) 55 inches	

REF.NO.	PART.NO	DESCRIPTION	REMARK
25	3-293-125-11	COVER, UNDER (40) 40 inches	
	3-299-095-11	COVER, UNDER (46Z) 46 inches	
	3-299-096-11	COVER, UNDER (55Z) 55 inches	
26	1-826-965-21	SP BOX ASSY WOOFER (R) 40 inches	
	1-826-964-21	SP BOX ASSY WOOFER (R) 46/55 inches	
27	3-299-103-01	GUIDE, LIGHT	
28	3-876-205-01	BRACKET, LED	
29	1-826-969-21	SP BOX ASSY (R) 40 inches	
	1-826-967-21	SP BOX ASSY (R) 46 inches	
	1-826-966-21	SP BOX ASSY (R) 55 inches	
30	1-787-333-11	D.C. FAN 46/55 inches	
31	X-2319-158-1	COVER CABINET R ASSY	
32	X-2319-159-1	COVER CABINET L ASSY	

5-3. BEZEL

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

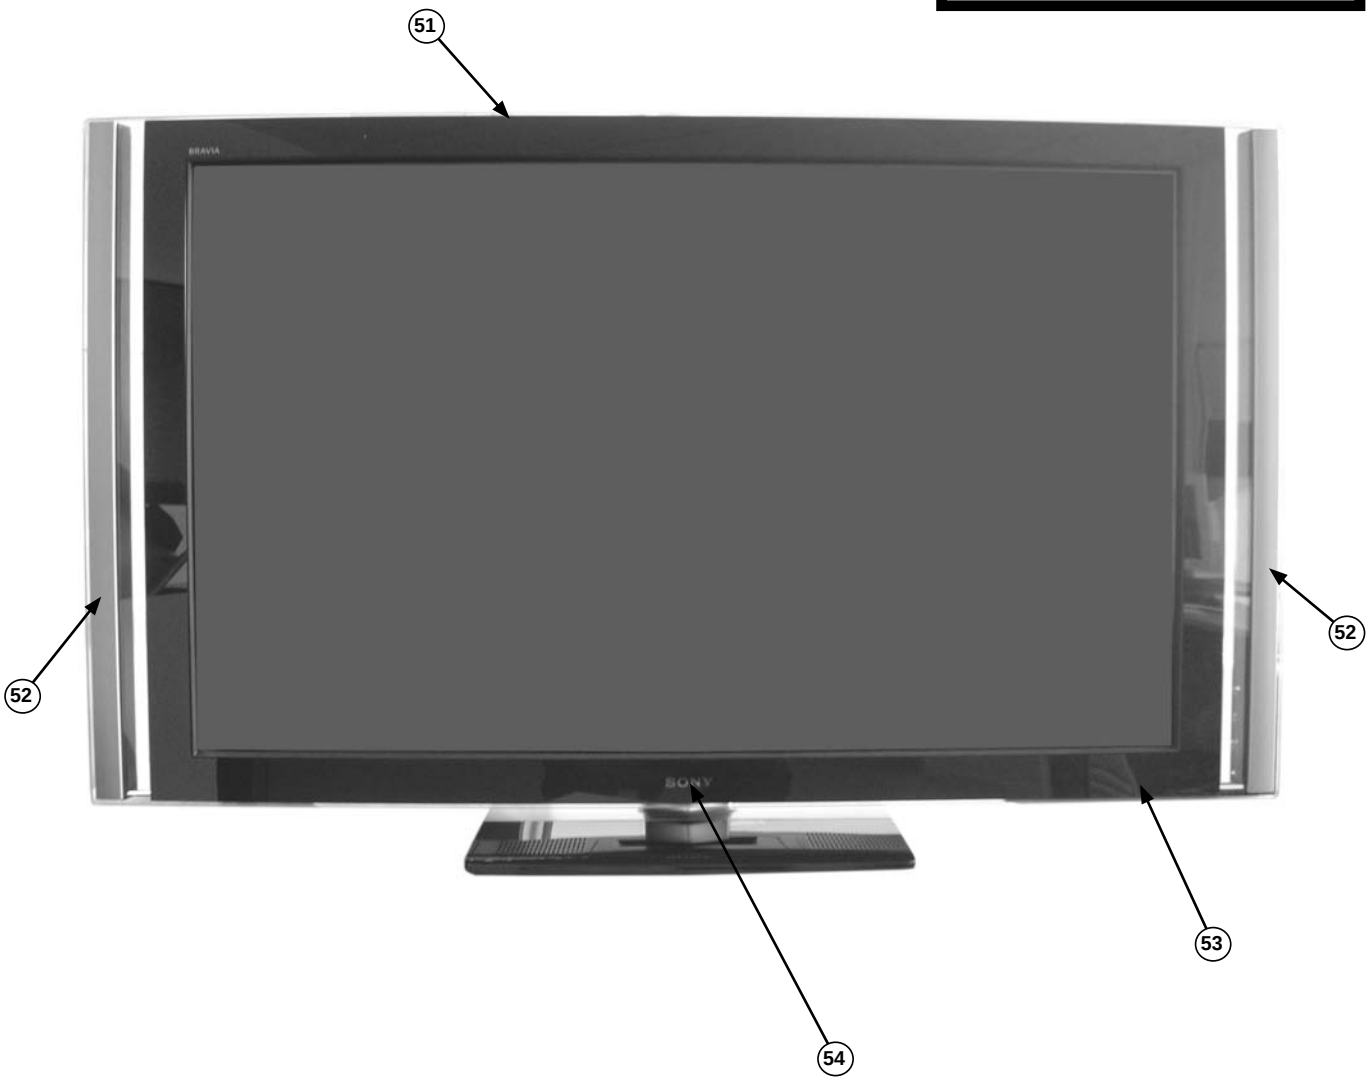

REF.NO.	PART.NO	DESCRIPTION	REMARK
51	X-2319-538-1	BEZEL (40) ASSY 40 inches	
	X-2319-540-1	BEZEL (46) ASSY 46 inches	
	X-2319-541-2	BEZEL (55) ASSY 55 inches	
52	X-2190-480-2	GRILLE (40_S) ASSY 40 inches	
	X-2190-485-2	GRILLE (46_S) ASSY 46 inches	
	X-2190-490-2	GRILLE (55_S) ASSY 55 inches	
53	1-798-150-11	TOUCH SENSOR MODULE	
54	1-480-680-12	ILLUMINATION MODULE	

5-4. REAR COVER & POWER SUPPLY CORDS

Note : Les composants indentifies par une trame et par une marque ⚠ sonte d'une importance critique pour la securite. Ne les remplacer que par des pieces du numero specifie.

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

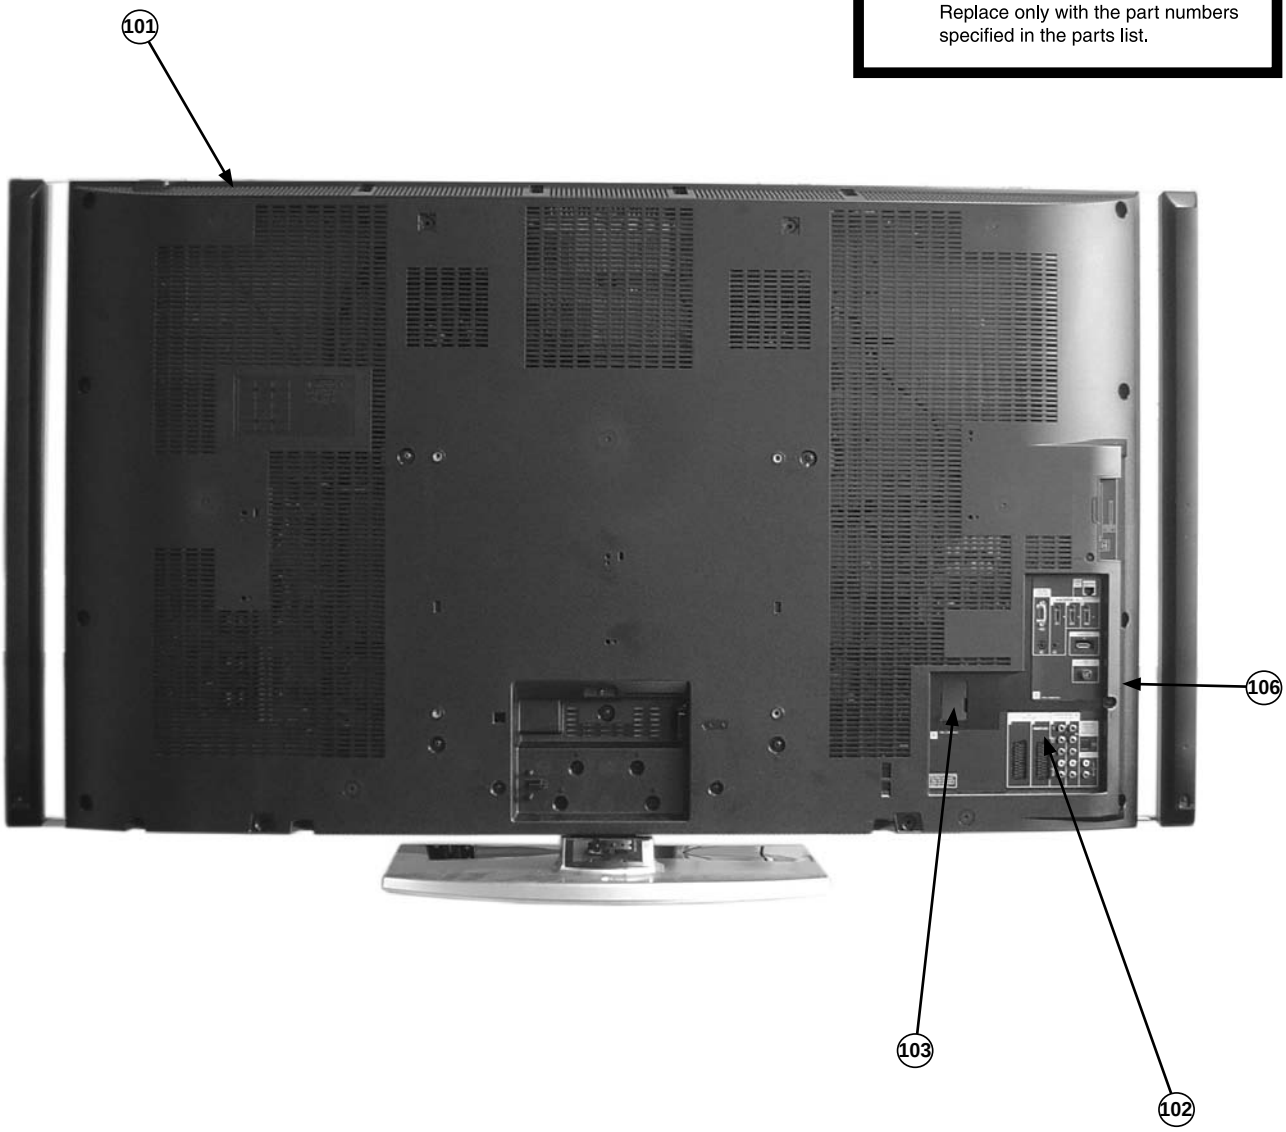

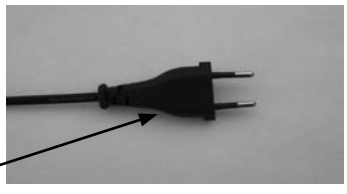

REF.NO.		PART.NO	DESCRIPTION	REMARK
101		3-296-655-21	REAR COVER (40) 40 inches	
		3-299-083-21	REAR COVER (46Z) 46 inches	
		3-296-672-21	REAR COVER (55Z) 55 inches	
102		3-300-710-11	LABEL, REAR TERMINAL	
103		3-299-466-01	ECS COVER	
104	⚠	1-835-200-11	POWER SUPPLY CORD (AEP)	
105	⚠	1-835-165-11	POWER SUPPLY CORD (UK)	
106		3-298-025-41	BRACKET, SIDE JACK (AEP)	

NOTE :

If ordering item 101 (Rear cover) please order item 102 (Label,rear terminal) as well.

SECTION 6
ELECTRICAL PARTS LIST

PARTS LISTING TABLE OF CONTENTS

		Page
CB1 BOARD COMPLETE Parts List :	**(55 inches only)**	84
H3VM BOARD COMPLETE Parts List :		91
H4 BOARD COMPLETE Parts List :		92
H1VM BOARD COMPLETE Parts List :		92
K2 BOARD COMPLETE Parts List :		92
CB1 BOARD COMPLETE Parts List :	**(46 inches only)**	93
AE BOARD COMPLETE Parts List :		101
FBA BOARD COMPLETE Parts List :		112
ACCESSORIES AND CONNECTORS :		131
REMOTE COMMANDER :		131

Note: To ensure safety and reliability it is Sony policy that power supply boards should not be repaired at component level in the field as a result... The D4, G6, G7 and GL boards are regarded as non service items for exchange only and are not indicated in the parts list of this service manual

Note : Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

*** A-1557-695-A CB1 Board, Complete (55 inches only)**

< CAPACITOR >

REF.NO.	PART.NO	DESCRIPTION	REMARK	
C9001	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9004	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9005	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9006	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9007	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9008	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9009	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9026	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9027	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9100	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C9101	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C9102	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9103	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C9104	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C9105	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C9106	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9107	1-114-532-21	ELECT CHIP 330UF	20%	4V
C9109	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9110	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9112	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9113	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9119	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9123	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9126	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9127	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9128	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9129	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9130	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9132	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9133	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9135	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9136	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9138	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9139	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9140	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9144	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C9145	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9147	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9148	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9149	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9150	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9151	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9152	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9153	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9154	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9155	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9156	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9157	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9158	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9159	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9160	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9161	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9162	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9163	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9164	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9165	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9166	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9167	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9168	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9169	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9170	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9176	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9185	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9188	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9199	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9207	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9211	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9215	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9219	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9220	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9221	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9222	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9223	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9224	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9225	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9226	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9227	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9228	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9229	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9230	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9231	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9232	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9233	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9234	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9235	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9236	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9237	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9238	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9239	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9240	1-131-956-21	ELECT CHIP 220UF	20%	4V
C9241	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9242	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9243	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9244	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9245	1-100-904-11	CERAMIC CHIP 330PF	10%	50V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C9246	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9343	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9247	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9344	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C9248	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C9345	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C9249	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9346	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C9250	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9347	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9251	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9348	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C9252	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9351	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V
C9253	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9352	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9254	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9353	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9255	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9356	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C9256	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9357	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C9257	1-112-774-11	CERAMIC CHIP 470PF	10%	50V	C9358	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9258	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9359	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9259	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9407	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9260	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9408	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9261	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9409	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9262	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9410	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9263	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9413	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9264	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9415	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9265	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9438	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9266	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9445	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9267	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9454	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9268	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9455	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9301	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9456	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9302	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9457	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9303	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9458	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9304	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9459	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9305	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9460	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9306	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9461	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9307	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9463	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9310	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9485	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9312	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C9488	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9314	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9495	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9315	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9496	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9316	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9497	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9317	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9498	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9326	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9499	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9327	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9500	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9328	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9501	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9329	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9502	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9330	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C9503	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9332	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C9700	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9333	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C9701	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9334	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9335	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C9703	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9336	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C9704	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9337	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9705	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9338	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9706	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9340	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C9707	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9342	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9708	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C9709	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9770	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V
C9710	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9771	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V
C9711	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9800	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9712	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9801	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9713	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9802	1-131-956-21	ELECT CHIP 220UF	20%	4V
C9714	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C9803	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9715	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C9804	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9716	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9805	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9717	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9806	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9718	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9807	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9719	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9808	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9720	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9810	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9721	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C9811	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9722	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9812	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9724	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9813	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9725	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9814	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9726	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9816	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9727	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9818	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9728	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9819	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9729	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9820	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9730	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9822	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9731	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9823	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9733	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9824	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9735	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9825	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9736	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9830	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9737	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9832	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9738	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9836	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9739	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9838	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9741	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9841	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9743	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9842	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9744	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9844	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9745	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9846	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9746	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9848	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9747	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9850	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9749	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9851	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9751	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9852	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9752	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9854	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9753	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9861	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9754	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9862	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9755	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9863	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9757	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9864	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9759	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9866	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9760	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9867	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9761	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9868	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9762	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9869	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9763	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9870	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9765	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9872	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9767	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9873	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9768	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9874	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9769	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9875	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

CB1

REF.NO.		PART.NO	DESCRIPTION	REMARK	
C9876		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9877		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9878		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9879		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9880		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9881		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9883		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9885		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9886		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9887		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9888		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9889		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9890		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9891		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9892		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9895		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9896		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9897		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9898		1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9901		1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C9904		1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C9905		1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9906		1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C9907		1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9908		1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9909		1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V
			< CONNECTOR >		
CN9000		1-821-607-11	HEADER ASSEMBLY FOR PWB 8P		
CN9001		*1-821-034-11	HEADER ASSEMBLY FOR PWB 51P		
CN9003		1-821-171-11	CONNECTOR, BOARD TO BOARD 41P		
CN9004		1-821-170-11	CONNECTOR, BOARD TO BOARD 51P		
CN9700		1-822-045-11	HEADER ASSEMBLY FOR PWB 32P		
CN9701		1-819-284-11	HEADER ASSEMBLY FOR PWB 30P		
CN9702		1-819-784-21	PIN, CONNECTOR 50P		
CN9703		1-821-604-11	HEADER ASSEMBLY FOR PWB 5P		
CN9704		1-779-331-51	CONNECTOR, FFC/FPC 14P		
			< DIODE >		
D9300		6-502-248-01	DI KDZTR3.9B		
D9301		6-502-248-01	DI KDZTR3.9B		
D9302		6-502-248-01	DI KDZTR3.9B		
D9306		8-719-081-67	DIODE M1FM3		
D9307		8-719-081-67	DIODE M1FM3		
D9311		8-719-081-67	DIODE M1FM3		
D9701		6-502-150-01	DI MA2SD320G8S0		
D9702		6-502-150-01	DI MA2SD320G8S0		
D9703		6-502-150-01	DI MA2SD320G8S0		
D9704		6-502-150-01	DI MA2SD320G8S0		
D9900		8-719-081-67	DIODE M1FM3		
D9901		6-502-248-01	DI KDZTR3.9B		
ET9002		1-780-482-11	EARTH TERMINAL		
ET9007		1-780-638-21	CONTACT TERMINAL		
ET9009		1-780-638-21	CONTACT TERMINAL		
ET9012		1-780-638-21	CONTACT TERMINAL		
ET9013		1-780-482-11	EARTH TERMINAL		
ET9014		1-780-638-21	CONTACT TERMINAL		
ET9015		1-780-482-11	EARTH TERMINAL		
ET9700		1-780-482-11	EARTH TERMINAL		
ET9701		1-780-482-11	EARTH TERMINAL		
ET9702		1-780-482-11	EARTH TERMINAL		
ET9703		1-780-482-11	EARTH TERMINAL		
			< FUSE >		
F9100	⚠	1-576-603-11	FUSE	3.15A	24V
F9300	⚠	1-576-603-11	FUSE	3.15A	24V
F9301	⚠	1-576-603-11	FUSE	3.15A	24V
			< FERRITE BEAD >		
FB9000		1-469-669-21	FERRITE	0UH	
FB9001		1-500-922-11	FERRITE	0UH	
FB9002		1-469-669-21	FERRITE	0UH	
FB9004		1-500-922-11	FERRITE	0UH	
FB9005		1-400-834-11	FERRITE	0UH	
FB9008		1-469-669-21	FERRITE	0UH	
FB9009		1-500-922-11	FERRITE	0UH	
FB9010		1-500-922-11	FERRITE	0UH	
FB9011		1-469-669-21	FERRITE	0UH	
FB9012		1-400-834-11	FERRITE	0UH	
FB9200		1-469-669-21	FERRITE	0UH	
FB9308		1-469-669-21	FERRITE	0UH	
FB9310		1-469-669-21	FERRITE	0UH	
FB9311		1-469-669-21	FERRITE	0UH	
FB9312		1-469-669-21	FERRITE	0UH	
FB9404		1-400-834-11	FERRITE	0UH	
FB9405		1-400-834-11	FERRITE	0UH	
FB9713		1-400-834-11	FERRITE	0UH	
FB9714		1-400-833-21	FERRITE	0UH	
FB9715		1-400-833-21	FERRITE	0UH	
FB9716		1-400-833-21	FERRITE	0UH	
FB9717		1-400-833-21	FERRITE	0UH	
FB9718		1-400-833-21	FERRITE	0UH	
FB9719		1-400-833-21	FERRITE	0UH	
FB9720		1-400-833-21	FERRITE	0UH	
FB9721		1-400-833-21	FERRITE	0UH	
FB9722		1-400-833-21	FERRITE	0UH	
FB9723		1-400-833-21	FERRITE	0UH	
FB9724		1-400-833-21	FERRITE	0UH	

REF.NO.	PART.NO	DESCRIPTION	REMARK
FB9725	1-400-833-21	FERRITE	0UH
FB9726	1-400-833-21	FERRITE	0UH
FB9727	1-400-833-21	FERRITE	0UH
FB9728	1-400-833-21	FERRITE	0UH
FB9729	1-400-833-21	FERRITE	0UH
FB9730	1-400-833-21	FERRITE	0UH
FB9731	1-400-833-21	FERRITE	0UH
FB9732	1-400-833-21	FERRITE	0UH
FB9733	1-400-833-21	FERRITE	0UH
FB9734	1-400-833-21	FERRITE	0UH
FB9735	1-400-833-21	FERRITE	0UH
FB9736	1-400-833-21	FERRITE	0UH
FB9737	1-400-833-21	FERRITE	0UH
FB9738	1-400-833-21	FERRITE	0UH
FB9739	1-400-833-21	FERRITE	0UH
FB9740	1-400-833-21	FERRITE	0UH
FB9741	1-400-833-21	FERRITE	0UH
FB9742	1-400-833-21	FERRITE	0UH
FB9743	1-400-833-21	FERRITE	0UH
FB9744	1-400-833-21	FERRITE	0UH
FB9745	1-400-833-21	FERRITE	0UH
FB9746	1-500-922-11	FERRITE	0UH
FB9805	1-469-669-21	FERRITE	0UH
FB9902	1-469-669-21	FERRITE	0UH
	< FILTER >		
FL9000	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9001	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9002	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9100	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9101	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9102	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9103	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9202	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9203	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9204	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9205	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9300	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9700	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9701	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9702	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9703	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9704	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9705	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9706	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9707	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9708	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9709	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9710	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9800	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9801	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9802	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9803	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9804	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9805	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9806	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9807	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9808	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
	< IC >		
IC9000	6-713-042-01	IC CXD9935GB	
IC9001	6-710-361-01	IC 74LVC2G66DC-125	
IC9002	6-704-566-01	IC R3112N291A-TR-FA	
IC9003	6-704-566-01	IC R3112N291A-TR-FA	
IC9007	6-704-067-01	IC M24128-BWMN6T(A)	
IC9008	6-710-361-01	IC 74LVC2G66DC-125	
IC9100	6-710-949-01	IC SN0608006PWPR	
IC9101	6-711-262-01	IC HYB18TC256160BF-3S	
IC9102	6-711-262-01	IC HYB18TC256160BF-3S	
IC9300	6-710-922-01	IC BD9853AFV-E2	
IC9301	6-710-922-01	IC BD9853AFV-E2	
IC9302	6-712-904-01	IC R1154N050B-TR-F	
IC9303	6-711-042-01	IC BD00KA5WFP-E2	
IC9400	6-713-137-01	IC CXD9929GB	
IC9401	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC9402	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC9700	6-712-442-01	IC 74AHC541PW-118	
IC9701	6-712-442-01	IC 74AHC541PW-118	
IC9702	6-712-442-01	IC 74AHC541PW-118	
IC9703	6-712-442-01	IC 74AHC541PW-118	
IC9704	6-701-985-01	IC BH2220FVM-TR	
IC9705	6-710-121-01	IC M24256-BWMN6TP(A)	
IC9706	6-712-442-01	IC 74AHC541PW-118	
IC9707	6-808-325-01	IC EPM570T100I5NRR-IC9707-C100	
IC9708	6-808-324-01	IC S29GL064N90TFI030-C3100-ER	
IC9709	6-709-888-01	IC TC7WHU04FK(T5RSOYF	
IC9710	6-708-758-01	IC PCA9517DP.118	
	< COIL >		
L9000	1-457-540-11	INDUCTOR	0UH
L9001	1-457-540-11	INDUCTOR	0UH
L9002	1-457-540-11	INDUCTOR	0UH
L9003	1-457-540-11	INDUCTOR	0UH
L9004	1-457-540-11	INDUCTOR	0UH
L9005	1-457-540-11	INDUCTOR	0UH
L9006	1-457-540-11	INDUCTOR	0UH
L9007	1-457-540-11	INDUCTOR	0UH
L9008	1-457-540-11	INDUCTOR	0UH
L9009	1-457-540-11	INDUCTOR	0UH

REF.NO.	PART.NO	DESCRIPTION	REMARK
L9010	1-457-540-11	INDUCTOR	0UH
L9011	1-457-540-11	INDUCTOR	0UH
L9012	1-457-540-11	INDUCTOR	0UH
L9013	1-457-540-11	INDUCTOR	0UH
L9014	1-457-540-11	INDUCTOR	0UH
L9015	1-457-540-11	INDUCTOR	0UH
L9016	1-457-540-11	INDUCTOR	0UH
L9017	1-457-540-11	INDUCTOR	0UH
L9018	1-457-540-11	INDUCTOR	0UH
L9019	1-457-540-11	INDUCTOR	0UH
L9020	1-457-540-11	INDUCTOR	0UH
L9021	1-457-540-11	INDUCTOR	0UH
L9022	1-457-540-11	INDUCTOR	0UH
L9023	1-457-540-11	INDUCTOR	0UH
L9100	1-481-246-11	INDUCTOR	2.2UH
L9300	1-457-428-11	INDUCTOR	4.7UH
L9301	1-457-428-11	INDUCTOR	4.7UH
L9302	1-457-428-11	INDUCTOR	4.7UH
L9900	1-457-428-11	INDUCTOR	4.7UH
		< TRANSISTOR >	
Q9002	6-551-904-01	TR RT3S03M-T111-1	
Q9100	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q9101	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q9300	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
Q9302	6-551-460-01	TRANSISTOR RSR025P03TL	
Q9303	6-551-460-01	TRANSISTOR RSR025P03TL	
Q9304	6-550-718-01	TRANSISTOR RSR025N03TL	
Q9306	6-550-718-01	TRANSISTOR RSR025N03TL	
Q9307	6-551-123-01	TRANSISTOR RSS065N03FU7TB	
Q9308	6-550-369-01	TRANSISTOR TPC8109(TE12L)	
Q9309	6-551-817-01	TR UNR52A3G0LS0	
Q9310	6-551-776-01	TR 2SC5950G0LS0	
Q9311	6-551-817-01	TR UNR52A3G0LS0	
Q9701	6-551-904-01	TR RT3S03M-T111-1	
Q9702	6-551-904-01	TR RT3S03M-T111-1	
Q9703	6-551-817-01	TR UNR52A3G0LS0	
Q9707	6-551-817-01	TR UNR52A3G0LS0	
Q9708	6-550-354-01	TRANSISTOR RTQ035P02TR	
Q9900	6-551-460-01	TRANSISTOR RSR025P03TL	
Q9901	6-550-718-01	TRANSISTOR RSR025N03TL	
		< RESISTOR >	
R9002	1-218-941-11	METAL CHIP 100 5%	1/16W
R9003	1-218-941-11	METAL CHIP 100 5%	1/16W
R9004	1-218-941-11	METAL CHIP 100 5%	1/16W
R9005	1-218-941-11	METAL CHIP 100 5%	1/16W
R9006	1-218-941-11	METAL CHIP 100 5%	1/16W
R9007	1-218-941-11	METAL CHIP 100 5%	1/16W
R9008	1-218-941-11	METAL CHIP 100 5%	1/16W

REF.NO.	PART.NO	DESCRIPTION	REMARK
R9009	1-218-941-11	METAL CHIP 100 5%	1/16W
R9010	1-218-941-11	METAL CHIP 100 5%	1/16W
R9011	1-218-941-11	METAL CHIP 100 5%	1/16W
R9012	1-218-941-11	METAL CHIP 100 5%	1/16W
R9013	1-218-941-11	METAL CHIP 100 5%	1/16W
R9028	1-218-941-11	METAL CHIP 100 5%	1/16W
R9029	1-218-941-11	METAL CHIP 100 5%	1/16W
R9030	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9031	1-208-935-11	METAL CHIP 100K 0.5%	1/16W
R9053	1-208-927-11	METAL CHIP 47K 0.5%	1/16W
R9061	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9063	1-218-990-81	SHORT CHIP 0	
R9065	1-208-923-11	METAL CHIP 33K 0.5%	1/16W
R9103	1-208-711-11	METAL CHIP 15K 0.5%	1/16W
R9104	1-218-990-81	SHORT CHIP 0	
R9105	1-208-683-11	METAL CHIP 1K 0.5%	1/16W
R9107	1-218-990-81	SHORT CHIP 0	
R9109	1-208-699-11	METAL CHIP 4.7K 0.5%	1/16W
R9110	1-218-990-81	SHORT CHIP 0	
R9113	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9114	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9116	1-208-663-11	METAL CHIP 150 0.5%	1/16W
R9117	1-208-663-11	METAL CHIP 150 0.5%	1/16W
R9118	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9119	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9121	1-218-933-11	METAL CHIP 22 5%	1/16W
R9122	1-218-933-11	METAL CHIP 22 5%	1/16W
R9123	1-218-933-11	METAL CHIP 22 5%	1/16W
R9124	1-218-933-11	METAL CHIP 22 5%	1/16W
R9125	1-218-933-11	METAL CHIP 22 5%	1/16W
R9126	1-218-933-11	METAL CHIP 22 5%	1/16W
R9128	1-208-663-11	METAL CHIP 150 0.5%	1/16W
R9129	1-208-663-11	METAL CHIP 150 0.5%	1/16W
R9130	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9131	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9132	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9133	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9136	1-218-990-81	SHORT CHIP 0	
R9137	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9300	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9303	1-218-990-81	SHORT CHIP 0	
R9304	1-208-939-11	METAL CHIP 150K 0.5%	1/16W
R9305	1-208-927-11	METAL CHIP 47K 0.5%	1/16W
R9312	1-208-709-11	METAL CHIP 12K 0.5%	1/16W
R9322	1-208-909-11	METAL CHIP 8.2K 0.5%	1/16W
R9323	1-208-909-11	METAL CHIP 8.2K 0.5%	1/16W
R9330	1-208-911-11	METAL CHIP 10K 0.5%	1/16W
R9342	1-208-703-11	METAL CHIP 6.8K 0.5%	1/16W
R9343	1-208-703-11	METAL CHIP 6.8K 0.5%	1/16W
R9345	1-208-927-11	METAL CHIP 47K 0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R9347	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9348	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9349	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R9351	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9352	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9353	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9354	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R9359	1-218-990-81	SHORT CHIP	0		
R9362	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9365	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9366	1-218-990-81	SHORT CHIP	0		
R9400	1-218-939-11	METAL CHIP	68	5%	1/16W
R9401	1-218-935-11	METAL CHIP	33	5%	1/16W
R9402	1-218-935-11	METAL CHIP	33	5%	1/16W
R9403	1-218-935-11	METAL CHIP	33	5%	1/16W
R9404	1-218-935-11	METAL CHIP	33	5%	1/16W
R9405	1-218-935-11	METAL CHIP	33	5%	1/16W
R9406	1-218-935-11	METAL CHIP	33	5%	1/16W
R9407	1-218-935-11	METAL CHIP	33	5%	1/16W
R9408	1-218-935-11	METAL CHIP	33	5%	1/16W
R9409	1-218-935-11	METAL CHIP	33	5%	1/16W
R9410	1-218-935-11	METAL CHIP	33	5%	1/16W
R9411	1-218-935-11	METAL CHIP	33	5%	1/16W
R9412	1-218-935-11	METAL CHIP	33	5%	1/16W
R9413	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9414	1-218-935-11	METAL CHIP	33	5%	1/16W
R9415	1-218-935-11	METAL CHIP	33	5%	1/16W
R9416	1-218-935-11	METAL CHIP	33	5%	1/16W
R9417	1-218-935-11	METAL CHIP	33	5%	1/16W
R9418	1-218-933-11	METAL CHIP	22	5%	1/16W
R9419	1-218-933-11	METAL CHIP	22	5%	1/16W
R9420	1-218-933-11	METAL CHIP	22	5%	1/16W
R9421	1-218-933-11	METAL CHIP	22	5%	1/16W
R9422	1-218-933-11	METAL CHIP	22	5%	1/16W
R9423	1-218-933-11	METAL CHIP	22	5%	1/16W
R9424	1-218-939-11	METAL CHIP	68	5%	1/16W
R9425	1-218-939-11	METAL CHIP	68	5%	1/16W
R9426	1-218-939-11	METAL CHIP	68	5%	1/16W
R9427	1-218-939-11	METAL CHIP	68	5%	1/16W
R9428	1-218-941-11	METAL CHIP	100	5%	1/16W
R9429	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9434	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9439	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9440	1-218-941-11	METAL CHIP	100	5%	1/16W
R9461	1-218-935-11	METAL CHIP	33	5%	1/16W
R9462	1-218-935-11	METAL CHIP	33	5%	1/16W
R9463	1-218-935-11	METAL CHIP	33	5%	1/16W
R9464	1-218-935-11	METAL CHIP	33	5%	1/16W
R9700	1-218-941-11	METAL CHIP	100	5%	1/16W
R9701	1-218-941-11	METAL CHIP	100	5%	1/16W
R9702	1-218-990-81	SHORT CHIP	0		
R9703	1-218-990-81	SHORT CHIP	0		
R9706	1-218-990-81	SHORT CHIP	0		
R9707	1-218-990-81	SHORT CHIP	0		
R9708	1-218-990-81	SHORT CHIP	0		
R9709	1-218-937-11	METAL CHIP	47	5%	1/16W
R9710	1-218-937-11	METAL CHIP	47	5%	1/16W
R9711	1-218-937-11	METAL CHIP	47	5%	1/16W
R9712	1-218-937-11	METAL CHIP	47	5%	1/16W
R9713	1-218-937-11	METAL CHIP	47	5%	1/16W
R9714	1-218-937-11	METAL CHIP	47	5%	1/16W
R9715	1-218-937-11	METAL CHIP	47	5%	1/16W
R9716	1-218-937-11	METAL CHIP	47	5%	1/16W
R9717	1-218-937-11	METAL CHIP	47	5%	1/16W
R9718	1-218-937-11	METAL CHIP	47	5%	1/16W
R9719	1-218-937-11	METAL CHIP	47	5%	1/16W
R9720	1-218-937-11	METAL CHIP	47	5%	1/16W
R9722	1-218-937-11	METAL CHIP	47	5%	1/16W
R9723	1-218-937-11	METAL CHIP	47	5%	1/16W
R9724	1-218-937-11	METAL CHIP	47	5%	1/16W
R9725	1-218-937-11	METAL CHIP	47	5%	1/16W
R9726	1-218-937-11	METAL CHIP	47	5%	1/16W
R9727	1-218-937-11	METAL CHIP	47	5%	1/16W
R9730	1-218-937-11	METAL CHIP	47	5%	1/16W
R9731	1-218-937-11	METAL CHIP	47	5%	1/16W
R9732	1-218-937-11	METAL CHIP	47	5%	1/16W
R9733	1-218-937-11	METAL CHIP	47	5%	1/16W
R9734	1-218-937-11	METAL CHIP	47	5%	1/16W
R9736	1-218-937-11	METAL CHIP	47	5%	1/16W
R9768	1-218-989-11	METAL CHIP	1M	5%	1/16W
R9769	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9771	1-218-941-11	METAL CHIP	100	5%	1/16W
R9775	1-218-941-11	METAL CHIP	100	5%	1/16W
R9776	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R9777	1-218-989-11	METAL CHIP	1M	5%	1/16W
R9782	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9793	1-218-941-11	METAL CHIP	100	5%	1/16W
R9794	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9905	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9906	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R9907	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9908	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9909	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W

< RESISTOR CHIP >

RB9001	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9002	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9004	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9005	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9008	1-234-375-21	RES, NETWORK 1K	(1005X4)

REF.NO.	PART.NO	DESCRIPTION	REMARK
RB9009	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9100	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9101	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9102	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9103	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9104	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9300	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9301	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9400	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9402	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9403	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9404	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9405	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9407	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9408	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9409	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9411	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9412	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9414	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9417	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9418	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9419	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9420	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9421	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9422	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9423	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9426	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9429	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9450	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9451	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9452	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9453	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9454	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9455	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9456	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9458	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9459	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9460	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9461	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9700	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9701	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9702	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9703	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9710	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9711	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9712	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9713	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9714	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9715	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9717	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9718	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9719	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9720	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9721	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9722	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9723	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9724	1-234-375-21	RES, NETWORK 1K	(1005X4)
		< CRYSTAL >	
X9000	1-814-165-11	QUARTS CRYSTAL OSCILLATOR	
X9700	1-814-164-21	PIEZOELECTRIC OSCILLATOR	
X9701	1-814-023-11	QUARTS CRYSTAL UNIT	
X9702	1-814-165-11	QUARTS CRYSTAL OSCILLATOR	

*** A-1557-910-A H3VM Board, Complete**

		< CAPACITOR >			
C302	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	
C303	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	
C304	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	
C305	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	
		< CONNECTOR >			
CN301	1-820-288-11	HEADER ASSEMBLY (PRINT PWB) 9P			
		< DIODE >			
D302	6-501-734-01	DIODE MAZ8056GMLS0			
D308	6-502-297-01	DI FR1105W-730-TR			
D322	6-502-297-01	DI FR1105W-730-TR			
D323	6-502-296-01	DI VYPY1105W-5C43A-TR			
D324	6-502-297-01	DI FR1105W-730-TR			
D325	6-502-296-01	DI VYPY1105W-5C43A-TR			
		< IC >			
IC301	6-600-680-01	PHOTO DIODE BH1690FVC-TR			
		< TRANSISTOR >			
Q301	6-551-815-01	TR UNR52A1G0LS0			
Q302	6-551-815-01	TR UNR52A1G0LS0			
Q303	6-551-815-01	TR UNR52A1G0LS0			
Q304	6-551-815-01	TR UNR52A1G0LS0			
Q305	6-551-815-01	TR UNR52A1G0LS0			
Q306	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF			
		< RESISTOR >			
R301	1-208-663-11	METAL CHIP 150	0.5%	1/16W	
R302	1-208-675-11	METAL CHIP 470	0.5%	1/16W	
R303	1-208-663-11	METAL CHIP 150	0.5%	1/16W	
R304	1-208-675-11	METAL CHIP 470	0.5%	1/16W	

REF.NO.	PART.NO	DESCRIPTION	REMARK
R305	1-208-675-11	METAL CHIP 470 0.5% 1/16W	
R306	1-218-990-81	SHORT CHIP 0	
R307	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R309	1-218-985-11	METAL CHIP 470K 5% 1/16W	
R310	1-218-989-11	METAL CHIP 1M 5% 1/16W	
R311	1-218-965-11	METAL CHIP 10K 5% 1/16W	
R312	1-218-973-11	METAL CHIP 47K 5% 1/16W	
R314	1-218-953-11	METAL CHIP 1K 5% 1/16W	

*** A-1557-911-A H4 Board, Complete**

< CAPACITOR >

C401	1-112-068-11	CERAMIC CHIP 220PF	10% 50V
C402	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V

< CONNECTOR >

CN401	1-820-180-11	HEADER ASSEMBLY (PRINT PWB) 3P

< IC >

IC401	6-600-681-01	IC RS-770N

< RESISTOR >

R401	1-218-949-11	METAL CHIP 470	5% 1/16W
R402	1-218-937-11	METAL CHIP 47	5% 1/16W

*** A-1557-912-A H1VM Board, Complete**

< CONNECTOR >

CN101	*1-820-297-11	HEADER ASSEMBLY (PRINT PWB) 3P

< SWITCH >

S101	1-786-700-11	SWITCH, TACTILE

*** A-1558-281-A K2 Board, Complete**

< CAPACITOR >

C8004	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8005	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8006	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8007	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8008	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8009	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8010	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8011	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8012	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8013	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8014	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8015	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8016	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8017	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8018	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C8019	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C8022	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8023	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8024	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8025	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8026	1-128-536-11	ELECT CHIP 100UF	20.00% 25V
C8027	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8028	1-128-536-11	ELECT CHIP 100UF	20.00% 25V
C8029	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8030	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8031	1-100-764-21	ELECT CHIP 4.7UF	20% 25V
C8032	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8033	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8034	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8035	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8036	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8037	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8038	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8039	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C8040	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8041	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8042	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8043	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8044	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8045	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8046	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8047	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8048	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8049	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8050	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C8051	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8056	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8057	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8058	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8059	1-114-193-11	ELECT CHIP 470UF	20% 25V
C8060	1-131-700-31	FILM 0.47UF	5% 50V
C8061	1-131-700-31	FILM 0.47UF	5% 50V
C8062	1-131-702-11	FILM 0.68UF	5% 50V
C8063	1-131-702-11	FILM 0.68UF	5% 50V
C8064	1-131-696-11	FILM 0.22UF	5% 50V
C8065	1-131-696-11	FILM 0.22UF	5% 50V
C8066	1-131-702-11	FILM 0.68UF	5% 50V
C8067	1-131-702-11	FILM 0.68UF	5% 50V
C8068	1-131-696-11	FILM 0.22UF	5% 50V
C8069	1-131-696-11	FILM 0.22UF	5% 50V
C8070	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C8071	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C8072	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

K2 CB1

REF.NO.		PART.NO	DESCRIPTION	REMARK
C8073		1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C8074		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8075		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8076		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8077		1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8078		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8079		1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C8080		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8081		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8082		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C8083		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
			< CONNECTOR >	
CN8000		1-821-618-11	HEADER ASSEMBLY FOR PWB 8P	
CN8001		1-822-105-11	HEADER ASSEMBLY FOR PWB 20P(L)	
CN8002		1-779-657-21	PIN, CONNECTOR (PC BOARD) 8P	
			< DIODE >	
D8000		6-501-817-01	DIODE MA2J1110GLS0	
D8001		6-500-335-01	DIODE MC2838-T112-1	
D8002		6-501-817-01	DIODE MA2J1110GLS0	
D8003		6-501-817-01	DIODE MA2J1110GLS0	
D8004		6-501-732-01	DIODE MAZ8056G0LS0	
D8005		6-501-732-01	DIODE MAZ8056G0LS0	
D8006		6-501-732-01	DIODE MAZ8056G0LS0	
D8007		6-501-732-01	DIODE MAZ8056G0LS0	
D8008		6-501-732-01	DIODE MAZ8056G0LS0	
D8009		6-501-732-01	DIODE MAZ8056G0LS0	
D8010		6-501-732-01	DIODE MAZ8056G0LS0	
D8011		6-501-732-01	DIODE MAZ8056G0LS0	
D8013		8-719-069-55	DI UDZSNPTE-175.6B	
ET8000		1-780-482-11	EARTH TERMINAL	
ET8001		1-780-482-11	EARTH TERMINAL	
ET8002		1-780-482-11	EARTH TERMINAL	
ET8003		1-780-482-11	EARTH TERMINAL	
			< FUSE >	
F8000	⚠	1-576-933-21	FUSE 5A	24V
F8001	⚠	1-576-933-21	FUSE 5A	24V
			< IC >	
IC8000		6-710-904-01	IC TPA3100D2PHPR	
IC8001		6-710-904-01	IC TPA3100D2PHPR	
			< COIL >	
L8001		1-457-485-21	INDUCTOR 22UH	
L8002		1-457-485-21	INDUCTOR 22UH	
L8003		1-457-485-21	INDUCTOR 22UH	
L8004		1-457-485-21	INDUCTOR 22UH	
L8005		1-457-485-21	INDUCTOR 22UH	
L8006		1-457-485-21	INDUCTOR 22UH	
L8007		1-457-485-21	INDUCTOR 22UH	
L8008		1-457-485-21	INDUCTOR 22UH	
			< TRANSISTOR >	
Q8001		6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q8002		6-551-815-01	TR UNR52A1G0LS0	
Q8003		6-551-271-01	TRANSISTOR RT3AMMM	
Q8004		6-551-271-01	TRANSISTOR RT3AMMM	
Q8005		6-551-271-01	TRANSISTOR RT3AMMM	
Q8006		6-551-271-01	TRANSISTOR RT3AMMM	
Q8007		8-729-028-73	TRANSISTOR DTA114EUA-T106	
Q8008		8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q8009		8-729-027-56	TRANSISTOR DTC143TKA-T146	
Q8010		8-729-028-73	TRANSISTOR DTA114EUA-T106	
			< RESISTOR >	
R8001		1-218-965-11	METAL CHIP 10K 5%	1/16W
R8004		1-218-953-11	METAL CHIP 1K 5%	1/16W
R8010		1-218-977-11	METAL CHIP 100K 5%	1/16W
R8011		1-218-977-11	METAL CHIP 100K 5%	1/16W
R8023		1-208-935-11	METAL CHIP 100K 0.5%	1/16W
R8024		1-208-935-11	METAL CHIP 100K 0.5%	1/16W
R8031		1-218-978-11	METAL CHIP 120K 5%	1/16W
R8032		1-218-978-11	METAL CHIP 120K 5%	1/16W
R8033		1-218-978-11	METAL CHIP 120K 5%	1/16W
R8034		1-218-978-11	METAL CHIP 120K 5%	1/16W
R8042		1-218-977-11	METAL CHIP 100K 5%	1/16W
R8044		1-218-977-11	METAL CHIP 100K 5%	1/16W
			< RESISTOR CHIP >	
RB8000		1-234-375-21	RES, NETWORK 1K	(1005X4)
RB8001		1-234-378-21	RES, NETWORK 10K	(1005X4)
RB8002		1-234-378-21	RES, NETWORK 10K	(1005X4)
RB8003		1-234-381-11	RES, NETWORK 100K	(1005X4)
RB8004		1-234-381-11	RES, NETWORK 100K	(1005X4)

* A-1557-693-A CB1 Board, Complete (46 inches only)

			< CAPACITOR >	
C9001		1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C9004		1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C9005		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C9006		1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C9007		1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C9008		1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C9009		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C9026		1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C9027		1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C9100		1-112-779-11	CERAMIC CHIP 0.047UF	10% 25V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C9101	1-114-410-21	CERAMIC CHIP 680PF	2%	50V	C9170	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9102	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9176	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9103	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9185	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9104	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9188	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9105	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C9199	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9106	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9207	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9107	1-114-532-21	ELECT CHIP 330UF	20%	4V	C9211	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9109	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9215	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9110	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9219	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9112	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9220	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9113	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9221	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9119	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9222	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9123	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9223	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9126	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9224	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9127	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9225	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9128	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9226	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9129	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9227	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9130	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9228	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9132	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9229	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9133	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9230	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9135	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9231	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9136	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9232	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9138	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9233	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9139	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9234	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9140	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9235	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9144	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C9236	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9145	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9237	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9147	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9238	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9148	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9239	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9149	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9240	1-131-956-21	ELECT CHIP 220UF	20%	4V
C9150	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9241	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9151	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9242	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9152	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9243	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9153	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9244	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9154	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9245	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9155	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9246	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9156	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9247	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9157	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9248	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C9158	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9249	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9159	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9250	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9160	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9251	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9161	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9252	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9162	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9253	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9163	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9254	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9164	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9255	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9165	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9256	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9166	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9257	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C9167	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9258	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9168	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9259	1-100-904-11	CERAMIC CHIP 330PF	10%	50V
C9169	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9260	1-100-904-11	CERAMIC CHIP 330PF	10%	50V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C9261	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9409	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9262	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9410	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9263	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9413	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9264	1-100-904-11	CERAMIC CHIP 330PF	10%	50V	C9415	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9265	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9438	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9266	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9445	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9267	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9454	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9268	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9455	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9301	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9456	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9302	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9457	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9303	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9458	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9304	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9459	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9305	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9460	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9306	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9461	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9307	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9463	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9310	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9485	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9312	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C9488	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9314	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9495	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9315	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9496	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9316	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9497	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9317	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9498	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9326	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9499	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9327	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9500	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9328	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C9501	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9329	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9502	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9330	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C9503	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9332	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C9700	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9333	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C9702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9334	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9704	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9335	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C9706	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9336	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C9708	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9337	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9709	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9338	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9710	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9340	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C9711	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9342	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9712	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9343	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9713	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9344	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C9714	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V
C9345	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C9715	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V
C9346	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C9716	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9347	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9717	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9348	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C9718	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9351	1-114-326-11	CERAMIC CHIP 0.22UF	10%	25V	C9719	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9352	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9720	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9353	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9721	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C9356	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C9722	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9357	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C9724	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C9358	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9725	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9359	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9726	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9407	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9727	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9408	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9728	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C9729	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9846	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9730	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9848	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9731	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9850	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9733	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9851	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9735	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9852	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9736	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9854	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9737	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C9861	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9738	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9862	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9739	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9863	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9741	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9864	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9743	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9866	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9744	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9867	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9745	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9868	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C9746	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9869	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9747	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9870	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9757	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9872	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9759	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9873	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9760	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9874	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9761	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9875	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9762	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9876	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9763	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C9877	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9800	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9878	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9801	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9879	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9802	1-131-956-21	ELECT CHIP 220UF	20%	4V	C9880	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9803	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9881	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9804	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9883	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9805	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9885	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9806	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9886	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9807	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9887	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9808	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9888	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9810	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9889	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9811	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9890	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9812	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9891	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9813	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C9892	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9814	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C9895	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9816	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9896	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9818	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9897	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9819	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C9898	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9820	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9901	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C9822	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C9904	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C9823	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9905	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C9824	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C9906	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C9825	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9907	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C9830	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9908	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C9832	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C9909	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V
C9836	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V			< CONNECTOR >		
C9838	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V					
C9841	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	CN9000	*1-821-607-11	HEADER ASSEMBLY FOR PWB 8P		
C9842	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	CN9001	*1-821-034-11	HEADER ASSEMBLY FOR PWB 51P		
C9844	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	CN9003	1-821-171-11	CONNECTOR, BOARD TO BOARD 41P		

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

CB1

REF.NO.		PART.NO	DESCRIPTION	REMARK
CN9004		1-821-170-11	CONNECTOR, BOARD TO BOARD 51P	
CN9700		*1-822-045-11	HEADER ASSEMBLY FOR PWB 32P	
CN9701		*1-819-284-11	HEADER ASSEMBLY FOR PWB 30P	
CN9702		1-819-784-21	PIN, CONNECTOR 50P	
CN9703		1-821-604-11	HEADER ASSEMBLY FOR PWB 5P	
CN9704		1-779-331-51	CONNECTOR, FFC/FPC 14P	
			< DIODE >	
D9300		6-502-248-01	DI KDZTR3.9B	
D9301		6-502-248-01	DI KDZTR3.9B	
D9302		6-502-248-01	DI KDZTR3.9B	
D9306		8-719-081-67	DIODE M1FM3	
D9307		8-719-081-67	DIODE M1FM3	
D9311		8-719-081-67	DIODE M1FM3	
D9701		6-502-150-01	DI MA2SD320G8S0	
D9703		6-502-150-01	DI MA2SD320G8S0	
D9900		8-719-081-67	DIODE M1FM3	
D9901		6-502-248-01	DI KDZTR3.9B	
ET9002		1-780-482-11	EARTH TERMINAL	
ET9007		1-780-638-21	CONTACT TERMINAL	
ET9009		1-780-638-21	CONTACT TERMINAL	
ET9012		1-780-638-21	CONTACT TERMINAL	
ET9013		1-780-482-11	EARTH TERMINAL	
ET9014		1-780-638-21	CONTACT TERMINAL	
ET9015		1-780-482-11	EARTH TERMINAL	
ET9700		1-780-482-11	EARTH TERMINAL	
ET9701		1-780-482-11	EARTH TERMINAL	
ET9702		1-780-482-11	EARTH TERMINAL	
ET9703		1-780-482-11	EARTH TERMINAL	
			< FUSE >	
F9100	⚠	1-576-603-11	FUSE 3.15A 24V	
F9300	⚠	1-576-603-11	FUSE 3.15A 24V	
F9301	⚠	1-576-603-11	FUSE 3.15A 24V	
			< FERRITE BEAD >	
FB9000		1-469-669-21	FERRITE 0UH	
FB9001		1-500-922-11	FERRITE 0UH	
FB9002		1-469-669-21	FERRITE 0UH	
FB9004		1-500-922-11	FERRITE 0UH	
FB9005		1-400-834-11	FERRITE 0UH	
FB9008		1-469-669-21	FERRITE 0UH	
FB9009		1-500-922-11	FERRITE 0UH	
FB9010		1-500-922-11	FERRITE 0UH	
FB9011		1-469-669-21	FERRITE 0UH	
FB9012		1-400-834-11	FERRITE 0UH	
FB9200		1-469-669-21	FERRITE 0UH	
FB9308		1-469-669-21	FERRITE 0UH	
FB9310		1-469-669-21	FERRITE 0UH	
FB9311		1-469-669-21	FERRITE 0UH	
FB9312		1-469-669-21	FERRITE 0UH	
FB9404		1-400-834-11	FERRITE 0UH	
FB9405		1-400-834-11	FERRITE 0UH	
FB9713		1-400-834-11	FERRITE 0UH	
FB9714		1-400-833-21	FERRITE 0UH	
FB9715		1-400-833-21	FERRITE 0UH	
FB9716		1-400-833-21	FERRITE 0UH	
FB9717		1-400-833-21	FERRITE 0UH	
FB9718		1-400-833-21	FERRITE 0UH	
FB9719		1-400-833-21	FERRITE 0UH	
FB9720		1-400-833-21	FERRITE 0UH	
FB9721		1-400-833-21	FERRITE 0UH	
FB9730		1-400-833-21	FERRITE 0UH	
FB9731		1-400-833-21	FERRITE 0UH	
FB9732		1-400-833-21	FERRITE 0UH	
FB9733		1-400-833-21	FERRITE 0UH	
FB9734		1-400-833-21	FERRITE 0UH	
FB9735		1-400-833-21	FERRITE 0UH	
FB9736		1-400-833-21	FERRITE 0UH	
FB9737		1-400-833-21	FERRITE 0UH	
FB9746		1-500-922-11	FERRITE 0UH	
FB9805		1-469-669-21	FERRITE 0UH	
FB9902		1-469-669-21	FERRITE 0UH	
			< FILTER >	
FL9000		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9001		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9002		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9100		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9101		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9102		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9103		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9202		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9203		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9204		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9205		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9300		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9700		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9701		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9702		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9705		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9706		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9707		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9708		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9709		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9710		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9800		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9801		1-234-939-21	FILTER, EMI REMOVAL (SMD)	

REF.NO.	PART.NO	DESCRIPTION	REMARK
FL9802	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9803	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9804	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9805	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9806	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9807	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL9808	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
		< IC >	
IC9000	6-713-042-01	IC CXD9935GB	
IC9001	6-710-361-01	IC 74LVC2G66DC-125	
IC9002	6-704-566-01	IC R3112N291A-TR-FA	
IC9003	6-704-566-01	IC R3112N291A-TR-FA	
IC9007	6-704-067-01	IC M24128-BWMN6T(A)	
IC9008	6-710-361-01	IC 74LVC2G66DC-125	
IC9100	6-710-949-01	IC SN0608006PWPR	
IC9101	6-711-262-01	IC HYB18TC256160BF-3S	
IC9102	6-711-262-01	IC HYB18TC256160BF-3S	
IC9300	6-710-922-01	IC BD9853AFV-E2	
IC9301	6-710-922-01	IC BD9853AFV-E2	
IC9302	6-712-904-01	IC R1154N050B-TR-F	
IC9303	6-711-042-01	IC BD00KA5WFP-E2	
IC9400	6-713-137-01	IC CXD9929GB	
IC9401	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC9402	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC9700	6-712-442-01	IC 74AHC541PW-118	
IC9702	6-712-442-01	IC 74AHC541PW-118	
IC9704	6-701-985-01	IC BH2220FVM-TR	
IC9705	6-710-121-01	IC M24256-BWMN6TP(A)	
IC9706	6-712-442-01	IC 74AHC541PW-118	
IC9707	6-808-325-01	IC EPM570T100I5NRR-IC9707-C100	
IC9708	6-808-323-01	IC S29GL064N90TFI030-C1100-ER	
IC9709	6-709-888-01	IC TC7WHU04FK(T5RSOYF	
IC9710	6-708-758-01	IC PCA9517DP.118	
		< COIL >	
L9000	1-457-540-11	INDUCTOR 0UH	
L9001	1-457-540-11	INDUCTOR 0UH	
L9002	1-457-540-11	INDUCTOR 0UH	
L9003	1-457-540-11	INDUCTOR 0UH	
L9004	1-457-540-11	INDUCTOR 0UH	
L9005	1-457-540-11	INDUCTOR 0UH	
L9006	1-457-540-11	INDUCTOR 0UH	
L9007	1-457-540-11	INDUCTOR 0UH	
L9008	1-457-540-11	INDUCTOR 0UH	
L9009	1-457-540-11	INDUCTOR 0UH	
L9010	1-457-540-11	INDUCTOR 0UH	
L9011	1-457-540-11	INDUCTOR 0UH	
L9012	1-457-540-11	INDUCTOR 0UH	
L9013	1-457-540-11	INDUCTOR 0UH	
L9014	1-457-540-11	INDUCTOR 0UH	
L9015	1-457-540-11	INDUCTOR 0UH	
L9016	1-457-540-11	INDUCTOR 0UH	
L9017	1-457-540-11	INDUCTOR 0UH	
L9018	1-457-540-11	INDUCTOR 0UH	
L9019	1-457-540-11	INDUCTOR 0UH	
L9020	1-457-540-11	INDUCTOR 0UH	
L9021	1-457-540-11	INDUCTOR 0UH	
L9022	1-457-540-11	INDUCTOR 0UH	
L9023	1-457-540-11	INDUCTOR 0UH	
L9100	1-481-246-11	INDUCTOR 2.2UH	
L9300	1-457-428-11	INDUCTOR 4.7UH	
L9301	1-457-428-11	INDUCTOR 4.7UH	
L9302	1-457-428-11	INDUCTOR 4.7UH	
L9900	1-457-428-11	INDUCTOR 4.7UH	
		< TRANSISTOR >	
Q9002	6-551-904-01	TR RT3S03M-T111-1	
Q9100	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q9101	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q9300	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
Q9302	6-551-460-01	TRANSISTOR RSR025P03TL	
Q9303	6-551-460-01	TRANSISTOR RSR025P03TL	
Q9304	6-550-718-01	TRANSISTOR RSR025N03TL	
Q9306	6-550-718-01	TRANSISTOR RSR025N03TL	
Q9307	6-551-123-01	TRANSISTOR RSS065N03FU7TB	
Q9308	6-550-369-01	TRANSISTOR TPC8109(TE12L)	
Q9309	6-551-817-01	TR UNR52A3G0LS0	
Q9310	6-551-776-01	TR 2SC5950G0LS0	
Q9311	6-551-817-01	TR UNR52A3G0LS0	
Q9701	6-551-904-01	TR RT3S03M-T111-1	
Q9702	6-551-904-01	TR RT3S03M-T111-1	
Q9703	6-551-817-01	TR UNR52A3G0LS0	
Q9707	6-551-817-01	TR UNR52A3G0LS0	
Q9708	6-550-354-01	TRANSISTOR RTQ035P02TR	
Q9900	6-551-460-01	TRANSISTOR RSR025P03TL	
Q9901	6-550-718-01	TRANSISTOR RSR025N03TL	
		< RESISTOR >	
R9002	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9003	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9004	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9005	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9006	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9007	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9008	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9009	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9010	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9011	1-218-941-11	METAL CHIP 100 5% 1/16W	
R9012	1-218-941-11	METAL CHIP 100 5% 1/16W	

REF.NO.	PART.NO	DESCRIPTION			REMARK
R9013	1-218-941-11	METAL CHIP	100	5%	1/16W
R9028	1-218-941-11	METAL CHIP	100	5%	1/16W
R9029	1-218-941-11	METAL CHIP	100	5%	1/16W
R9030	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9031	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9053	1-218-941-11	METAL CHIP	100	5%	1/16W
R9060	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9062	1-218-990-81	SHORT CHIP	0		
R9065	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R9103	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R9104	1-218-990-81	SHORT CHIP	0		
R9105	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9107	1-218-990-81	SHORT CHIP	0		
R9109	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R9110	1-218-990-81	SHORT CHIP	0		
R9113	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9114	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9116	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R9117	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R9118	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9119	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9121	1-218-933-11	METAL CHIP	22	5%	1/16W
R9122	1-218-933-11	METAL CHIP	22	5%	1/16W
R9123	1-218-933-11	METAL CHIP	22	5%	1/16W
R9124	1-218-933-11	METAL CHIP	22	5%	1/16W
R9125	1-218-933-11	METAL CHIP	22	5%	1/16W
R9126	1-218-933-11	METAL CHIP	22	5%	1/16W
R9128	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R9129	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R9130	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9131	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9132	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9133	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9136	1-218-990-81	SHORT CHIP	0		
R9137	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9300	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9303	1-218-990-81	SHORT CHIP	0		
R9304	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R9305	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9312	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R9322	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R9323	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R9330	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9342	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R9343	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R9345	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9347	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9348	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9349	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R9351	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9352	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9353	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9354	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R9359	1-218-990-81	SHORT CHIP	0		
R9362	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9365	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9366	1-218-990-81	SHORT CHIP	0		
R9400	1-218-939-11	METAL CHIP	68	5%	1/16W
R9401	1-218-935-11	METAL CHIP	33	5%	1/16W
R9402	1-218-935-11	METAL CHIP	33	5%	1/16W
R9403	1-218-935-11	METAL CHIP	33	5%	1/16W
R9404	1-218-935-11	METAL CHIP	33	5%	1/16W
R9405	1-218-935-11	METAL CHIP	33	5%	1/16W
R9406	1-218-935-11	METAL CHIP	33	5%	1/16W
R9407	1-218-935-11	METAL CHIP	33	5%	1/16W
R9408	1-218-935-11	METAL CHIP	33	5%	1/16W
R9409	1-218-935-11	METAL CHIP	33	5%	1/16W
R9410	1-218-935-11	METAL CHIP	33	5%	1/16W
R9411	1-218-935-11	METAL CHIP	33	5%	1/16W
R9412	1-218-935-11	METAL CHIP	33	5%	1/16W
R9413	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9414	1-218-935-11	METAL CHIP	33	5%	1/16W
R9415	1-218-935-11	METAL CHIP	33	5%	1/16W
R9416	1-218-935-11	METAL CHIP	33	5%	1/16W
R9417	1-218-935-11	METAL CHIP	33	5%	1/16W
R9418	1-218-933-11	METAL CHIP	22	5%	1/16W
R9419	1-218-933-11	METAL CHIP	22	5%	1/16W
R9420	1-218-933-11	METAL CHIP	22	5%	1/16W
R9421	1-218-933-11	METAL CHIP	22	5%	1/16W
R9422	1-218-933-11	METAL CHIP	22	5%	1/16W
R9423	1-218-933-11	METAL CHIP	22	5%	1/16W
R9424	1-218-939-11	METAL CHIP	68	5%	1/16W
R9425	1-218-939-11	METAL CHIP	68	5%	1/16W
R9426	1-218-939-11	METAL CHIP	68	5%	1/16W
R9427	1-218-939-11	METAL CHIP	68	5%	1/16W
R9428	1-218-941-11	METAL CHIP	100	5%	1/16W
R9429	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9434	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9439	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9440	1-218-941-11	METAL CHIP	100	5%	1/16W
R9461	1-218-935-11	METAL CHIP	33	5%	1/16W
R9462	1-218-935-11	METAL CHIP	33	5%	1/16W
R9463	1-218-935-11	METAL CHIP	33	5%	1/16W
R9464	1-218-935-11	METAL CHIP	33	5%	1/16W
R9700	1-218-941-11	METAL CHIP	100	5%	1/16W
R9701	1-218-941-11	METAL CHIP	100	5%	1/16W
R9702	1-218-990-81	SHORT CHIP	0		
R9703	1-218-990-81	SHORT CHIP	0		
R9706	1-218-990-81	SHORT CHIP	0		
R9707	1-218-990-81	SHORT CHIP	0		

REF.NO.	PART.NO	DESCRIPTION			REMARK
R9708	1-218-990-81	SHORT CHIP	0		
R9709	1-218-937-11	METAL CHIP	47	5%	1/16W
R9710	1-218-937-11	METAL CHIP	47	5%	1/16W
R9711	1-218-937-11	METAL CHIP	47	5%	1/16W
R9712	1-218-937-11	METAL CHIP	47	5%	1/16W
R9713	1-218-937-11	METAL CHIP	47	5%	1/16W
R9714	1-218-937-11	METAL CHIP	47	5%	1/16W
R9722	1-218-937-11	METAL CHIP	47	5%	1/16W
R9723	1-218-937-11	METAL CHIP	47	5%	1/16W
R9724	1-218-937-11	METAL CHIP	47	5%	1/16W
R9725	1-218-937-11	METAL CHIP	47	5%	1/16W
R9726	1-218-937-11	METAL CHIP	47	5%	1/16W
R9727	1-218-937-11	METAL CHIP	47	5%	1/16W
R9768	1-218-989-11	METAL CHIP	1M	5%	1/16W
R9769	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9771	1-218-941-11	METAL CHIP	100	5%	1/16W
R9775	1-218-941-11	METAL CHIP	100	5%	1/16W
R9776	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R9777	1-218-989-11	METAL CHIP	1M	5%	1/16W
R9782	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R9793	1-218-941-11	METAL CHIP	100	5%	1/16W
R9794	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R9905	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R9906	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R9907	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R9908	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R9909	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W

< RESISTOR CHIP >

RB9001	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9002	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9004	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9005	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9008	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9009	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9100	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9101	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9102	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9103	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9104	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9300	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9301	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9400	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9402	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9403	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9404	1-234-370-21	RES, NETWORK 22	(1005X4)
RB9405	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9407	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9408	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9409	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9411	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9412	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9414	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9417	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9418	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9419	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9420	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9421	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9422	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9423	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9426	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9429	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9450	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9451	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9452	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9453	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9454	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9455	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9456	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9458	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9459	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9460	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9461	1-242-963-21	RES, NETWORK 33	(1005X4)
RB9700	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9702	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9710	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9711	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9712	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9713	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9714	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9715	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9717	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9718	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9719	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9720	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB9721	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9722	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9723	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9724	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB9725	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB9726	1-234-378-21	RES, NETWORK 10K	(1005X4)

< CRYSTAL >

X9000	1-814-165-11	QUARTS CRYSTAL OSCILLATOR
X9700	1-814-164-21	PIEZOELECTRIC OSCILLATOR
X9701	1-814-023-11	QUARTS CRYSTAL UNIT
X9702	1-814-165-11	QUARTS CRYSTAL OSCILLATOR

Note : The components identified by mark 🔒 contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

AE

🔒 * A-1568-315-A AE Board, Complete

< CAPACITOR >

REF.NO.	PART.NO	DESCRIPTION	REMARK
C1000	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1001	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1002	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1003	1-135-366-11	ELECT CHIP 100UF	20% 16V
C1006	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1007	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1008	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1010	1-112-161-21	ELECT CHIP 1000UF	20% 6.3V
C1017	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1018	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1021	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C1022	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1023	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1024	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1025	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C1026	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1027	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1028	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1029	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1030	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1031	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C1033	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1034	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1102	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1104	1-114-553-11	CERAMIC CHIP 10UF	10% 16V
C1108	1-100-767-21	ELECT CHIP 220UF	20% 16V
C1110	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C1111	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1114	1-112-161-21	ELECT CHIP 1000UF	20% 6.3V
C1115	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
C1116	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C1117	1-100-911-11	CERAMIC CHIP 4.7UF	10% 25V
C1118	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1119	1-114-807-11	CERAMIC CHIP 0.015UF	10% 25V
C1120	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1121	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1122	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1125	1-162-967-11	CERAMIC CHIP 0.0033UF	10.00% 50V
C1126	1-162-967-11	CERAMIC CHIP 0.0033UF	10.00% 50V
C1127	1-114-807-11	CERAMIC CHIP 0.015UF	10% 25V
C1128	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1129	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C1130	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C1131	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
C1140	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1141	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1142	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1143	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1144	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C1149	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C1151	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C1152	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C1154	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C1158	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1160	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1162	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1165	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C1170	1-114-553-11	CERAMIC CHIP 10UF	10% 16V
C1171	1-100-769-21	ELECT CHIP 470UF	20% 16V
C1251	1-164-876-11	CERAMIC CHIP 120PF	5.00% 50V
C1253	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 50V
C1254	1-164-842-11	CERAMIC CHIP 2PF	0.25PF 50V
C1255	1-164-842-11	CERAMIC CHIP 2PF	0.25PF 50V
C1256	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C1257	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1258	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1259	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C1260	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C1261	1-100-765-21	ELECT CHIP 10UF	20% 16V
C1262	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1263	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1264	1-100-765-21	ELECT CHIP 10UF	20% 16V
C1265	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C1266	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1267	1-112-068-11	CERAMIC CHIP 220PF	10% 50V
C1268	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1269	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1270	1-100-765-21	ELECT CHIP 10UF	20% 16V
C1271	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C1272	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C1273	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1274	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C1275	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C1276	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1304	1-112-161-21	ELECT CHIP 1000UF	20% 6.3V
C1306	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C1307	1-112-780-11	CERAMIC CHIP 0.47UF	10% 16V
C1310	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1311	1-100-421-21	ELECT CHIP 220UF	20% 6.3V
C1317	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1400	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1402	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1404	1-164-866-11	CERAMIC CHIP 47PF	5.00% 50V
C1405	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C1406	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C1407	1-112-778-11	CERAMIC CHIP 0.022UF	10%	25V	C1575	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1408	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1576	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1416	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1580	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1417	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1581	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1418	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1582	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1419	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1586	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1420	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1587	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1421	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1588	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1422	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1589	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1423	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1590	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1430	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1593	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1431	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1594	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1432	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1597	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1433	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1598	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1434	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1599	1-100-767-21	ELECT CHIP 220UF	20%	16V
C1435	1-112-774-11	CERAMIC CHIP 470PF	10%	50V	C1600	1-100-767-21	ELECT CHIP 220UF	20%	16V
C1437	1-112-774-11	CERAMIC CHIP 470PF	10%	50V	C1601	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1439	1-112-778-11	CERAMIC CHIP 0.022UF	10%	25V	C1602	1-112-065-11	CERAMIC CHIP 4.7UF	10%	16V
C1440	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1603	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C1441	1-112-778-11	CERAMIC CHIP 0.022UF	10%	25V	C1604	1-112-780-11	CERAMIC CHIP 0.47UF	10%	16V
C1442	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1605	1-112-780-11	CERAMIC CHIP 0.47UF	10%	16V
C1443	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V	C1606	1-112-780-11	CERAMIC CHIP 0.47UF	10%	16V
C1449	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1607	1-112-780-11	CERAMIC CHIP 0.47UF	10%	16V
C1450	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1608	1-112-780-11	CERAMIC CHIP 0.47UF	10%	16V
C1451	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1609	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C1452	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1610	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1453	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1612	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1454	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1613	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C1550	1-135-366-11	ELECT CHIP 100UF	20%	16V	C1614	1-114-400-21	ELECT CHIP 100UF	20%	6.3V
C1551	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1615	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1552	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C1616	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1553	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1618	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1554	1-114-400-21	ELECT CHIP 100UF	20%	6.3V	C1619	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1555	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C1620	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1556	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1621	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1557	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1623	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1558	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1625	1-114-320-11	CERAMIC CHIP 0.22UF	10%	6.3V
C1559	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C1626	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C1560	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C1627	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C1561	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C1628	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V
C1562	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1629	1-164-866-11	CERAMIC CHIP 47PF	5.00%	50V
C1563	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1630	1-100-769-21	ELECT CHIP 470UF	20%	16V
C1564	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1631	1-100-767-21	ELECT CHIP 220UF	20%	16V
C1565	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1632	1-100-767-21	ELECT CHIP 220UF	20%	16V
C1566	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1700	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1568	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1701	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C1569	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1570	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1703	1-135-366-11	ELECT CHIP 100UF	20%	16V
C1572	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1704	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C1574	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1705	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C1706	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1762	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C1707	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1763	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C1708	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1764	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C1709	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1765	1-137-893-11	ELECT CHIP 22UF	20%	16V
C1710	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1766	1-137-893-11	ELECT CHIP 22UF	20%	16V
C1711	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1767	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C1712	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C1768	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C1713	1-100-769-21	ELECT CHIP 470UF	20%	16V	C1769	1-112-774-11	CERAMIC CHIP 470PF	10%	50V
C1714	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1770	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C1715	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C1771	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C1716	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C1772	1-100-766-21	ELECT CHIP 47UF	20%	16V
C1717	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1800	1-137-942-21	ELECT CHIP 47UF	20%	25V
C1718	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1801	1-114-325-11	CERAMIC CHIP 0.1UF	10%	25V
C1719	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1802	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1720	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C1803	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1721	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1804	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C1722	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1805	1-100-766-21	ELECT CHIP 47UF	20%	16V
C1723	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1806	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1724	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C1807	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C1725	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C1808	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C1726	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C1809	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1727	1-114-354-11	CAP, CERAMIC 0.1MF X7R (1410)			C1810	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1730	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1811	1-100-765-21	ELECT CHIP 10UF	20%	16V
C1731	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C1812	1-100-766-21	ELECT CHIP 47UF	20%	16V
C1732	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1813	1-100-766-21	ELECT CHIP 47UF	20%	16V
C1733	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1814	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1734	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1815	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1735	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1816	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1736	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1817	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1737	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1818	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1738	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C1819	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1739	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1820	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1740	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C1821	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1741	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C1822	1-100-767-21	ELECT CHIP 220UF	20%	16V
C1742	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1823	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1743	1-114-399-21	ELECT CHIP 47UF	20%	6.3V	C1824	1-114-553-11	CERAMIC CHIP 10UF	10%	16V
C1744	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C1825	1-114-553-11	CERAMIC CHIP 10UF	10%	16V
C1745	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1826	1-100-766-21	ELECT CHIP 47UF	20%	16V
C1746	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1827	1-114-406-21	ELECT CHIP 2.2UF	20%	50V
C1747	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C1828	1-114-406-21	ELECT CHIP 2.2UF	20%	50V
C1748	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1829	1-100-765-21	ELECT CHIP 10UF	20%	16V
C1749	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1830	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C1750	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1831	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1751	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1832	1-100-765-21	ELECT CHIP 10UF	20%	16V
C1752	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C1833	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1753	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C1834	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1754	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C1836	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C1755	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V	C1837	1-100-766-21	ELECT CHIP 47UF	20%	16V
C1756	1-100-765-21	ELECT CHIP 10UF	20%	16V	C1838	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V
C1757	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C1839	1-112-064-11	CERAMIC CHIP 2.2UF	10%	10V

REF.NO.	PART.NO	DESCRIPTION	REMARK
C1844	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1845	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1846	1-114-410-21	CERAMIC CHIP 680PF	2% 50V
C1847	1-114-410-21	CERAMIC CHIP 680PF	2% 50V
C1848	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1849	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1850	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1851	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1852	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1853	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1854	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1859	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1860	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1863	1-112-064-11	CERAMIC CHIP 2.2UF	10% 10V
C1866	1-137-893-11	ELECT CHIP 22UF	20% 16V
C1867	1-114-334-11	CERAMIC CHIP 10UF	10% 25V
C1868	1-114-334-11	CERAMIC CHIP 10UF	10% 25V
C1869	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1870	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1900	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1901	1-100-766-21	ELECT CHIP 47UF	20% 16V
C1902	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1903	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C1904	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C1906	1-112-066-11	CERAMIC CHIP 10UF	10% 10V
C1908	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1909	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C1911	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C1912	1-114-817-11	CERAMIC CHIP 2.2UF	10% 50V
C1913	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1914	1-114-326-11	CERAMIC CHIP 0.22UF	10% 25V
C1915	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1916	1-114-203-11	ELECT CHIP 100UF	20% 50V
C1918	1-114-400-21	ELECT CHIP 100UF	20% 6.3V
C1919	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1920	1-114-400-21	ELECT CHIP 100UF	20% 6.3V
C1921	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1922	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1923	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1924	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C1925	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1926	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1927	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1928	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V
C1930	1-164-852-11	CERAMIC CHIP 12PF	5.00% 50V
C1931	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1932	1-114-400-21	ELECT CHIP 100UF	20% 6.3V
C1933	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1934	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1935	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C1936	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1937	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V
C1938	1-114-323-11	CERAMIC CHIP 0.01UF	10% 50V
C1939	1-112-774-11	CERAMIC CHIP 470PF	10% 50V
C1940	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1942	1-114-415-21	ELECT CHIP 100UF	20% 6.3V
C1943	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1944	1-114-332-11	CERAMIC CHIP 22UF	10% 6.3V
C1945	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C1946	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1949	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1950	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C1951	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1953	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C1954	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C1955	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C1957	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1959	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1961	1-114-325-11	CERAMIC CHIP 0.1UF	10% 25V
C1964	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C1965	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2100	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2101	1-100-765-21	ELECT CHIP 10UF	20% 16V
C2102	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C2103	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2104	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2105	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2106	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C2107	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2108	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2109	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C2110	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2111	1-100-766-21	ELECT CHIP 47UF	20% 16V
C2112	1-114-400-21	ELECT CHIP 100UF	20% 6.3V
C2113	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C2114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2116	1-104-905-11	DOUBLE LAYER 0.22F	5.5V
C2117	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C2119	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2120	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2121	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C2122	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2123	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2125	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2127	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 50V
C2128	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2130	1-114-399-21	ELECT CHIP 47UF	20% 6.3V
C2131	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C2132	1-112-775-11	CERAMIC CHIP 0.0022UF	10% 50V
C2133	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

AE

REF.NO.	PART.NO	DESCRIPTION	REMARK
C2134	1-164-843-11	CERAMIC CHIP 3PF	0.25PF 50V
C2136	1-114-320-11	CERAMIC CHIP 0.22UF	10% 6.3V
C2137	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2138	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C2139	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2140	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2141	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2142	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2143	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C2144	1-100-912-11	CERAMIC CHIP 1UF	10% 25V
C2145	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2146	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2148	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2149	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2151	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2152	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2153	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2154	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2155	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2156	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2157	1-100-765-21	ELECT CHIP 10UF	20% 16V
C2158	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2161	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2162	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2163	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2164	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C2165	1-100-765-21	ELECT CHIP 10UF	20% 16V
C2167	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2169	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C2301	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
		< CONNECTOR >	
CN1000	*1-821-603-11	HEADER ASSEMBLY FOR PWB 4P	
CN1001	*1-821-879-11	CONNECTOR, SQUARE TYPE (RECE)	
CN1002	*1-822-104-11	HEADER ASSEMBLY FOR PWB 20P(H)	
CN1300	*1-822-066-11	BOARD TO BOARD CONNECTOR 80P	
CN1301	*1-822-103-11	HEADER ASSEMBLY FOR PWB 40P(H)	
CN1302	*1-822-066-11	BOARD TO BOARD CONNECTOR 80P	
CN1400	1-821-054-11	21PIN SOCKET	
CN1401	1-821-026-11	OPTICAL OUT CONNECTOR	
CN1402	1-821-054-11	21PIN SOCKET	
CN2100	1-779-936-51	CONNECTOR, FFC/FPC 18P	
		< DIODE >	
D1100	6-501-817-01	DIODE MA2J1110GLS0	
D1106	8-719-081-67	DIODE M1FM3	
D1107	8-719-081-67	DIODE M1FM3	
D1108	6-500-579-01	DIODE PTZ-TE25-6.8B	
D1109	6-500-295-01	DIODE PTZ-TE25-5.6B	

REF.NO.	PART.NO	DESCRIPTION	REMARK
D1113	6-502-318-01	DI MA4J1130GLS0	
D1250	6-501-817-01	DIODE MA2J1110GLS0	
D1400	6-501-754-01	DIODE MAZ8091G0LS0	
D1550	6-502-318-01	DI MA4J1130GLS0	
D1551	6-502-318-01	DI MA4J1130GLS0	
D1552	6-501-817-01	DIODE MA2J1110GLS0	
D1553	6-501-817-01	DIODE MA2J1110GLS0	
D1900	6-501-817-01	DIODE MA2J1110GLS0	
D2100	6-502-318-01	DI MA4J1130GLS0	
D2102	8-719-056-48	DIODE 1SS388(TPL3)	
D2103	8-719-058-24	DIODE RB501V-40TE-17	
D2106	6-502-318-01	DI MA4J1130GLS0	
D2107	6-502-318-01	DI MA4J1130GLS0	
ET1001	1-780-482-11	EARTH TERMINAL	
ET1003	1-780-482-11	EARTH TERMINAL	
ET1005	1-780-482-11	EARTH TERMINAL	
ET1006	1-780-482-11	EARTH TERMINAL	
ET1008	1-780-482-11	EARTH TERMINAL	
ET1010	1-780-482-11	EARTH TERMINAL	
ET1012	1-780-482-11	EARTH TERMINAL	
ET1014	1-780-482-11	EARTH TERMINAL	
ET1016	1-780-482-11	EARTH TERMINAL	
ET1018	1-780-482-11	EARTH TERMINAL	
ET1902	1-780-152-11	CONTACT, ON-BOARD	
ET1905	1-780-152-11	CONTACT, ON-BOARD	
ET1912	1-780-152-11	CONTACT, ON-BOARD	
		< FUSE >	
F1001 ⚠	1-576-933-21	FUSE	5A 24V
		< FERRITE BEAD >	
FB1001	1-400-089-21	FERRITE	0UH
FB1006	1-400-110-21	FERRITE	0UH
FB1007	1-400-461-21	FERRITE	0UH
FB1250	1-481-250-11	FERRITE	0UH
FB1251	1-481-250-11	FERRITE	0UH
FB1252	1-400-331-11	FERRITE	0UH
FB1302	1-414-445-11	FERRITE	0UH
FB1303	1-414-445-11	FERRITE	0UH
FB1304	1-400-915-21	FERRITE	0UH
FB1305	1-400-331-11	FERRITE	0UH
FB1306	1-400-331-11	FERRITE	0UH
FB1307	1-400-331-11	FERRITE	0UH
FB1308	1-400-331-11	FERRITE	0UH
FB1309	1-400-331-11	FERRITE	0UH
FB1900	1-400-834-11	FERRITE	0UH
FB1901	1-400-834-11	FERRITE	0UH
FB1902	1-400-834-11	FERRITE	0UH
FB1903	1-400-834-11	FERRITE	0UH

REF.NO.	PART.NO	DESCRIPTION	REMARK
FB1904	1-400-834-11	FERRITE	0UH
FB1905	1-400-834-11	FERRITE	0UH
FB1906	1-400-834-11	FERRITE	0UH
FB1907	1-400-834-11	FERRITE	0UH
FB1908	1-400-834-11	FERRITE	0UH
FB1909	1-400-834-11	FERRITE	0UH
FB1910	1-400-834-11	FERRITE	0UH
FB1911	1-400-834-11	FERRITE	0UH
FB1912	1-400-834-11	FERRITE	0UH
FB1913	1-400-461-21	FERRITE	0UH
FB1914	1-400-461-21	FERRITE	0UH
FB1915	1-400-834-11	FERRITE	0UH
FB1916	1-400-591-22	FERRITE	0UH
FB1917	1-400-591-22	FERRITE	0UH
FB1918	1-400-591-22	FERRITE	0UH
FB2107	1-400-580-21	FERRITE	0UH
	< FILTER >		
FL2100	1-234-939-21	FILTER, EMI REMOVAL (SMD)	
	< IC >		
IC1000	6-711-999-01	IC MM3286EFBE	
IC1001	6-712-525-01	IC MIC2005-0.8YM6TR	
IC1100	6-708-762-01	IC PQ200WNA1ZPH	
IC1102	8-759-581-11	IC NJM2125F(TE2)	
IC1104	6-710-922-01	IC BD9853AFV-E2	
IC1105	6-708-603-01	IC PQ070XNA1ZPH	
IC1106	6-708-603-01	IC PQ070XNA1ZPH	
IC1107	6-708-603-01	IC PQ070XNA1ZPH	
IC1108	6-708-603-01	IC PQ070XNA1ZPH	
IC1109	6-708-762-01	IC PQ200WNA1ZPH	
IC1250	6-702-714-01	IC MSP3417G-QG-B8V3	
IC1300	6-711-116-01	IC NJM2878F3-05 (TE2)	
IC1550	6-709-777-01	IC ADA4861-3YRZ-RL7	
IC1551	8-753-289-65	IC CXA2240AR-TL	
IC1700	6-712-974-01	IC CXD9926ATQ	
IC1701	6-705-973-01	IC PCM1754DBQR	
IC1702	6-706-481-01	IC TC7SET32FU(T5RSOJF)	
IC1703	8-759-278-58	IC NJM4558V-TE2	
IC1800	8-753-299-00	IC CXA3767R-T6	
IC1801	8-759-278-58	IC NJM4558V-TE2	
IC1802	8-759-278-58	IC NJM4558V-TE2	
IC1803	6-709-927-01	IC RT8H225C-TP-2	
IC1900	6-708-603-01	IC PQ070XNA1ZPH	
IC1901	6-709-607-01	IC LA5795T-TLM-E	
IC1902	6-709-932-01	IC MM3141CNRE	
IC1903	6-709-257-01	IC 74LVC4066PW	
IC2100	6-709-512-01	IC S-1132B18-M5T1G	
IC2101	6-709-322-01	IC TC7WH123FK(TE85R)	
IC2102	6-709-257-01	IC 74LVC4066PW	
IC2103	6-709-517-01	IC S-35390A-J8T1G	
IC2104	6-708-219-01	IC MB91305PMC-G-BNDE1	
IC2105	6-703-175-01	IC PST3629UL	
IC2107	6-808-513-01	IC S29AL016D70TFI010-08HAE011	
IC2108	6-706-419-01	IC LM393DT (A)	
IC2109	6-709-257-01	IC 74LVC4066PW	
	< SOCKET >		
J1000	1-821-830-11	PHONO JACK 2P	
J1001	1-815-325-11	JACK	
J1002	1-821-826-11	JACK (SMALL TYPE)	
J1003	1-821-826-11	JACK (SMALL TYPE)	
J1400	1-821-881-11	PHONO JACK 10P	
	< COIL >		
L1000	1-400-177-21	FERRITE	0UH
L1108	1-457-428-11	INDUCTOR	4.7UH
L1109	1-457-428-11	INDUCTOR	4.7UH
L1110	1-400-180-21	FERRITE	0UH
L1250	1-469-555-21	INDUCTOR	10UH
L1251	1-412-990-41	INDUCTOR	8.2UH
L1252	1-400-180-21	FERRITE	0UH
L1253	1-400-180-21	FERRITE	0UH
L1254	1-469-555-21	INDUCTOR	10UH
L1300	1-400-179-21	FERRITE	0UH
L1301	1-400-179-21	FERRITE	0UH
L1302	1-400-179-21	FERRITE	0UH
L1303	1-400-179-21	FERRITE	0UH
L1306	1-400-179-21	FERRITE	0UH
L1307	1-412-058-11	INDUCTOR	10UH
L1400	1-469-555-21	INDUCTOR	10UH
L1550	1-412-058-11	INDUCTOR	10UH
L1551	1-412-058-11	INDUCTOR	10UH
L1554	1-412-058-11	INDUCTOR	10UH
L1556	1-412-058-11	INDUCTOR	10UH
L1557	1-412-058-11	INDUCTOR	10UH
L1558	1-412-058-11	INDUCTOR	10UH
L1700	1-400-179-21	FERRITE	0UH
L1701	1-469-555-21	INDUCTOR	10UH
L1702	1-400-180-21	FERRITE	0UH
L1703	1-469-555-21	INDUCTOR	10UH
L1704	1-469-555-21	INDUCTOR	10UH
L1705	1-469-555-21	INDUCTOR	10UH
L1706	1-469-555-21	INDUCTOR	10UH
L1707	1-469-555-21	INDUCTOR	10UH
L1800	1-412-058-11	INDUCTOR	10UH
L1802	1-469-555-21	INDUCTOR	10UH
L1804	1-412-058-11	INDUCTOR	10UH
L1805	1-412-058-11	INDUCTOR	10UH

REF.NO.	PART.NO	DESCRIPTION	REMARK
L1806	1-412-058-11	INDUCTOR 10UH	
L1807	1-469-555-21	INDUCTOR 10UH	
L1901	1-416-344-11	INDUCTOR 10UH	
L1902	1-469-549-21	INDUCTOR 1UH	
L1903	1-400-180-21	FERRITE 0UH	
L1904	1-469-549-21	INDUCTOR 1UH	
L1910	1-400-180-21	FERRITE 0UH	
L1911	1-400-180-21	FERRITE 0UH	
L2100	1-400-180-21	FERRITE 0UH	
L2101	1-412-058-11	INDUCTOR 10UH	
L2102	1-469-555-21	INDUCTOR 10UH	
L2103	1-400-180-21	FERRITE 0UH	
	< TRANSISTOR >		
Q001	6-551-943-01	TR RT3XBBM-T111-1	
Q1000	6-551-815-01	TR UNR52A1G0LS0	
Q1100	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q1101	6-550-828-01	TRANSISTOR RSQ035P03TR	
Q1104	6-551-815-01	TR UNR52A1G0LS0	
Q1105	6-551-815-01	TR UNR52A1G0LS0	
Q1106	6-551-815-01	TR UNR52A1G0LS0	
Q1107	6-551-776-01	TR 2SC5950G0LS0	
Q1250	6-551-776-01	TR 2SC5950G0LS0	
Q1252	6-551-815-01	TR UNR52A1G0LS0	
Q1550	8-729-122-63	TRANSISTOR 2SA1226-E4	
Q1551	8-729-122-63	TRANSISTOR 2SA1226-E4	
Q1552	8-729-122-63	TRANSISTOR 2SA1226-E4	
Q1553	6-551-775-01	TR 2SA2122G0LS0	
Q1554	6-551-775-01	TR 2SA2122G0LS0	
Q1555	6-551-775-01	TR 2SA2122G0LS0	
Q1556	6-551-775-01	TR 2SA2122G0LS0	
Q1562	6-551-776-01	TR 2SC5950G0LS0	
Q1563	6-551-776-01	TR 2SC5950G0LS0	
Q1800	6-551-551-01	TRANSISTOR RT3N77M-TP-1	
Q1802	6-551-815-01	TR UNR52A1G0LS0	
Q1803	6-551-551-01	TRANSISTOR RT3N77M-TP-1	
Q1804	6-551-943-01	TR RT3XBBM-T111-1	
Q1900	6-551-815-01	TR UNR52A1G0LS0	
Q1904	6-550-871-01	TRANSISTOR 2SA2048TL QR	
Q1905	6-550-871-01	TRANSISTOR 2SA2048TL QR	
Q1909	6-551-815-01	TR UNR52A1G0LS0	
Q1910	6-551-775-01	TR 2SA2122G0LS0	
Q1911	6-551-815-01	TR UNR52A1G0LS0	
Q1912	6-551-815-01	TR UNR52A1G0LS0	
Q1913	6-551-815-01	TR UNR52A1G0LS0	
Q2102	6-551-815-01	TR UNR52A1G0LS0	
Q2103	6-551-775-01	TR 2SA2122G0LS0	
Q2104	6-551-824-01	TR UNR51A5G0LS0	
Q2105	6-551-824-01	TR UNR51A5G0LS0	
Q2106	6-551-775-01	TR 2SA2122G0LS0	
Q2107	6-551-776-01	TR 2SC5950G0LS0	
Q2108	6-551-775-01	TR 2SA2122G0LS0	
Q2109	6-551-775-01	TR 2SA2122G0LS0	
Q2110	6-551-776-01	TR 2SC5950G0LS0	
Q2111	6-551-776-01	TR 2SC5950G0LS0	
Q2112	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
Q2113	6-551-824-01	TR UNR51A5G0LS0	
Q2114	6-551-815-01	TR UNR52A1G0LS0	
Q2115	6-551-815-01	TR UNR52A1G0LS0	
Q2116	6-551-815-01	TR UNR52A1G0LS0	
Q2117	6-551-387-01	TRANSISTOR SSM6N16FU	
Q2119	6-551-813-01	TR UNR51A3G0LS0	
Q2120	6-551-817-01	TR UNR52A3G0LS0	
	< RESISTOR >		
R1003	1-218-965-11	METAL CHIP 10K 5% 1/16W	
R1004	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R1021	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R1022	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R1023	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W	
R1024	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W	
R1025	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R1026	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R1027	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1028	1-218-989-11	METAL CHIP 1M 5% 1/16W	
R1029	1-218-989-11	METAL CHIP 1M 5% 1/16W	
R1030	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W	
R1031	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W	
R1032	1-218-989-11	METAL CHIP 1M 5% 1/16W	
R1033	1-218-989-11	METAL CHIP 1M 5% 1/16W	
R1034	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1035	1-218-953-11	METAL CHIP 1K 5% 1/16W	
R1039	1-218-941-81	METAL CHIP 100 5% 1/16W	
R1040	1-218-977-11	METAL CHIP 100K 5% 1/16W	
R1042	1-218-941-81	METAL CHIP 100 5% 1/16W	
R1045	1-208-860-81	METAL CHIP 75 0.5% 1/16W	
R1048	1-218-973-11	METAL CHIP 47K 5% 1/16W	
R1100	1-218-965-11	METAL CHIP 10K 5% 1/16W	
R1102	1-208-699-11	METAL CHIP 4.7K 0.5% 1/16W	
R1104	1-208-691-11	METAL CHIP 2.2K 0.5% 1/16W	
R1106	1-208-905-11	METAL CHIP 5.6K 0.5% 1/16W	
R1107	1-208-893-11	METAL CHIP 1.8K 0.5% 1/16W	
R1110	1-218-965-11	METAL CHIP 10K 5% 1/16W	
R1112	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R1113	1-208-911-11	METAL CHIP 10K 0.5% 1/16W	
R1118	1-208-713-11	METAL CHIP 18K 0.5% 1/16W	
R1119	1-208-715-11	METAL CHIP 22K 0.5% 1/16W	
R1120	1-208-939-11	METAL CHIP 150K 0.5% 1/16W	
R1121	1-208-923-11	METAL CHIP 33K 0.5% 1/16W	

REF.NO.	PART.NO	DESCRIPTION			REMARK
R1122	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R1128	1-218-931-11	METAL CHIP	15	5%	1/16W
R1135	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R1139	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1143	1-218-931-11	METAL CHIP	15	5%	1/16W
R1146	1-218-931-11	METAL CHIP	15	5%	1/16W
R1149	1-218-931-11	METAL CHIP	15	5%	1/16W
R1150	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R1151	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1152	1-218-990-81	SHORT CHIP	0		
R1153	1-218-990-81	SHORT CHIP	0		
R1154	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R1155	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R1156	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R1157	1-208-713-11	METAL CHIP	18K	0.5%	1/16W
R1161	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1166	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1167	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R1168	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1169	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1170	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R1171	1-218-948-11	METAL CHIP	390	5%	1/16W
R1172	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1173	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R1174	1-218-948-11	METAL CHIP	390	5%	1/16W
R1175	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1177	1-208-883-81	METAL CHIP	680	0.5%	1/16W
R1178	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1179	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1181	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1188	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R1189	1-218-941-11	METAL CHIP	100	5%	1/16W
R1190	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1191	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1196	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1251	1-208-855-81	METAL CHIP	47	0.5%	1/16W
R1253	1-218-977-11	METAL CHIP	100K	5%	1/16W
R1256	1-218-977-11	METAL CHIP	100K	5%	1/16W
R1346	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1401	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1402	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1406	1-218-947-11	METAL CHIP	330	5%	1/16W
R1407	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1408	1-218-947-11	METAL CHIP	330	5%	1/16W
R1409	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1410	1-218-966-11	METAL CHIP	12K	5%	1/16W
R1413	1-218-945-11	METAL CHIP	220	5%	1/16W
R1414	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1415	1-218-945-11	METAL CHIP	220	5%	1/16W
R1416	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1419	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1425	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1426	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1428	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1430	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1431	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1432	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1433	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1434	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1435	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1436	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1437	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1441	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1442	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1445	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1446	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1448	1-218-947-11	METAL CHIP	330	5%	1/16W
R1449	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1450	1-218-947-11	METAL CHIP	330	5%	1/16W
R1451	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1452	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1453	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1455	1-218-966-11	METAL CHIP	12K	5%	1/16W
R1457	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1458	1-218-945-11	METAL CHIP	220	5%	1/16W
R1459	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R1461	1-218-945-11	METAL CHIP	220	5%	1/16W
R1463	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1474	1-218-941-81	METAL CHIP	100	5%	1/16W
R1475	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1476	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1480	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1481	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1482	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1485	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1486	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1487	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R1488	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R1492	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1493	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1494	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1495	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1496	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1497	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1498	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1499	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1500	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1501	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1502	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1503	1-208-860-81	METAL CHIP	75	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R1504	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1505	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1506	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1507	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1508	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1509	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1510	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R1553	1-218-939-11	METAL CHIP	68	5%	1/16W
R1554	1-218-939-11	METAL CHIP	68	5%	1/16W
R1555	1-218-939-11	METAL CHIP	68	5%	1/16W
R1557	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R1560	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R1563	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R1564	1-208-635-11	METAL CHIP	10	0.5%	1/16W
R1565	1-208-635-11	METAL CHIP	10	0.5%	1/16W
R1566	1-208-635-11	METAL CHIP	10	0.5%	1/16W
R1568	1-218-947-11	METAL CHIP	330	5%	1/16W
R1569	1-218-933-11	METAL CHIP	22	5%	1/16W
R1570	1-218-941-81	METAL CHIP	100	5%	1/16W
R1571	1-218-941-81	METAL CHIP	100	5%	1/16W
R1572	1-218-929-11	METAL CHIP	10	5%	1/16W
R1573	1-218-929-11	METAL CHIP	10	5%	1/16W
R1574	1-218-947-11	METAL CHIP	330	5%	1/16W
R1575	1-218-933-11	METAL CHIP	22	5%	1/16W
R1576	1-218-941-81	METAL CHIP	100	5%	1/16W
R1577	1-218-941-81	METAL CHIP	100	5%	1/16W
R1578	1-218-941-81	METAL CHIP	100	5%	1/16W
R1582	1-218-947-11	METAL CHIP	330	5%	1/16W
R1584	1-218-941-81	METAL CHIP	100	5%	1/16W
R1585	1-218-947-11	METAL CHIP	330	5%	1/16W
R1587	1-218-983-11	METAL CHIP	330K	5%	1/16W
R1588	1-218-983-11	METAL CHIP	330K	5%	1/16W
R1589	1-218-983-11	METAL CHIP	330K	5%	1/16W
R1590	1-218-933-11	METAL CHIP	22	5%	1/16W
R1591	1-218-941-81	METAL CHIP	100	5%	1/16W
R1592	1-218-941-81	METAL CHIP	100	5%	1/16W
R1593	1-218-941-81	METAL CHIP	100	5%	1/16W
R1594	1-218-941-81	METAL CHIP	100	5%	1/16W
R1595	1-218-941-81	METAL CHIP	100	5%	1/16W
R1597	1-218-941-81	METAL CHIP	100	5%	1/16W
R1598	1-218-941-81	METAL CHIP	100	5%	1/16W
R1599	1-218-941-81	METAL CHIP	100	5%	1/16W
R1601	1-218-941-81	METAL CHIP	100	5%	1/16W
R1602	1-218-947-11	METAL CHIP	330	5%	1/16W
R1603	1-218-933-11	METAL CHIP	22	5%	1/16W
R1605	1-218-941-81	METAL CHIP	100	5%	1/16W
R1606	1-218-941-81	METAL CHIP	100	5%	1/16W
R1607	1-218-941-81	METAL CHIP	100	5%	1/16W
R1608	1-218-933-11	METAL CHIP	22	5%	1/16W
R1609	1-218-941-81	METAL CHIP	100	5%	1/16W
R1610	1-218-941-81	METAL CHIP	100	5%	1/16W
R1611	1-218-941-81	METAL CHIP	100	5%	1/16W
R1612	1-218-941-81	METAL CHIP	100	5%	1/16W
R1613	1-218-975-11	METAL CHIP	68K	5%	1/16W
R1614	1-218-941-81	METAL CHIP	100	5%	1/16W
R1615	1-218-941-81	METAL CHIP	100	5%	1/16W
R1616	1-218-975-11	METAL CHIP	68K	5%	1/16W
R1617	1-218-941-81	METAL CHIP	100	5%	1/16W
R1619	1-218-941-81	METAL CHIP	100	5%	1/16W
R1620	1-218-941-81	METAL CHIP	100	5%	1/16W
R1621	1-218-941-81	METAL CHIP	100	5%	1/16W
R1623	1-218-949-11	METAL CHIP	470	5%	1/16W
R1624	1-218-949-11	METAL CHIP	470	5%	1/16W
R1629	1-218-941-81	METAL CHIP	100	5%	1/16W
R1630	1-218-941-81	METAL CHIP	100	5%	1/16W
R1631	1-218-941-81	METAL CHIP	100	5%	1/16W
R1634	1-218-941-81	METAL CHIP	100	5%	1/16W
R1635	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1636	1-218-949-11	METAL CHIP	470	5%	1/16W
R1637	1-218-945-11	METAL CHIP	220	5%	1/16W
R1638	1-218-949-11	METAL CHIP	470	5%	1/16W
R1639	1-218-945-11	METAL CHIP	220	5%	1/16W
R1645	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1647	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1652	1-218-949-11	METAL CHIP	470	5%	1/16W
R1653	1-218-949-11	METAL CHIP	470	5%	1/16W
R1701	1-218-937-11	METAL CHIP	47	5%	1/16W
R1702	1-218-937-11	METAL CHIP	47	5%	1/16W
R1703	1-218-937-11	METAL CHIP	47	5%	1/16W
R1704	1-218-937-11	METAL CHIP	47	5%	1/16W
R1705	1-218-937-11	METAL CHIP	47	5%	1/16W
R1706	1-218-937-11	METAL CHIP	47	5%	1/16W
R1709	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1715	1-218-937-11	METAL CHIP	47	5%	1/16W
R1717	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R1718	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R1719	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R1720	1-208-715-11	METAL CHIP	22K	0.5%	1/16W
R1723	1-218-937-11	METAL CHIP	47	5%	1/16W
R1724	1-218-937-11	METAL CHIP	47	5%	1/16W
R1725	1-218-937-11	METAL CHIP	47	5%	1/16W
R1726	1-218-945-11	METAL CHIP	220	5%	1/16W
R1727	1-218-945-11	METAL CHIP	220	5%	1/16W
R1730	1-218-989-11	METAL CHIP	1M	5%	1/16W
R1731	1-218-990-81	SHORT CHIP	0		
R1734	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1735	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1736	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1737	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1738	1-208-911-11	METAL CHIP	10K	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R1739	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1740	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1741	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R1744	1-218-990-81	SHORT CHIP	0		
R1745	1-218-990-81	SHORT CHIP	0		
R1748	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R1749	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R1750	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R1751	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R1802	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1803	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1806	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R1807	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1809	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1810	1-218-985-11	METAL CHIP	470K	5%	1/16W
R1811	1-218-947-11	METAL CHIP	330	5%	1/16W
R1812	1-218-947-11	METAL CHIP	330	5%	1/16W
R1817	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R1818	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R1823	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1824	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1825	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1826	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1827	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1828	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1829	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1830	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1831	1-218-977-11	METAL CHIP	100K	5%	1/16W
R1832	1-218-970-11	METAL CHIP	27K	5%	1/16W
R1833	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1901	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1904	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1905	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1906	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R1907	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R1908	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R1909	1-218-990-81	SHORT CHIP	0		
R1917	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R1918	1-218-990-81	SHORT CHIP	0		
R1920	1-218-949-11	METAL CHIP	470	5%	1/16W
R1922	1-218-949-11	METAL CHIP	470	5%	1/16W
R1923	1-218-990-81	SHORT CHIP	0		
R1924	1-218-937-11	METAL CHIP	47	5%	1/16W
R1925	1-218-937-11	METAL CHIP	47	5%	1/16W
R1929	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1931	1-218-933-11	METAL CHIP	22	5%	1/16W
R1934	1-218-933-11	METAL CHIP	22	5%	1/16W
R1938	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1940	1-218-969-11	METAL CHIP	22K	5%	1/16W
R1941	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R1945	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R1948	1-218-941-81	METAL CHIP	100	5%	1/16W
R1953	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1954	1-218-941-81	METAL CHIP	100	5%	1/16W
R1958	1-218-990-81	SHORT CHIP	0		
R1959	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1962	1-218-953-11	METAL CHIP	1K	5%	1/16W
R1966	1-218-941-81	METAL CHIP	100	5%	1/16W
R1968	1-218-941-81	METAL CHIP	100	5%	1/16W
R1971	1-218-945-11	METAL CHIP	220	5%	1/16W
R1972	1-218-965-11	METAL CHIP	10K	5%	1/16W
R1974	1-218-941-81	METAL CHIP	100	5%	1/16W
R1977	1-218-929-11	METAL CHIP	10	5%	1/16W
R1986	1-218-929-11	METAL CHIP	10	5%	1/16W
R1990	1-218-953-11	METAL CHIP	1K	5%	1/16W
R2003	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R2101	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2107	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2113	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2116	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R2117	1-218-941-81	METAL CHIP	100	5%	1/16W
R2118	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R2120	1-218-941-81	METAL CHIP	100	5%	1/16W
R2124	1-218-941-81	METAL CHIP	100	5%	1/16W
R2125	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R2126	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R2131	1-218-945-11	METAL CHIP	220	5%	1/16W
R2137	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R2138	1-208-943-11	METAL CHIP	220K	0.5%	1/16W
R2139	1-218-989-11	METAL CHIP	1M	5%	1/16W
R2145	1-218-989-11	METAL CHIP	1M	5%	1/16W
R2146	1-218-959-11	METAL CHIP	3.3K	5%	1/16W
R2147	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R2150	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R2152	1-208-697-11	METAL CHIP	3.9K	0.5%	1/16W
R2153	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2154	1-218-990-81	SHORT CHIP	0		
R2155	1-218-957-11	METAL CHIP	2.2K	5%	1/16W
R2156	1-218-969-11	METAL CHIP	22K	5%	1/16W
R2158	1-218-969-11	METAL CHIP	22K	5%	1/16W
R2159	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2160	1-218-989-11	METAL CHIP	1M	5%	1/16W
R2162	1-218-959-11	METAL CHIP	3.3K	5%	1/16W
R2165	1-218-959-11	METAL CHIP	3.3K	5%	1/16W
R2168	1-218-941-81	METAL CHIP	100	5%	1/16W
R2169	1-218-941-81	METAL CHIP	100	5%	1/16W
R2171	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2172	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2175	1-218-941-81	METAL CHIP	100	5%	1/16W
R2176	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R2179	1-218-973-11	METAL CHIP	47K	5%	1/16W
R2180	1-218-941-81	METAL CHIP	100	5%	1/16W
R2182	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2183	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2184	1-218-933-11	METAL CHIP	22	5%	1/16W
R2185	1-218-953-11	METAL CHIP	1K	5%	1/16W
R2186	1-218-941-81	METAL CHIP	100	5%	1/16W
R2187	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2188	1-218-941-81	METAL CHIP	100	5%	1/16W
R2189	1-218-953-11	METAL CHIP	1K	5%	1/16W
R2195	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2196	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2199	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2203	1-218-949-11	METAL CHIP	470	5%	1/16W
R2207	1-218-971-11	METAL CHIP	33K	5%	1/16W
R2208	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2210	1-218-949-11	METAL CHIP	470	5%	1/16W
R2213	1-218-949-11	METAL CHIP	470	5%	1/16W
R2214	1-218-949-11	METAL CHIP	470	5%	1/16W
R2215	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R2218	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2219	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2222	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2223	1-218-973-11	METAL CHIP	47K	5%	1/16W
R2224	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2225	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2230	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2231	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2233	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2234	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R2238	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W

< RESISTOR CHIP >

RB1003	1-234-370-21	RES, NETWORK 22	(1005X4)
RB1005	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB1006	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB1007	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB1008	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB1100	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1252	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
RB1550	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1554	1-234-371-21	RES, NETWORK 47	(1005X4)
RB1555	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1701	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1703	1-234-882-21	RES, CHIP NETWORK 47KX8	(3816)
RB1705	1-234-882-21	RES, CHIP NETWORK 47KX8	(3816)
RB1708	1-234-371-21	RES, NETWORK 47	(1005X4)
RB1716	1-234-376-11	RES, NETWORK 2.2K	(1005X4)
RB1717	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1718	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1719	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1720	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB1721	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1722	1-234-374-21	RES, NETWORK 470	(1005X4)
RB1723	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1724	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB1725	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1801	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1813	1-234-373-21	RES, NETWORK 220	(1005X4)
RB1815	1-234-374-21	RES, NETWORK 470	(1005X4)
RB1816	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1817	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1818	1-234-372-11	RES, NETWORK 100	(1005X4)
RB1819	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
RB1820	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB1821	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB2101	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2103	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB2106	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2108	1-234-371-21	RES, NETWORK 47	(1005X4)
RB2109	1-234-371-21	RES, NETWORK 47	(1005X4)
RB2111	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2113	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2114	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2120	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2123	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2129	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2130	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2131	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2132	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2139	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB2141	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB2145	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2146	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2147	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2148	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2149	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2156	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB2157	1-234-371-21	RES, NETWORK 47	(1005X4)
RB2158	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB2159	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB2160	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB2161	1-234-375-21	RES, NETWORK 1K	(1005X4)
RB2162	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2166	1-234-376-11	RES, NETWORK 2.2K	(1005X4)
RB2167	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2169	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
RB2170	1-234-377-21	RES, NETWORK 4.7K	(1005X4)

Note : The components identified by mark 🔒 contain confidential information. Strictly follow the instructions when ever the components are repaired and/or replaced.

AE FBA

REF.NO.	PART.NO	DESCRIPTION	REMARK
RB2171	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB2172	1-234-370-21	RES, NETWORK 22	(1005X4)
RB2173	1-234-370-21	RES, NETWORK 22	(1005X4)
RB2174	1-234-372-11	RES, NETWORK 100	(1005X4)
RB2175	1-234-370-21	RES, NETWORK 22	(1005X4)
TB1400	1-780-489-11	S TERMINAL BLOCK (RIGHT ANGLE)	
		< TUNER >	
TU1900	8-597-641-00	TUNER UNIT, DIGITAL BTD-HF411T	
		< VARISTOR >	
VD1008	1-802-090-21	VARISTOR, CHIP	
VD1009	1-802-090-21	VARISTOR, CHIP	
VD1010	1-802-090-21	VARISTOR, CHIP	
VD1011	1-802-090-21	VARISTOR, CHIP	
VD1012	1-802-090-21	VARISTOR, CHIP	
VD1013	1-802-090-21	VARISTOR, CHIP	
VD1014	1-802-090-21	VARISTOR, CHIP	
VD1015	1-802-090-21	VARISTOR, CHIP	
VD1016	1-802-090-21	VARISTOR, CHIP	
VD1400	1-802-090-21	VARISTOR, CHIP	
VD1401	1-802-090-21	VARISTOR, CHIP	
VD1402	1-802-090-21	VARISTOR, CHIP	
VD1403	1-802-090-21	VARISTOR, CHIP	
VD1404	1-802-090-21	VARISTOR, CHIP	
VD1405	1-802-090-21	VARISTOR, CHIP	
VD1406	1-802-090-21	VARISTOR, CHIP	
VD1407	1-802-090-21	VARISTOR, CHIP	
VD1408	1-802-090-21	VARISTOR, CHIP	
VD1409	1-802-090-21	VARISTOR, CHIP	
VD1410	1-802-090-21	VARISTOR, CHIP	
VD1413	1-802-090-21	VARISTOR, CHIP	
VD1414	1-802-090-21	VARISTOR, CHIP	
VD1415	1-802-090-21	VARISTOR, CHIP	
VD1416	1-802-090-21	VARISTOR, CHIP	
VD1417	1-802-090-21	VARISTOR, CHIP	
VD1418	1-802-090-21	VARISTOR, CHIP	
VD1419	1-802-090-21	VARISTOR, CHIP	
VD1420	1-802-090-21	VARISTOR, CHIP	
VD1421	1-802-090-21	VARISTOR, CHIP	
VD1422	1-802-090-21	VARISTOR, CHIP	
VD1424	1-802-090-21	VARISTOR, CHIP	
VD1425	1-802-090-21	VARISTOR, CHIP	
VD1426	1-802-090-21	VARISTOR, CHIP	
VD1427	1-802-090-21	VARISTOR, CHIP	
VD1428	1-802-090-21	VARISTOR, CHIP	
VD1429	1-802-090-21	VARISTOR, CHIP	
VD1430	1-802-090-21	VARISTOR, CHIP	
VD1431	1-802-090-21	VARISTOR, CHIP	
VD1432	1-802-090-21	VARISTOR, CHIP	
VD1433	1-802-090-21	VARISTOR, CHIP	
VD1434	1-802-090-21	VARISTOR, CHIP	
VD1435	1-802-090-21	VARISTOR, CHIP	
VD1436	1-802-090-21	VARISTOR, CHIP	
VD1437	1-802-090-21	VARISTOR, CHIP	
VD1438	1-802-090-21	VARISTOR, CHIP	
VD1439	1-802-090-21	VARISTOR, CHIP	
VD1440	1-802-090-21	VARISTOR, CHIP	
VD2100	1-802-090-21	VARISTOR, CHIP	
VD2101	1-802-493-21	VARISTOR, NETWORK (1005X2)	
VD2102	1-802-493-21	VARISTOR, NETWORK (1005X2)	
VD2103	1-802-493-21	VARISTOR, NETWORK (1005X2)	
VD2104	1-802-493-21	VARISTOR, NETWORK (1005X2)	
		< CRYSTAL >	
X1250	1-813-991-11	VIBRATOR,CRYSTAL(SMD18.432MHZ)	
X1550	1-813-124-21	VIBRATOR, CERAMIC	
X1700	1-814-130-11	QUARTZ CRYSTAL UNIT	
X2100	1-814-004-11	VIBRATOR, CRYSTAL	
X2101	1-813-070-21	PIEZOELECTRIC OSCILLATOR	

🔒 * A-1568-320-A FBA Board, Complete

*	1-910-049-69	CONNECTOR ASSY (5298T)		
		< CAPACITOR >		
C2801	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C2802	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C2803	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2809	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2811	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2813	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C2815	1-100-765-21	ELECT CHIP 10UF	20%	16V
C2816	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2817	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C2818	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C2819	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C2820	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C2821	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2822	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C2823	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C2824	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C2825	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C2826	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C2830	1-135-366-11	ELECT CHIP 100UF	20%	16V
C4000	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4001	1-100-912-11	CERAMIC CHIP 1UF	10%	25V
C4002	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4004	1-112-066-11	CERAMIC CHIP 10UF	10%	10V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C4006	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4175	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4007	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4176	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4010	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4179	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C4104	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4181	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C4105	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4300	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4106	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4301	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4107	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4302	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4109	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4310	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4110	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4312	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4111	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4314	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4112	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C4315	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4113	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C4317	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4114	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4319	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4115	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4323	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4116	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4351	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4117	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4352	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4118	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4507	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4119	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4509	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4120	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4511	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4121	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4512	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4124	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4514	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4125	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4517	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4126	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4518	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4127	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4523	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4129	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C4543	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4130	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C4545	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4133	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C4546	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4134	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4549	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4135	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C4559	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4137	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4560	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4144	1-164-878-11	CERAMIC CHIP 150PF	5%	50V	C4561	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4145	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4562	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C4146	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V	C4569	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4147	1-114-800-11	CERAMIC CHIP 0.0015UF	10%	50V	C4604	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4148	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C4605	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C4149	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4608	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4150	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4609	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4157	1-100-912-11	CERAMIC CHIP 1UF	10%	25V	C4610	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4158	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4612	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4159	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4613	1-164-882-11	CERAMIC CHIP 220PF	5.00%	16V
C4160	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4614	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4161	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4615	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4162	1-114-807-11	CERAMIC CHIP 0.015UF	10%	25V	C4618	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C4163	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V	C4619	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4164	1-112-775-11	CERAMIC CHIP 0.0022UF	10%	50V	C4620	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4165	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4621	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4167	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C4622	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4172	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C4623	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4173	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C4624	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4174	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4626	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C4627	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C4901	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4629	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4902	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4631	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C4903	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4632	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4904	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4633	1-114-804-11	CERAMIC CHIP 0.0056UF	10%	50V	C4905	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4634	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4906	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4639	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4907	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4640	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4908	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4643	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4909	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4644	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4910	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4645	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4911	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4646	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4912	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4647	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4913	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4649	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4914	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C4662	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4915	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4701	1-112-066-11	CERAMIC CHIP 10UF	10%	10V	C4916	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4702	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4917	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4703	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C4918	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C4704	1-164-849-11	CERAMIC CHIP 9PF	0.50PF	50V	C4919	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4707	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C4920	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4708	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4921	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4709	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4922	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4710	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4923	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4711	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4924	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4712	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4925	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4714	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4926	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4715	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4927	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4716	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4928	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4717	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V	C4929	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4719	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4930	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4720	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4931	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4721	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4932	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4723	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4933	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4725	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4934	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4727	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4935	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4728	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4936	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4731	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4938	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4733	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4939	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4806	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4942	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C4808	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4943	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4810	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C4945	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C4811	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C4946	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4812	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4947	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C4880	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4948	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C4881	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4949	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4882	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4950	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4883	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4951	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4884	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4952	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4885	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C4953	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C4900	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C4954	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C4955	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5037	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4956	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5038	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4957	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5039	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4972	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5040	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4974	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5041	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4975	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5042	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4976	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5043	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4977	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5044	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4979	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5046	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4981	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5048	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4982	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5049	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4989	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5050	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4991	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5051	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4993	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5052	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4994	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5053	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4995	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5054	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4996	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5056	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C4997	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5057	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C4998	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5058	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5003	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5059	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5004	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5060	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5006	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5061	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5007	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5062	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5008	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5063	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5010	1-114-532-21	ELECT CHIP 330UF	20%	4V	C5064	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5011	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5065	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5012	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5066	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5013	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5067	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5014	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5068	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5015	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5069	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5016	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5070	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5017	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5071	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5018	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5072	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5019	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5073	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5020	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5074	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5021	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5087	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5022	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5088	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C5023	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5090	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5024	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5091	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5025	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5096	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V
C5026	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5097	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5027	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5098	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5028	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5099	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5030	1-114-532-21	ELECT CHIP 330UF	20%	4V	C5100	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5031	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5101	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C5032	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5103	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5033	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5105	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V
C5034	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5110	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5035	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5111	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5036	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5115	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C5120	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5213	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5124	1-114-532-21	ELECT CHIP 330UF	20%	4V	C5214	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C5126	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5215	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5128	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5216	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5129	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5217	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5131	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5218	1-135-366-11	ELECT CHIP 100UF	20%	16V
C5132	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V	C5222	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5135	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5223	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5136	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C5224	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5137	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C5225	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C5139	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C5300	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5150	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5301	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5151	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5302	1-100-905-11	CERAMIC CHIP 0.001UF	10%	50V
C5152	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C5303	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5154	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5304	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5155	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5306	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5156	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5400	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5157	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5401	1-164-882-11	CERAMIC CHIP 220PF	5.00%	16V
C5158	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C5402	1-114-410-21	CERAMIC CHIP 680PF	2%	50V
C5159	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5403	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C5160	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5404	1-100-911-11	CERAMIC CHIP 4.7UF	10%	25V
C5163	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C5406	1-112-781-11	CERAMIC CHIP 1UF	10%	10V
C5164	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C5407	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5165	1-164-874-11	CERAMIC CHIP 100PF	5.00%	50V	C5408	1-114-532-21	ELECT CHIP 330UF	20%	4V
C5166	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C5409	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5169	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5410	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V
C5170	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5411	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5173	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5412	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5175	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5413	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5176	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5414	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5177	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5415	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5178	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C5416	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5179	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5417	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5180	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)			C5418	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5181	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5419	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5182	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5420	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5185	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5421	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5188	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5422	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5189	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5423	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5190	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5424	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5191	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5425	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5193	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5426	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5194	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V	C5427	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5196	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5428	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5201	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V	C5429	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5205	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C5430	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5206	1-164-850-11	CERAMIC CHIP 10PF	0.50PF	50V	C5431	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5208	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5432	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5209	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5433	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V
C5211	1-112-781-11	CERAMIC CHIP 1UF	10%	10V	C5434	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V

REF.NO.	PART.NO	DESCRIPTION	REMARK		REF.NO.	PART.NO	DESCRIPTION	REMARK	
C5435	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5487	1-112-066-11	CERAMIC CHIP 10UF	10%	10V
C5436	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5500	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5437	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5501	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5438	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5502	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5439	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5503	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5440	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5504	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5441	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5510	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5442	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5511	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5443	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5520	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C5444	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5522	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C5445	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5524	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C5446	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5526	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C5447	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5527	1-114-354-11	CAP, CERAMIC 0.1MF X7R (1410)		
C5448	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5529	1-114-354-11	CAP, CERAMIC 0.1MF X7R (1410)		
C5449	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5531	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C5450	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5533	1-114-353-11	CAP, CERAMIC 0.01MF X7R (1410)		
C5451	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5550	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5452	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5558	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5453	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5562	1-112-779-11	CERAMIC CHIP 0.047UF	10%	25V
C5454	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5564	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5455	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5571	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5456	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C5572	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5457	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C5574	1-100-916-11	CERAMIC CHIP 0.1UF	10%	16V
C5458	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7000	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C5459	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7001	1-114-331-11	CERAMIC CHIP 4.7UF	10%	10V
C5460	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C7002	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5461	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7003	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5462	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7004	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5463	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7005	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5464	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7006	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5465	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7007	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5466	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7008	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5467	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7009	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5468	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7013	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5469	1-100-909-11	CERAMIC CHIP 10UF	10%	6.3V	C7014	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5470	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7015	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5471	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7017	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5472	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7018	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5473	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7019	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5474	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7020	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5475	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7021	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5476	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7022	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5477	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7023	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5478	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7024	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5479	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7026	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5480	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7027	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5481	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7028	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5482	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7029	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5484	1-114-130-11	CERAMIC CHIP 1UF	10%	6.3V	C7030	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V
C5486	1-114-367-11	CERAMIC CHIP 0.1UF	20%	6.3V	C7034	1-112-777-11	CERAMIC CHIP 0.01UF	10%	25V

REF.NO.	PART.NO	DESCRIPTION	REMARK
C7035	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7036	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7037	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7038	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7039	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7040	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7041	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7043	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7044	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7045	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7100	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7104	1-164-849-11	CERAMIC CHIP 9PF	0.50PF 50V
C7105	1-164-849-11	CERAMIC CHIP 9PF	0.50PF 50V
C7106	1-164-856-81	CERAMIC CHIP 18PF	5.00% 50V
C7107	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7108	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7109	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7110	1-164-854-11	CERAMIC CHIP 15PF	5.00% 50V
C7112	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7113	1-100-767-21	ELECT CHIP 220UF	20% 16V
C7114	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7115	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7200	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7201	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7202	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7203	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7204	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7205	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7206	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7207	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7208	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7210	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7211	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7212	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7213	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7214	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7215	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7216	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7217	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7218	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7219	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7220	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7221	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7222	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7223	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7224	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7225	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7226	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7227	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7228	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7229	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7230	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7231	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7232	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7233	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7234	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7235	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7236	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7237	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7238	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7239	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7240	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7241	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7242	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7243	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7244	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7245	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7246	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7300	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7301	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C7302	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7400	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7401	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7402	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7403	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7404	1-164-850-11	CERAMIC CHIP 10PF	0.50PF 50V
C7407	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7600	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7602	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7603	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7605	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7606	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7607	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7608	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7609	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7610	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7611	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7612	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7613	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7614	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7615	1-164-874-11	CERAMIC CHIP 100PF	5.00% 50V
C7616	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7617	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7618	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7703	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7708	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7709	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7710	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7711	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7712	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

FBA

REF.NO.	PART.NO	DESCRIPTION	REMARK
C7713	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7714	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7715	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C7716	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7717	1-100-905-11	CERAMIC CHIP 0.001UF	10% 50V
C7801	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7803	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7804	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7806	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7808	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C7810	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7813	1-112-778-11	CERAMIC CHIP 0.022UF	10% 25V
C7814	1-114-533-21	ELECT CHIP 330UF	20% 6.3V
C7816	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7818	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7822	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7826	1-112-777-11	CERAMIC CHIP 0.01UF	10% 25V
C7829	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7831	1-112-776-11	CERAMIC CHIP 0.0047UF	10% 50V
C7832	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7840	1-112-786-11	ELECT CHIP 330UF	20% 4V
C7842	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7844	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7846	1-114-331-11	CERAMIC CHIP 4.7UF	10% 10V
C7847	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
C7849	1-100-916-11	CERAMIC CHIP 0.1UF	10% 16V
C7852	1-112-065-11	CERAMIC CHIP 4.7UF	10% 16V
C7854	1-112-786-11	ELECT CHIP 330UF	20% 4V
C7856	1-114-130-11	CERAMIC CHIP 1UF	10% 6.3V
C7858	1-100-909-11	CERAMIC CHIP 10UF	10% 6.3V
C7859	1-112-781-11	CERAMIC CHIP 1UF	10% 10V
		< CONNECTOR >	
CN2800	*1-821-613-11	HEADER ASSEMBLY FOR PWB 14P	
CN4000	*1-822-066-11	BOARD TO BOARD CONNECTOR 80P	
CN4001	*1-822-066-11	BOARD TO BOARD CONNECTOR 80P	
CN4300	1-821-916-21	HDMI CONNECTOR	
CN4301	1-821-916-21	HDMI CONNECTOR	
CN4302	1-821-916-21	HDMI CONNECTOR	
CN4303	1-821-917-11	HDMI CONNECTOR	
CN4600	1-821-013-11	D SUB CONNECTOR	
CN5300	*1-821-034-11	HEADER ASSEMBLY FOR PWB 51P	
CN7100	1-821-834-12	USB CONNECTOR	
CN7501	1-822-033-11	MEMORY STICK CONNECTOR	
CN7600	1-821-868-11	ETHERNET CONNECTOR (8P)	
CN7700	*1-793-769-22	CONNECTOR, CARD (PCMCIA CARD)	
		< DIODE >	
D4100	8-719-081-67	DIODE M1FM3	
D4102	8-719-081-67	DIODE M1FM3	
D4103	8-719-081-67	DIODE M1FM3	
D4105	6-502-248-01	DI KDZTR3.9B	
D4106	6-502-248-01	DI KDZTR3.9B	
D4107	6-502-248-01	DI KDZTR3.9B	
D4109	8-719-081-67	DIODE M1FM3	
D4110	8-719-081-67	DIODE M1FM3	
D4111	6-502-248-01	DI KDZTR3.9B	
D4112	6-502-248-01	DI KDZTR3.9B	
D4306	6-502-318-01	DI MA4J1130GLS0	
D4307	6-502-318-01	DI MA4J1130GLS0	
D4308	6-502-318-01	DI MA4J1130GLS0	
D4311	6-502-318-01	DI MA4J1130GLS0	
D4312	* 6-502-150-01	DI MA2SD320G8S0	
D4603	6-502-172-01	DI UMZ5.6KTL	
D4605	6-502-318-01	DI MA4J1130GLS0	
D7101	6-500-701-01	DIODE PGB1010603NR	
D7102	6-500-701-01	DIODE PGB1010603NR	
D7802	8-719-069-56	DI UDZSNPTE-176.2B	
D7803	8-719-081-67	DIODE M1FM3	
D7807	6-501-528-01	DIODE 1SMA5915BT3G	
D7808	6-501-528-01	DIODE 1SMA5915BT3G	
ET2810	1-780-482-11	EARTH TERMINAL	
ET2811	1-780-482-11	EARTH TERMINAL	
ET2812	1-780-482-11	EARTH TERMINAL	
ET2813	1-780-482-11	EARTH TERMINAL	
ET2814	1-780-482-11	EARTH TERMINAL	
ET2815	1-780-482-11	EARTH TERMINAL	
ET2816	1-780-482-11	EARTH TERMINAL	
ET2817	1-780-482-11	EARTH TERMINAL	
ET2818	1-780-482-11	EARTH TERMINAL	
ET2819	1-780-482-11	EARTH TERMINAL	
ET4900	1-780-668-21	CONTACT TERMINAL	
ET4901	1-780-668-21	CONTACT TERMINAL	
ET4902	1-780-668-21	CONTACT TERMINAL	
ET4903	1-780-668-21	CONTACT TERMINAL	
ET4904	1-780-317-11	TERMINAL	
ET4905	1-780-317-11	TERMINAL	
ET5101	1-780-638-21	CONTACT TERMINAL	
ET5102	1-780-638-21	CONTACT TERMINAL	
ET5103	1-780-638-21	CONTACT TERMINAL	
		< FUSE >	
F4100 ⚠	1-576-603-21	FUSE	3.15A 24V
F4101 ⚠	1-576-603-21	FUSE	3.15A 24V
F4102 ⚠	1-576-603-21	FUSE	3.15A 24V
F4600 ⚠	1-576-646-11	FUSE	0.5A 50V
F5400 ⚠	1-576-603-21	FUSE	3.15A 24V
F7800 ⚠	1-576-913-11	FUSE	1.6A 36V

Note : The components identified by shading and marked ⚠ are critical for safety. Replace only with the part numbers specified in the parts list.

REF.NO.		PART.NO	DESCRIPTION	REMARK
F7801	⚠	1-576-913-11	FUSE	1.6A 36V
			< FERRITE BEAD >	
FB2808		1-400-331-11	FERRITE 0UH	
FB4001		1-400-180-21	FERRITE 0UH	
FB4002		1-400-915-21	FERRITE 0UH	
FB4004		1-400-331-11	FERRITE 0UH	
FB4115		1-400-179-21	FERRITE 0UH	
FB4603		1-400-180-21	FERRITE 0UH	
FB4900		1-400-180-21	FERRITE 0UH	
FB4901		1-400-180-21	FERRITE 0UH	
FB4902		1-400-180-21	FERRITE 0UH	
FB4903		1-400-180-21	FERRITE 0UH	
FB4904		1-400-180-21	FERRITE 0UH	
FB4905		1-400-180-21	FERRITE 0UH	
FB4906		1-400-331-11	FERRITE 0UH	
FB4907		1-400-331-11	FERRITE 0UH	
FB4908		1-400-331-11	FERRITE 0UH	
FB5115		1-400-331-11	FERRITE 0UH	
FB7100		1-400-382-11	FERRITE 0UH	
FB7101		1-400-382-11	FERRITE 0UH	
FB7600		1-400-382-11	FERRITE 0UH	
FB7601		1-400-382-11	FERRITE 0UH	
FB7602		1-400-382-11	FERRITE 0UH	
FB7603		1-400-382-11	FERRITE 0UH	
FB7709		1-469-869-21	FERRITE 0UH	
			< FILTER >	
FL4300		1-456-844-11	INDUCTOR 0UH	
FL4301		1-456-844-11	INDUCTOR 0UH	
FL4302		1-456-844-11	INDUCTOR 0UH	
FL4303		1-456-844-11	INDUCTOR 0UH	
FL4304		1-456-844-11	INDUCTOR 0UH	
FL4305		1-456-844-11	INDUCTOR 0UH	
FL4306		1-456-844-11	INDUCTOR 0UH	
FL4307		1-456-844-11	INDUCTOR 0UH	
FL4308		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4309		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4502		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4503		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4504		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4507		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4508		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4510		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4511		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4600		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4601		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4602		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4700		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4800		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL4801		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5000		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5001		1-234-494-21	FILTER, EMI REMOVAL (SMD)	
FL5002		1-234-494-21	FILTER, EMI REMOVAL (SMD)	
FL5003		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5100		1-234-494-21	FILTER, EMI REMOVAL (SMD)	
FL5102		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5103		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5104		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5105		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5106		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5107		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5108		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5109		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5110		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5111		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5112		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5113		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5114		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5115		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5116		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5117		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5300		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5301		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5500		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5501		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5502		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL5503		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL7000		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
FL7400		1-234-939-21	FILTER, EMI REMOVAL (SMD)	
			< IC >	
IC2808		8-759-564-10	IC 74LVC157A-PW	
IC2809		6-710-361-01	IC 74LVC2G66DC-125	
IC2810		6-710-905-01	IC AK4388ET-E2	
IC2811		8-759-278-58	IC NJM4558V-TE2	
IC2812		6-713-248-01	IC TPA5050RSAR	
IC4000		6-708-603-01	IC PQ070XNA1ZPH	
IC4100		6-710-922-01	IC BD9853AFV-E2	
IC4101		6-710-922-01	IC BD9853AFV-E2	
IC4102		6-710-922-01	IC BD9853AFV-E2	
IC4103		6-710-080-01	IC MM3292FNRE	
IC4104		6-711-239-01	IC NJM2878F3-18 (TE2)	
IC4300		6-704-600-01	IC M24C02-WMN6T(B)	
IC4301		6-704-600-01	IC M24C02-WMN6T(B)	
IC4302		6-704-600-01	IC M24C02-WMN6T(B)	
IC4306		8-753-302-98	IC CXB1446R-T6	
IC4307		6-704-600-01	IC M24C02-WMN6T(B)	

REF.NO.	PART.NO	DESCRIPTION	REMARK
IC4601	6-707-739-01	IC MM1661JTRE	
IC4602	6-713-025-11	IC THC7984-17-TY	
IC4603	6-711-239-01	IC NJM2878F3-18 (TE2)	
IC4604	6-704-600-01	IC M24C02-WMN6T(B)	
IC4700	6-708-641-01	IC SAA7115AHL/V1	
IC4800	8-753-294-97	IC CXD3821GB	
IC4801	8-759-651-59	IC SN74CBTLV3245APWR	
IC4900	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC4901	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC4902	6-707-373-01	IC TPS51100DGQR	
IC4903	6-712-984-01	IC EDD1232ABBH-5C-E-TR	
IC4904	6-707-373-01	IC TPS51100DGQR	
IC4905	6-707-373-01	IC TPS51100DGQR	
IC5100	8-753-306-77	IC CXD4716BGB	
IC5104	6-808-216-01	IC IDT6V40046APGGI8	
IC5105	6-705-673-01	IC TC7PA53FU(TE85L.F)	
IC5300	6-703-181-01	IC TC74VCX74FT(EL)	
IC5301	6-703-238-01	IC TC7WZ34FK(TE85R)	
IC5302	8-759-829-30	IC CY2305SXC-1HT	
IC5400	6-710-949-01	IC SN0608006PWPR	
IC5401	6-711-262-01	IC HYB18TC256160BF-3S	
IC5402	6-706-478-01	IC TC7SET08FU(T5RSOJF)	
IC5403	6-711-262-01	IC HYB18TC256160BF-3S	
IC5500	6-707-897-01	IC EDS6416AHTA-75-E	
IC5501	6-708-219-01	IC MB91305PMC-G-BNDE1	
IC5502	6-808-472-01	IC S29AL032D70TFI030H-8HBE3105	
IC5503	6-704-566-01	IC R3112N291A-TR-FA	
IC5505	6-710-786-01	IC TC7SH125FU(T5RSOYF	
IC5507	6-706-484-01	IC TC7SH04FU(T5RSOYJF)	
IC7000	6-713-132-01	IC UPD61300F1-230-LU2-A	
IC7101	6-711-288-01	IC MIC2005-0.5YM6TR	
IC7200	6-712-189-01	IC EDE5116AJBG-6E-E	
IC7201	6-712-189-01	IC EDE5116AJBG-6E-E	
IC7300	6-711-242-01	IC K9F1208U0C-PCB0T	
IC7600	6-712-775-11	IC KSZ8041TLTR	
IC7701	6-712-563-01	IC 74LVC245APW-118	
IC7704	8-759-644-48	IC 74LVC541APW	
IC7705	8-759-644-48	IC 74LVC541APW	
IC7706	8-759-644-48	IC 74LVC541APW	
IC7707	8-759-644-48	IC 74LVC541APW	
IC7708	8-759-644-48	IC 74LVC541APW	
IC7709	8-759-644-48	IC 74LVC541APW	
IC7710	6-711-288-01	IC MIC2005-0.5YM6TR	
IC7801	6-711-586-01	IC MP2303DN-LF-Z	
IC7803	6-713-072-01	IC MP1415DSE-LF-Z	
IC7806	6-711-145-01	IC TPS51124RGER	
IC7807	6-710-941-01	IC MM3141ZNRE(1.07V)	
IC7808	6-713-063-01	IC NJM2831F05(TE1)	

REF.NO.	PART.NO	DESCRIPTION	REMARK
		< COIL >	
L2809	1-400-177-21	FERRITE	0UH
L2810	1-400-177-21	FERRITE	0UH
L4101	1-424-918-21	INDUCTOR	10UH
L4102	1-424-918-21	INDUCTOR	10UH
L4103	1-456-787-21	INDUCTOR	10UH
L4104	1-457-428-11	INDUCTOR	4.7UH
L4105	1-456-787-21	INDUCTOR	10UH
L4600	1-469-555-21	INDUCTOR	10UH
L4700	1-469-549-21	INDUCTOR	1UH
L4701	1-469-549-21	INDUCTOR	1UH
L5101	1-469-555-21	INDUCTOR	10UH
L5102	1-469-549-21	INDUCTOR	1UH
L5103	1-469-549-21	INDUCTOR	1UH
L5104	1-412-977-31	INDUCTOR	0.68UH
L5300	1-457-038-11	INDUCTOR	0UH
L5301	1-457-038-11	INDUCTOR	0UH
L5302	1-457-038-11	INDUCTOR	0UH
L5303	1-457-038-11	INDUCTOR	0UH
L5304	1-457-038-11	INDUCTOR	0UH
L5305	1-457-038-11	INDUCTOR	0UH
L5400	1-481-246-11	INDUCTOR	2.2UH
L7100	1-457-374-21	INDUCTOR	0UH
L7801	1-456-787-21	INDUCTOR	10UH
L7802	1-481-441-11	INDUCTOR	15UH
L7805	1-481-246-11	INDUCTOR	2.2UH
L7806	1-481-257-11	INDUCTOR	4.7UH
		< TRANSISTOR >	
Q2808	6-551-815-01	TR UNR52A1G0LS0	
Q4100	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q4101	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
Q4102	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
Q4104	6-551-382-01	TRANSISTOR RSS040P03FD5TB	
Q4105	6-552-024-01	TR RRH070N03TB1	
Q4106	6-552-024-01	TR RRH070N03TB1	
Q4108	6-552-024-01	TR RRH070N03TB1	
Q4111	6-550-851-01	TRANSISTOR RSS050P03TB	
Q4112	6-551-460-01	TRANSISTOR RSR025P03TL	
Q4113	6-552-024-01	TR RRH070N03TB1	
Q4114	6-550-718-01	TRANSISTOR RSR025N03TL	
Q4117	6-551-456-01	TRANSISTOR RTR020P02TL	
Q4118	6-551-815-01	TR UNR52A1G0LS0	
Q4300	6-551-815-01	TR UNR52A1G0LS0	
Q4301	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q4302	6-551-456-01	TRANSISTOR RTR020P02TL	
Q4307	6-551-815-01	TR UNR52A1G0LS0	
Q4600	8-729-122-63	TRANSISTOR 2SA1226-E4	
Q4601	8-729-122-63	TRANSISTOR 2SA1226-E4	

REF.NO.	PART.NO	DESCRIPTION	REMARK
Q4602	8-729-122-63	TRANSISTOR 2SA1226-E4	
Q4603	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q4604	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q4605	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q4606	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q4607	6-551-815-01	TR UNR52A1G0LS0	
Q4700	6-551-776-01	TR 2SC5950G0LS0	
Q4701	6-551-776-01	TR 2SC5950G0LS0	
Q4702	6-551-775-01	TR 2SA2122G0LS0	
Q4703	6-551-775-01	TR 2SA2122G0LS0	
Q4800	6-551-815-01	TR UNR52A1G0LS0	
Q5100	6-551-775-01	TR 2SA2122G0LS0	
Q5101	6-551-775-01	TR 2SA2122G0LS0	
Q5102	6-551-775-01	TR 2SA2122G0LS0	
Q5103	6-551-775-01	TR 2SA2122G0LS0	
Q5104	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
Q5105	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
Q5106	6-551-321-01	TRANSISTOR RT3WLMM-TP-1F	
Q5400	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q5401	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q5500	6-551-776-01	TR 2SC5950G0LS0	
Q5501	6-551-815-01	TR UNR52A1G0LS0	
Q5503	6-551-813-01	TR UNR51A3G0LS0	
Q5504	6-551-824-01	TR UNR51A5G0LS0	
Q5505	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q5506	6-551-775-01	TR 2SA2122G0LS0	
Q5508	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q5509	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q5510	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q7100	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q7101	6-551-690-01	TRANSISTOR RT3N11M-TP-1	
Q7802	6-551-639-01	TRANSISTOR RTR040N03TL	
Q7803	6-551-639-01	TRANSISTOR RTR040N03TL	
Q7804	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q7805	6-550-663-01	TRANSISTOR RSS100N03FD5TB	
Q7806	6-551-456-01	TRANSISTOR RTR020P02TL	
Q7807	6-551-276-01	TRANSISTOR RT1N431C-TP-1	
Q7808	6-551-639-01	TRANSISTOR RTR040N03TL	

< RESISTOR >

REF.NO.	PART.NO	DESCRIPTION			REMARK
R2811	1-218-941-81	METAL CHIP	100	5%	1/16W
R2814	1-218-937-11	METAL CHIP	47	5%	1/16W
R2821	1-218-965-11	METAL CHIP	10K	5%	1/16W
R2838	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R2839	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R2840	1-218-977-11	METAL CHIP	100K	5%	1/16W
R2841	1-218-977-11	METAL CHIP	100K	5%	1/16W
R2842	1-218-973-11	METAL CHIP	47K	5%	1/16W
R2843	1-218-973-11	METAL CHIP	47K	5%	1/16W
R2844	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R2845	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R2846	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R2847	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R2848	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R2849	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R2850	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R2851	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R2852	1-218-941-81	METAL CHIP	100	5%	1/16W
R2853	1-218-941-81	METAL CHIP	100	5%	1/16W
R2881	1-218-990-81	SHORT CHIP	0		
R4000	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R4001	1-218-948-11	METAL CHIP	390	5%	1/16W
R4002	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4003	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4004	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4005	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4020	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4021	1-218-933-11	METAL CHIP	22	5%	1/16W
R4022	1-218-937-11	METAL CHIP	47	5%	1/16W
R4047	1-218-933-11	METAL CHIP	22	5%	1/16W
R4048	1-218-933-11	METAL CHIP	22	5%	1/16W
R4060	1-218-990-81	SHORT CHIP	0		
R4066	1-218-939-11	METAL CHIP	68	5%	1/16W
R4067	1-218-990-81	SHORT CHIP	0		
R4077	1-218-939-11	METAL CHIP	68	5%	1/16W
R4085	1-218-939-11	METAL CHIP	68	5%	1/16W
R4096	1-218-941-81	METAL CHIP	100	5%	1/16W
R4100	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4101	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4102	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4104	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R4105	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4106	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4108	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R4109	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4110	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4113	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4114	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4123	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R4125	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4128	1-218-929-11	METAL CHIP	10	5%	1/16W
R4129	1-218-977-11	METAL CHIP	100K	5%	1/16W
R4131	1-218-929-11	METAL CHIP	10	5%	1/16W
R4133	1-218-929-11	METAL CHIP	10	5%	1/16W
R4134	1-218-929-11	METAL CHIP	10	5%	1/16W
R4137	1-218-929-11	METAL CHIP	10	5%	1/16W
R4139	1-218-929-11	METAL CHIP	10	5%	1/16W
R4149	1-208-935-11	METAL CHIP	100K	0.5%	1/16W
R4155	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4156	1-208-935-11	METAL CHIP	100K	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R4157	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4159	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4162	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R4165	1-208-939-11	METAL CHIP	150K	0.5%	1/16W
R4166	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4168	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4175	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R4179	1-218-929-11	METAL CHIP	10	5%	1/16W
R4180	1-218-977-11	METAL CHIP	100K	5%	1/16W
R4181	1-218-929-11	METAL CHIP	10	5%	1/16W
R4182	1-218-929-11	METAL CHIP	10	5%	1/16W
R4184	1-218-929-11	METAL CHIP	10	5%	1/16W
R4191	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4193	1-208-927-11	METAL CHIP	47K	0.5%	1/16W
R4194	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4195	1-208-721-11	METAL CHIP	39K	0.5%	1/16W
R4196	1-208-905-11	METAL CHIP	5.6K	0.5%	1/16W
R4197	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4198	1-218-953-11	METAL CHIP	1K	5%	1/16W
R4303	1-218-929-11	METAL CHIP	10	5%	1/16W
R4304	1-218-929-11	METAL CHIP	10	5%	1/16W
R4305	1-218-929-11	METAL CHIP	10	5%	1/16W
R4306	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4307	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4308	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4309	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R4310	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R4311	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R4318	1-218-941-81	METAL CHIP	100	5%	1/16W
R4319	1-208-923-11	METAL CHIP	33K	0.5%	1/16W
R4327	1-218-941-81	METAL CHIP	100	5%	1/16W
R4336	1-218-941-81	METAL CHIP	100	5%	1/16W
R4354	1-218-989-11	METAL CHIP	1M	5%	1/16W
R4356	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4360	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4361	1-218-929-11	METAL CHIP	10	5%	1/16W
R4362	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R4363	1-218-953-11	METAL CHIP	1K	5%	1/16W
R4375	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R4380	1-218-941-81	METAL CHIP	100	5%	1/16W
R4383	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4386	1-208-889-11	METAL CHIP	1.2K	0.5%	1/16W
R4388	1-208-889-11	METAL CHIP	1.2K	0.5%	1/16W
R4403	1-218-970-11	METAL CHIP	27K	5%	1/16W
R4404	1-218-953-11	METAL CHIP	1K	5%	1/16W
R4503	1-218-939-11	METAL CHIP	68	5%	1/16W
R4515	1-218-990-81	SHORT CHIP	0		
R4520	1-218-933-11	METAL CHIP	22	5%	1/16W
R4522	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4525	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4527	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4545	1-218-939-11	METAL CHIP	68	5%	1/16W
R4546	1-218-939-11	METAL CHIP	68	5%	1/16W
R4547	1-218-941-81	METAL CHIP	100	5%	1/16W
R4549	1-218-933-11	METAL CHIP	22	5%	1/16W
R4550	1-218-933-11	METAL CHIP	22	5%	1/16W
R4551	1-218-973-11	METAL CHIP	47K	5%	1/16W
R4600	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4601	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4602	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R4603	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R4604	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R4605	1-208-860-81	METAL CHIP	75	0.5%	1/16W
R4606	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4607	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4608	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4609	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R4610	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R4611	1-208-861-81	METAL CHIP	82	0.5%	1/16W
R4618	1-218-947-11	METAL CHIP	330	5%	1/16W
R4619	1-218-929-11	METAL CHIP	10	5%	1/16W
R4620	1-218-947-11	METAL CHIP	330	5%	1/16W
R4621	1-218-929-11	METAL CHIP	10	5%	1/16W
R4622	1-218-947-11	METAL CHIP	330	5%	1/16W
R4623	1-218-929-11	METAL CHIP	10	5%	1/16W
R4628	1-218-947-11	METAL CHIP	330	5%	1/16W
R4629	1-218-947-11	METAL CHIP	330	5%	1/16W
R4630	1-218-947-11	METAL CHIP	330	5%	1/16W
R4631	1-218-947-11	METAL CHIP	330	5%	1/16W
R4641	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4642	1-218-941-81	METAL CHIP	100	5%	1/16W
R4646	1-218-937-11	METAL CHIP	47	5%	1/16W
R4648	1-218-937-11	METAL CHIP	47	5%	1/16W
R4652	1-218-937-11	METAL CHIP	47	5%	1/16W
R4654	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4660	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4662	1-218-938-11	METAL CHIP	56	5%	1/16W
R4684	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4685	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R4692	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R4696	1-218-933-11	METAL CHIP	22	5%	1/16W
R4711	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R4713	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R4714	1-208-885-11	METAL CHIP	820	0.5%	1/16W
R4715	1-208-885-11	METAL CHIP	820	0.5%	1/16W
R4718	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4719	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R4727	1-218-969-11	METAL CHIP	22K	5%	1/16W
R4728	1-218-933-11	METAL CHIP	22	5%	1/16W
R4729	1-218-939-11	METAL CHIP	68	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R4734	1-208-885-11	METAL CHIP	820	0.5%	1/16W
R4800	1-218-937-11	METAL CHIP	47	5%	1/16W
R4801	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4802	1-218-937-11	METAL CHIP	47	5%	1/16W
R4803	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4804	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4805	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4806	1-218-929-11	METAL CHIP	10	5%	1/16W
R4807	1-218-933-11	METAL CHIP	22	5%	1/16W
R4808	1-218-933-11	METAL CHIP	22	5%	1/16W
R4809	1-218-933-11	METAL CHIP	22	5%	1/16W
R4810	1-218-933-11	METAL CHIP	22	5%	1/16W
R4813	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4824	1-218-935-11	METAL CHIP	33	5%	1/16W
R4826	1-218-990-81	SHORT CHIP	0		
R4827	1-218-965-11	METAL CHIP	10K	5%	1/16W
R4830	1-218-933-11	METAL CHIP	22	5%	1/16W
R4831	1-218-933-11	METAL CHIP	22	5%	1/16W
R4837	1-218-990-81	SHORT CHIP	0		
R4852	1-218-990-81	SHORT CHIP	0		
R4900	1-218-937-11	METAL CHIP	47	5%	1/16W
R4901	1-218-937-11	METAL CHIP	47	5%	1/16W
R4902	1-218-937-11	METAL CHIP	47	5%	1/16W
R4903	1-218-937-11	METAL CHIP	47	5%	1/16W
R4904	1-218-937-11	METAL CHIP	47	5%	1/16W
R4905	1-218-937-11	METAL CHIP	47	5%	1/16W
R4906	1-218-937-11	METAL CHIP	47	5%	1/16W
R4907	1-218-937-11	METAL CHIP	47	5%	1/16W
R4908	1-218-933-11	METAL CHIP	22	5%	1/16W
R4909	1-218-933-11	METAL CHIP	22	5%	1/16W
R4910	1-218-933-11	METAL CHIP	22	5%	1/16W
R4911	1-218-933-11	METAL CHIP	22	5%	1/16W
R4912	1-218-933-11	METAL CHIP	22	5%	1/16W
R4913	1-218-933-11	METAL CHIP	22	5%	1/16W
R4914	1-218-933-11	METAL CHIP	22	5%	1/16W
R4915	1-218-933-11	METAL CHIP	22	5%	1/16W
R4916	1-218-933-11	METAL CHIP	22	5%	1/16W
R4917	1-218-933-11	METAL CHIP	22	5%	1/16W
R4918	1-218-933-11	METAL CHIP	22	5%	1/16W
R4919	1-218-933-11	METAL CHIP	22	5%	1/16W
R4920	1-218-933-11	METAL CHIP	22	5%	1/16W
R4921	1-218-933-11	METAL CHIP	22	5%	1/16W
R4922	1-218-933-11	METAL CHIP	22	5%	1/16W
R4923	1-218-933-11	METAL CHIP	22	5%	1/16W
R4924	1-218-933-11	METAL CHIP	22	5%	1/16W
R4925	1-218-933-11	METAL CHIP	22	5%	1/16W
R4926	1-218-933-11	METAL CHIP	22	5%	1/16W
R4927	1-218-933-11	METAL CHIP	22	5%	1/16W
R4928	1-218-933-11	METAL CHIP	22	5%	1/16W
R4929	1-218-933-11	METAL CHIP	22	5%	1/16W
R4930	1-218-937-11	METAL CHIP	47	5%	1/16W
R4931	1-218-937-11	METAL CHIP	47	5%	1/16W
R4932	1-218-937-11	METAL CHIP	47	5%	1/16W
R4933	1-218-937-11	METAL CHIP	47	5%	1/16W
R4934	1-218-937-11	METAL CHIP	47	5%	1/16W
R4935	1-218-937-11	METAL CHIP	47	5%	1/16W
R4936	1-218-937-11	METAL CHIP	47	5%	1/16W
R4937	1-218-937-11	METAL CHIP	47	5%	1/16W
R4940	1-218-933-11	METAL CHIP	22	5%	1/16W
R4941	1-218-933-11	METAL CHIP	22	5%	1/16W
R4942	1-218-933-11	METAL CHIP	22	5%	1/16W
R4943	1-218-933-11	METAL CHIP	22	5%	1/16W
R4944	1-218-933-11	METAL CHIP	22	5%	1/16W
R4945	1-218-933-11	METAL CHIP	22	5%	1/16W
R4946	1-218-933-11	METAL CHIP	22	5%	1/16W
R4947	1-218-933-11	METAL CHIP	22	5%	1/16W
R4948	1-218-941-81	METAL CHIP	100	5%	1/16W
R4949	1-218-941-81	METAL CHIP	100	5%	1/16W
R4950	1-218-933-11	METAL CHIP	22	5%	1/16W
R4951	1-218-933-11	METAL CHIP	22	5%	1/16W
R4952	1-218-933-11	METAL CHIP	22	5%	1/16W
R4953	1-218-933-11	METAL CHIP	22	5%	1/16W
R4954	1-218-933-11	METAL CHIP	22	5%	1/16W
R4955	1-218-933-11	METAL CHIP	22	5%	1/16W
R4956	1-218-933-11	METAL CHIP	22	5%	1/16W
R4957	1-218-933-11	METAL CHIP	22	5%	1/16W
R4958	1-218-937-11	METAL CHIP	47	5%	1/16W
R4959	1-218-937-11	METAL CHIP	47	5%	1/16W
R4960	1-218-937-11	METAL CHIP	47	5%	1/16W
R4961	1-218-937-11	METAL CHIP	47	5%	1/16W
R4962	1-218-933-11	METAL CHIP	22	5%	1/16W
R4963	1-218-933-11	METAL CHIP	22	5%	1/16W
R4964	1-218-933-11	METAL CHIP	22	5%	1/16W
R4965	1-218-933-11	METAL CHIP	22	5%	1/16W
R4966	1-218-990-81	SHORT CHIP	0		
R4967	1-218-933-11	METAL CHIP	22	5%	1/16W
R4968	1-218-933-11	METAL CHIP	22	5%	1/16W
R4969	1-218-933-11	METAL CHIP	22	5%	1/16W
R4970	1-218-933-11	METAL CHIP	22	5%	1/16W
R4971	1-218-933-11	METAL CHIP	22	5%	1/16W
R4972	1-218-933-11	METAL CHIP	22	5%	1/16W
R4973	1-218-933-11	METAL CHIP	22	5%	1/16W
R4974	1-218-937-11	METAL CHIP	47	5%	1/16W
R4975	1-218-937-11	METAL CHIP	47	5%	1/16W
R4976	1-218-937-11	METAL CHIP	47	5%	1/16W
R4977	1-218-937-11	METAL CHIP	47	5%	1/16W
R4979	1-218-933-11	METAL CHIP	22	5%	1/16W
R4980	1-218-933-11	METAL CHIP	22	5%	1/16W
R4981	1-218-933-11	METAL CHIP	22	5%	1/16W
R4982	1-218-933-11	METAL CHIP	22	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R4983	1-218-941-81	METAL CHIP	100	5%	1/16W
R4984	1-218-990-81	SHORT CHIP	0		
R4985	1-218-933-11	METAL CHIP	22	5%	1/16W
R4986	1-218-933-11	METAL CHIP	22	5%	1/16W
R4987	1-218-933-11	METAL CHIP	22	5%	1/16W
R4988	1-218-933-11	METAL CHIP	22	5%	1/16W
R4990	1-218-990-81	SHORT CHIP	0		
R4991	1-218-990-81	SHORT CHIP	0		
R4992	1-218-990-81	SHORT CHIP	0		
R4993	1-218-990-81	SHORT CHIP	0		
R4994	1-218-935-11	METAL CHIP	33	5%	1/16W
R4995	1-218-935-11	METAL CHIP	33	5%	1/16W
R4996	1-218-935-11	METAL CHIP	33	5%	1/16W
R4997	1-218-990-81	SHORT CHIP	0		
R5101	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5103	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5104	1-218-935-11	METAL CHIP	33	5%	1/16W
R5105	1-218-935-11	METAL CHIP	33	5%	1/16W
R5106	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5107	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5108	1-218-941-11	METAL CHIP	100	5%	1/16W
R5109	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5110	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5111	1-218-941-11	METAL CHIP	100	5%	1/16W
R5112	1-208-871-81	METAL CHIP	220	0.5%	1/16W
R5113	1-218-973-11	METAL CHIP	47K	5%	1/16W
R5114	1-218-935-11	METAL CHIP	33	5%	1/16W
R5117	1-218-935-11	METAL CHIP	33	5%	1/16W
R5118	1-218-935-11	METAL CHIP	33	5%	1/16W
R5122	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5123	1-208-687-11	METAL CHIP	1.5K	0.5%	1/16W
R5124	1-218-947-11	METAL CHIP	330	5%	1/16W
R5125	1-218-990-81	SHORT CHIP	0		
R5127	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R5129	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R5132	1-218-947-11	METAL CHIP	330	5%	1/16W
R5133	1-218-947-11	METAL CHIP	330	5%	1/16W
R5135	1-208-675-11	METAL CHIP	470	0.5%	1/16W
R5136	1-218-990-81	SHORT CHIP	0		
R5138	1-220-884-81	METAL CHIP	39	0.5%	1/16W
R5139	1-218-935-11	METAL CHIP	33	5%	1/16W
R5141	1-208-855-81	METAL CHIP	47	0.5%	1/16W
R5144	1-218-958-11	METAL CHIP	2.7K	5%	1/16W
R5145	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5149	1-208-683-11	METAL CHIP	1K	0.5%	1/16W
R5151	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5155	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5156	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5158	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R5161	1-218-951-11	METAL CHIP	680	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R5162	1-218-951-11	METAL CHIP	680	5%	1/16W
R5164	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R5165	1-218-951-11	METAL CHIP	680	5%	1/16W
R5166	1-218-951-11	METAL CHIP	680	5%	1/16W
R5175	1-218-977-11	METAL CHIP	100K	5%	1/16W
R5178	1-218-990-81	SHORT CHIP	0		
R5300	1-218-937-11	METAL CHIP	47	5%	1/16W
R5301	1-218-939-11	METAL CHIP	68	5%	1/16W
R5302	1-218-939-11	METAL CHIP	68	5%	1/16W
R5303	1-218-937-11	METAL CHIP	47	5%	1/16W
R5305	1-218-990-81	SHORT CHIP	0		
R5306	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5308	1-218-937-11	METAL CHIP	47	5%	1/16W
R5310	1-218-933-11	METAL CHIP	22	5%	1/16W
R5311	1-218-933-11	METAL CHIP	22	5%	1/16W
R5316	1-218-990-81	SHORT CHIP	0		
R5317	1-218-990-81	SHORT CHIP	0		
R5318	1-218-935-11	METAL CHIP	33	5%	1/16W
R5319	1-218-937-11	METAL CHIP	47	5%	1/16W
R5321	1-218-937-11	METAL CHIP	47	5%	1/16W
R5322	1-218-937-11	METAL CHIP	47	5%	1/16W
R5325	1-218-933-11	METAL CHIP	22	5%	1/16W
R5345	1-218-941-81	METAL CHIP	100	5%	1/16W
R5403	1-218-969-11	METAL CHIP	22K	5%	1/16W
R5404	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5408	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5409	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R5424	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R5426	1-218-929-11	METAL CHIP	10	5%	1/16W
R5427	1-218-929-11	METAL CHIP	10	5%	1/16W
R5428	1-218-929-11	METAL CHIP	10	5%	1/16W
R5429	1-218-929-11	METAL CHIP	10	5%	1/16W
R5436	1-218-941-81	METAL CHIP	100	5%	1/16W
R5502	1-218-937-11	METAL CHIP	47	5%	1/16W
R5503	1-218-937-11	METAL CHIP	47	5%	1/16W
R5504	1-218-939-11	METAL CHIP	68	5%	1/16W
R5505	1-218-937-11	METAL CHIP	47	5%	1/16W
R5507	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5510	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5511	1-218-977-11	METAL CHIP	100K	5%	1/16W
R5512	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5513	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5514	1-218-990-81	SHORT CHIP	0		
R5516	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5519	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5520	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5524	1-218-941-81	METAL CHIP	100	5%	1/16W
R5526	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5527	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5528	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R5530	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5532	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5534	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5538	1-208-691-11	METAL CHIP	2.2K	0.5%	1/16W
R5545	1-218-990-81	SHORT CHIP	0		
R5552	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5554	1-218-939-11	METAL CHIP	68	5%	1/16W
R5556	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5560	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5566	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5571	1-218-977-11	METAL CHIP	100K	5%	1/16W
R5572	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R5573	1-218-977-11	METAL CHIP	100K	5%	1/16W
R5576	1-218-990-81	SHORT CHIP	0		
R5580	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5582	1-218-937-11	METAL CHIP	47	5%	1/16W
R5601	1-218-941-81	METAL CHIP	100	5%	1/16W
R5603	1-218-973-11	METAL CHIP	47K	5%	1/16W
R5604	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5605	1-218-937-11	METAL CHIP	47	5%	1/16W
R5610	1-218-973-11	METAL CHIP	47K	5%	1/16W
R5611	1-218-977-11	METAL CHIP	100K	5%	1/16W
R5614	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5615	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5616	1-218-953-11	METAL CHIP	1K	5%	1/16W
R5617	1-218-965-11	METAL CHIP	10K	5%	1/16W
R5618	1-218-973-11	METAL CHIP	47K	5%	1/16W
R5620	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7100	1-218-941-81	METAL CHIP	100	5%	1/16W
R7103	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7105	1-218-990-81	SHORT CHIP	0		
R7107	1-218-949-11	METAL CHIP	470	5%	1/16W
R7108	1-218-937-11	METAL CHIP	47	5%	1/16W
R7109	1-218-937-11	METAL CHIP	47	5%	1/16W
R7110	1-220-884-81	METAL CHIP	39	0.5%	1/16W
R7111	1-220-884-81	METAL CHIP	39	0.5%	1/16W
R7112	1-218-949-11	METAL CHIP	470	5%	1/16W
R7113	1-208-688-11	METAL CHIP	1.6K	0.5%	1/16W
R7114	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R7115	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R7120	1-218-990-81	SHORT CHIP	0		
R7200	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7201	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7202	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R7203	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R7204	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R7205	1-218-933-11	METAL CHIP	22	5%	1/16W
R7206	1-218-933-11	METAL CHIP	22	5%	1/16W
R7207	1-218-933-11	METAL CHIP	22	5%	1/16W
R7208	1-218-933-11	METAL CHIP	22	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R7209	1-218-933-11	METAL CHIP	22	5%	1/16W
R7211	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R7213	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7214	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7215	1-208-663-11	METAL CHIP	150	0.5%	1/16W
R7217	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7218	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7219	1-218-929-11	METAL CHIP	10	5%	1/16W
R7220	1-218-929-11	METAL CHIP	10	5%	1/16W
R7300	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7302	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7305	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7306	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7308	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7310	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7312	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7313	1-218-949-11	METAL CHIP	470	5%	1/16W
R7315	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7317	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7319	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7321	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7324	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7325	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7328	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7329	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7330	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7331	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7333	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7334	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7337	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7338	1-218-949-11	METAL CHIP	470	5%	1/16W
R7339	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7341	1-218-949-11	METAL CHIP	470	5%	1/16W
R7342	1-218-990-81	SHORT CHIP	0		
R7408	1-220-180-11	METAL CHIP	620	5%	1/16W
R7409	1-220-174-11	METAL CHIP	200	5%	1/16W
R7410	1-220-174-11	METAL CHIP	200	5%	1/16W
R7411	1-220-174-11	METAL CHIP	200	5%	1/16W
R7412	1-208-866-11	METAL CHIP	130	0.5%	1/16W
R7414	1-218-990-81	SHORT CHIP	0		
R7418	1-218-990-81	SHORT CHIP	0		
R7421	1-218-937-11	METAL CHIP	47	5%	1/16W
R7500	1-218-937-11	METAL CHIP	47	5%	1/16W
R7501	1-218-937-11	METAL CHIP	47	5%	1/16W
R7502	1-218-937-11	METAL CHIP	47	5%	1/16W
R7503	1-218-937-11	METAL CHIP	47	5%	1/16W
R7505	1-218-937-11	METAL CHIP	47	5%	1/16W
R7507	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7509	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7511	1-218-965-11	METAL CHIP	10K	5%	1/16W

REF.NO.	PART.NO	DESCRIPTION			REMARK
R7513	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7516	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7518	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7521	1-218-937-11	METAL CHIP	47	5%	1/16W
R7522	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7527	1-218-937-11	METAL CHIP	47	5%	1/16W
R7528	1-218-937-11	METAL CHIP	47	5%	1/16W
R7530	1-218-937-11	METAL CHIP	47	5%	1/16W
R7531	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7532	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7533	1-218-937-11	METAL CHIP	47	5%	1/16W
R7534	1-218-933-11	METAL CHIP	22	5%	1/16W
R7600	1-218-941-11	METAL CHIP	100	5%	1/16W
R7601	1-218-941-11	METAL CHIP	100	5%	1/16W
R7602	1-218-941-11	METAL CHIP	100	5%	1/16W
R7603	1-218-941-11	METAL CHIP	100	5%	1/16W
R7605	1-208-703-11	METAL CHIP	6.8K	0.5%	1/16W
R7606	1-218-941-81	METAL CHIP	100	5%	1/16W
R7607	1-218-937-11	METAL CHIP	47	5%	1/16W
R7608	1-218-978-11	METAL CHIP	120K	5%	1/16W
R7610	1-218-937-11	METAL CHIP	47	5%	1/16W
R7612	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R7613	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R7615	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R7618	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7619	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R7622	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7624	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7625	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R7628	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7630	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7631	1-218-961-11	METAL CHIP	4.7K	5%	1/16W
R7634	1-218-941-11	METAL CHIP	100	5%	1/16W
R7635	1-218-941-11	METAL CHIP	100	5%	1/16W
R7636	1-218-941-11	METAL CHIP	100	5%	1/16W
R7637	1-218-941-11	METAL CHIP	100	5%	1/16W
R7700	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7712	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7718	1-218-937-11	METAL CHIP	47	5%	1/16W
R7722	1-218-941-81	METAL CHIP	100	5%	1/16W
R7723	1-218-941-81	METAL CHIP	100	5%	1/16W
R7724	1-218-941-81	METAL CHIP	100	5%	1/16W
R7725	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7726	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7727	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7729	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7730	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7731	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7733	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7734	1-218-937-11	METAL CHIP	47	5%	1/16W
R7735	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7736	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7738	1-218-937-11	METAL CHIP	47	5%	1/16W
R7739	1-218-937-11	METAL CHIP	47	5%	1/16W
R7802	1-208-928-11	METAL CHIP	51K	0.5%	1/16W
R7803	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R7806	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7810	1-208-933-11	METAL CHIP	82K	0.5%	1/16W
R7819	1-208-894-81	METAL CHIP	2K	0.5%	1/16W
R7820	1-208-920-81	METAL CHIP	24K	0.5%	1/16W
R7828	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7831	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R7832	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7834	1-208-909-11	METAL CHIP	8.2K	0.5%	1/16W
R7845	1-208-893-11	METAL CHIP	1.8K	0.5%	1/16W
R7846	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7849	1-208-709-11	METAL CHIP	12K	0.5%	1/16W
R7850	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7851	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7852	1-216-791-11	METAL CHIP	3.3	5%	1/10W
R7853	1-208-699-11	METAL CHIP	4.7K	0.5%	1/16W
R7855	1-208-911-11	METAL CHIP	10K	0.5%	1/16W
R7856	1-208-677-11	METAL CHIP	560	0.5%	1/16W
R7859	1-208-695-11	METAL CHIP	3.3K	0.5%	1/16W
R7860	1-218-941-11	METAL CHIP	100	5%	1/16W
R7861	1-208-711-11	METAL CHIP	15K	0.5%	1/16W
R7862	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7864	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7866	1-218-953-11	METAL CHIP	1K	5%	1/16W
R7867	1-218-965-11	METAL CHIP	10K	5%	1/16W
R7876	1-218-947-11	METAL CHIP	330	5%	1/16W

< RESISTOR CHIP >

RB2808	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB2809	1-234-387-21	RES, NETWORK 330	(1005X4)
RB4001	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4002	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4003	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB4004	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB4005	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4006	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4007	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4008	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4009	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4010	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4011	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB4012	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4013	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4014	1-234-371-21	RES, NETWORK 47	(1005X4)

REF.NO.	PART.NO	DESCRIPTION	REMARK
RB4304	1-200-025-21	RES, NETWORK 6.8K	(1005X4)
RB4305	1-200-025-21	RES, NETWORK 6.8K	(1005X4)
RB4306	1-200-025-21	RES, NETWORK 6.8K	(1005X4)
RB4307	1-200-025-21	RES, NETWORK 6.8K	(1005X4)
RB4503	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4504	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4505	1-242-963-21	RES, NETWORK 33	(1005X4)
RB4506	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4507	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4508	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
RB4509	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB4511	1-234-376-11	RES, NETWORK 2.2K	(1005X4)
RB4512	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4514	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4515	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB4516	1-234-380-21	RES, NETWORK 47K	(1005X4)
RB4518	1-242-963-21	RES, NETWORK 33	(1005X4)
RB4604	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4605	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4608	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4610	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4611	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4612	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4613	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4617	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4618	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4701	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4703	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4705	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4706	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4707	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4708	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4709	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4800	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4801	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4802	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4803	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4804	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4805	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4806	1-234-702-11	RES, NETWORK 68	(1005X4)
RB4807	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB4811	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4812	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB4817	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4820	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4821	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4822	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4900	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4901	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4902	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4903	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4904	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4905	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4906	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4907	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4908	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4909	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4910	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4911	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4912	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4913	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4914	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4915	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4916	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4917	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4918	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4919	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4920	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4921	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4922	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4923	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4924	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4925	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4926	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4927	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4928	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4929	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4930	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4931	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4932	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4933	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4934	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4935	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4936	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4937	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4938	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4939	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4940	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4941	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4942	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4943	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4944	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4945	1-234-370-21	RES, NETWORK 22	(1005X4)
RB4946	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4947	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB4948	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB4949	1-234-371-21	RES, NETWORK 47	(1005X4)
RB4950	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4951	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB4952	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)

REF.NO.	PART.NO	DESCRIPTION	REMARK
RB4953	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB5300	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB5301	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5305	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5306	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5307	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5308	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5309	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5310	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5314	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)
RB5315	1-234-400-21	CONDUCTOR, NETWORK	(1005X4)
RB5400	1-234-369-21	RES, NETWORK 10	(1005X4)
RB5401	1-234-369-21	RES, NETWORK 10	(1005X4)
RB5402	1-234-369-21	RES, NETWORK 10	(1005X4)
RB5403	1-234-369-21	RES, NETWORK 10	(1005X4)
RB5404	1-234-369-21	RES, NETWORK 10	(1005X4)
RB5500	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5501	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5503	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB5504	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5505	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5506	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB5507	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB5509	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB5510	1-234-785-21	RES, CHIP NETWORK 100X8	(3816)
RB5511	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5512	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5513	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB5515	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5516	1-234-887-21	RES, CHIP NETWORK 0X8	(3816)
RB5517	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5518	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5519	1-234-371-21	RES, NETWORK 47	(1005X4)
RB5520	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB5523	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB5527	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB5528	1-234-892-21	RES, CHIP NETWORK 33X8	(3816)
RB5529	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB5531	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB5532	1-245-943-21	RES, CHIP NETWORK 68X8	(3816)
RB5533	1-234-370-21	RES, NETWORK 22	(1005X4)
RB5534	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB5535	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB5537	1-234-702-11	RES, NETWORK 68	(1005X4)
RB5538	1-234-370-21	RES, NETWORK 22	(1005X4)
RB7100	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7103	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7104	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7105	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7106	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7200	1-234-370-21	RES, NETWORK 22	(1005X4)
RB7201	1-234-702-11	RES, NETWORK 68	(1005X4)
RB7202	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB7203	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB7300	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7301	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7303	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7304	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7305	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7306	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7400	1-234-377-21	RES, NETWORK 4.7K	(1005X4)
RB7402	1-234-372-11	RES, NETWORK 100	(1005X4)
RB7404	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7500	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7501	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7503	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7504	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7505	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7506	1-234-370-21	RES, NETWORK 22	(1005X4)
RB7507	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7508	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7510	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7511	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB7513	1-234-711-21	RES, CHIP NETWORK 22X8	(3816)
RB7518	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB7519	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7521	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7522	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7523	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7525	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7526	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7600	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7706	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7707	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7709	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7712	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7713	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB7714	1-234-799-21	RES, CHIP NETWORK 10KX8	(3816)
RB7715	1-234-378-21	RES, NETWORK 10K	(1005X4)
RB7716	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7717	1-234-710-21	RES, CHIP NETWORK 47X8	(3816)
RB7718	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7719	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7720	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7721	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7722	1-234-371-21	RES, NETWORK 47	(1005X4)
RB7723	1-234-371-21	RES, NETWORK 47	(1005X4)

REF.NO.	PART.NO	DESCRIPTION	REMARK
		< VARISTOR >	
VD7100	1-804-988-21	VARISTOR, CHIP	(1608)
		< CRYSTAL >	
X4700	1-813-462-11	VIBRATOR, CRYSTAL 24.576MHZ	
X4800	1-814-176-11	QUARTS CRYSTAL OSCILLATOR	
X5100	1-813-985-11	QUARTZ CRYSTAL OSCILLATOR	
X5101	1-813-984-11	OSCILLATOR, CRYSTAL	
X5102	1-814-023-11	QUARTS CRYSTAL UNIT	
X7100	1-814-145-11	QUARTS CRYSTAL UNIT	
X7101	1-813-990-11	QUARTS CRYSTAL 30MHZ	
X7600	1-814-147-11	QUARTZ CRYSTAL OSCILLATOR	

REF.NO.	PART.NO	DESCRIPTION	REMARK

ACCESSORIES AND CONNECTORS

	*1-835-570-11	CONNECTOR ASSY (CN6500(G6)-CN6600(D4))	(40 inches)
	*1-835-714-11	CONNECTOR ASSY, MDF61 (CN6700(D4)-BALANCER)	(40 inches)
	1-835-782-11	LEAD WIRE CONNECTOR (LVDS) (CN5300(FBA)-CN1)	(40 inches)
	*1-910-048-30	CONNECTOR ASSY (XA15P) (CN6150(G6)-CN4002(FBA))	(40 inches)
	*1-910-048-32	CONNECTOR ASSY (XA8P) (CN6154(G6)-CN6702(D4))	(40 inches)
	*1-910-048-37	CONNECTOR ASSY (XA7P/H) (CN6701(D4)-BALANCER)	(40 inches)
	*1-910-049-94	CONNECTOR ASSY (GHDR40P) (CN1301(AE)-H)	(40 inches)
	*1-910-049-95	CONNECTOR ASSY (GHDR20P/XA8P) (CN1002(AE)-CN8001(K2), CN6502(G6)-CN8000(K2))	(40 inches)
	*1-910-051-12	CONNECTOR ASSY (VH8P) (CN8002(K2)-SP)	(40 inches)
	*1-910-051-55	CONNECTOR ASSY (XA12P) (CN6503(G6)-TCON, CN1000(AE))	(40 inches)
	1-835-784-11	LEAD WIRE CONNECTOR (LVDS)	(46 inches)
	*1-910-049-17	CONNECTOR ASSY (GHDR40P) (CN1301(AE)-H)	(46 inches)
	*1-910-049-18	CONNECTOR ASSY (VH8P) (CN8002(K2)-SP)	(46 inches)
	*1-910-050-42	CONNECTOR ASSY (XADRP40P) (PANEL-CB1)	(46 inches)
	*1-910-050-43	CONNECTOR ASSY (XADRP36P) (PANEL-CB1)	(46 inches)
	*1-910-052-17	CONNECTOR ASSY (XA12P/XA10P) (CN6503(G6)-TCON, CN1000(AE), CN6153(G6)-CN6789(GL))	(46 inches)
	*1-835-187-11	CONNECTOR ASSY (CN6505(G6)-CN6003(G7))	(55 inches)
	*1-835-568-11	CONNECTOR ASSY (CN6004(G6)-CN6602(G7))	(55 inches)
	*1-835-569-11	CONNECTOR ASSY (CN6500(G6)-CN6730(GL))	(55 inches)
	1-835-786-11	LEAD WIRE CONNECTOR (LVDS)	(55 inches)
	*1-910-048-67	CONNECTOR ASSY 8P (CN6152(G6)-CN6789(GL))	(55 inches)
	*1-910-048-68	CONNECTOR ASSY 3P (CN6503(G6)-CN1000(AE))	(55 inches)
	*1-910-049-24	CONNECTOR ASSY (VH8P) (CN8002(K2)-SP)	(55 inches)
	*1-910-050-33	CONNECTOR ASSY (XA15P) (CN6150(G6)-CN4002(FBA))	(46/55 inches)
	*1-910-050-44	CONNECTOR ASSY (XADRP40P) (PANEL-CB1)	(55 inches)
	*1-910-050-45	CONNECTOR ASSY (XADRP36P) (PANEL-CB1)	(55 inches)
	*1-910-050-52	CONNECTOR ASSY (GHDR20P/XA8P) (CN6502(G6)-CN8000(K2), CN1002(AE)-CN8001(K2))	(46/55 inches)
	*1-910-051-51	CONNECTOR ASSY (XA12P) (CN6503(G6)-TCON, CN1000(AE))	(55 inches)
	*1-910-052-38	CONNECTOR ASSY (GHDR40P) (CN1301(AE)-H)	(55 inches)
	*4-108-535-12	INSTRUCTION MANUAL (UK) ENGLISH	
	*4-108-535-22	INSTRUCTION MANUAL (AEP) GERMAN/FRENCH/ITALIAN/DUTCH	
	*4-108-535-32	INSTRUCTION MANUAL (AEP) SPANISH/GREEK/PORTUGUESE	
	*4-108-535-42	INSTRUCTION MANUAL (AEP) DANISH/FINNISH/NORWEGIAN/SWEDISH	
	*4-108-535-52	INSTRUCTION MANUAL (AEP) ENGLISH/POLISH/RUSSIAN	
	*4-108-535-62	INSTRUCTION MANUAL (AEP) CZECH/HUNGARIAN/SLOVAK/TURKISH	

REMOTE COMMANDER

	1-480-895-12	REMOTE COMMANDER (RM-ED012)	

English
08IP7100-1
Printed in U.K.
© 2008.09

Sony Corporation
Sony UK
Service Promotions Dept.

9-883-412-02