



SONY

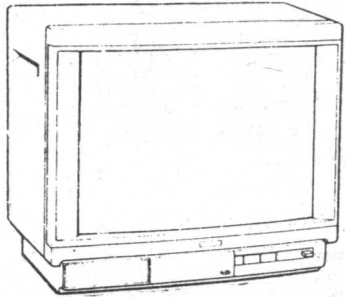

KV-2182MR RM-656A

GP-1 CHASSIS


H	IC901	BX-1398	RMT SENSOR
	D901	SEL551ST	PROG IND

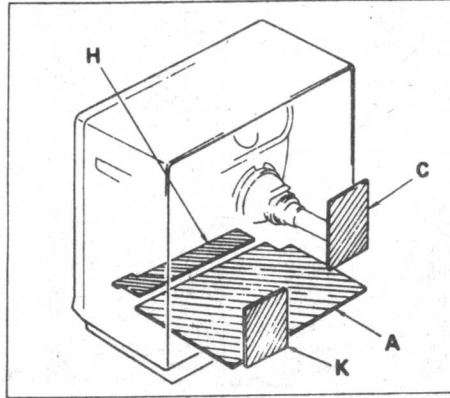

IC001	M50431-521SP	CONTROLLER
002	CXK1004L	MEMORY
003	HZT33-02	33V REG
151	LA7920	BAND SW
201	NJM78L09A	9V REG
202	BA7001	VIDEO SW
203	BA7001	AUDIO SW
251	UPC1241H	AUDIO OUT
300	CXA1001AP	Y CHROMA
400		SECAM DEMO
470		PAL/SECAM SW
501	UPC1377C	H.V OSC
551	UPC1488H	V OUT
601	STR50115B	PWM REG
871	UPC4558C	PIN AMP
Q001	2SA1175	RESET
002	2SC4035P	VC AMP
003	2SD773	5V REG
008	DTA124ES	ST-BY
010	2SA1175	LED DRIVE
011	DTA124ES	BLK-1
012	2SA1175	BLK-2
201	2SC2785	VC FILTER
151	2SC2785	BUFFER
330	2SC2785	ABL

400	2SC2785	SECAM DRIVE
401	2SC2785	R-Y DRIVE
402	2SC2785	B-Y DRIVE
470	2SC2785	DL DRIVE
501	2SC2785	SYNC AMP
504	2SC2785	V SIZE CORRECT
801	2SC2688	H DRIVE
802	2SD1398	H OUT
804	2SC2785	H PULSE
851	2SD1761	12V REG
871	2SD1761	PIN OUT
D001	RD3.9ESL1	RESET
006	RD5.6ESB2	5V REG
010	1SS119	AV SW
011	1SS119	KEY SCAN D1
012	1SS119	KEY SCAN D2
013	1SS119	KEY SCAN D3
014	1SS119	KEY SCAN D4
017	1SS119	12 DISP
018	1SS119	12 PROG
020	RD7.5ESB3	BLK
021	1SS119	BLK-1
022	1SS119	BLK-2
027A	GP08D	BACK UP-2
028	1SS119	VOL
030	1SS119	COL CONT
151	RD5.6ESB2	AGC
201	RD2.0ESB1	MUTE
202	1SS119	9V REG









305	1SS119	ACC
330	1SS119	ABL
339	1SS119	V PULSE
341	1SS119	CLIP
360	1SS119	ABL-1
381	RD7.5ESB3	ABL-2
401	1SS119	TDL
501	1SS119	12V SUPPLY
502	1SS119	V SYNC
503	1SS119	V HOLD
544	1SS133	PROTECT
545	RD10ES	KICK
551	GP08D	V DRIVE
581	GP08D	V PROTECT
601	KBU4JL-6088	LINE RECT
604	GP08D	CHARGE UP
605	RGP15J	155V DAMPER
608	RGP10G	CLAMP 1
607	GP08D	CLAMP 2
608	RGP10G	14V RECT
610	R2M	OVP
801	ERC06-15S	H DAMPER
802	ERD28-08S	PIN DAMPER
811	1SS199	HP PROTECT
851	RGP10G	200V RECT
852	ES1F	MV RECT
853	RGP10G	15V RECT
854	RGP10G	24V RECT
855	RD13ESB2	12V REG
856	GP08D	H CENTER 1
857	GP08D	N CENTER 2

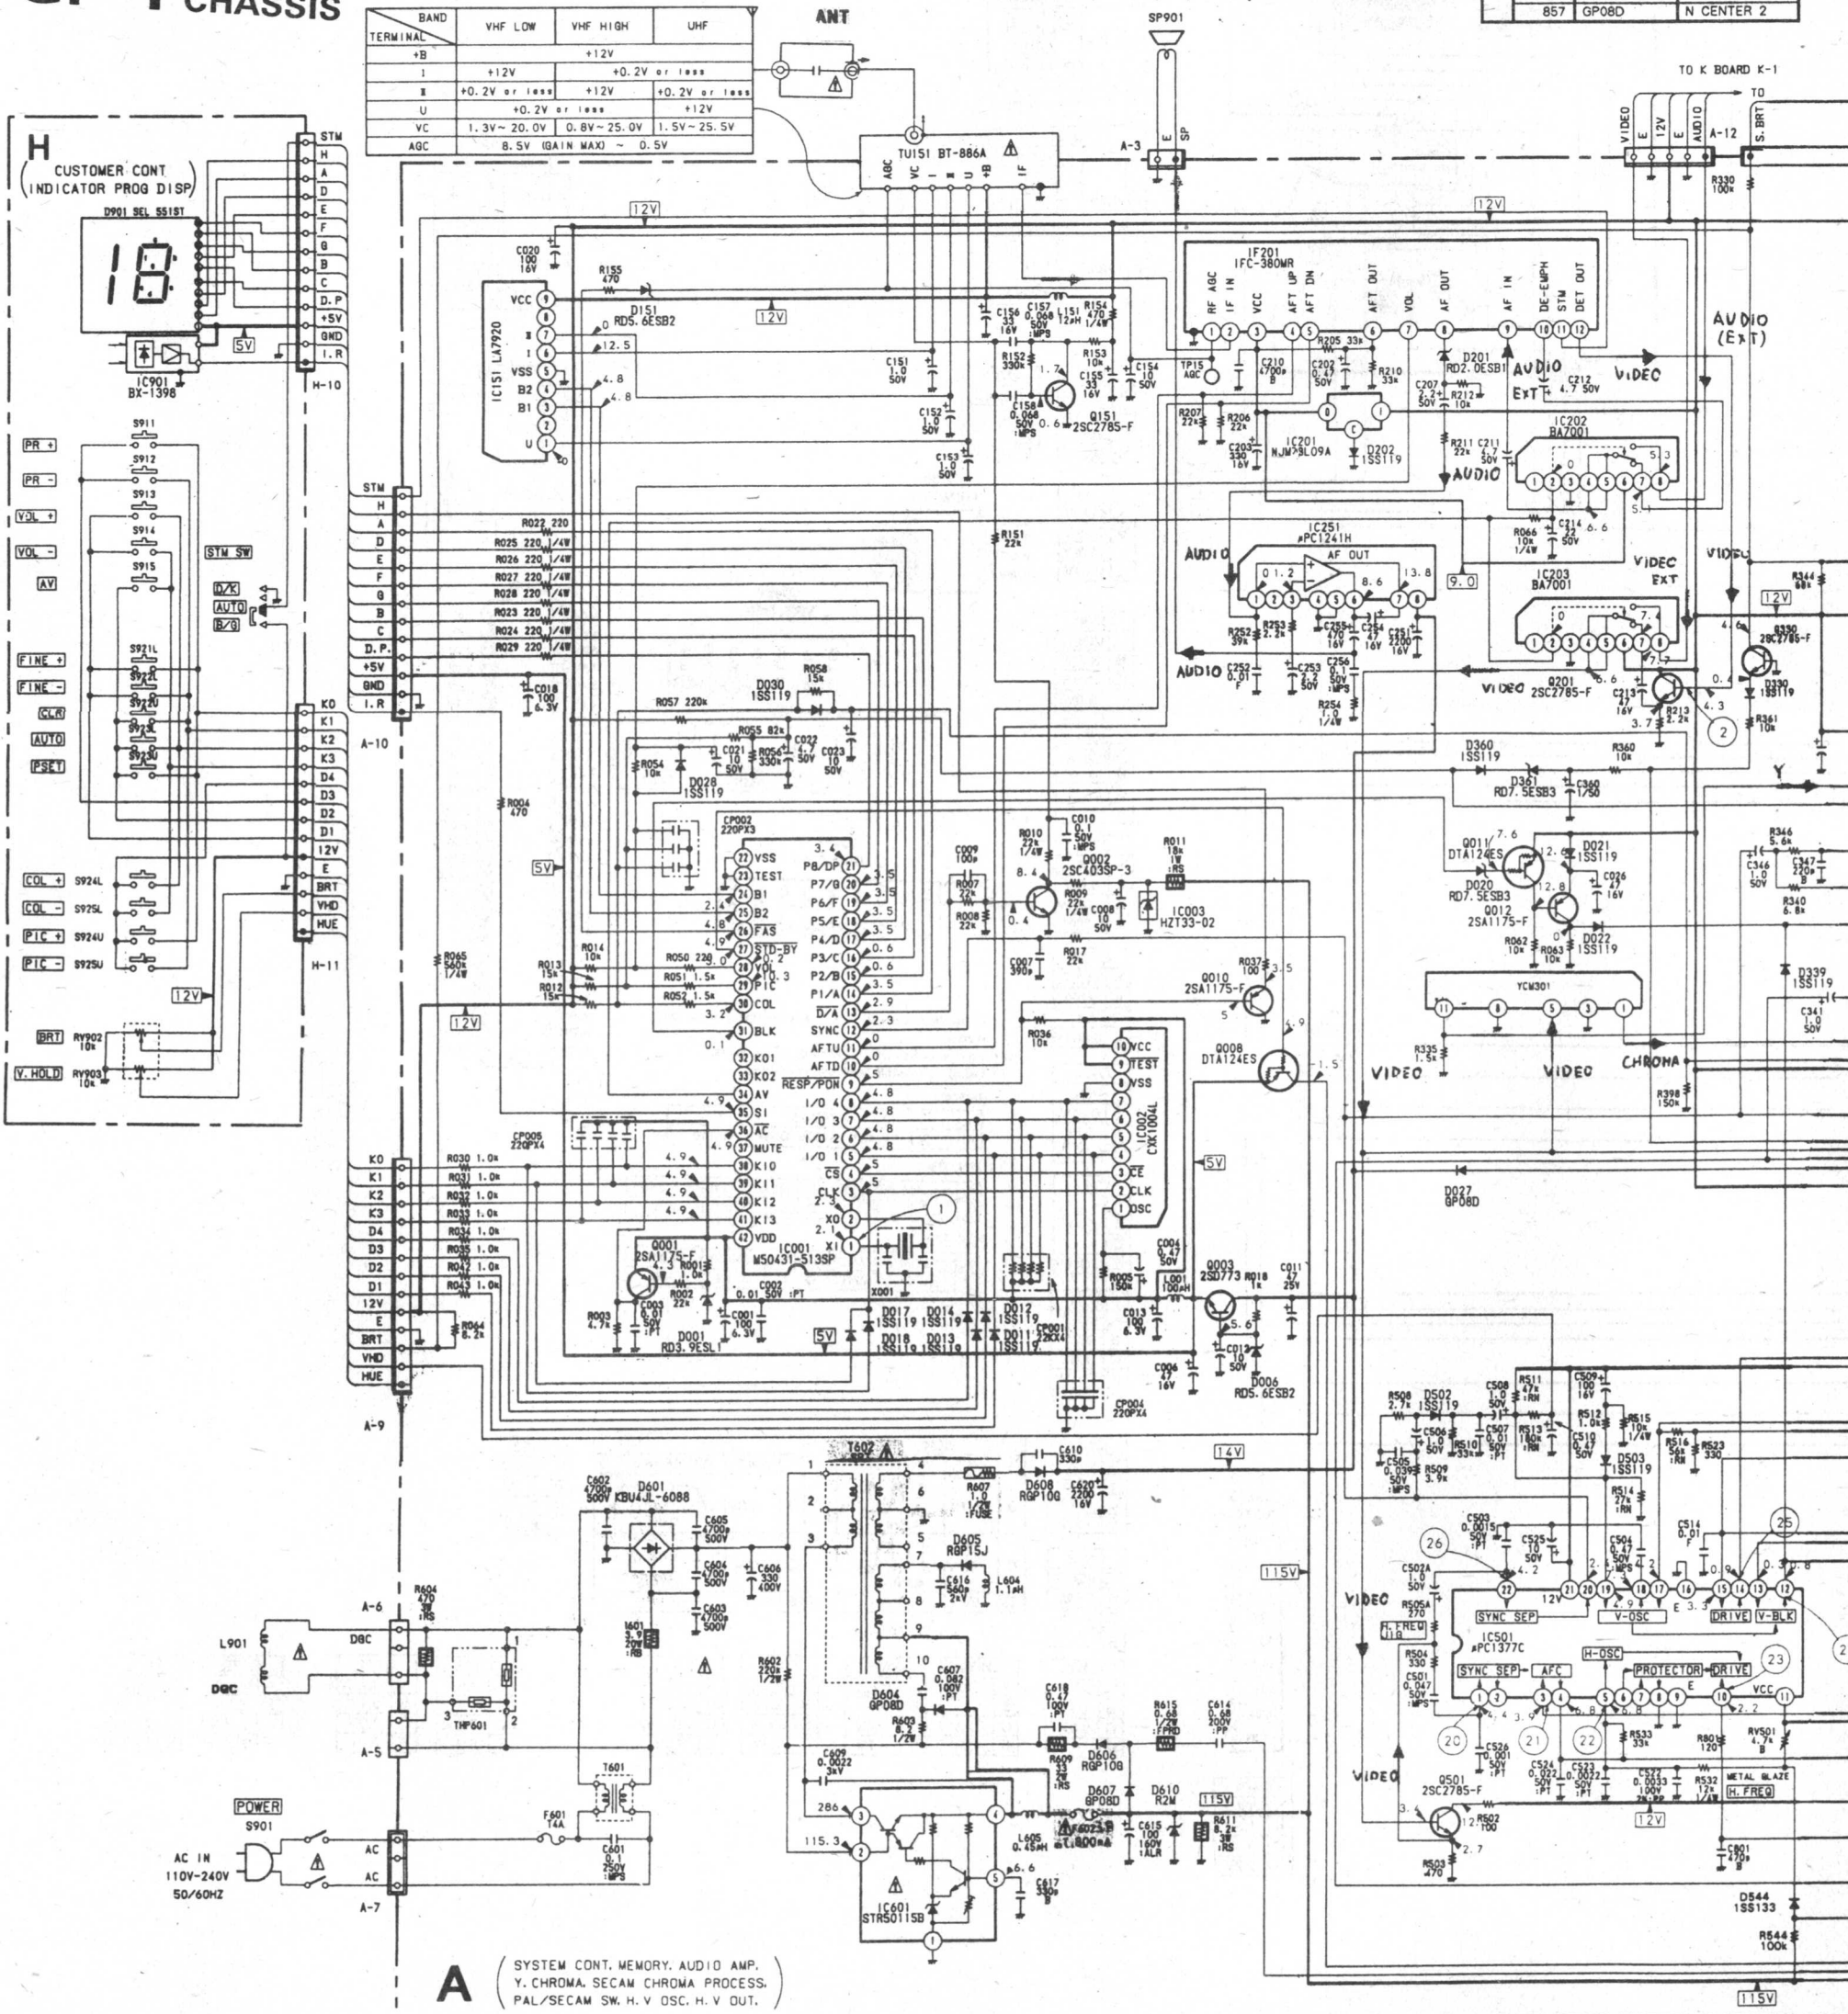

BAND	VHF LOW	VHF HIGH	UHF
TERMINAL			
+B	+12V	+12V	+0.2V or less
I	+0.2V or less	+12V	+0.2V or less
U	+0.2V or less	+12V	+12V
VC	1.3V ~ 20.0V	0.8V ~ 25.0V	1.5V ~ 25.5V
AGC	8.5V (GAIN MAX) ~ 0.5V		

A (SYSTEM CONT. MEMORY. AUDIO AMP. Y. CHROMA. SECAM CHROMA PROCESS. PAL/SECAM SW. H. V OSC. H. V OUT.)

• A BOARD WAVEFORM

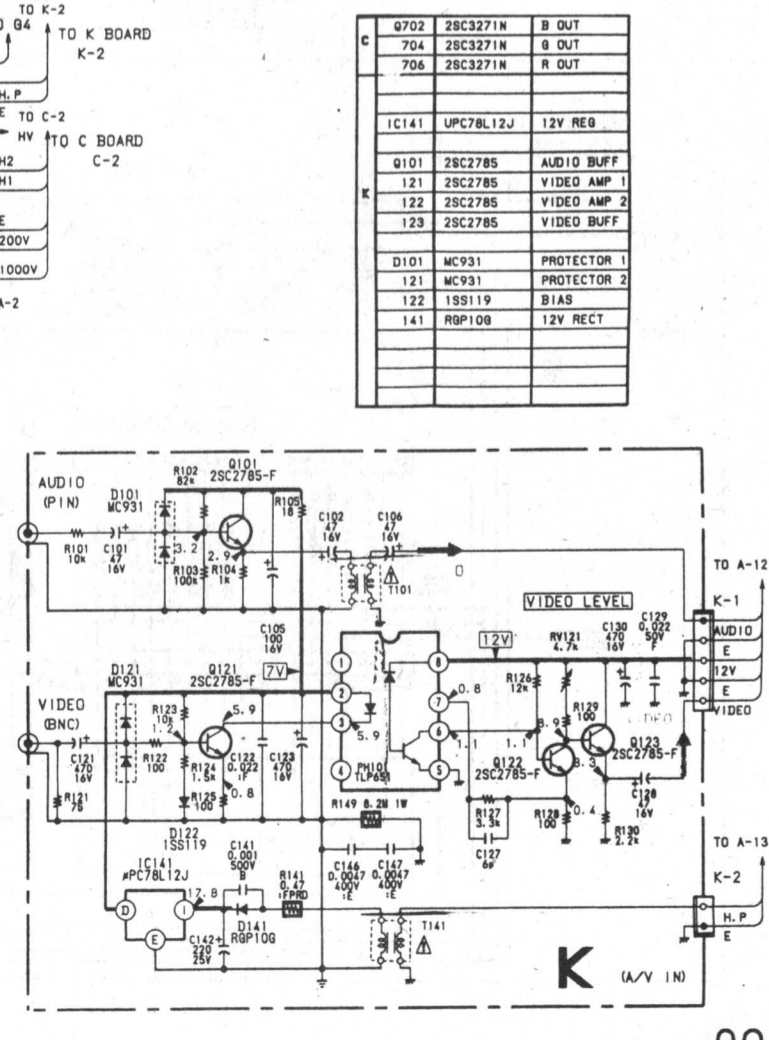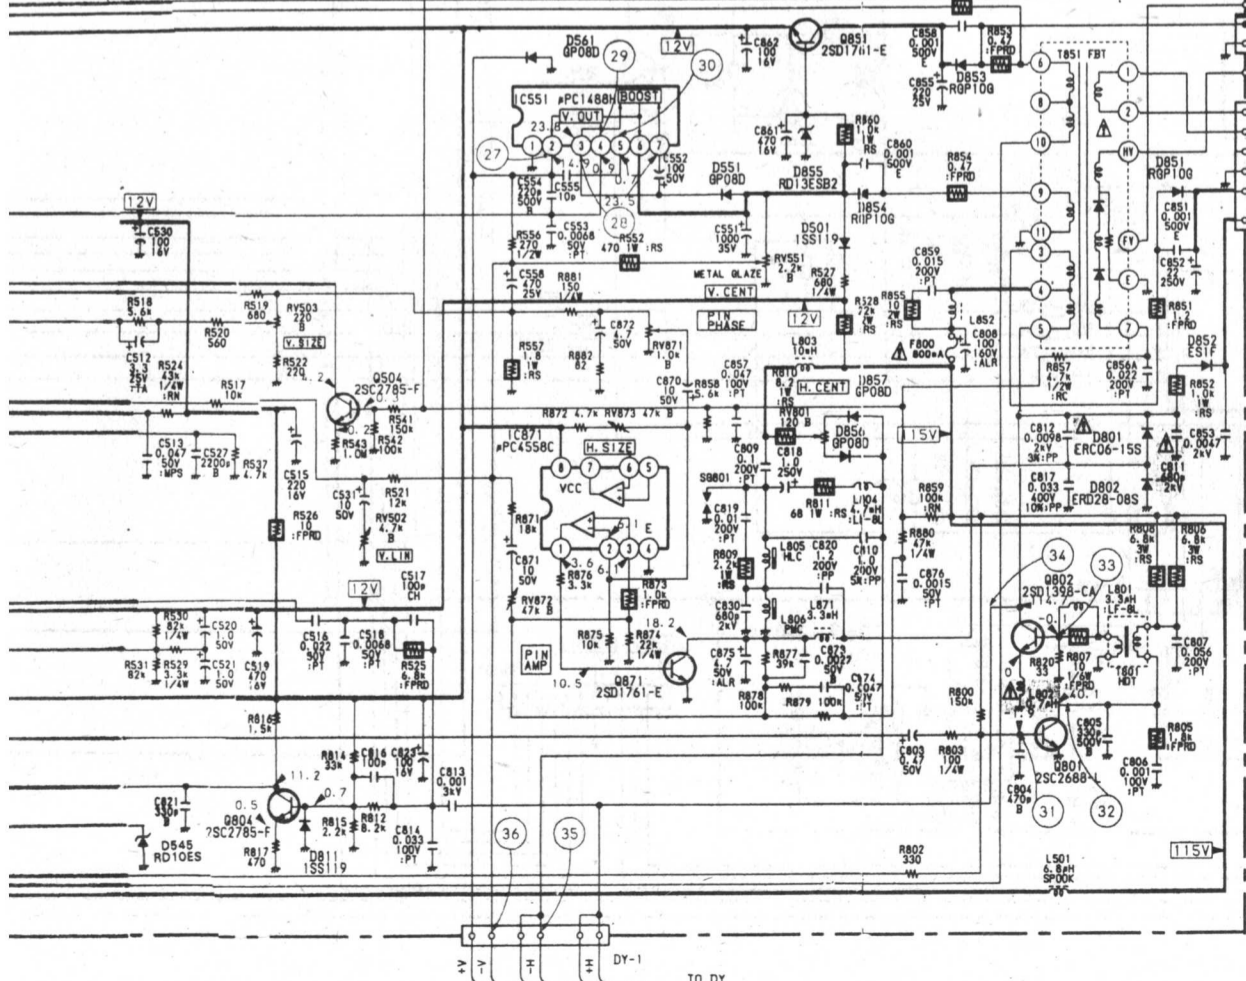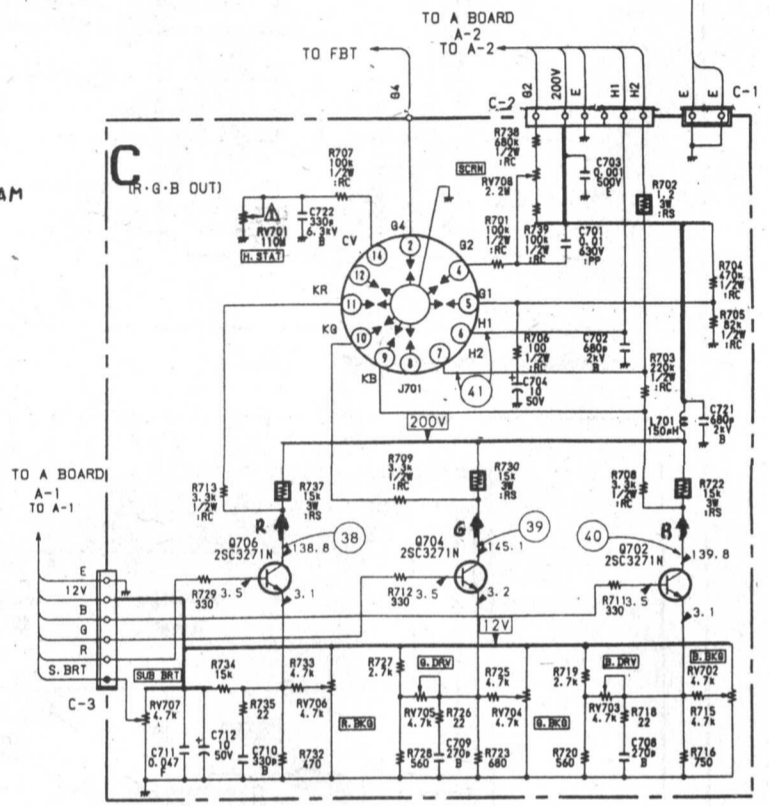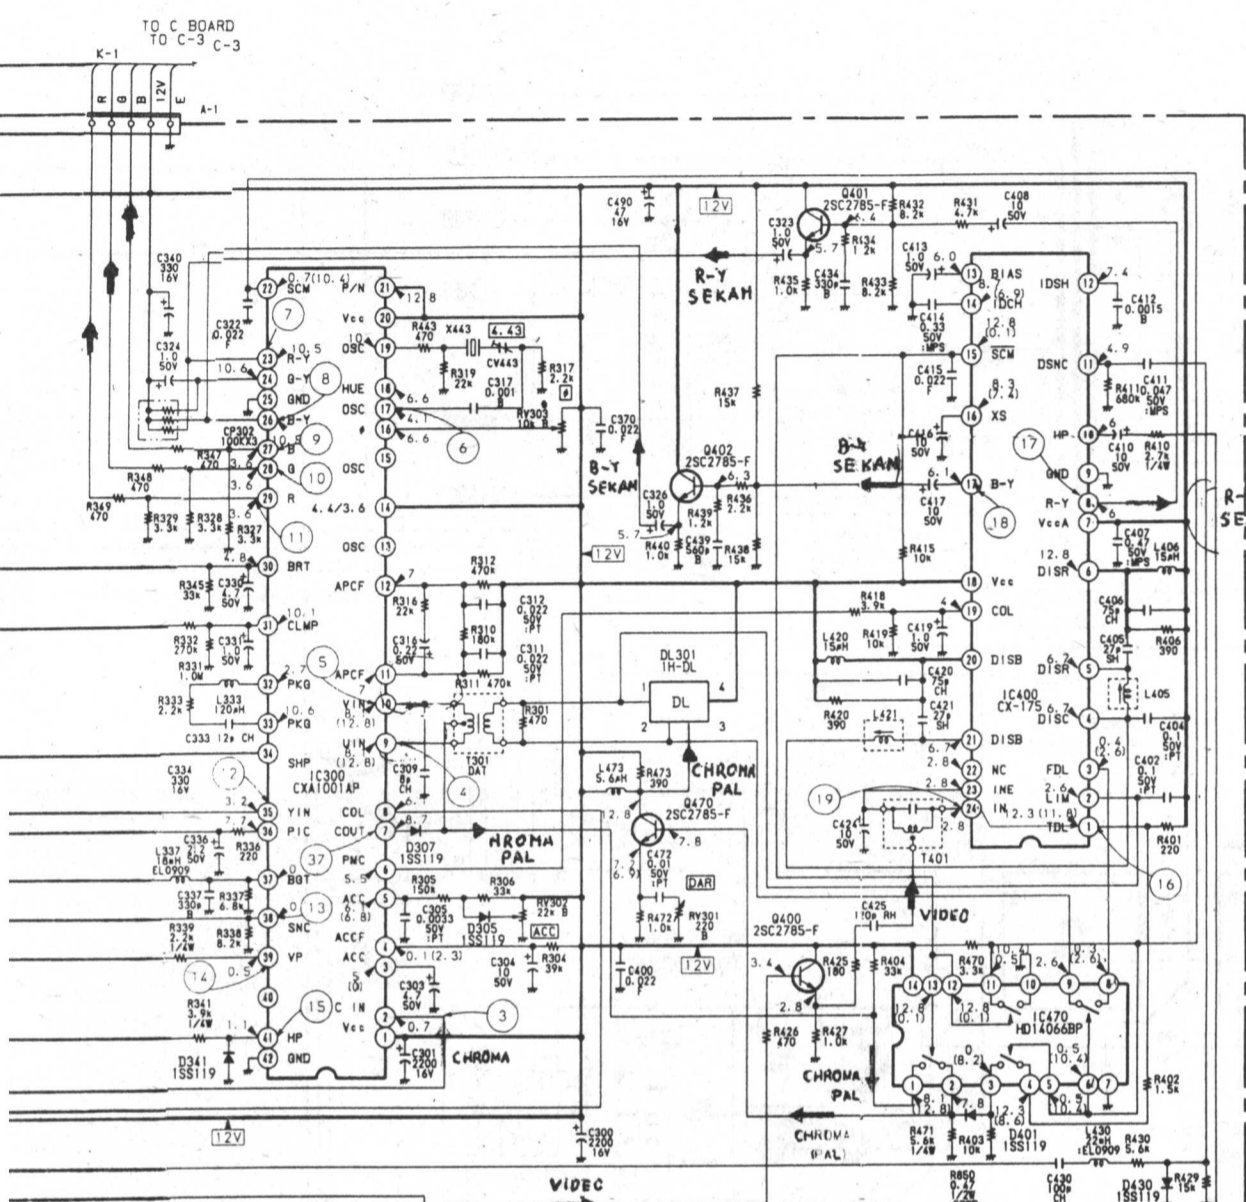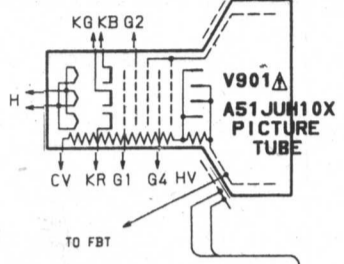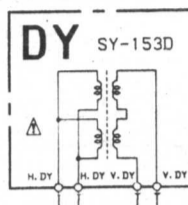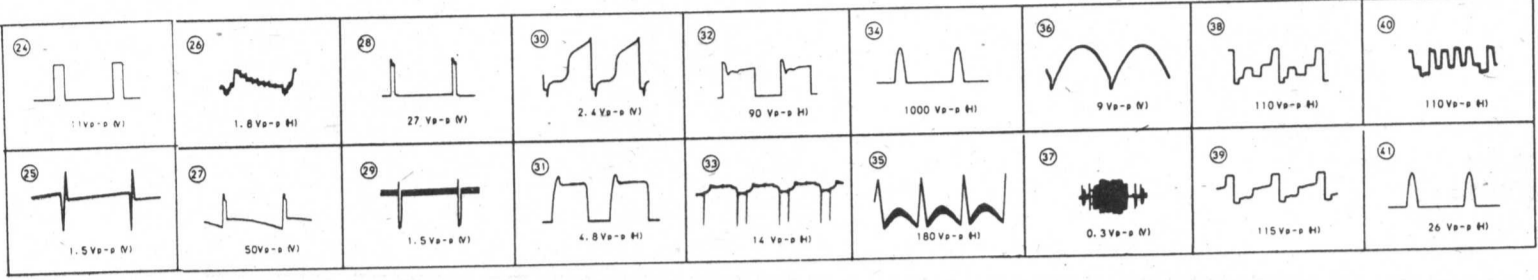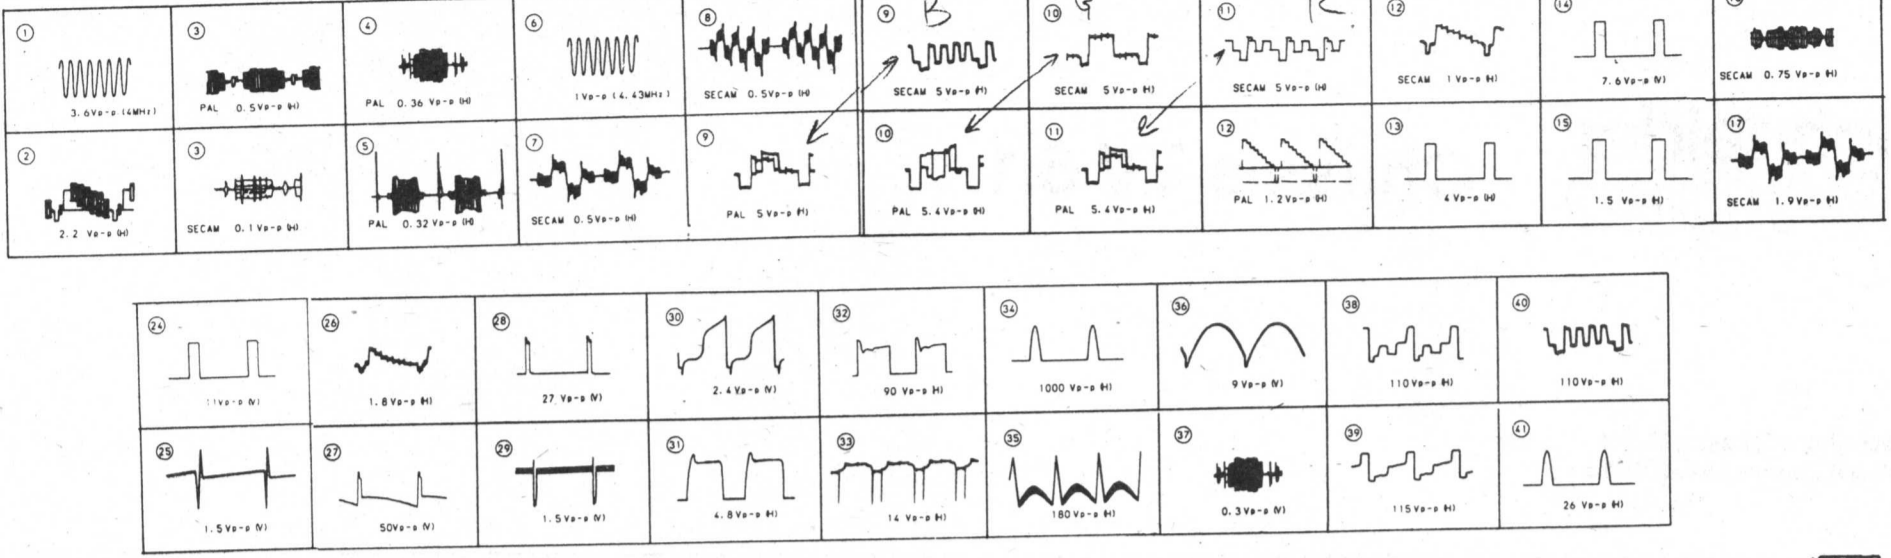

Q702	2SC3271N	B OUT
Q704	2SC3271N	G OUT
Q706	2SC3271N	R OUT
IC141	UPC78L12J	12V REG
Q101	2SC2785	AUDIO BUFF
Q121	2SC2785	VIDEO AMP 1
Q122	2SC2785	VIDEO AMP 2
Q123	2SC2785	VIDEO BUFF
D101	MC931	PROTECTOR 1
D121	MC931	PROTECTOR 2
D122	ISS119	BIAS
D141	RGP108	12V RECT