


CIRCUIT DIAGRAM FOR MC007A/C CHASSIS

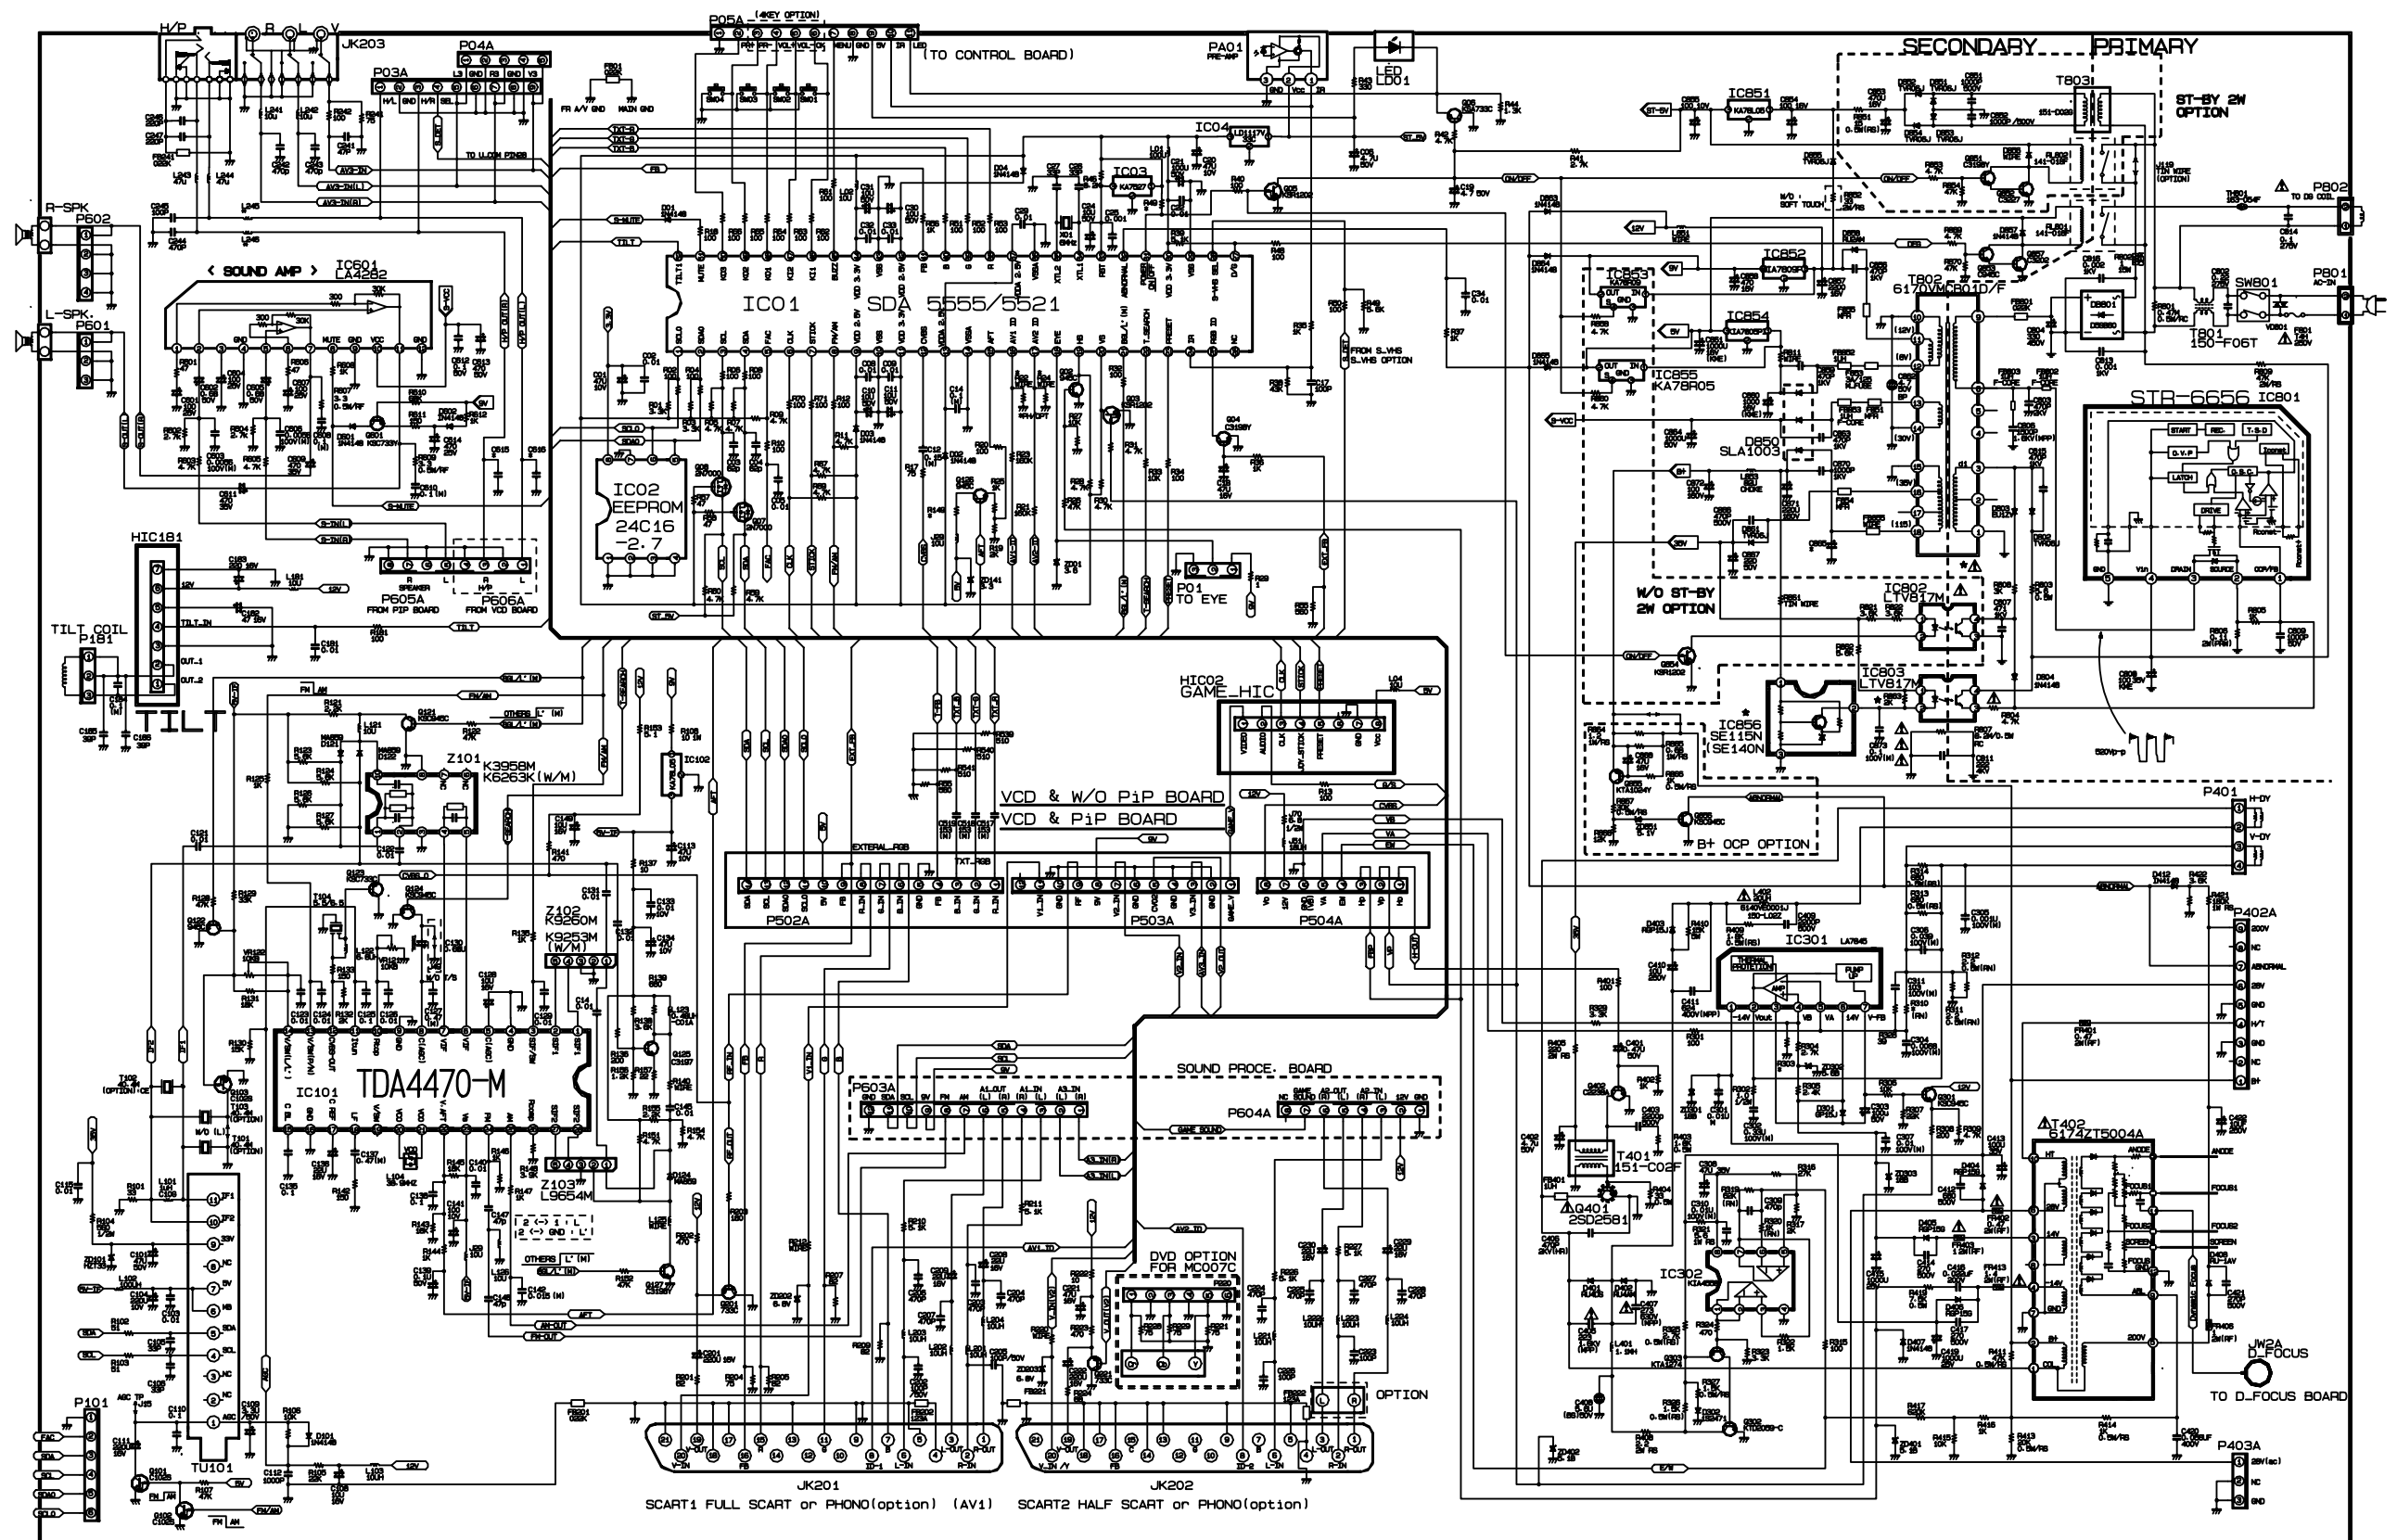

	R329	R303	R304	R310	R311	Z3302	R305	R302	D300
VDP3120B	X	X	2-7K	8-2K	2-2/0.5M	5.6V	2-4K	RUBM	33/2
VDP3120Y	3-3K	2-4K	X	2-7K	4-7/0.5M	X	X	D4L20U	27/2

*INCH TABLE

	T402	FR413	FR402	FR403	FR401	L402	C407	C405	C411
29 INCH FLAT	61742-6004A	1.4 / 2M	1 / 2M	1 / 2M	0.47/2M	6174WE000J5	0.027U/530V	0.028U/560V	0.02U/400V
29 INCH NORMAL	6174W-6003L	1.4 / 2M	1 / 2M	1 / 2M	0.47/2M	152D-1.01D	0.027U/530V	0.018U/560V	0.47U/400V
29 INCH NORMAL	6174W-6003L	1.4 / 2M	1 / 2M	1 / 2M	0.47/2M	152D-1.01D	0.028U/400V	0.02U/560V	0.02U/400V