


Elenberg CD-500DVD

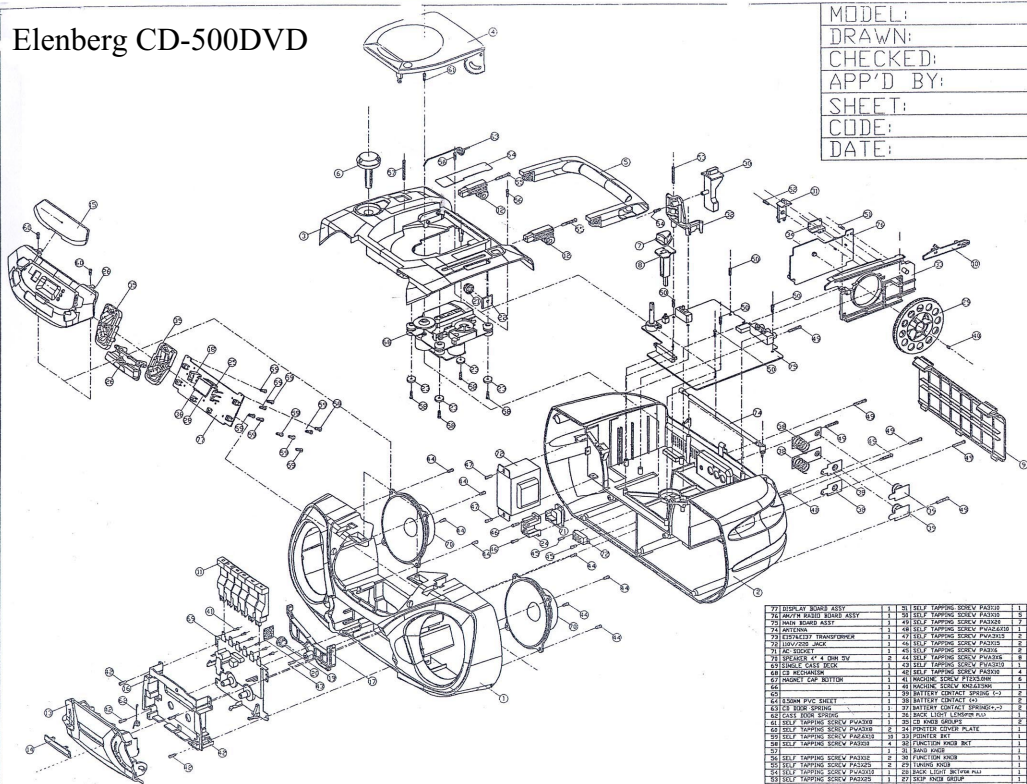

MODEL:
DRAWN:
CHECKED:
APP'D BY:
SHEET:
CODE:
DATE:

72	DISPLAY BOARD ASSY	1	51	SELF TAPPING SCREW P/ASIS	1	52	CLICH BKT	1
76	DRUM RASID BOARD ASSY	1	53	SELF TAPPING SCREW P/ASIS	5	54	AC SOCKET COVER	1
79	MAIN BOARD ASSY	1	55	SELF TAPPING SCREW P/ASIS	7	55	20K VARIOR	1
74	ANTENNA	1	56	SELF TAPPING SCREW P/ASIS	1	56	CD GEAR HALDER	1
75	CONVEXITY TRANSFORMER	1	57	SELF TAPPING SCREW P/ASIS	2	57	SPUR GEAR	1
78	DRUM/220 JACK	1	58	SELF TAPPING SCREW P/ASIS	2	58	CD GEAR HALDER	1
77	AC SOCKET	1	59	SELF TAPPING SCREW P/ASIS	2	59	CLICH-TOOTH GEAR	1
73	SPEAKER AT 4 OHM 2W	2	60	SELF TAPPING SCREW P/ASIS	8	60	REVERSE SENSOR BKT	1
71	SELF CASE BODY	1	61	SELF TAPPING SCREW P/ASIS	1	61	RECORDING BKT	1
80	CD MECHANISM	1	62	SELF TAPPING SCREW P/ASIS	4	62	CASE DIV	1
81	WINDUP CAR BUTTON	1	63	MACHINE SCREW P/ASIS	4	63	DISC LENS	1
64		1	64	MACHINE SCREW P/ASIS	1	64	CASE BODY LENS	1
65		1	65	BATTERY CONTACT SPRING (C-2)	2	65	CASE BODY	1
66		1	66	BATTERY CONTACT (C-3)	2	66	HABLE ROTATE AXIS	2
67		1	67	BATTERY CONTACT SPRING (C-2)	2	67	CASE BODY	1
68		1	68	SPRING LENS (C-2)	2	68	POINTER	1
69		1	69	CD GEAR GROUP	2	69	BATTERY BODY	1
70		1	70	POINTER COVER PLATE	1	70	BACK-BOARD BKT	1
71		1	71	POINTER BKT	1	71	3-RAIL-TOOTH	1
72		1	72	FUNCTION ROVER BKT	1	72	VOLUME-ROVER	1
73		1	73	BRAND GEAR	1	73	HABLE	1
74		1	74	FUNCTION ROVER	2	74	CD BODY	1
75		1	75	SELF TAPPING SCREW P/ASIS	2	75	TOP-CASINET	1
76		1	76	BRAND LENS (C-2)	1	76	FRONT CASINET	1
77		1	77	BRAND LENS (C-2)	1	77	FRONT CASINET	1
78		1	78	BRAND LENS (C-2)	1	78	FRONT CASINET	1
79		1	79	BRAND LENS (C-2)	1	79	FRONT CASINET	1
80		1	80	BRAND LENS (C-2)	1	80	FRONT CASINET	1

DVD 89 物料清单

机型	DVD89		BOM层		功放板(新板)	备注
项次	物料名称	物料规格	用量	单位	位号	
1	贴片电阻 RESISTOR CHIP	0R(0805)	8	PCS	R2.16.20.21.37.111.33.34	
2	贴片电阻 RESISTOR CHIP	10R(0805)	3	PCS	R107.108.194	
3	贴片电阻 RESISTOR CHIP	100R(0805)	14	PCS	R94.91.102.161.59.106.120.116.125.121.63.197.203.82	
4	贴片电阻 RESISTOR CHIP	150R(0805)	2	PCS	R104.36	
5	贴片电阻 RESISTOR CHIP	180R(0805)	2	PCS	R164.165	
6	贴片电阻 RESISTOR CHIP	200R(0805)	2	PCS	R40.41	
7	贴片电阻 RESISTOR CHIP	220R(0805)	4	PCS	R35.200.201.117	
8	贴片电阻 RESISTOR CHIP	330R(0805)	1	PCS	R54.	
9	贴片电阻 RESISTOR CHIP	470R(0805)	2	PCS	R23.24.	
10	贴片电阻 RESISTOR CHIP	560R(0805)	1	PCS	R112.	
11	贴片电阻 RESISTOR CHIP	680R(0805)	3	PCS	R25.26.105.	
12	贴片电阻 RESISTOR CHIP	1K(0805)	16	PCS	R6.11.15.22.51.80.81.83.87.89.99.100.113.174.199.202	
13	贴片电阻 RESISTOR CHIP	1K2(0805)	2	PCS	R48.49	
14	贴片电阻 RESISTOR CHIP	1K5(0805)	4	PCS	R58.60.55.61.	
15	贴片电阻 RESISTOR CHIP	1K8(0805)	1	PCS	R75.	
16	贴片电阻 RESISTOR CHIP	2K2(0805)	2	PCS	R192.193	
17	贴片电阻 RESISTOR CHIP	3K3(0805)	2	PCS	R195.196.	
18	贴片电阻 RESISTOR CHIP	4K7(0805)	10	PCS	R29.114.12.72.73.167.170.176.178.179.	
19	贴片电阻 RESISTOR CHIP	5K6(0805)	2	PCS	R9.93.	
20	贴片电阻 RESISTOR CHIP	6K8(0805)	5	PCS	R27.28.64.90.188.	
21	贴片电阻 RESISTOR CHIP	10K(0805)	28	PCS	R3.4.5.8.13.14.17.18.19.42.45.52.53.71.86.92.109.110.115.123.124.127.128.166.186.190.191.229.	
22	贴片电阻 RESISTOR CHIP	12K(0805)	1	PCS	R74.	
23	贴片电阻 RESISTOR CHIP	15K(0805)	6	PCS	R31.32.95.96.118.119.	
24	贴片电阻 RESISTOR CHIP	18K(0805)	2	PCS	R10.62.	
25	贴片电阻 RESISTOR CHIP	22K(0805)	4	PCS	R68.69.78.79.	
26	贴片电阻 RESISTOR CHIP	47K(0805)	7	PCS	R65.66.67.88.85.46.47.	
27	贴片电阻 RESISTOR CHIP	56K(0805)	2	PCS	R56.57.	
28	贴片电阻 RESISTOR CHIP	100K(0805)	6	PCS	R38.168.169.183.184.187	
29	贴片电阻 RESISTOR CHIP	120K(0805)	2	PCS	R181.182.	
30	贴片电阻 RESISTOR CHIP	150K(0805)	1	PCS	R50.	
31	贴片电阻 RESISTOR CHIP	180K(0805)	2	PCS	R43.44.	
32	贴片电阻 RESISTOR CHIP	220K(0805)	2	PCS	R97.98.	
33	贴片电阻 RESISTOR CHIP	1M(0805)	1	PCS	R7.	
34	贴片电容 CAPACITOR CHIP	15P(0805)	2	PCS	C69.68	
35	贴片电容 CAPACITOR CHIP	27P(0805)	2	PCS	C19.20.	
36	贴片电容 CAPACITOR CHIP	47P(0805)	2	PCS	C43.44.	
37	贴片电容 CAPACITOR CHIP	180P(0805)	5	PCS	C51.52.55.56.78.	
38	贴片电容 CAPACITOR CHIP	200P(0805)	1	PCS	C77	
39	贴片电容 CAPACITOR CHIP	500P(0805)	1	PCS	C96.	

制表:

审核:

第1页共9页2006-12-9

DVD 89 物料清单

机型	DVD89		BOM层		功放板(新板)	备注
项次	物料名称	物料规格	用量	单位	位号	
40	贴片电容 CAPACITOR CHIP	102P(0805)	16	PCS	C24.25.26.29.59.60.61.57.64.76.86 90.91.108.114.115.	
41	贴片电容 CAPACITOR CHIP	152P(0805)	2	PCS	C83.84	
42	贴片电容 CAPACITOR CHIP	332P(0805)	4	PCS	C53.54.79.80.	
43	贴片电容 CAPACITOR CHIP	103P(0805)	3	PCS	C74.110.111.	
44	贴片电容 CAPACITOR CHIP	153P(0805)	2	PCS	C47.48.	
45	贴片电容 CAPACITOR CHIP	203P(0805)	4	PCS	C8.21.65.75.	
46	贴片电容 CAPACITOR CHIP	104P(0805)	17	PCS	C3.4.5.6.13.38.41.42.66.70.71.72.123.124.126.149.150.	
47	贴片电容 CAPACITOR CHIP	473P(0805)	1	PCS	C23	
48	贴片电容 CAPACITOR CHIP	224P(0805)	6	PCS	C45.46.141.142.143.144.	
49	贴片电容 CAPACITOR CHIP	105P(0805)	6	PCS	C11.12.135.136.137.138.	
50	贴片三极管 TRANSISTOR CHIP	9014	19	PCS	Q2.3.4.5.6.7.14.15.16.17.18.20.24.26.29.34.36.37.38.	
51	贴片三极管 TRANSISTOR CHIP	9015	1	PCS	Q33.	
52	贴片三极管 TRANSISTOR CHIP	8550	7	PCS	Q8.12.13.23.28.30.31	
53	贴片三极管 TRANSISTOR CHIP	8050	5	PCS	Q9.10.11.21.22.	
54	色环电阻 RESISTOR	2R2 1/4W	3	PCS	R162.163.198	
55	色环电阻 RESISTOR	10R 1/4W	1	PCS	R103.	
56	色环电阻 RESISTOR	100R 1/4W	1	PCS	R130	
57	色环电阻 RESISTOR	1K 1/4W	2	PCS	R39.122	
58	色环电阻 RESISTOR	2K2 1/8W	1	PCS	R1.	
59	色环电阻 RESISTOR	4K7 1/4W	1	PCS	R30	
60	色环电阻 RESISTOR	5K6 1/4W	2	PCS	R126.129	
61	色环电阻 RESISTOR	10K 1/8W	9	PCS	R70.76.77.84.101.133.145.177.185	
62	色环电阻 RESISTOR	100K 1/8W	2	PCS	R213.136	
63	二极管 DIODE	IN4148	10	PCS	D1.12.15.17.19.20.21.38.39.40.	
64	稳压二极管 ZENER DIODE	5V1	1	PCS	D16.	
65	稳压二极管 ZENER DIODE	5V6	1	PCS	D43.	
66	稳压二极管 ZENER DIODE	8V2	1	PCS	D50	
67	插件三极管 TRANSISTOR INSERTION	8050	1	PCS	Q27	
68	插件三极管 TRANSISTOR INSERTION	B772	1	PCS	Q1	
69	电解电容5*11 ELECT. CAPACITOR	1UF/50V	1	PCS	C28.	
70	电解电容5*11 ELECT. CAPACITOR	4.7UF/50V	3	PCS	C67.81.82.	
71	电解电容5*11 ELECT. CAPACITOR	10UF/50V	10	PCS	C7.9.15.17.22.73.85.125.131.132.	
72	电解电容5*11 ELECT. CAPACITOR	47UF/16V	5	PCS	C37.39.40.49.50.	
73	电解电容5*11 ELECT. CAPACITOR	100UF/16V	3	PCS	C10.14.113.	
74	电解电容 ELECT. CAPACITOR	220UF/16V	5	PCS	C18.30.31.62.63	
75	电解电容 ELECT. CAPACITOR	470UF/16V	3	PCS	C58.147.148.	
76	电解电容 ELECT. CAPACITOR	1000UF/16V	2	PCS	C32.33.	
77	电解电容 ELECT. CAPACITOR	2200UF/16V	1	PCS	C27.	
78	咪哪 MYLAR CAPACITOR	272J	1	PCS	C112	
79	咪哪 MYLAR CAPACITOR	154J	2	PCS	C34.35.	

制表:

审核:

第2页共9页2006-12-9

DVD 89 物料清单

[illegible]

制表：

审核：

第3页共9页2006-12-9

DVD 89 物料清单

机型	DVD89		BOM层		收音板	备注
项次	物料名称	物料规格	用量	单位	位号	
1	电阻1/4W RESISTOR	10 Ω	1	PCS	R1	
2	贴片电阻 RESISTOR CHIP	0 Ω	4	PCS	R2.3.C53.54	
3	贴片电阻 RESISTOR CHIP	10 Ω	5	PCS	R30.31.37.38.43	
4	贴片电阻 RESISTOR CHIP	47 Ω	1	PCS	R17	
5	贴片电阻 RESISTOR CHIP	100 Ω	4	PCS	R7.8.9.10.	
6	贴片电阻 RESISTOR CHIP	220 Ω	2	PCS	R12.33	
7	贴片电阻 RESISTOR CHIP	470R	1	PCS	R55	
8	贴片电阻 RESISTOR CHIP	680 Ω	1	PCS	R18	
9	贴片电阻 RESISTOR CHIP	1K	6	PCS	R4.14.40.42.48.50	
10	贴片电阻 RESISTOR CHIP	1. 2K	1	PCS	R34	
11	贴片电阻 RESISTOR CHIP	2. 2K	3	PCS	R20.22.23	
12	贴片电阻 RESISTOR CHIP	2. 7K	1	PCS	R19	
13	贴片电阻 RESISTOR CHIP	3. 3K	1	PCS	R32	
14	贴片电阻 RESISTOR CHIP	4. 7K	3	PCS	R11.45.54	
15	贴片电阻 RESISTOR CHIP	10K	8	PCS	R6.13.15.24.28.47.49.46	
16	贴片电阻 RESISTOR CHIP	22K	1	PCS	R53	
17	贴片电阻 RESISTOR CHIP	33K	2	PCS	R21.26	
18	贴片电阻 RESISTOR CHIP	47K	1	PCS	R57	
19	贴片电阻 RESISTOR CHIP	56K	2	PCS	R29.41	
20	贴片电阻 RESISTOR CHIP	100K	5	PCS	R16.25.36.39.56	
21	贴片电阻 RESISTOR CHIP	150K	1	PCS	R27	
22	贴片电阻 RESISTOR CHIP	220K	1	PCS	R35	
23	二极管 DIODE	4148	5	PCS	D5.6.8.9.10	
24	稳压二极管 ZENER DIODE	5. 6V	1	PCS	D7	
25	变容二极管 VARIABLE CAPACITANE DIODE	I321-3D	2	PCS	D1.2	
26	变容二极管 VARIABLE CAPACITANE DIODE	I201	2	PCS	D3.4	
27	贴片三极管 TRANSISTOR CHIP	9014	4	PCS	Q1.4.6.7	
28	贴片三极管 TRANSISTOR CHIP	9018	2	PCS	Q2.5	
29	贴片三极管 TRANSISTOR CHIP	8050	1	PCS	Q3	
30	SDIP IC SDIP INTERGRATED CIRCUIT	LA1823	1	PCS	U1	
31	SDIP IC SDIP INTERGRATED CIRCUIT	LC72131	1	PCS	U2	
32	贴片电容0805 CAPACITOR CHIP	22P	1	PCS	C34	
33	贴片电容0805 CAPACITOR CHIP	30P	2	PCS	C32.33	
34	贴片电容0805 CAPACITOR CHIP	470P	1	PCS	C36	
35	贴片电容0805 CAPACITOR CHIP	3P	3	PCS	C35.42.44	
37	贴片电容0805 CAPACITOR CHIP	102P	11	PCS	C63.64.69.70.72.43.45.52.59.50.	
38	贴片电容0805 CAPACITOR CHIP	100P	4	PCS	C24.25.26.60	
39	贴片电容0805 CAPACITOR CHIP	5P	1	PCS	C47	
40	贴片电容0805 CAPACITOR CHIP	103	7	PCS	C28.29.30.37.38.41.65	
41	贴片电容0805 CAPACITOR CHIP	203	2	PCS	C31.23	
42	贴片电容0805 CAPACITOR CHIP	223	3	PCS	C39.61.62	
43	贴片电容0805 CAPACITOR CHIP	104	8	PCS	C22.27.48.49.57.67.73.	

制表：

审核：

第4页共9页2006-12-9

DVD 89 物料清单

机型	DVD89		BOM层		收音板	备注
项次	物料名称	物料规格	用量	单位	位号	
44	贴片电容0805 CAPACITOR CHIP	105	2	PCS	C66.71	
45	贴片电容0805 CAPACITOR CHIP	224	2	PCS	C55.56	
46	电解电容5*11 ELECT. CAPACITOR	3.3 μ F/50V	2	PCS	C5.9	
47	电解电容5*11 ELECT. CAPACITOR	4.7 μ F/50V	2	PCS	C6.10	
48	电解电容5*11 ELECT. CAPACITOR	10 μ F/50V	4	PCS	C8.11.L3.4	
49	电解电容5*11 ELECT. CAPACITOR	47 μ F/16V	1	PCS	C68	
50	电解电容5*11 ELECT. CAPACITOR	100 μ F/16V	5	PCS	C1.3.4.7.12	
51	电解电容6*12 ELECT. CAPACITOR	220 μ F/16V	1	PCS	C2	
52	微调电容 TRIMMER CAPACITOR	20P	1	PCS	TC1	两脚
53	滤波器 CERAMIC FILTER	10.7	1	PCS	CF4 (TDK料)	两脚
54	滤波器 CERAMIC FILTER	10.7	2	PCS	CF2.F3 (TDK料)	三脚
55	滤波器 CERAMIC FILTER	450B	1	PCS	CF1	三脚
56	高通滤波器	64-108	1	PCS	CF5	
57	晶振 CRYSTAL	4.5M	1	PCS	TC1	两脚
58	磁珠电感 CHOKO COIL	10uHz	1	PCS	L5	
59	电感线圈 CHOKO COIL	0.7*5*3 1/2	1	PCS	L1	
60	电感线圈 CHOKO COIL	0.7*5*5 1/2	1	PCS	L2	
61	红周 I. F. T. RED	WG1007(红)	1	PCS	T2 (89A)	
62	黄周 I. F. T. YELLOW	721	1	PCS	T1	
63	AM天线 AM LOOP ANTENNA	70:15(M3线)	1	PCS	T3	
64	磁棒 FERRITE BAR	10*60	1	PCS		
65	磁棒支架 BAR HOLDER		2	PCS		圆形
66	铁线 JUMPER CABLE		19	PCS		
67	插座 CONNECTOR SOCKET	4P 2.0距	1	PCS	CN2	直插
68	插座 CONNECTOR SOCKET	9P 2.0距	1	PCS	CN1	直插
69	咪VOL MIC VOLUME CONTROL	10K	2	PCS	VR1.2	J-777
70	咪插座 MIC SOCKET	6.3mm 咪插座	2	PCS		J-777
71	海棉 SPONE	10*10*10	2	PCS		
机型	DVD89		BOM层		电源板	备注
项次	物料名称	物料规格	用量	单位	位号	
1	贴片电阻0805 RESISTOR CHIP	100R	1	PCS	R16	
2	贴片电容1206 RESISTOR CHIP	203P	4	PCS	C34.35.36.37	
3	贴片电容0805 CAPACITOR CHIP	104P	3	PCS	C30.43.44	
4	二极管 DIODE	IN5401	4	PCS	D15.16.17.18	
5	二极管 DIODE	IN5822	1	PCS	D21	
6	电解电容 ELECT. CAPACITOR	1000UF/16V	1	PCS	C41	
7	电解电容 ELECT. CAPACITOR	3300 μ F/25V	1	PCS	C29.	
8	IC INTERGRATED CIRCUIT	LM2576	1	PCS	IC1	
9	电感 CHOKO COIL	220UH	1	PCS	L9	环形电感
10	插座 CONNECTOR SOCKET	2P 2.5距	2	PCS	CN7.8	直插
11	插座 CONNECTOR SOCKET	5P 2.5距	1	PCS	CN9	直插
12	插件电阻 RESISTOR INSERTION	10K	1	PCS	R15	
13	跳线 JUMPER CABLE		1	PCS		
14	散热片 HEATSINK		1	PCS	LM2576	

制表:

审核:

第5页共9页2006-12-9

DVD 89 物料清单

[illegible]

制表：

审核：

第6页共9页2006-12-9

DVD 89 物料清单

五金线材

机型	DVD89		BOM层		五金线材	备注
项次	物料名称	物料规格	用量	单位	位 号	
29	DVD板 DVD BOARD	8202S	1	PCS		MPEG-4
30	DVD机芯 DVD MECHANISM		1	PCS	三洋、波珠头	
31	卡式机芯 TAPE DECK MECHANISM		1	PCS		全电控
32	喇叭 SPEAKER UNIT	4寸 4 Ω 60磁	1	对	5W泡边带耳仔	
33	火牛 POWER TRANSFORMER	57*28	1	PCS		
34	FM天线 FM WIRE ANTENNA	6158 5节	1	PCS		
35	喇叭网 SPEAKER GRILL		1	对		
36	电池片 BATTERY CONTACT PLATE	(视底壳不同)	1	套	(连片*2、正片*1、负片*1)	
37	CD门弹弓 CD DOOR SPRING		1	PCS		
38	卡门弹弓 CASSETTE DOOR SPRING		1	PCS		
39	FM天线焊片 ANTENNA CONNECTOR		1	PCS		
40	AC插 AC JACK		1	PCS		
41	纸介子 FIBER SPACER	3*6*0.5	2	PCS	螺丝柱	
42	纸介子 FIBER SPACER	3*8*1	2	PCS	功放772上面, 电源板D882	
43	CD门锁 CD DOOR LOCK		1	PCS		
44	叶片开关 LEAVE SWITCH		1	PCS		
45	DVD机芯防尘盖 MECHANISM DUST. COVER		1	PCS		DVD专用
46	DVD机芯减振胶 MECHANISM SHOCK ABSORBANT		1	套		
47	PCB		1	套		89专用
48	镙丝 SCREW	PWA2*12	1	PCS	叶片开关*1	
49	镙丝 (黑色) SCREW (BLACK)	PWA2.6*10	1	PCS	FM天线*1	
50	镙丝 SCREW	PWA2.6*12	4	PCS	DVD机芯*4	
51	镙丝 SCREW	PA3*8	23	PCS	LCD支架*4、收音板*3、邦定板*2、按键板*8、解码板*4、AV板*2	
52	镙丝 SCREW	PA3*12	2	PCS	AC插*2	
53	镙丝 SCREW	PWA3*10	8	PCS	喇叭*8	
54	镙丝 SCREW	PWA3*8	1	PCS	CD门阻力轮*1、	
55	镙丝 SCREW	PM3*8	2	PCS	B772*1、功放IC*1	
56	镙丝 SCREW	PA3*6	1	PCS	L2576*1	
57	镙丝 SCREW	PA3*10	10	PCS	下式机芯*4、电源板*2、功放板*4	
	镙丝 SCREW	BA3*10	2	PCS	收音支架*2	
58	镙丝 (黑色) SCREW (BLACK)	PA3*10	4	PCS	输出插座2、顶壳2	
	镙丝 (黑色) SCREW (BLACK)	PA3*12	1	PCS	顶壳1	
59	镙丝 SCREW	PWA3*15	2	PCS	火牛2	
60	镙丝 SCREW	PA3*20	7	PCS	底面壳	
61	镙丝 SCREW	PA3*25	2	PCS	手挽	
62	单支线 SINGLE CABLE	80mm 24#	1	PCS	FM天线	
63	单支线 SINGLE CABLE	120mm 22#	1	PCS	电源至AC线	
64	单支线 SINGLE CABLE	2P*70MM 26#	1	PCS	卡式机芯开关线	
65	2P/2.0	170mm 28#	1	PCS	抹音线	
66	2P/2.5	160mm 22#	1	PCS	马达线	
67	7P/2.0	50MM 28#	1	PCS	灰排线	
68	5P/2.0	160mm	1	PCS	叶片开关线	

制表:

审核:

第7页共9页2006-12-9

DVD 89 物料清单

塑胶

[illegible]

制表：

审核:

第9页共9页2006-12-9

6

5

4

3

2

1

REVISION RECORD			
LTR	ECO NO.	APPROVED	DATE

D

D

C


C

B


B

A

A

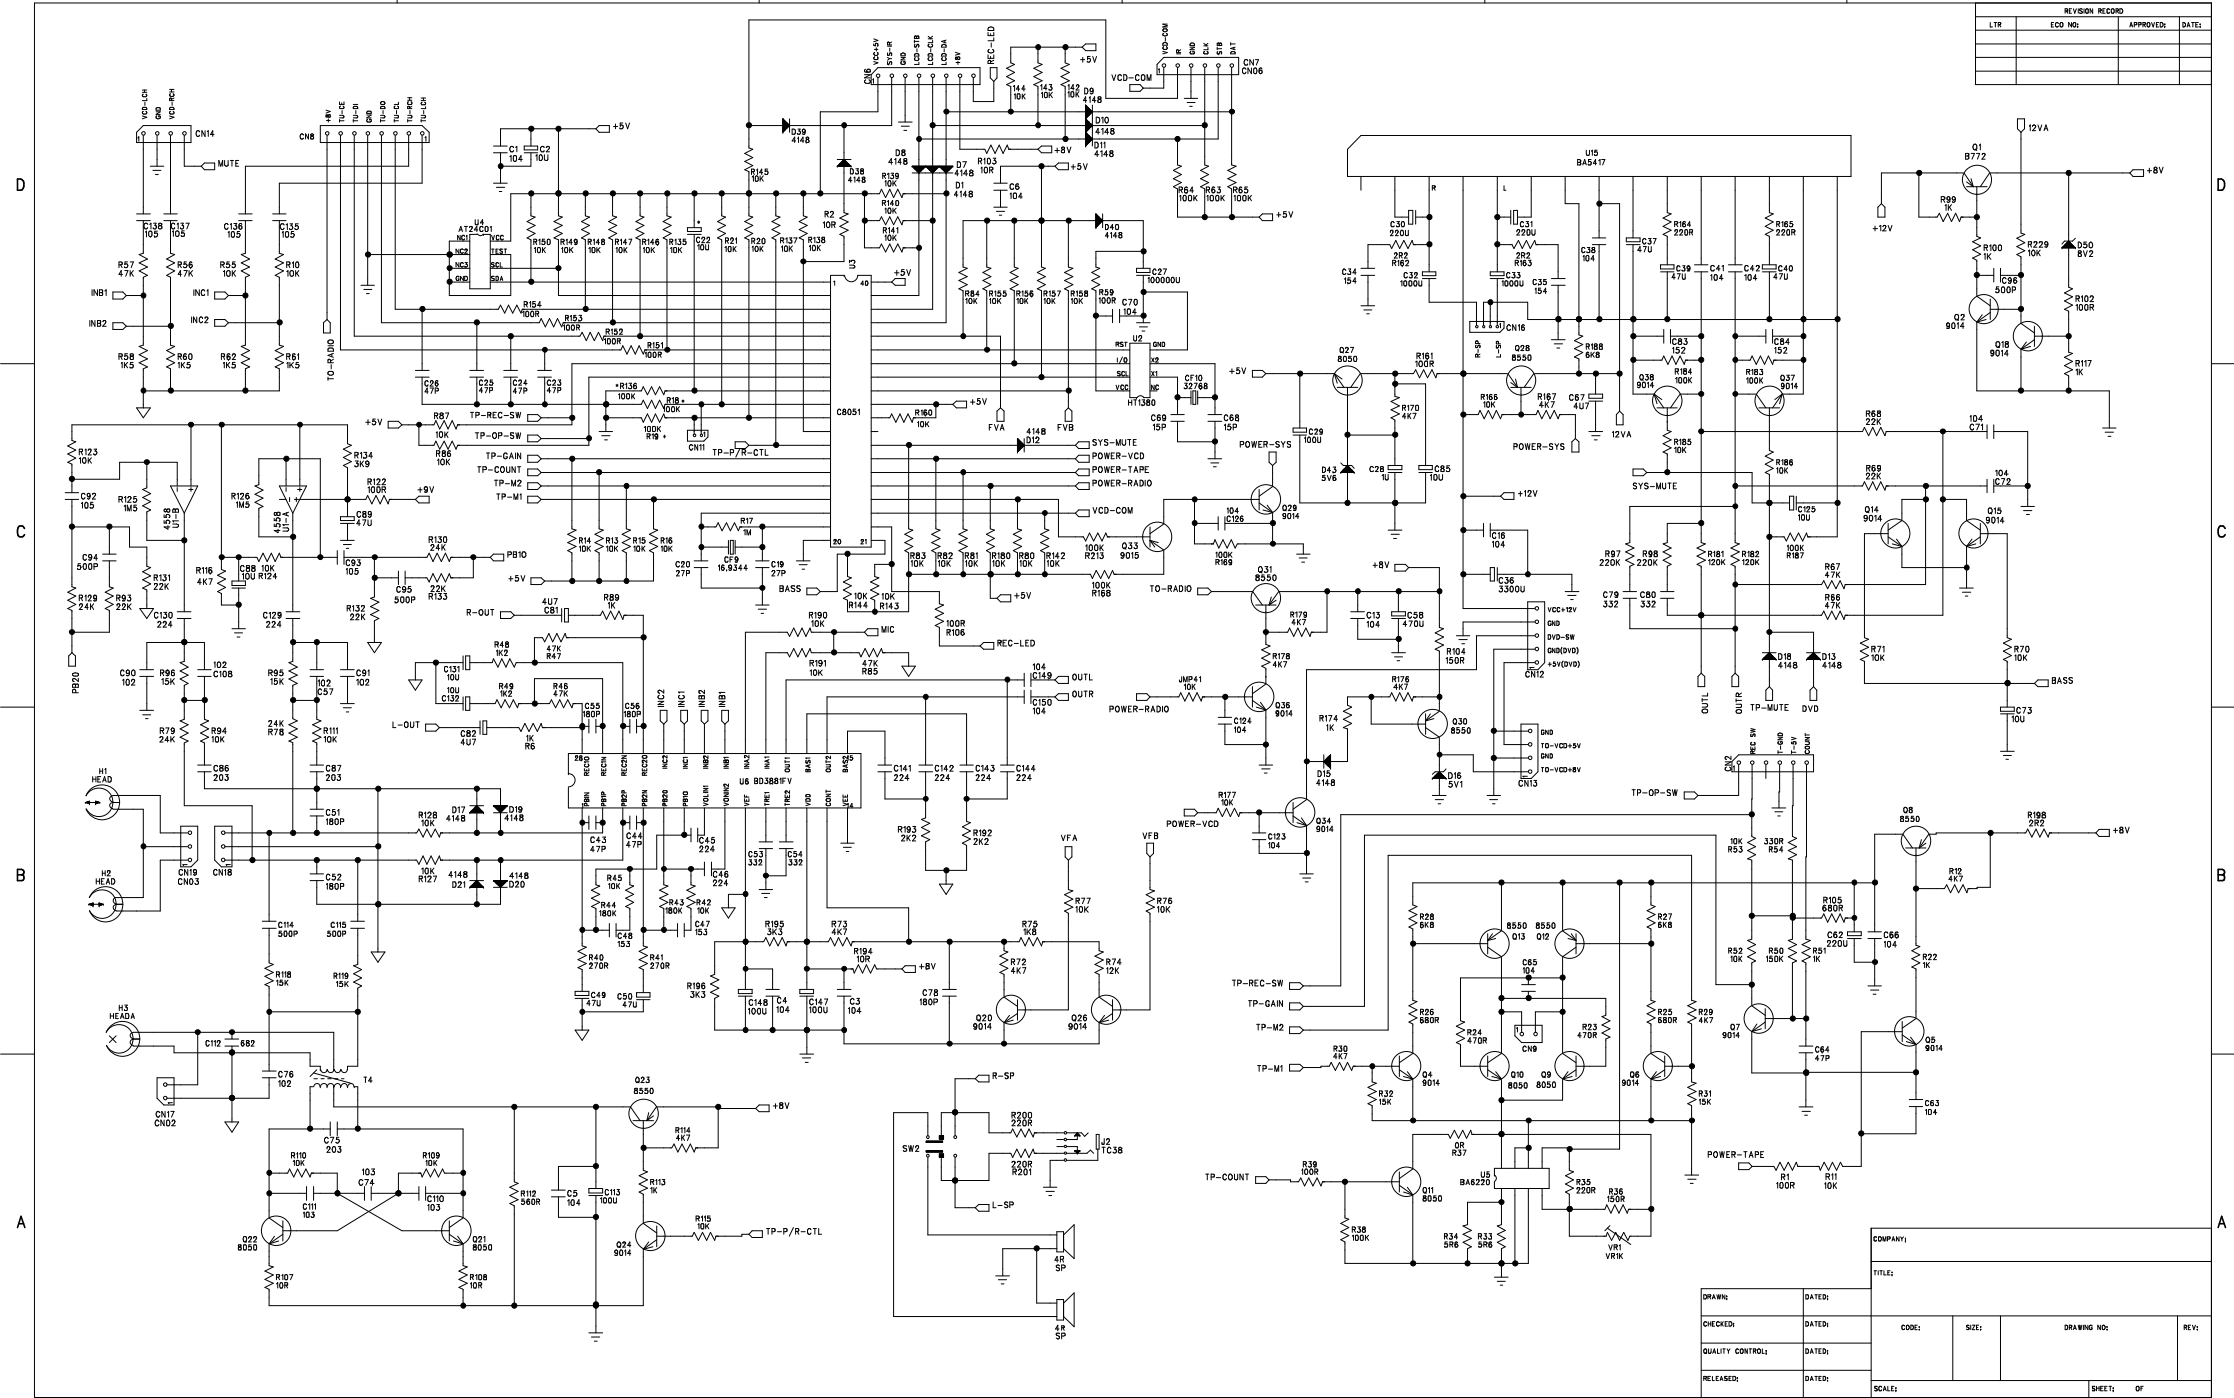

LTR	ECO NO:	APPROVED:	DATE:

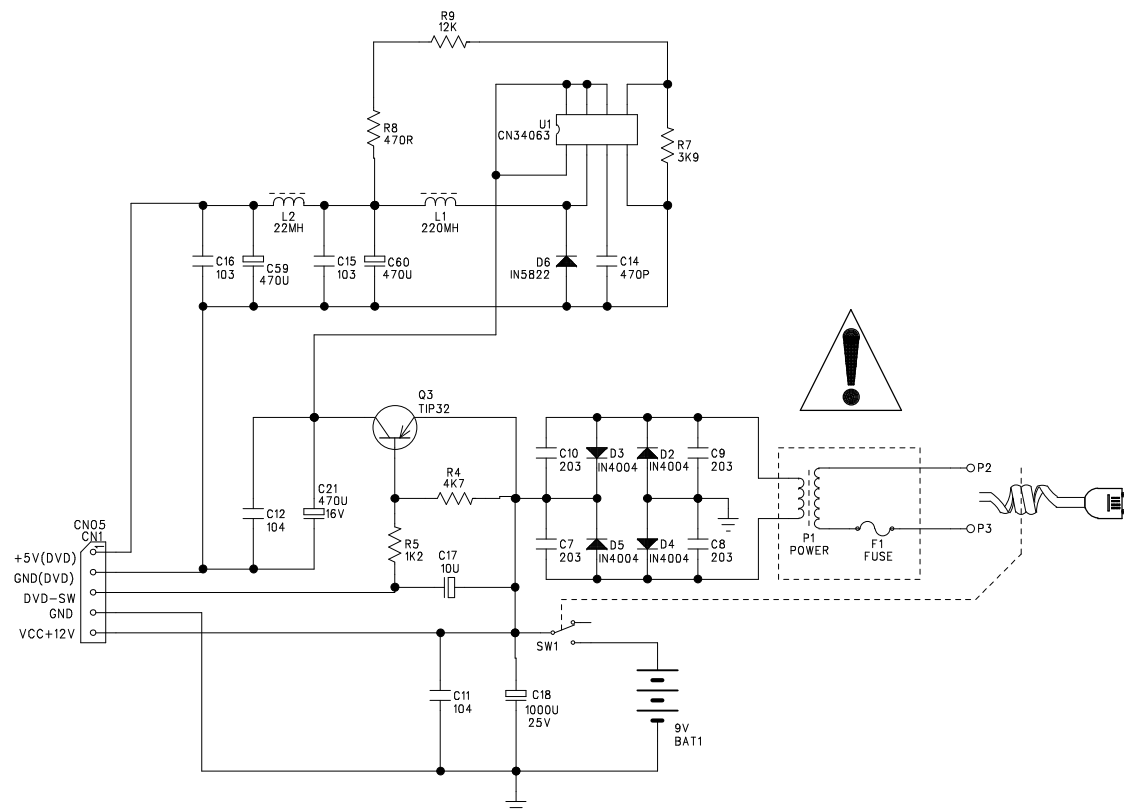

DRAWN:	DATED:
CHECKED:	DATED:
QUALITY CONTROL:	DATED:
RELEASED:	DATED:

COMPANY:			
TITLE:			
CODE:	SIZE:	DRAWING NO:	REV:
SCALE:	SHEET:		OF

