


ACCESSING THE SELECTOR SWITCH PACK & DISPENSER SWITCHES

⚠ WARNING



Electrical Shock Hazard
Disconnect power before servicing.
Replace all panels before operating.
Failure to do so can result in death or electrical shock.


1. Disconnect the unit from the electrical supply.
2. Pull out and unclip the drip tray on the ice and water dispenser compartment.

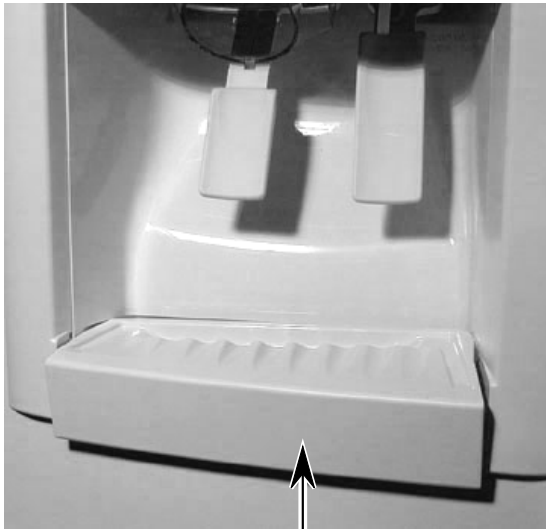

Drip Tray

3. Remove the screws from the ice and water dispenser compartment front panel and turn it over. The selector switch pack and dispenser switches are now accessible for testing.

Ice Dispenser Switch

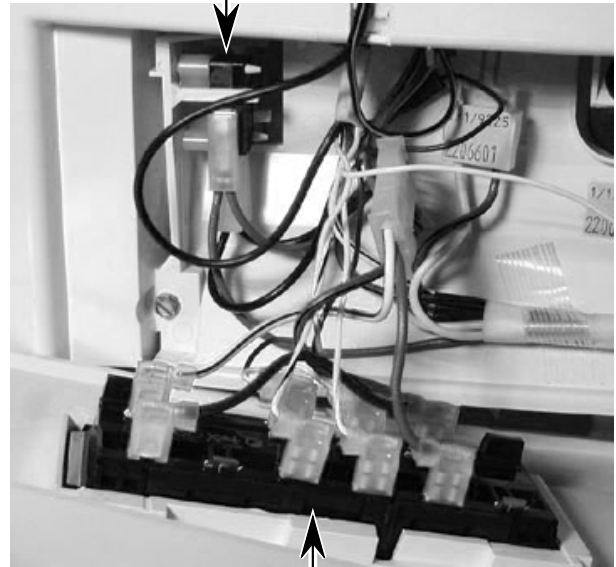

Selector Switch Pack