

notebook



P150EM/
P151EM1
SERVICE
MANUAL

Notebook Computer

P150EM/P151EM1

Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 2.0
April 2012

Trademarks

Intel and **Intel Core** are trademarks of Intel Corporation.

Windows[®] is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *P150EM/P151EM1* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

IMPORTANT SAFETY INSTRUCTIONS

Follow basic safety precautions, including those listed below, to reduce the risk of fire, electric shock and injury to persons when using any electrical equipment:

1. Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electrical shock from lightning.
3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
5. This product is intended to be supplied by a Listed Power Unit with an AC Input of 100 - 240V, 50 - 60Hz, DC Output of 19V, 9.47A (**180** Watts for P150EM) / 19V, 6.3A (**120** Watts for P151EM1) minimum AC/DC Adapter.

CAUTION

This Computer's Optical Device is a Laser Class 1 Product


Instructions for Care and Operation

The notebook computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:


1. **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.



2. **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.

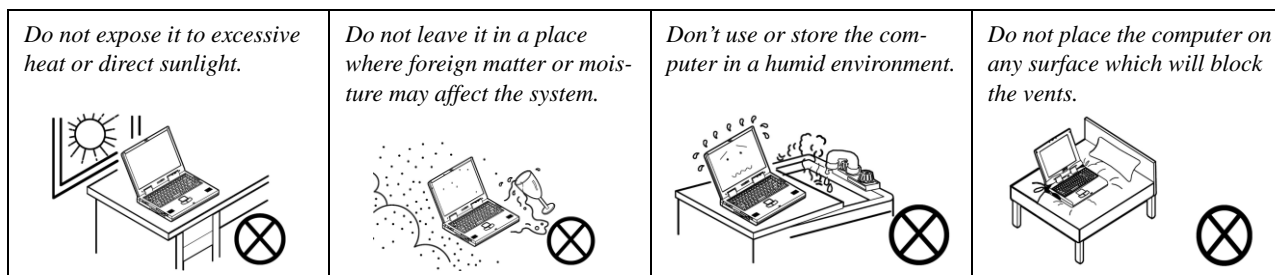

3. **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost if the battery is depleted.

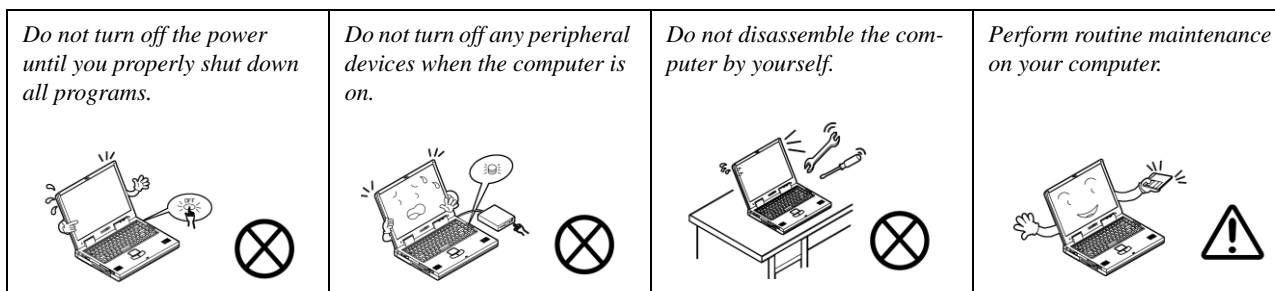

Preface



Removal Warning

When removing any cover(s) and screw(s) for the purposes of device upgrade, remember to replace the cover(s) and screw(s) before restoring power to the system.

Also note the following when the cover is removed:


- Hazardous moving parts.
- Keep away from moving fan blades

Power Safety Warning


Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

4. **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
5. **Take care when using peripheral devices.**

Use only approved brands of peripherals.

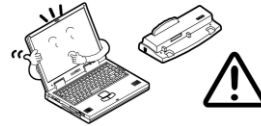

Unplug the power cord before attaching peripheral devices.

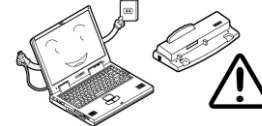

Power Safety


The computer has specific power requirements:

- Only use a power adapter approved for use with this computer.
- Your AC adapter may be designed for international travel but it still requires a steady, uninterrupted power supply. If you are unsure of your local power specifications, consult your service representative or local power company.
- The power adapter may have either a 2-prong or a 3-prong grounded plug. The third prong is an important safety feature; do not defeat its purpose. If you do not have access to a compatible outlet, have a qualified electrician install one.
- When you want to unplug the power cord, be sure to disconnect it by the plug head, not by its wire.
- Make sure the socket and any extension cord(s) you use can support the total current load of all the connected devices.
- Before cleaning the computer, make sure it is disconnected from any external power supplies.


Do not plug in the power cord if you are wet.



Do not use the power cord if it is broken.

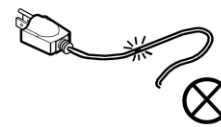

Do not place heavy objects on the power cord.

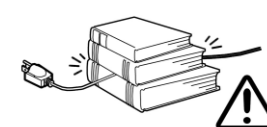

Battery Precautions

- Only use batteries designed for this computer. The wrong battery type may explode, leak or damage the computer.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Recharge the batteries using the notebook's system. Incorrect recharging may make the battery explode.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Keep children away from, and promptly dispose of a damaged battery. Always dispose of batteries carefully. Batteries may explode or leak if exposed to fire, or improperly handled or discarded.
- Keep the battery away from metal appliances.
- Affix tape to the battery contacts before disposing of the battery.
- Do not touch the battery contacts with your hands or metal objects.

Battery Guidelines

The following can also apply to any backup batteries you may have.

- If you do not use the battery for an extended period, then remove the battery from the computer for storage.
- Before removing the battery for storage charge it to 60% - 70%.
- Check stored batteries at least every 3 months and charge them to 60% - 70%.





Battery Disposal

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

Battery Level

Click the battery icon   in the taskbar to see the current battery level and charge status. A battery that drops below a level of 10% will not allow the computer to boot up. Make sure that any battery that drops below 10% is recharged within one week.

Related Documents


You may also need to consult the following manual for additional information:

User's Manual on Disc

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Insert the battery and tighten the screws.
4. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
5. Attach the AC/DC adapter to the DC-In jack at the rear of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the AC/DC adapter.
6. Use one hand to raise the lid/LCD to a comfortable viewing angle (do not to exceed **135** degrees); use the other hand (as illustrated in *Figure 1*) to support the base of the computer (**Note: Never** lift the computer by the lid/LCD).
7. Press the power button to turn the computer "on".

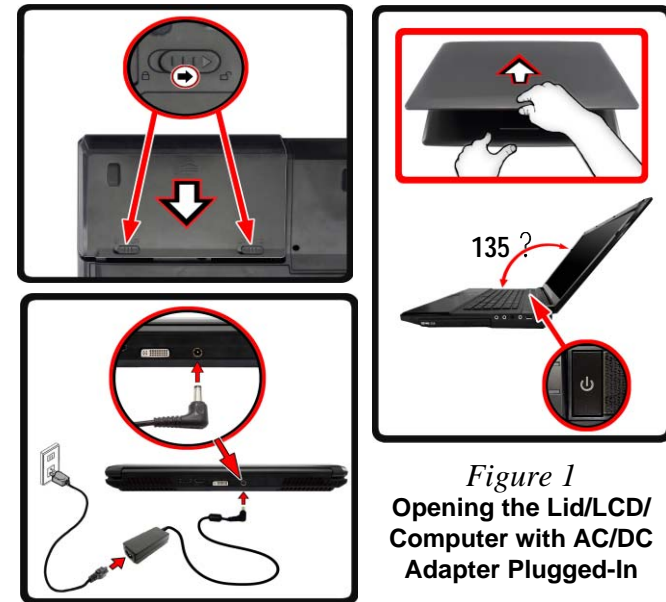

Contents

System Startup	1-VIII
Introduction	1-1
Overview	1-1
External Locator - Top View with LCD Panel Open	1-4
External Locator - Front & Right side Views	1-5
External Locator - Left Side & Rear View	1-6
External Locator - Bottom View	1-7
Mainboard Overview - Top (Key Parts)	1-8
Mainboard Overview - Bottom (Key Parts)	1-9
Mainboard Overview - Top (Connectors)	1-10
Mainboard Overview - Bottom (Connectors)	1-11
Disassembly	2-1
Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Disassembly Steps	2-4
Removing the Battery	2-5
Removing the Hard Disk Drive	2-6
Inserting the Hard Disk Into the HDD Bay	2-8
Removing the Optical (CD/DVD) Device	2-9
Removing the Hard Disk from the Secondary HDD Bay	2-10
Removing the Primary System Memory (RAM)	2-11
Removing the System Memory (RAM) from Under the Keyboard	2-13
Removing and Installing the Processor	2-15
Removing the Wireless LAN Module	2-18
Removing the 3G Module	2-19
Removing and Installing the Video Card	2-20

Part Lists	A-1
Part List Illustration Location	A-2
Top with Fingerprint (P150EM)	A-3
Top without Fingerprint (P150EM)	A-4
Top with Fingerprint (P151EM1)	A-5
Top without Fingerprint (P151EM1)	A-6
Bottom	A-7
LCD	A-8
COMBO	A-9
DVD-Dual Drive	A-10
HDD	A-11
2nd HDD	A-12
Schematic Diagrams.....	B-1
System Block Diagram	B-2
TPM	B-3
Processor 1/7	B-4
Processor 2/7	B-5
Processor 3/7	B-6
Processor 4/7	B-7
Processor 5/7	B-8
Processor 6/7	B-9
Processor 7/7	B-10
DDRIII CHA SO-DIMM_0	B-11
DDRIII CHA SO-DIMM_1	B-12
DDRIII CHB SO-DIMM_0	B-13
DDRIII CHB SO-DIMM_1	B-14
MXM PCI-E	B-15
Panel, Inverter, CRT	B-16
1394_JMB380C	B-17

Preface


DVI	B-18	Audio Board	B-50
Display Port	B-19	P150 ODD Board	B-51
HDMI	B-20	P150 Click Board	B-52
PCH 1/9 - RTC, HDA, SATA	B-21	P150 LED 1 Board	B-53
PCH 2/9 - PCIE, SMBUS, CLK	B-22	P150 LED 2 Board	B-54
PCH3/9 - DMI, FDI, PWRGD	B-23	P150 LED 3 Board	B-55
PCH 4/9 - LVDS, DDI, CRT	B-24	P170 HDD & ODD Board	B-56
PCH 5/9 - PCI, USB, RSVD	B-25	P170 LED Board	B-57
PCH 6/9 - GPIO, CPU	B-26	P170 Click Board	B-58
PCH 7/9 - Power	B-27	P170 Fingerprint Board	B-59
PCH 8/9 - Power	B-28	P150 HDD Board	B-60
PCH 9/9 - GND	B-29	P150 LED Board_L	B-61
USB+eSATA, USB Charging	B-30	P150 LED Board_R	B-62
USB 2.0, CCD, Mini PCIE, LID	B-31	Power on Sequence	B-63
LED, Hotkey, LID SW, Fan	B-32	Updating the FLASH ROM BIOS..... C-1	
RJ 45	B-33		
Codec Realtek ALC892	B-34		
APA2607-TPA2008D2	B-35		
KBC-ITE IT8518E	B-36		
Backlight Keyboard	B-37		
mSATA, FAN, TP, FP, MULTI-CON	B-38		
Card Reader RTL8411	B-39		
USB 3.0	B-40		
VDD3, VDD5	B-41		
5VS, 3.3VS, 1.5VS	B-42		
Power 1.05VS	B-43		
Power 1.5V/VTT_MEM	B-44		
Power 1V, 1.8VS	B-45		
Power V-Core 1	B-46		
Power V-Core 2	B-47		
AC_In, Charger	B-48		
Power 0.85VS	B-49		

Chapter 1: Introduction

Overview

This manual covers the information you need to service or upgrade the *P150EM/P151EM1* series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows 7*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The *P150EM/P151EM1* series notebook is designed to be upgradeable. See *Disassembly on page 2 - 1* for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

Introduction

Specifications



Latest Specification Information

The specifications listed here are correct at the time of sending them to the press. Certain items (particularly processor types/speeds) may be changed, delayed or updated due to the manufacturer's release schedule. Check with your service center for more details.



CPU

The CPU is not a user serviceable part. Accessing the CPU in any way may violate your warranty.

Processor Options

P150EM :

Intel® Core™ i7 Processor

i7-3920XM (2.90GHz)

8MB L3 Cache, **22nm**, DDR3-1600MHz, TDP 55W

All Models:

Intel® Core™ i7 Processor

i7-3820QM (2.70GHz)

8MB L3 Cache, **22nm**, DDR3-1600MHz, TDP 45W

i7-3720QM (2.60GHz) , i7-3610QM (2.30GHz)

6MB L3 Cache, **22nm**, DDR3-1600MHz, TDP 45W

i7-3520M (2.90GHz)

4MB L3 Cache, **22nm**, DDR3-1600MHz, TDP 35W

Intel® Core™ i5 Processor

i5-3360M (2.80GHz), i5-3320M (2.60GHz), i5-3210M (2.50GHz)

3MB L3 Cache, **22nm**, DDR3-1600MHz, TDP 35W

P150EM :

Intel® Core™ i7 Processor

i7-2960XM (2.70GHz)

8MB L3 Cache, **32nm**, DDR3-1600MHz, TDP 55W

All Models:

Intel® Core™ i7 Processor

i7-2760QM (2.40GHz)

6MB L3 Cache, **32nm**, DDR3-1600MHz, TDP 45W

i7-2670QM (2.20GHz)

4MB L3 Cache, **32nm**, DDR3-1333MHz, TDP 45W

i7-2640M (2.80GHz)

4MB L3 Cache, **32nm**, DDR3-1333MHz, TDP 35W

Intel® Core™ i5 Processor

i5-2540M (2.60GHz), i5-2520M (2.50GHz)

3MB L3 Cache, **32nm**, DDR3-1333MHz, TDP 35W

All Models:

Intel® Core™ i5 Processor

i5-2450M (2.50GHz)

3MB L3 Cache, **32nm**, DDR3-1333MHz, TDP 35W

P151EM1 :

Intel® Core™ i3 Processor

i3-2350M (2.30GHz)

3MB L3 Cache, **32nm**, DDR3-1333MHz, TDP 35W

Memory

*Four 204 Pin SO-DIMM Sockets Supporting DDR3 1333/1600** MHz Memory Modules

Memory Expandable up to 16GB

Compatible with 2GB or 4GB Modules

*Note: Four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum

**Note: 1600 MHz Memory Modules are only supported by Quad-Core CPUs to a maximum of two SO-DIMMs

LCD

P150EM:

15.6" (39.62cm) FHD (1920 * 1080)

P151EM1:

15.6" (39.62cm) HD+ (1600 * 900)

BIOS

AMI BIOS (48Mb SPI Flash-ROM)

Storage

One Changeable 2.5" (6cm) 9.5mm (h) **SATA** (Serial) Hard Disk Drives

(Factory Option) One 12.7mm(h) Optical Device Type Drive (Super Multi Drive/Blu-Ray Combo Drive/Blu-Ray Writer Drive)

(Factory Option) One mSATA Solid State Drive (SSD)

(Factory Option) 9.5mm 2nd HDD caddy

Core Logic

Intel® HM77 Chipset

Video Adapter**Intel® Integrated GPU and NVIDIA® Discrete GPU****Supports NVIDIA® Optimus Technology****Intel Integrated GPU (GPU is Dependent on Processor)****Intel® HD Graphics 3000**Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®10 Compatible

Intel® HD Graphics 4000Dynamic Frequency (Intel Dynamic Video Memory Technology for up to **1.7GB**)

Microsoft DirectX®11 Compatible

P150EM :**nVIDIA® GeForce GTX 675M PCIe Video Card****2GB** GDDR5 Video RAM on board

Microsoft DirectX® 11 Compatible

nVIDIA® GeForce GTX 670M PCIe Video Card**1.5GB** GDDR5 Video RAM on board

Microsoft DirectX® 11 Compatible

P151EM1 :**nVIDIA® GeForce GTX 670M PCIe Video Card****1.5GB** GDDR5 Video RAM on board

Microsoft DirectX® 11 Compatible

Security

Security (Kensington® Type) Lock Slot

BIOS Password

(Factory Option) Fingerprint Reader Module**Audio**

High Definition Audio Compliant Interface

THX TruStudio Pro

S/PDIF Digital Output

One (3W) Sub Woofer

Built-In Microphone

2 Speakers

Pointing Device

Built-in TouchPad (scrolling key functionality integrated)

Keyboard

Illuminated Full-size “WinKey” keyboard with numeric keypad

Communication

Built-In Giga Base-TX Ethernet LAN

(Factory Option) 2.0M Pixel FHD PC Camera Module**WLAN/ Bluetooth Half Mini-Card Modules:****(Factory Option)** Intel® Centrino® Ultimate-N 6300 Wireless LAN (**802.11a/g/n**)**(Factory Option)** Intel® Centrino® Advanced-N 6235 Wireless LAN (**802.11a/g/n**) + Bluetooth **4.0****(Factory Option)** Intel® Centrino® Wireless-N 2230 Wireless LAN (**802.11a/g/n**) + Bluetooth **4.0****(Factory Option)** Wireless LAN (**802.11b/g/n**) + Bluetooth **3.0****(Factory Option)** Wireless LAN (**802.11b/g/n**) + Bluetooth **4.0****Interface**

Three USB 3.0 Ports (Including one AC/DC Powered USB/eSATA port)

One USB 2.0 Port

One eSATA Port (USB 3.0 Port Combined)

One HDMI-Out (1.4a) Port

One DVI-Out Port

One S/PDIF Out Jack

One Headphone/Speaker-Out Jack

One Microphone-In Jack

One Line-In Jack

One Mini-IEEE1394b Port

One RJ-45 LAN Jack

One Display (1.1a) Port

One DC-In Jack

Note: External 7.1CH Audio Output Supported by Headphone, Microphone, Line-In and Surround-Out Jacks**Card Reader**

Embedded Multi-In-1 Card Reader

MMC (MultiMedia Card) / RS MMC

SD (Secure Digital) / Mini SD / SDHC / SDXC

MS (Memory Stick) / MS Pro / MS Duo

Mini Card SlotsSlot 1 for **WLAN** Module or **Combo WLAN and Bluetooth** Module**(Factory Option)** Slot 2 for **mSATA SSD****Environmental Spec****Temperature**

Operating: 5°C - 35°C

Non-Operating: -20°C - 60°C

Relative Humidity

Operating: 20% - 80%

Non-Operating: 10% - 90%

Power

Removable 8-cell cylinder battery, 76.96Wh (5200mAh)

P150EM :

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19V, 9.47A (**180W**)**P151EM1 :**

Full Range AC/DC Adapter

AC Input: 100 - 240V, 50 - 60Hz

DC Output: 19V, 6.3A (**120W**)**Dimensions & Weight**

376mm (w) * 256mm (d) * 35 - 43mm (h)

Around 3.1kg with Battery and ODD

Introduction

Figure 1
Top View

1. PC Camera
2. LCD
3. LED Status Indicators
4. Power Button
5. Speakers
6. Keyboard
7. Built-In Microphone
8. TouchPad and Buttons
9. Fingerprint Reader (Optional)

External Locator - Top View with LCD Panel Open



External Locator - Front & Right side Views

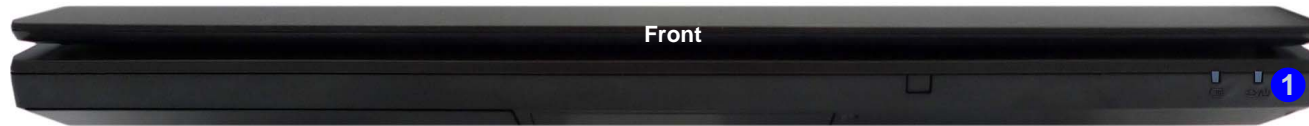


Figure 2
Front Views

1. LED Power Indicators

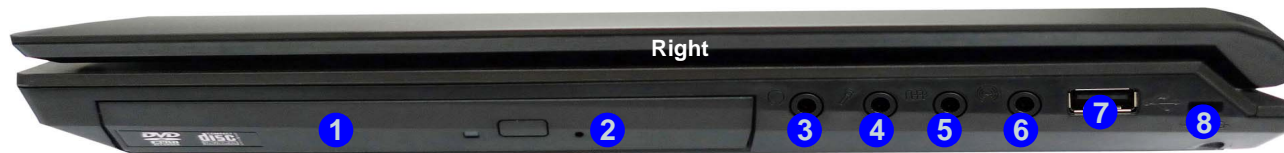


Figure 3
Right Side Views

1. Optical Device Drive Bay
2. Emergency Eject Hole
3. Headphone Jack
4. Microphone Jack
5. S/PDIF-Out Jack
6. Line-In Jack
7. USB 2.0 Port
8. Security Lock Slot

Introduction

External Locator - Left Side & Rear View

Figure 4
Left Side View

1. Mini-IEEE 1394a Port
2. RJ-45 LAN Jack
3. USB 3.0 Ports
4. Combined eSATA/ Powered USB 3.0 Port
5. Multi-in-1 Card Reader



Figure 5
Rear View

1. Vent
2. Displa Port
3. HDMI-Out Port
4. DVI-Out Port
5. DC-In Jack



External Locator - Bottom View

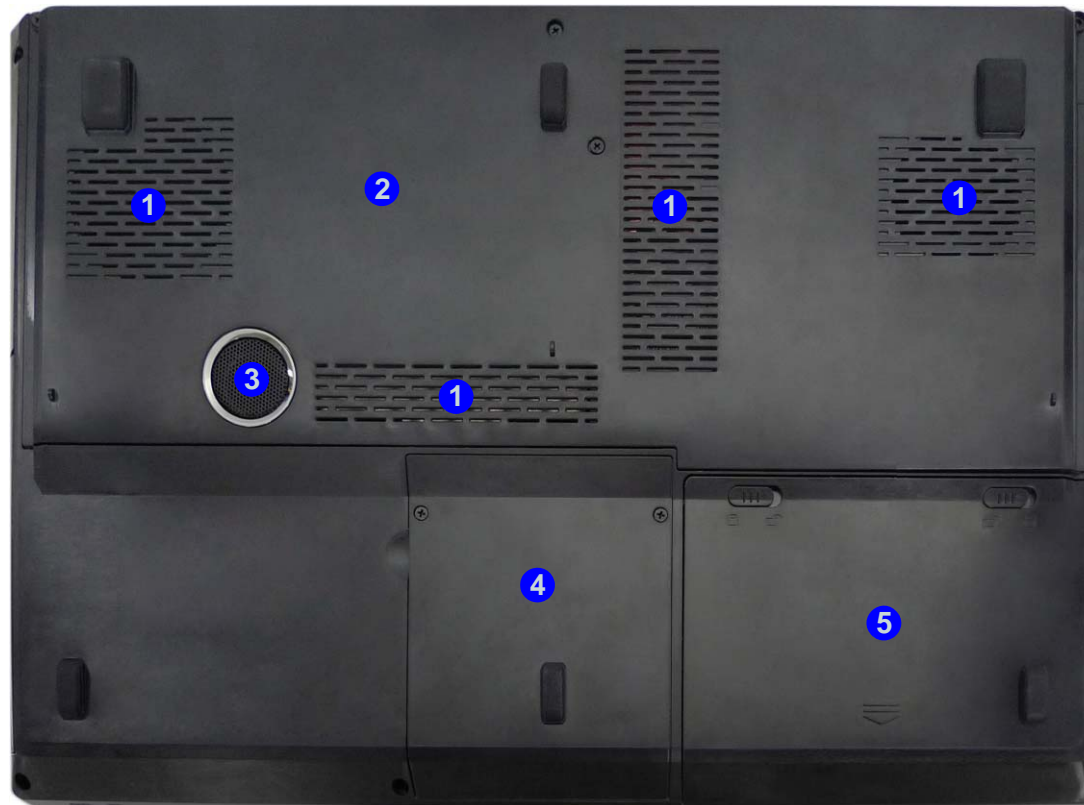


Figure 6
Bottom View

1. Vent
2. Component Bay Cover
3. Sub Woofer
4. HDD Bay
5. Battery



Overheating


To prevent your computer from overheating make sure nothing blocks the vent/fan intakes while the computer is in use.

Introduction

Figure 7
**Mainboard Top
Key Parts**

1. Platform
Controller Hub
2. Audio Codec
3. KBC ITE IT8519E


Mainboard Overview - Top (Key Parts)

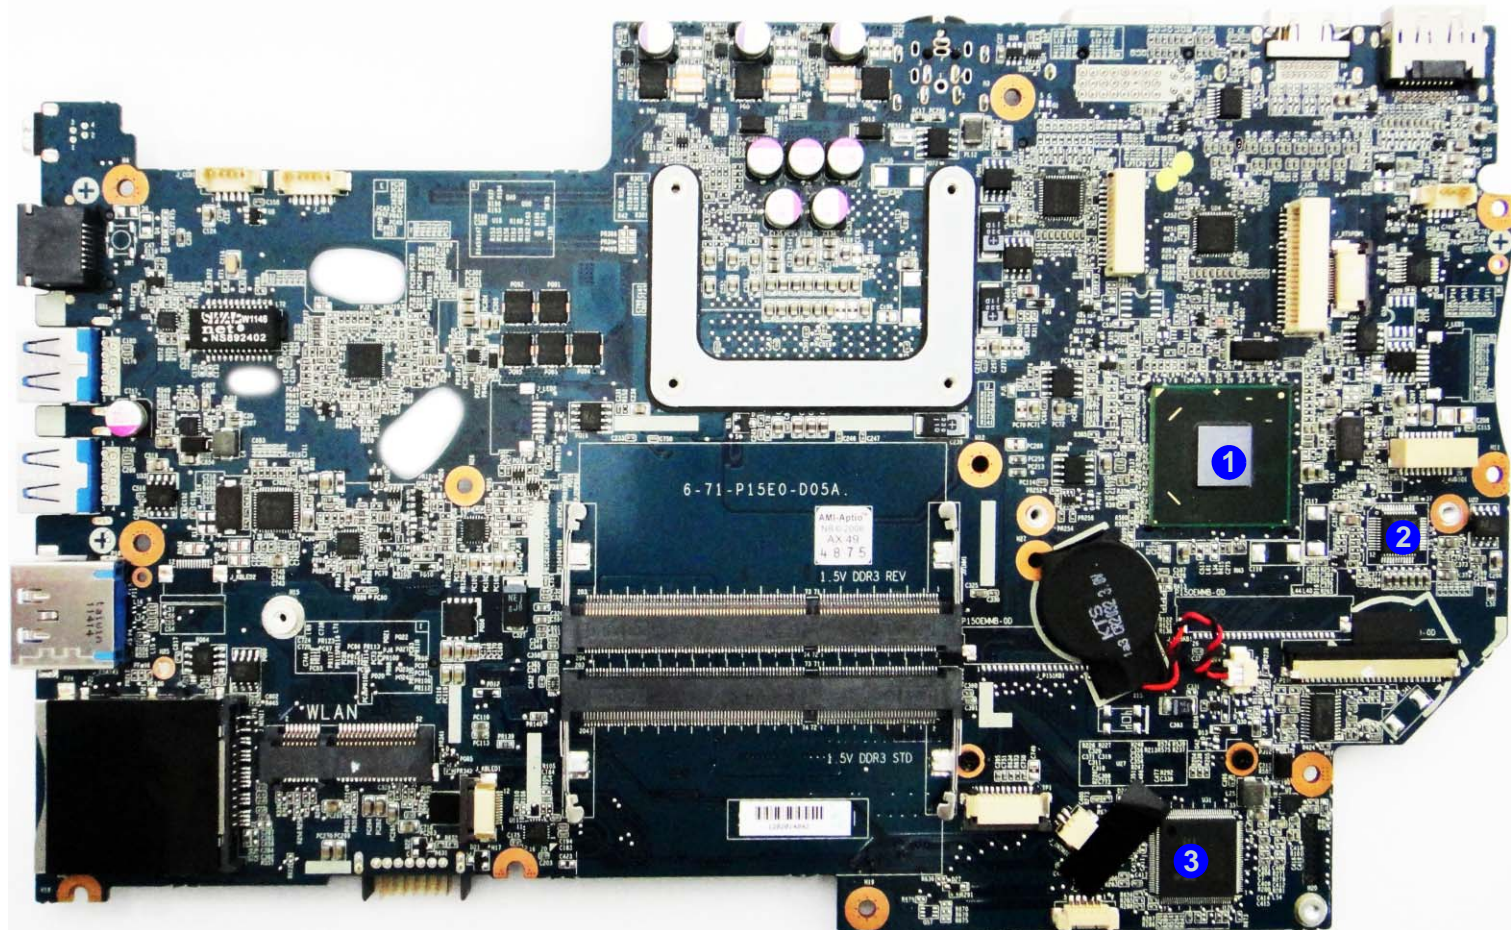

Mainboard Overview - Bottom (Key Parts)

Figure 8
Mainboard Bottom
Key Parts

1. VGA-Card Connector
2. CPU Socket (no CPU installed)
3. Memory Slots
DDR3 SO-DIMM
(Primary)
4. Hard Disk Connector
5. MSATA Connector
6. RTL8411

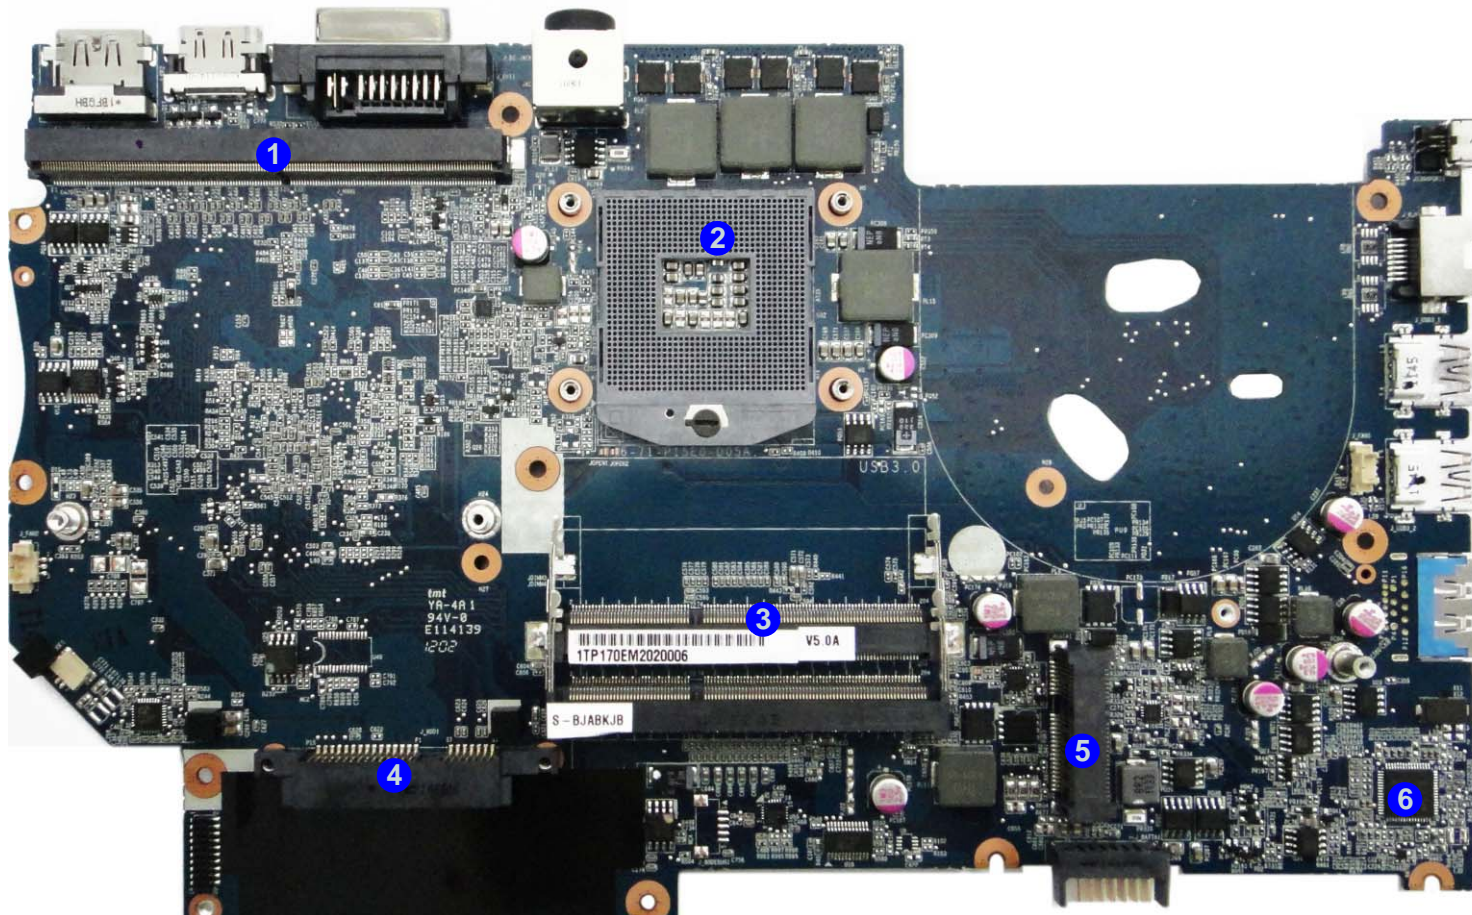


Introduction

Figure 9
**Mainboard Top
Connectors**

1. CCD Connector
2. USB 3.0 Port / e-SATA
3. Multi-in-1 Card Reader
4. LED 2 Cable Connector
5. Keyboard Cable Connector
6. TouchPad Cable Connector
7. Microphone Cable Connector
8. LED 3 Cable Connector
9. Audio Cable Connector
10. LED 1 Cable Connector
11. Speaker Connector
12. LCD Cable Connector

Mainboard Overview - Top (Connectors)

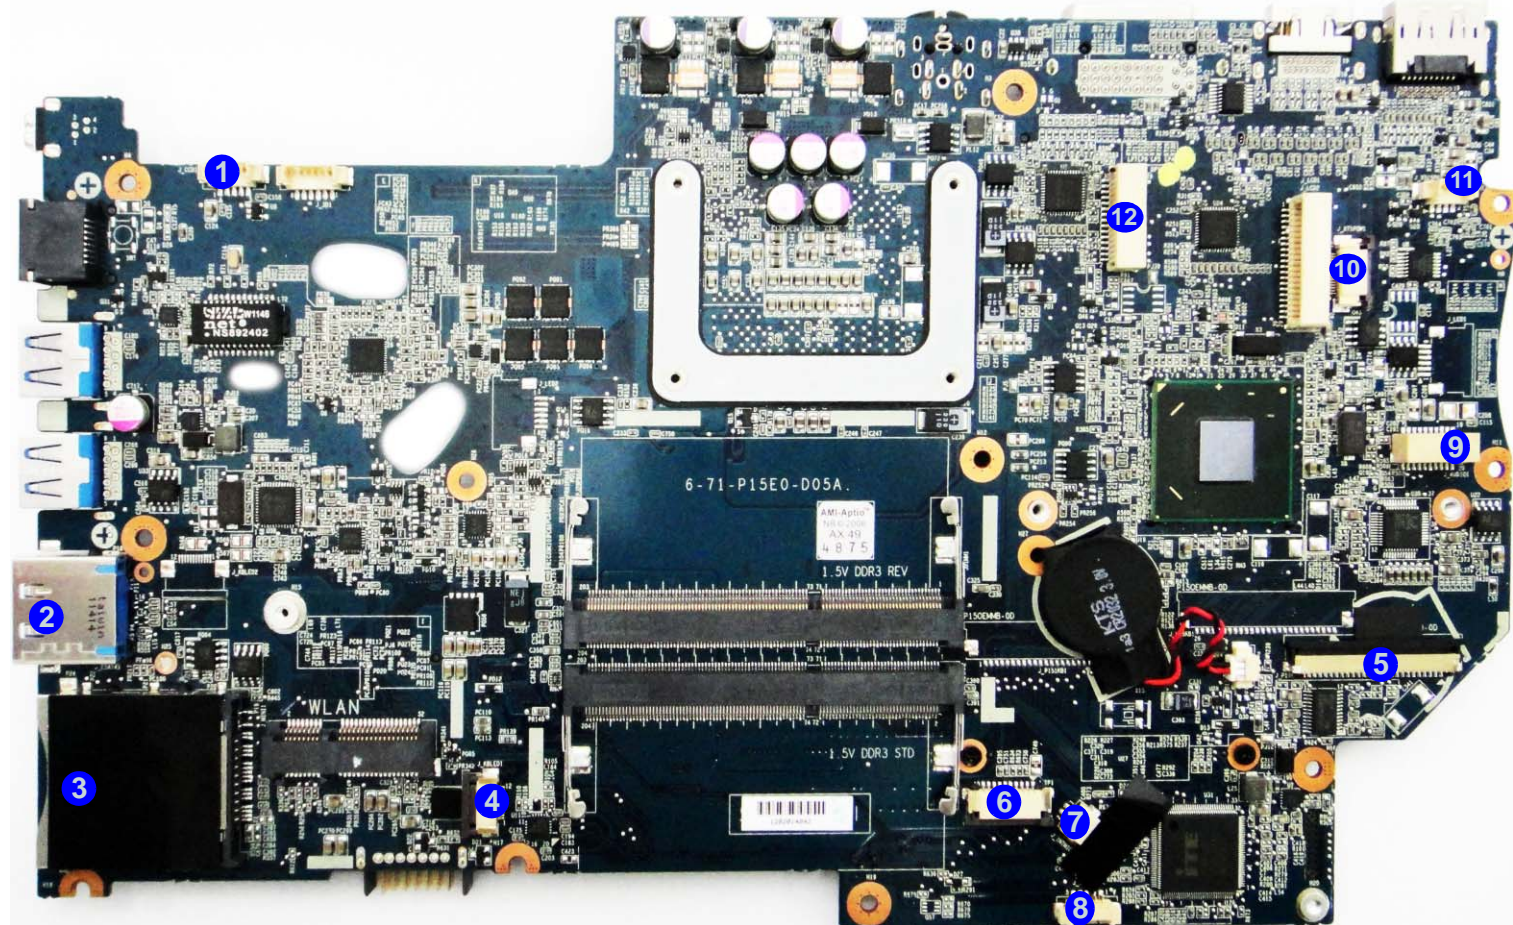

Mainboard Overview - Bottom (Connectors)

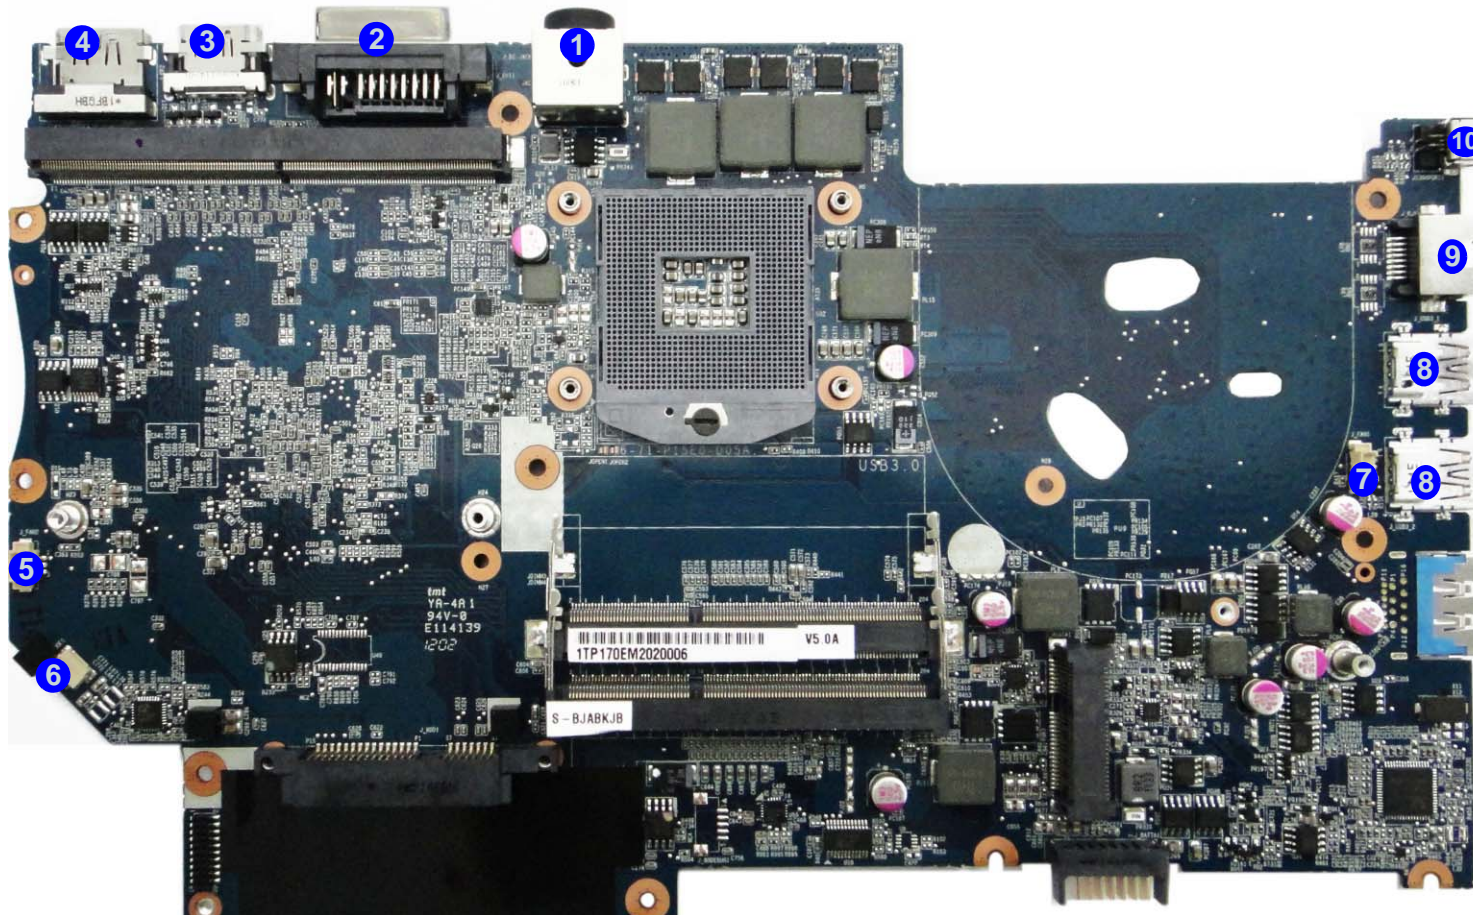


Figure 10
**Mainboard Bottom
Connectors**

1. DC-In Jack
2. DVI-Out Port
3. HDMI-Out Port
4. Display Port
5. VGA Fan Cable Connector
6. Sub Woofer Cable Connector
7. CPU Fan Cable Connector
8. USB 3.0 Ports
9. RJ-45 LAN Jack
10. Mini-IEEE 1394a Port


Chapter 2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling the *P150EM/P151EMI* series notebook's parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, optical device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will also provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

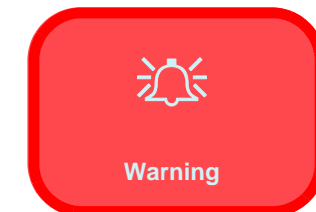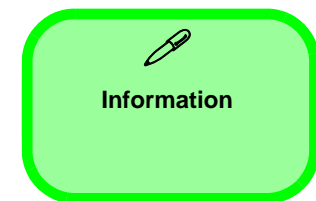

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines and power cord). You must also remove your battery in order to prevent accidentally turning the machine on.

Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery [page 2 - 5](#)

To remove and install the HDD:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 6](#)
3. Install the HDD [page 2 - 8](#)

To remove the Optical Device:

1. Remove the battery [page 2 - 5](#)
2. Remove the Optical device [page 2 - 9](#)

To remove the HDD from the Secondary Bay:

1. Remove the battery [page 2 - 5](#)
2. Remove the HDD [page 2 - 10](#)

To remove the Primary System Memory:

1. Remove the battery [page 2 - 5](#)
2. Remove the system memory [page 2 - 11](#)

To remove the System Memory under the Keyboard:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 11](#)
3. Remove the system memory [page 2 - 14](#)

To remove and install the Processor:

1. Remove the battery [page 2 - 5](#)

2. Remove the system memory [page 2 - 11](#)
3. Remove the processor [page 2 - 15](#)
4. Install the processor [page 2 - 17](#)

To remove the WLAN Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the keyboard [page 2 - 11](#)
3. Remove the wireless LAN [page 2 - 18](#)

To remove the MSATA Module:

1. Remove the battery [page 2 - 5](#)
2. Remove the MSATA [page 2 - 19](#)

To remove and install the Video Card:

1. Remove the battery [page 2 - 5](#)
2. Remove the video card [page 2 - 20](#)
3. Install the video card [page 2 - 21](#)

Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Slide the latch **1** in the direction of the arrow (*Figure 1a*).
3. Slide the latch **2** in the direction of the arrow, and hold it in place (*Figure 1a*).
4. Slide the battery in the direction of the arrow **3**.
5. Lift the battery **4** out of the compartment (*Figure 1c*).



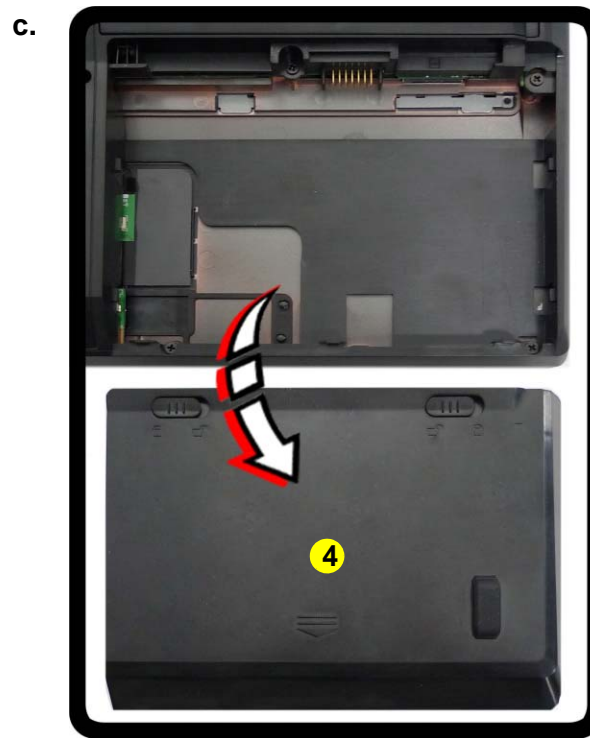


Figure 1
Battery Removal

- a. Slide the latch and hold in place.
- b. Slide the battery out in the direction of the arrow.
- c. Lift the battery out.

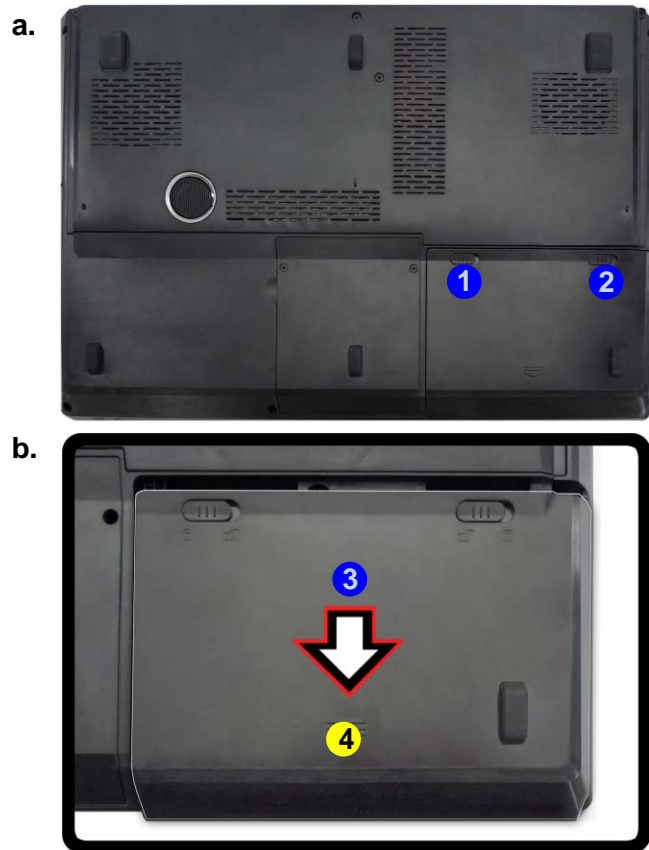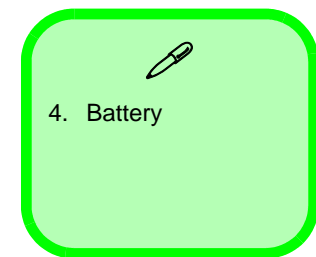

Disassembly

Figure 2
**HDD Assembly
Removal**

- a. Locate the HDD bay cover and remove the screws.
- b. Remove the hard disk bay cover by levering the cover at point ③.

Removing the Hard Disk Drive

The hard disk drive can be taken out to accommodate other 2.5" serial (SATA) hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws ① - ② ([Figure 2a](#)).
3. Remove the hard disk bay cover by levering the cover at point ③ ([Figure 2b](#)).



- 2 Screws



HDD System Warning


New HDD's are blank. Before you begin make sure:

You have backed up any data you want to keep from your old HDD.


You have all the CD-ROMs and FDDs required to install your operating system and programs.

If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

- Slide the HDD assembly in the direction of the arrow **4** (*Figure 3c*).
- Remove the hard disk assembly **5** (*Figure 3d*).
- Remove screws **6** & **7** and the insulation plate **8** (*Figure 3e*).
- Reverse the process to install a new hard disk (do not forget to replace all the screws and covers).

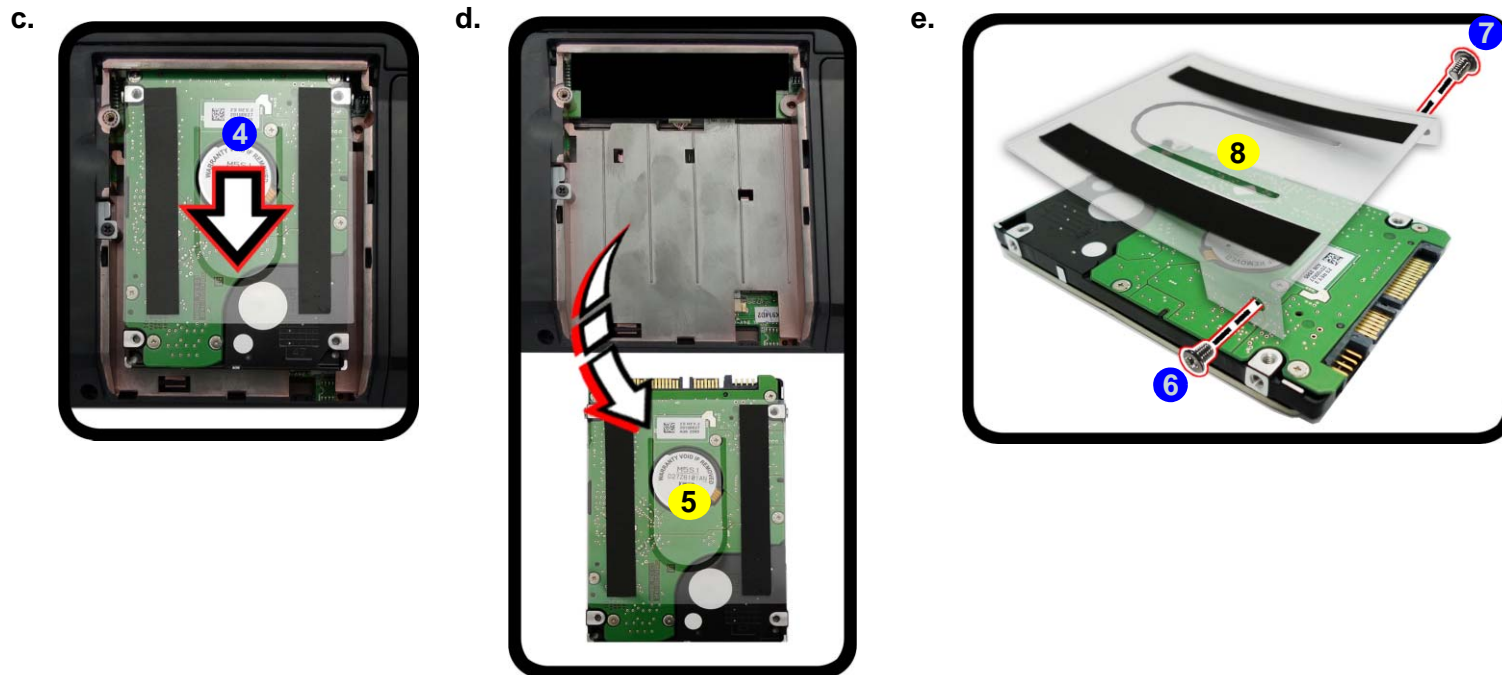

- Figure 3*
HDD Assembly Removal (cont'd.)
- Slide the HDD assembly in the direction of the arrow.
 - Remove the hard disk assembly.
 - Remove the screws and the insulation plate.

- 
- 5. HDD
 - 8. HDD Insulation Plate
 - 2 Screws

Disassembly



Figure 4
Inserting the Hard Disk Into the HDD Bay

a. Make sure the HDD assembly is aligned with the black taped area. When aligned, carefully insert the HDD assembly into the case so that the connectors line up.

Inserting the Hard Disk Into the HDD Bay

1. Make sure the HDD assembly is aligned with the black taped area ① (*Figure 4a*).
2. When aligned, carefully insert the HDD assembly ② into the case so that the connectors line up (*Figure 4a*).
3. Replace the hard disk bay covers and screws.

a.

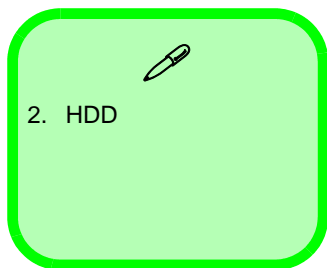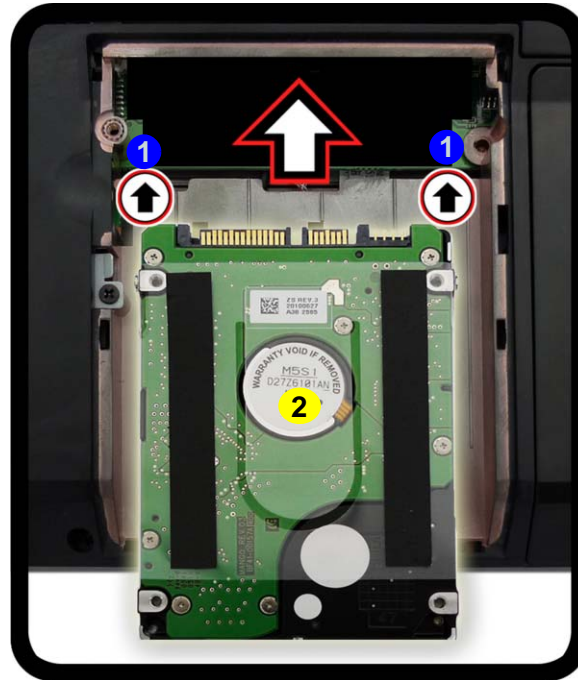

Removing the Optical (CD/DVD) Device

1. Turn **off** the computer, and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws **1** & **2** ([Figure 5a](#)).
3. Remove the hard disk bay cover **3** ([Figure 5b](#)).
4. Remove the screw at point **4** ([Figure 5c](#)), and use a screwdriver to carefully push out the optical device **5** at point **6** ([Figure 5d](#)).
5. Reverse the process to install any new optical (CD/DVD) device.



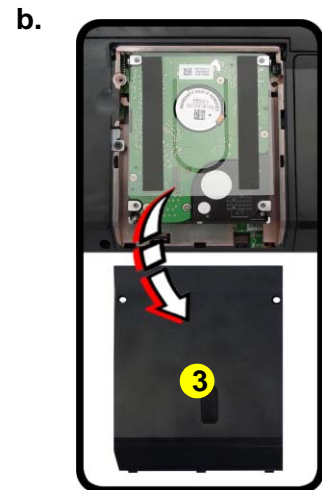


Figure 5
Optical Device Removal

- a. Locate the hard disk bay cover and remove the screws.
- b. Remove the hard disk bay cover.
- c. Remove the screw.
- d. Use a screwdriver to carefully push the optical device out.

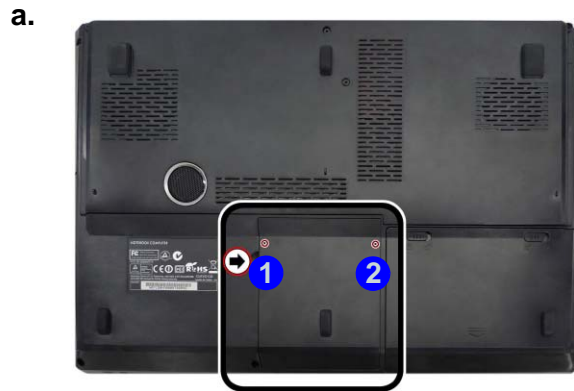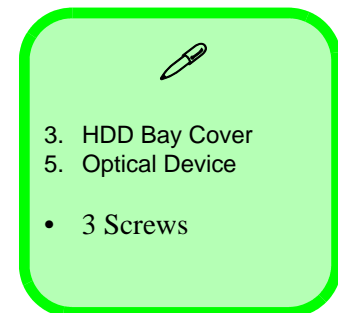

Disassembly


Figure 6
**Secondary HDD
 Assembly Removal**

- Remove the screws.
- Use a screwdriver to carefully push the HDD module out.
- Remove the screws.
- Lift the secondary HDD assembly up and out of the module caddy.

Removing the Hard Disk from the Secondary HDD Bay

Note that the **secondary** hard disk (if installed) is located under the optical device bay (CD/DVD).

- Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)) and optical device ([page 2 - 9](#)).
- Remove the screw at point **1** ([Figure 6c](#)), and use a screwdriver to carefully push out the secondary HDD module **3** at point **2** ([Figure 6a](#) and [Figure 6b](#)).
- When the module is removed turn it over to access the rear. Remove screws **4** - **7** from the secondary HDD module assembly ([Figure 6c](#)).
- Remove the hard disk **8** from the module caddy **9** ([Figure 6d](#)).
- Reverse the process to install a new hard disk.

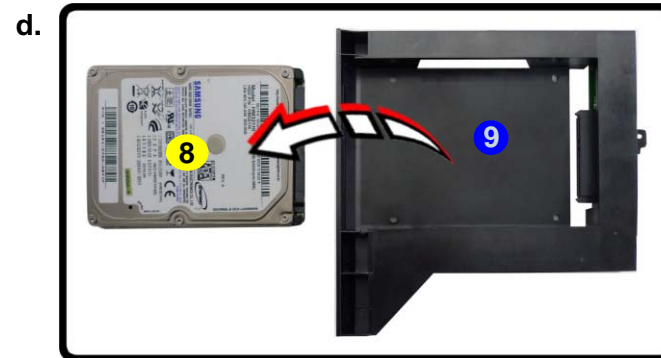

- 3. Hard Disk Assembly
- 8. HDD
- 5 Screws

Removing the Primary System Memory (RAM)

The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Note that **four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum.**

Two primary memory sockets are located under component bay cover (the bottom case cover), and two secondary memory sockets are located under the keyboard (not user upgradable). If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Note that the RAM located under the keyboard is not user upgradable. Contact your service center for more information if you wish to upgrade the memory in the secondary memory sockets.

Memory Upgrade Process

1. Turn **off** the computer, and turn it over, remove the battery ([page 2 - 5](#)).
2. Remove screws **1** - **4** ([Figure 7a](#)).
3. Slide the bottom cover until the cover and case indicators **5** are aligned ([Figure 7b](#)).

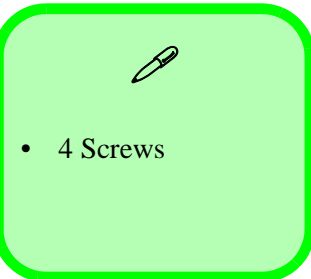
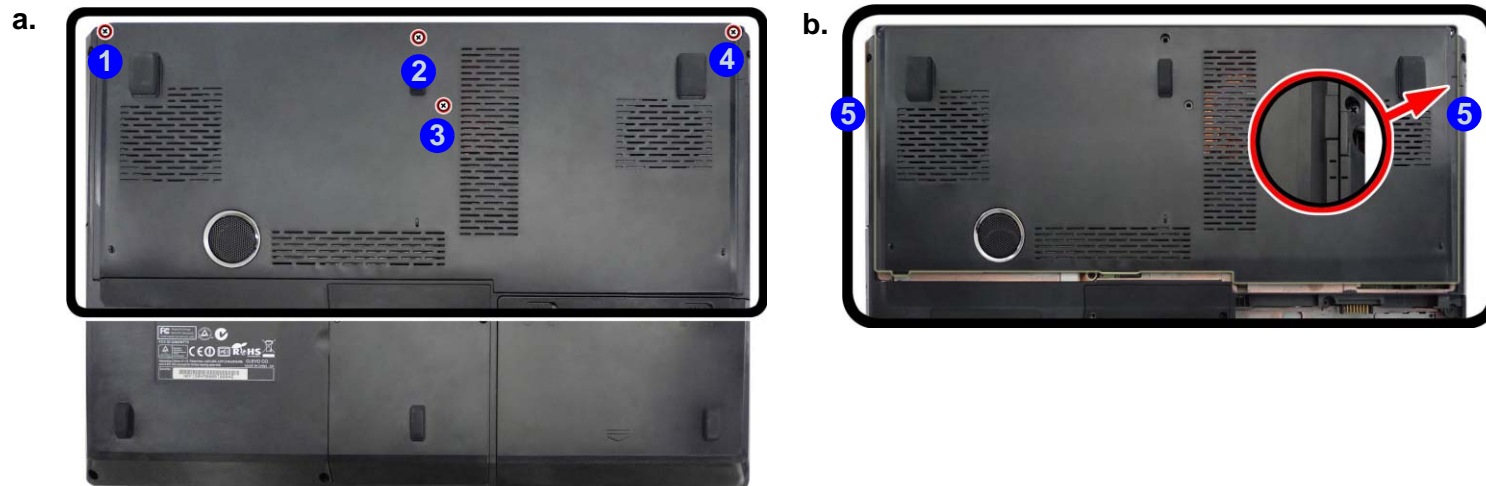


Figure 7
RAM Module Removal


- a. Remove the screws.
- b. Slide the bottom cover until the cover and case indicators are aligned.

Disassembly

Figure 8
RAM Module Removal (cont'd.)

- c. Lift the component bay cover off the computer case. The modules will be visible at point 7.
- d. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.
- e. The RAM module will pop-up, and you can remove it.

4. Lift the component bay cover 6 off the computer case. The modules will be visible at point 7 (*Figure 8c*).
5. Gently pull the two release latches (8 & 9) on the sides of the memory socket(s) in the direction indicated below (*Figure 8d*).
6. The RAM module 10 will pop-up, and you can remove it (*Figure 8e*).
7. Pull the latches to release the second module if necessary.
8. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
9. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE the module; it should fit without much pressure.
10. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
11. Replace the bay cover and screws.
12. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

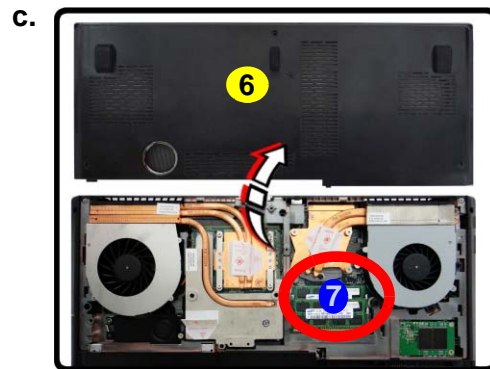

6. Component Bay Cover
10. RAM Module



Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

Removing the System Memory (RAM) from Under the Keyboard


The computer has **four** memory sockets for 204 pin Small Outline Dual In-line (SO-DIMM) **DDR III (DDR3)** type memory modules. The total memory size is automatically detected by the POST routine once you turn on your computer.

Note that **four SO-DIMMs are only supported by Quad-Core CPUs; Dual-Core CPUs support two SO-DIMMs maximum.**

Two primary memory sockets are located under component bay cover (the bottom case cover), and two secondary memory sockets are located under the keyboard. If you are installing only two RAM modules then they should be installed in the primary memory sockets under the component bay cover.

Memory Upgrade Process


1. Remove screws **1** - **4**.
2. Use the small tool **A** provided (see picture below) to carefully push out the top cover module at point **B**.
3. Remove the top cover module **C** and remove screws **5** - **9**.
4. Carefully lift the keyboard **D** up, being careful not to bend the keyboard ribbon cable **10**.

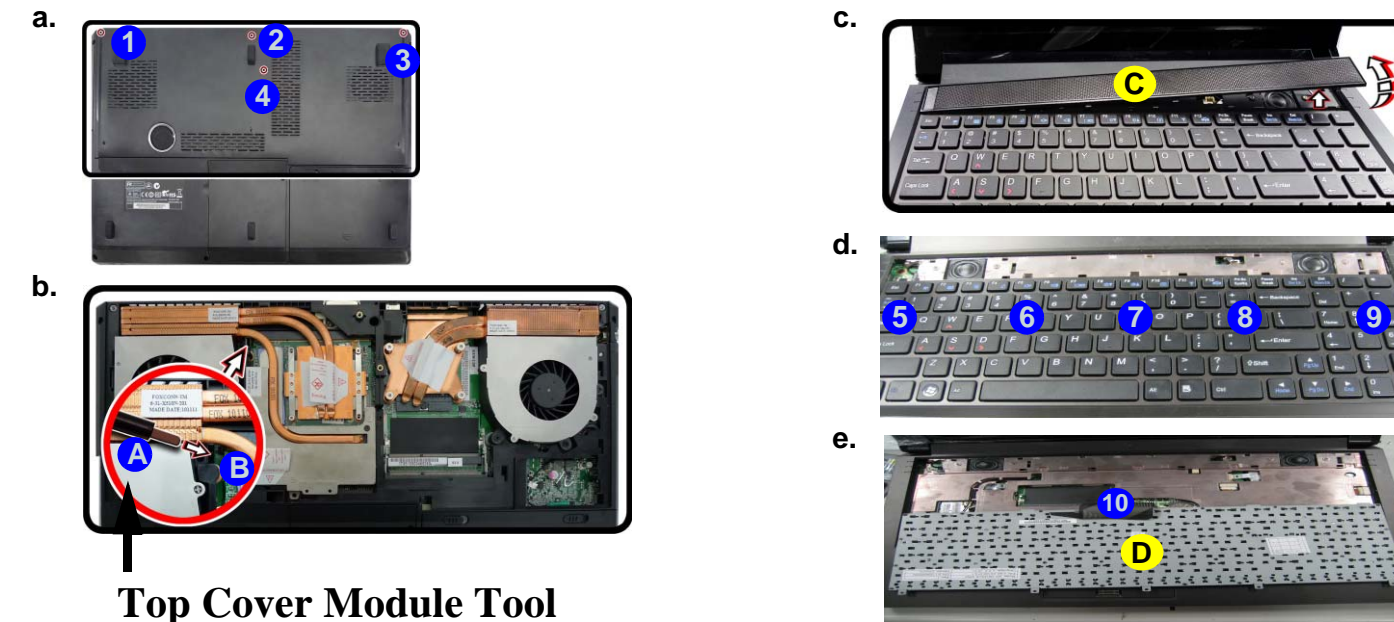

Top Cover Module Tool

Figure 9
RAM Module Removal

- a. Remove the component bay cover.
- b. Use the small tool provided to carefully push out the top cover module.
- c. Remove the top cover module.
- d. Remove the screws.
- e. Carefully lift the keyboard up, being careful not to bend the keyboard ribbon cable.






C. Top Cover Module
D. Keyboard

- 9 Screws

Disassembly

Figure 10 RAM Module Removal (cont'd.)

- f. Disconnect the keyboard ribbon cable from the locking collar socket by using a small flat-head screwdriver to pry the locking collar pins away from the base.
 - g. Remove the keyboard and the memory sockets will be visible.
 - h. Gently pull the two release latches on the sides of the memory socket(s) in the direction indicated below.
5. Disconnect the keyboard ribbon cable **10** from the locking collar socket **11** by using a small flat-head screwdriver to pry the locking collar pins **12** away from the base. (*Figure 10c*).
 6. Remove the keyboard and the memory sockets **13** & **14** will be visible.
 7. Gently pull the two release latches (**15** & **16**) on the sides of the memory socket(s) in the direction indicated below.
 8. The RAM module **17** will pop-up, and you can remove it.
 9. Pull the latches to release the second module if necessary.
 10. Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
 11. The module's pin alignment will allow it to only fit one way. Make sure the module is seated as far into the slot as it will go. **DO NOT FORCE** the module; it should fit without much pressure.
 12. Press the module in and down towards the mainboard until the slot levers click into place to secure the module.
 13. Replace the bay cover and screws.
 14. Restart the computer to allow the BIOS to register the new memory configuration as it starts up.

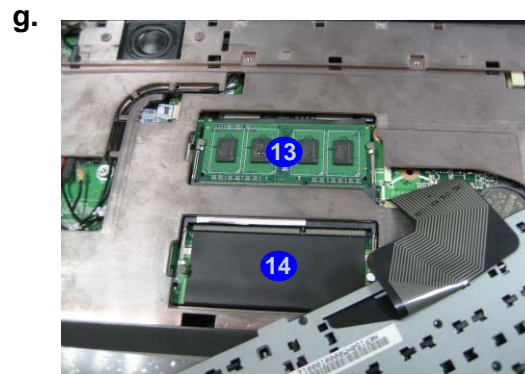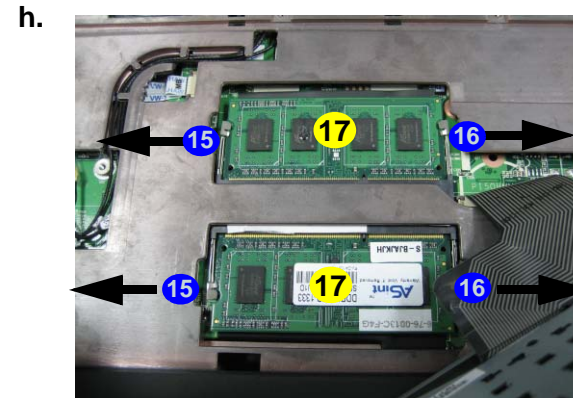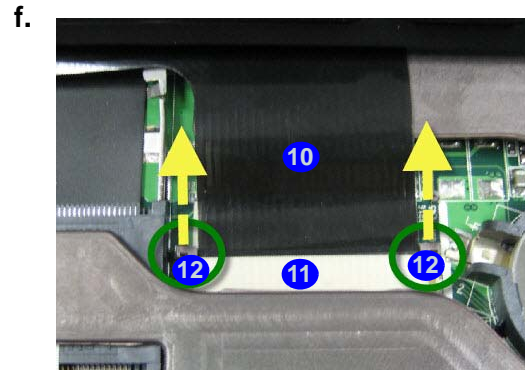

17. RAM Modules




Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.

Removing and Installing the Processor

Processor Removal Procedure

1. Turn **off** the computer, remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 11](#)).
2. Remove screws **1** - **4** from the heat sink unit in the order indicated on the label (i.e screw 4 first through to screw 1 last [Figure 11a](#)).
3. Carefully (it may be hot) remove the heat sink unit **5** ([Figure 11b](#)).

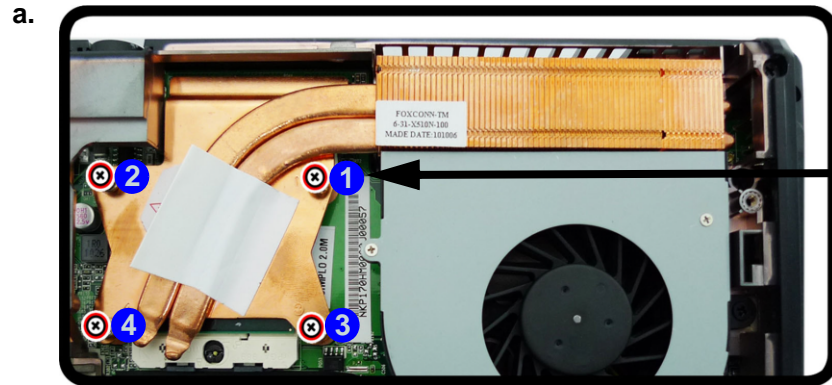

Note: Loosen the screws in the reverse order 4-3-2-1 as indicated on the label.

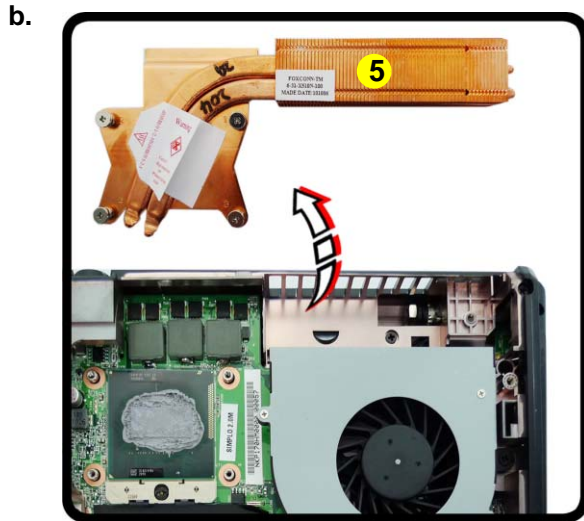


Figure 11
Processor Removal Procedure

- a. Remove the screws in the correct order.
- b. Carefully remove the heat sink unit.



CPU Warning

In order to prevent damaging the contact pins when removing the CPU, it is necessary to first remove the WLAN module from the computer.




5. Heat Sink Unit

- 4 Screws

Disassembly

Figure 12 Processor Removal (cont'd)

- c. Turn the release latch to unlock the CPU.
- d. Lift the CPU out of the socket.

4. Turn the release latch **6** towards the unlock symbol , to release the CPU (**Figure 12c**).
5. Carefully (it may be hot) lift the CPU **A** up out of the socket (**Figure 12d**).
6. See [page 2 - 17](#) for information on inserting a new CPU.
7. When re-inserting the CPU, pay careful attention to the pin alignment, it will fit only one way (DO NOT FORCE IT!).

c.




Unlock



Lock

d.

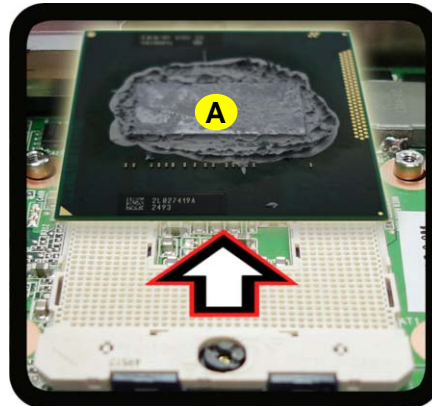

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



A. CPU

Processor Installation Procedure


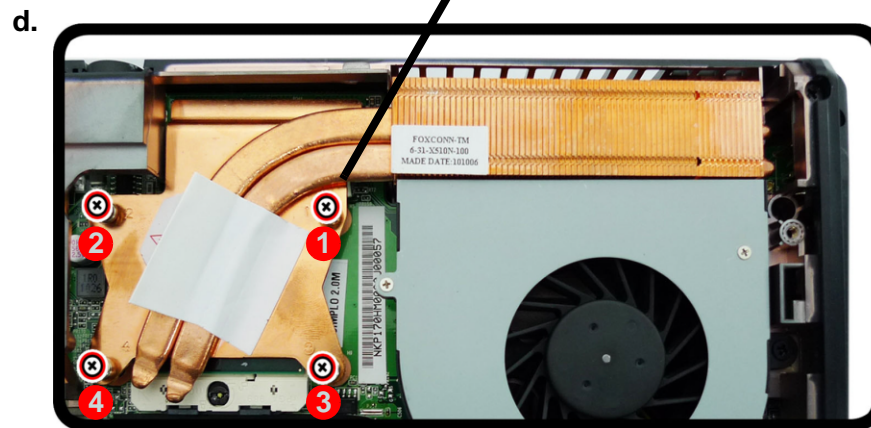
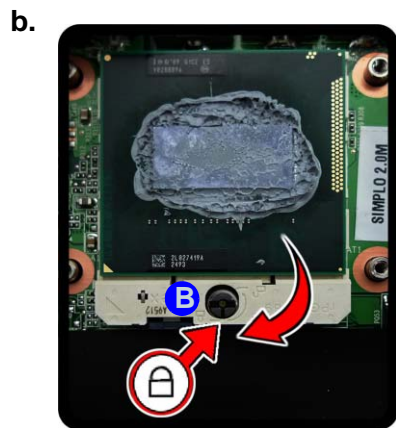
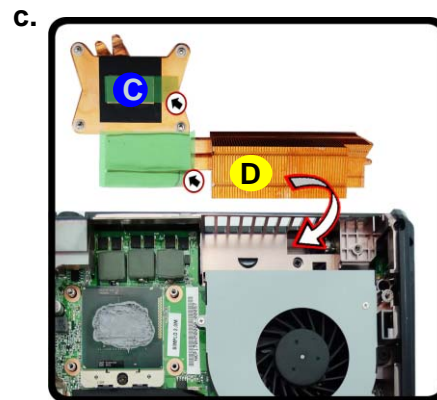
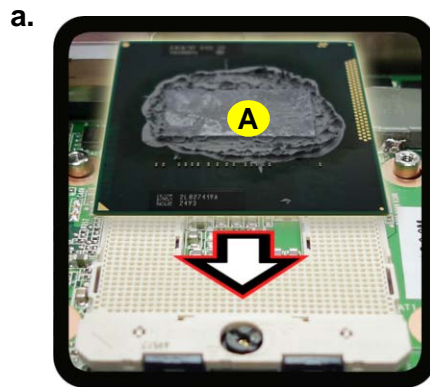

1. Insert the CPU **A**, pay careful attention to the pin alignment (*Figure 13a*), it will fit only one way (DO NOT FORCE IT!), and turn the release latch **B** towards the lock symbol  (*Figure 13b*).
2. **Remove the sticker C** (*Figure 13c*) from the heat sink unit.
3. Insert the heat sink unit **D** as indicated in *Figure 13c*.
4. Tighten the CPU heat sink screws in the order **1**, **2**, **3** & **4** (the order as indicated on the label and *Figure 13d*).
5. Replace the CPU fan, component bay cover and tighten the screws (*page 2 - 15*).

Figure 13
Processor Installation

- a. Insert the CPU.
- b. Turn the release latch towards the lock symbol.
- c. Remove the sticker from the heat sink unit and insert the heat sink.
- d. Tighten the screws.



Note:
Tighten the screws in the order 1-2-3-4 as indicated on the label.



A. CPU
D. Heat Sink

- 4 Screws



Disassembly

Figure 14
**Wireless LAN
Module Removal**

- The Wireless LAN module will be visible at point 1 under the keyboard
- Disconnect the cables and remove the screw.
- The WLAN module will pop up.
- Lift the WLAN module out.

Removing the Wireless LAN Module

- Turn off the computer, remove the battery ([page 2 - 5](#)) and the keyboard ([page 2 - 13](#)).
- The Wireless LAN module will be visible at point 1 under the keyboard ([Figure 14a](#)).
- Carefully disconnect cables 2 - 3, then remove screw 4 from the module socket ([Figure 14b](#)).
- The Wireless LAN module 5 will pop-up ([Figure 14c](#)).
- Lift the Wireless LAN module ([Figure 14d](#)) up and off the computer.

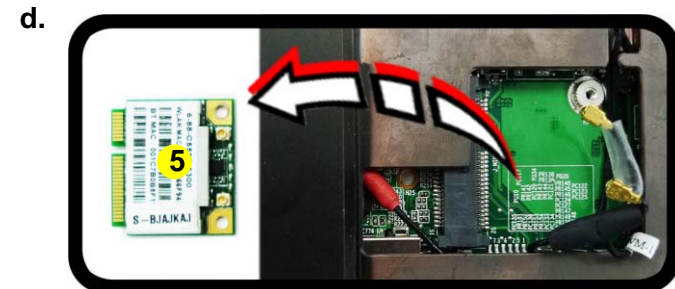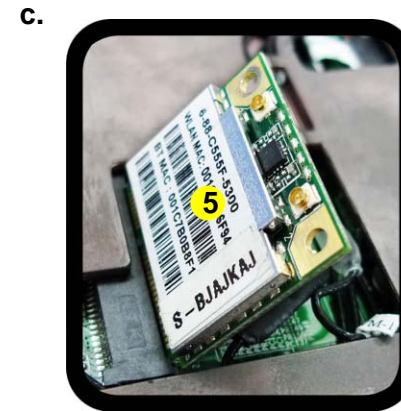

5. WLAN Module

- 1 Screw

Removing the MSATA Module

1. Turn off the computer, remove the battery (page 2 - 5), and component bay cover (page 2 - 11).
2. Locate the module, it is visible at point ① (Figure 15a).
3. Carefully disconnect the cable ② and remove the screw ③ from the module (Figure 15b).
4. Lift the module ④ up and off the computer (Figure 15b).


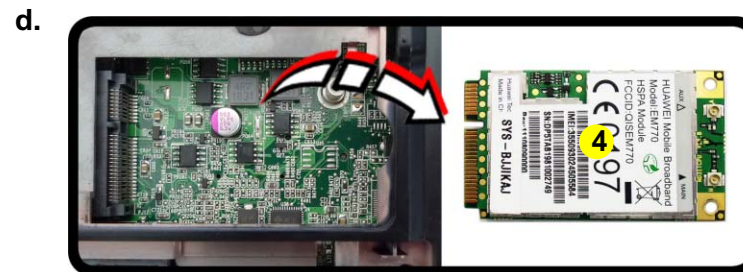


Figure 15
MSATA Module
Removal

- a. Remove the screw.
- b. Disconnect the cable and remove the screw.
- c. Lift the 3G module up off the socket.

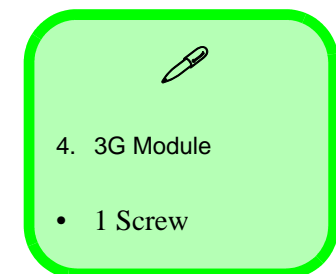

Disassembly

Figure 16

Video Card
Removal Procedure

- Remove the screws in the correct order.
- Carefully remove the heat sink units.
- Remove the video card screws. The video card will pop up.
- Remove the video card.



Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



8 & 9. Heat Sink Units
12. Video Card


- 9 Screws

Removing and Installing the Video Card



Video Card Removal Procedure

- Turn off the computer, turn it over and remove the battery ([page 2 - 5](#)) and component cover ([page 2 - 11](#)).
- Remove screws **1** - **7** from the heat sink unit in the order indicated on the label (i.e screw **7** first through to screw **1** last) ([Figure 16a](#)).
- Carefully (**it may be hot**) remove the heat sink units **8** & **9** ([Figure 16b](#)).
- Remove screws **10** & **11** from the video card. The video card **12** will pop up ([Figure 16c](#)).
- Remove the video card **12** ([Figure 16d](#)).

a.

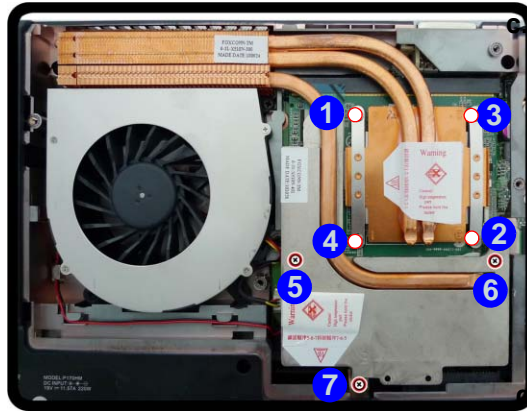



c.

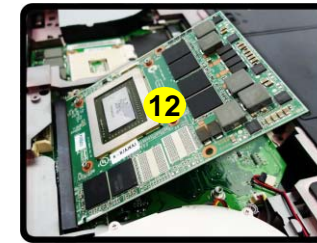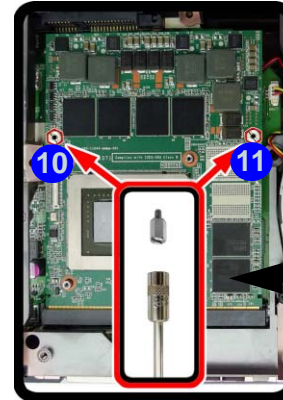


Note:

Please use a hexagonal screwdriver to remove screws **10** & **11**.

b.

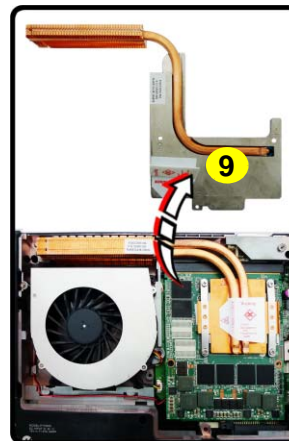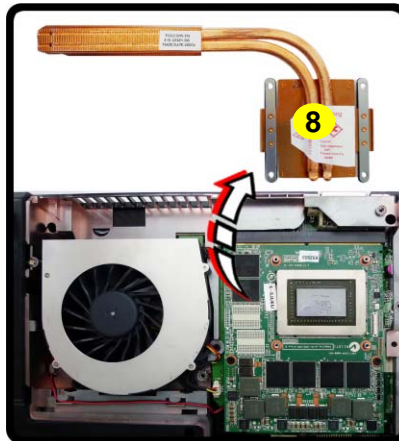

d.


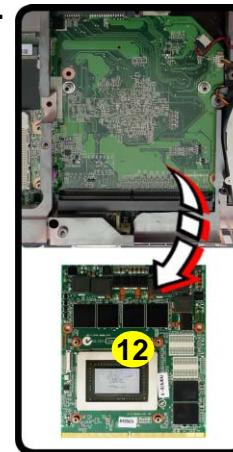
Heat Sink Screw Removal
and Insertion

Remove the screws from the heat sink in the order indicated here: 7-6-5-4-3-2-1.

When tightening the screws, make sure that they are tightened in the order: 1-2-3-4-5-6-7.

Installing a New Video Card

1. Prepare to fit the video card **12** into the slot by holding it at about a 30° angle (*Figure 17e*).
2. The card needs to be fully into the slot, and the video card and socket have a guide-key and pin which align to allow the card to fit securely (*Figure 17f*).
3. Fit the connectors firmly into the socket, straight and evenly.

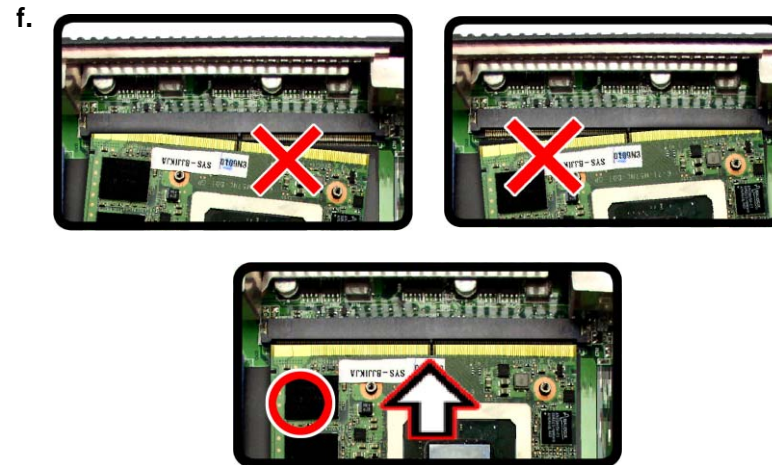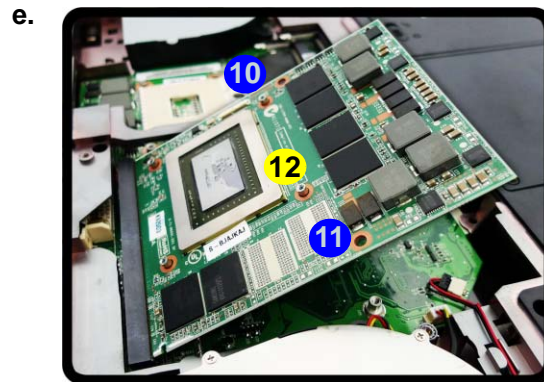

4. DO NOT attempt to push one end of the card in ahead of the other.
5. The card's pin alignment will allow it to only fit one way. **Make sure the module is seated as far into the socket as it will go** (none of the gold colored contact should be showing). DO NOT FORCE the card; it should fit without much pressure.
6. Secure the card with screws **10** & **11** (*Figure 16 on page 2 - 20*).
7. Place the heat sink back on the card, and secure the screws in the order indicated in *Figure 16 on page 2 - 20*.
8. Attach the video card fan and secure with the screws as indicated in *Figure 16 on page 2 - 20*.
9. Reinsert the component bay cover, and secure with the screws as indicated in *Figure 9 on page 2 - 13*.

Figure 17
Installing a New Video Card

- e. Insert the video card at a 30 degree angle.
- f. Fit the connectors straight and even, and secure the card with screws **10** & **11**.



Caution

The heat sink, and video card area in general, contains parts which are subject to high temperatures. Allow the area time to cool before removing these parts.



12. Video Card

- 2 Screws

Appendix A: Part Lists

This appendix breaks down the *P150EM/P151EM1* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

Table A-1
**Part List Illustration
Location**

Parts	
Top with Fingerprint (P150EM)	<i>page A - 3</i>
Top without Fingerprint (P150EM)	<i>page A - 4</i>
Top with Fingerprint (P151EM1)	<i>page A - 5</i>
Top without Fingerprint (P151EM1)	<i>page A - 6</i>
Bottom	<i>page A - 7</i>
LCD	<i>page A - 8</i>
COMBO	<i>page A - 9</i>
DVD-Dual Drive	<i>page A - 10</i>
HDD	<i>page A - 11</i>
2nd HDD	<i>page A - 12</i>

Top with Fingerprint (P150EM)

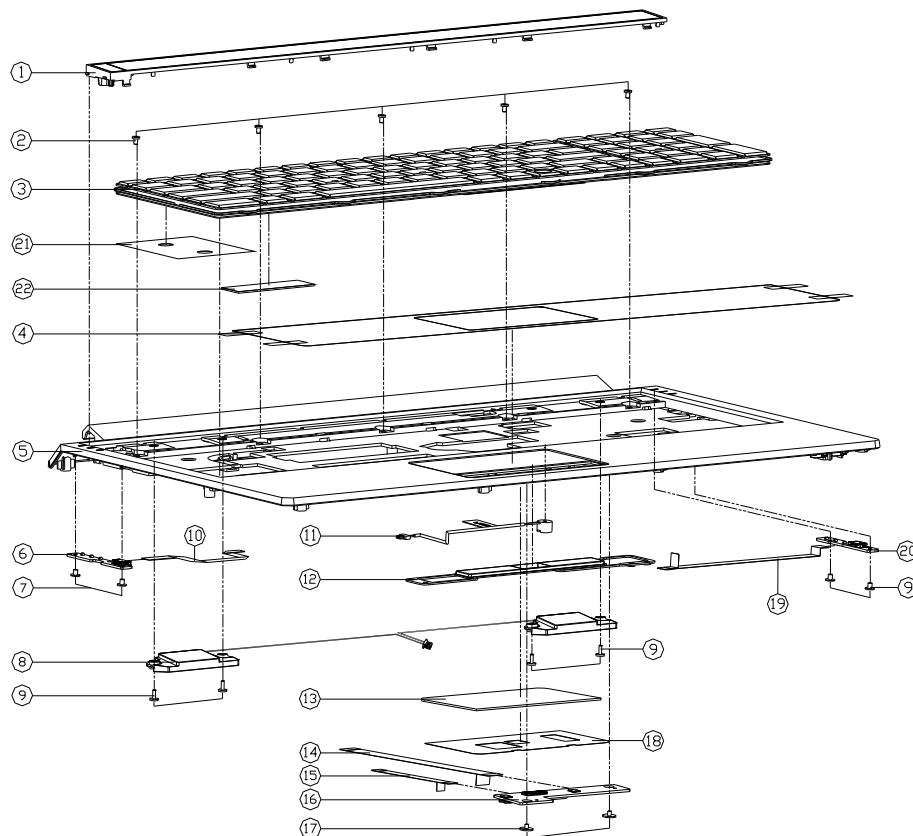


Figure A - 1
Top with
Fingerprint
(P150EM)

ITEM	PART NAME	PART NO	REMARK
1	TOP CENTER COVER MODULE P150EM	6-42-P15E2-201	
2	SCREW M2X3 KI BZ ICT NY (OD=44.5,DT=8.4)	6-35-B6120-3RD	
3	KEYBOARD MYLAR (75X70X0.1) P170EM	6-80-P2701-010-3	
4	TOP PROTECT FILM SH71S P150EM	6-40-X5108-010	
5	TOP CASE MODULE (CONYD SPEAKER) P150EM	6-39-P15E2-012-N	
6	INDICATOR LED BOARD R FOR MIOURIGHT KEYBOARD V20 P150EM	6-77-P15EK-D22	
7	SCREW M2X3 KI NI ICT NY (OD=44.5,DT=8.4)	6-35-B1120-3RE	
8	SPONGE FRONT RL SHD 152 2BY #1 (E0988A) P150EM	6-23-5P15E-0S1	
9	SCREW M2X6.2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
10	FFC CABLE FOR MIO TO LED L BOARD GPIN P150EM (HD)	6-43-X5100-073-1	
11	KEYBOARD FILM (75X70X0.1) P170EM (HD)	6-23-EM540-012-2	
12	CLICK BUTTON W/FINGERPRINT PC-ABS P150EM	6-42-P1502-010	
13	TOUCH PAD SYNAPTICS TM-0146-003 MULTI-FES	6-49-C4802-010	
14	FFC CABLE FOR CLICK BOARD TO MIO GPIN P150EM (HD)	6-43-X5100-062-1	
15	FFC CABLE FOR TP TO CLICK BOARD GPIN P150EM (HD)	6-43-X5102-011-1	
16	CLICK BOARD V4.0 (W/FINGER) P150EM	6-77-P15E2-004	
17	SCREW M2X2 KI BK/2 ICT NY(K98,T=0.6)	6-35-B6120-2RE	
18	TOP TOUCH PAD MYLAR PET P150EM	6-40-X5102-010	
19	FFC CABLE FOR MIO TO LED R BOARD GPIN P150EM (HD)	6-43-X5100-013-1	
20	INDICATOR LED BOARD L FOR MIOURIGHT KEYBOARD V20 P150EM	6-77-P15EK-D12	
21	KEYBOARD MYLAR (75X70X0.1) P170EM	6-40-P17E2-010	
22	SPONGE CR 45X6X0.5T P170EM	6-47-0019A-007	

A.Part Lists

Top without Fingerprint (P150EM)

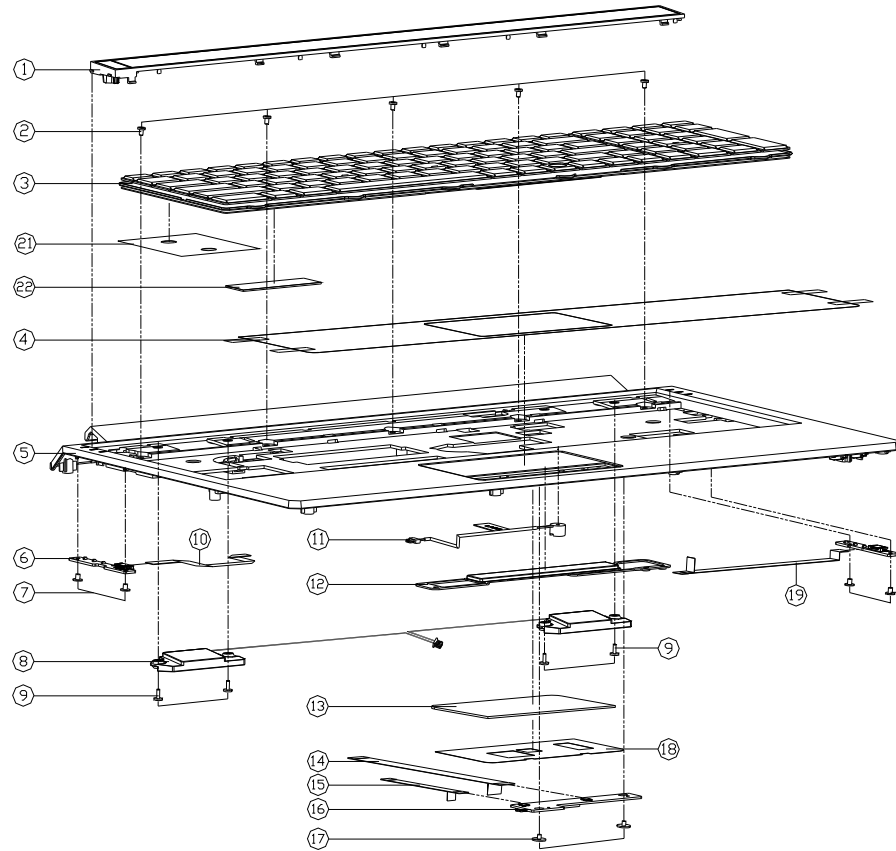


Figure A - 2
Top without Fingerprint
(P150EM)

ITEM	PART NAME	PART NO	REMARK
1	TOP CENTER COVER MODULE P150EM	6-42-P15E2-201	
2	SCREW M2x3 KI BZ ICT NY (00=84.5,01=04)	6-35-B6120-3RD	
3	KEYBOARD MYLAR (75*70*0.1) P170EM	6-80-P2701-010-3	
4	TOP PROTECT FILM SH71S P150EM	6-40-X5108-010	
5	TOP CASE MODULE (W/O/D SPEAKER) P150EM	6-39-P15E2-012-N	
6	INDICATOR LED BOARD FOR MIDDLE KEYBOARD V2A P150EM	6-77-P15EK-D22	
7	SCREW M2x3 KI NI ICT NY (00=84.5,01=04)	6-35-B1120-3RE	
8	SPEAKER FROM RAL SH20 152 22W 41 TERRINA P150EM	6-23-5P15E-0S1	
9	SCREW M2x2.5 NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
10	FFC CABLE FOR NB TO LED L BOARD 6PIN P150EM	6-43-X5100-073-1	
11	KEYBOARD MYLAR (75*70*0.1) P170EM	6-80-P2701-010-3	
12	CLICK BUTTON W/O FINGER PCBAS CHANGE P150EM	6-42-X5102-013	
13	TOUCH PAD SYNAPTICS TM-01146-003 MULTI-GES	6-49-C4802-010	
14	FFC CABLE FOR CLICK BOARD TO NB (OPIN) P150EM	6-43-X5100-062-1	
15	FFC CABLE FOR TP TO CLICK BOARD 6PIN 600	6-43-X5102-011-1	
16	CLICK BOARD V4.0 (W/O FINGER) P150EM	6-77-P15E2-D04-1	
17	SCREW M2x2.5 KI BK/Z ICT NY(00=1.06)	6-35-B6120-2RE	
18	TOP TOUCH PAD MYLAR PET P150EM	6-40-X5102-010	
19	FFC CABLE FOR NB TO LED R BOARD 6PIN P150EM 600	6-43-X5100-013-1	
20	INDICATOR LED BOARD FOR MIDDLE KEYBOARD V2A P150EM	6-77-P15EK-D12	
21	KEYBOARD MYLAR (75*70*0.1) P170EM	6-80-P2701-010-3	
22	SPONGE CR 45*6*0.5T P170EM	6-47-0019A-007	

Top with Fingerprint (P151EM1)

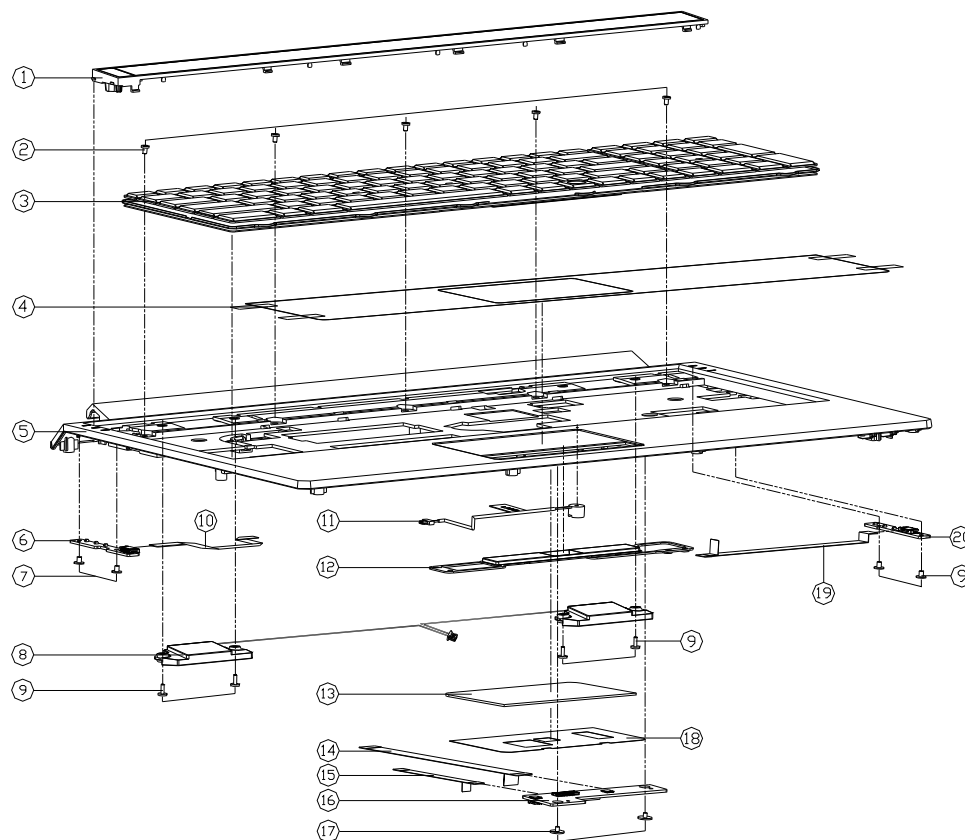



Figure A - 3
Top with
Fingerprint
(P151EM1)

ITEM	PART NAME	PART NO	REMARK
1	TOP CENTER COVER MODULE (CHANGE) P151EM1	6-42-P1512-102	
2	SCREW M2x2L KI BZ ICT NY (DD=44.5,DT=04)	6-35-B6120-3RD	
3	K/8 USA (BLACK) FRAME (US) MODULE P151EM1	6-79-P151MIK-010	
4	TOP PROTECT FILM SH71S P151EM1	6-40-XS108-010	
5	TOP CASE MODULE (MKYD SPEAKER) P151EM1	6-39-P15E2-021-N	
6	INDICATORY BOARD V2.0 P151EM1	6-77-P15EK-DO2	
7	SCREW M2x3L KI NI ICT NY (DD=44.5,DT=04)	6-35-B1120-3RE	
8	SPK CABLE FRONT RL SH20 TS2 22W F1 (ECP104) P151EM1	6-23-5P15E-0S1	
9	SCREW M2x2L NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
10	FFC CABLE FOR NB TO LED.L BOARD SPIN P151EM1 (HD)	6-43-X5100-073-1	
11	MEMBRANE SWITCH WITH FINGERPRINT SENSOR (ABS) P151EM1	6-23-EMS4G-012-2	
12	CLICK BUTTON W/FINGERPRINT PC+ABS P151EM1	6-42-P15E2-010	
13	TOUCH PAD SYNAPTICS TM-0146-003 MULTI-GES	6-49-C4802-010	
14	FFC CABLE FOR CLICK BOARD TO NB (UPIN) P151EM1 (HD)	6-43-X5100-062-1	
15	FFC CABLE FOR TP TO CLICK BOARD SPIN P151EM1 (HD)	6-43-X5102-011-1	
16	CLICK BOARD V4.0 (W/FINGER) P151EM1	6-77-P15E2-004-A	
17	SCREW M2x2L KI BK/2 ICT NY (DD=44.5,DT=04)	6-35-B6120-2RE	
18	TOP TOUCH PAD MYLAR PET P151EM1	6-40-XS102-010	
19	FFC CABLE FOR NB TO LED.R BOARD SPIN P151EM1 (HD)	6-43-X5100-013-1	
20	FUNCTION LED BOARD V2.0 P151EM1	6-77-P15E7-DO2	

A.Part Lists


Top without Fingerprint (P151EM1)

Figure A - 4
Top without Fingerprint
(P151EM1)

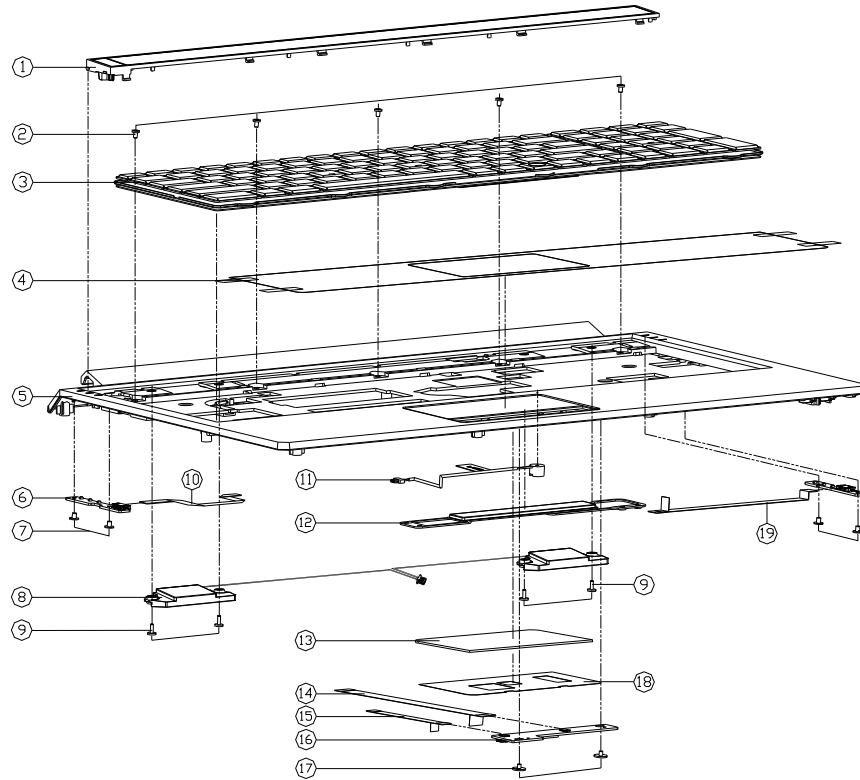

ITEM	PART NAME	PART NO	REMARK
1	TOP CENTER COVER MODULE (CHANGED) P151EM1	6-42-P1512-102	
2	SCREW M2X2. KI BZ ICT NY (00-#45,01-04)	6-35-B6120-3RD	
3	K/A USA (BLACK) FRAME (03) MODULE P151EM1	6-79-P151MK-010	
4	TOP PROTECT FILM SH71S P151EM1	6-40-X5108-010	
5	TOP CASE MODULE (ON/OFF SPEAKER) P151EM1	6-39-P15E2-021-N	
6	INDICATORY BOARD V2.0 P151EM1	6-77-P15EK-D02	
7	SCREW M2X2. KI NI ICT NY (00-#45,01-04)	6-35-B1120-3RE	
8	SPK/CABLE FRONT RL 5000 152 ZAV P151EM1 P151EM1	6-23-SP15E-051	
9	SCREW M2X2L KI NI ICT NY FOR SPEAKER	6-35-Z1120-6R2	
10	FFC CABLE FOR NB TO LED L BOARD 6PIN P151EM1	6-43-X5100-073-1	
11	CLICK BUTTON V4.0 FINGERPRINT PEAKS (CHANGED) P151EM1 (白色)	6-23-EM54G-012-2	
12	CLICK BUTTON V4.0 FINGERPRINT PEAKS (CHANGED) P151EM1	6-42-P1512-032	
13	TOUCH PAD SYMPLECTICS TM-01146-003 MULTI-USE	6-49-C4802-010	
14	FFC CABLE FOR CLICK BOARD TO NB TOPIN P151EM1	6-43-X5100-062-1	
15	FFC CABLE FOR TP TO CLICK BOARD 6PIN P151EM1 (03)	6-43-X5102-011-1	
16	CLICK BOARD V4.0 (W/O FINGER) P151EM1	6-77-P15E2-004-1A	
17	SCREW M2X2L KI BK/2 ICT NY(08,1-06)	6-35-B6120-2RE	
18	TOP TOUCH PAD MYLAR PET P151EM1	6-40-X5102-010	
19	FFC CABLE FOR NB TO LED R BOARD 6PIN P151EM1 (03)	6-43-X5100-013-1	
20	FUNCTION LED BOARD V2.0 P151EM1	6-77-P15E7-D02	

Bottom

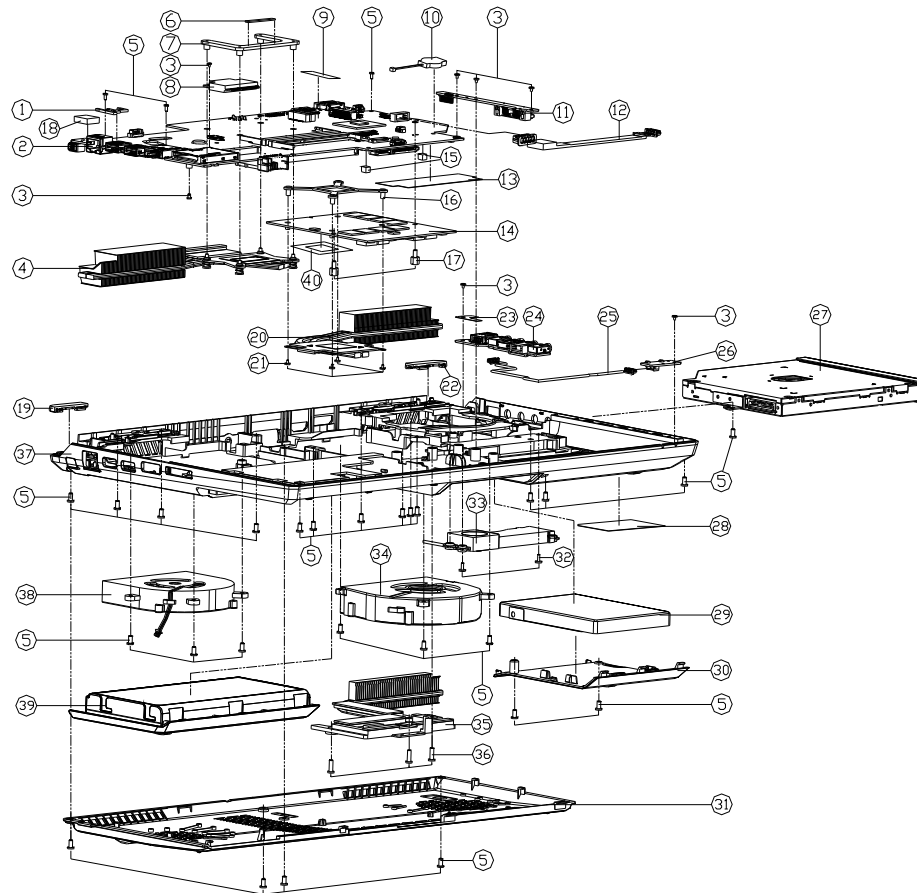


ITEM	PART NAME	PART NO	REMARK
1	POWER LED PWRON 04x40 P150EM	6-47-P15ES-010	
2	MAIN BOARD V5.0A P150EM	6-77-P15E-D05A	
2	MAIN BOARD V5.0A P150EM	6-77-P15E-D05A-1	
3	SCREW M4x4 KI NY ICT NY (00-845J1-84)	6-35-B1120-3RE	
4	CPU HEATSINK MODULE P150HM	6-31-X510N-102	
5	SCREW M2.5x6L K BZ ICT NY	6-35-B2125-6RA	
6	GLUE (EPOXY) FOR W/O MYLAR M50M	6-47-00190-35D	
7	CPU SUPPORT BRACKET SECC T145 P150HM	6-33-X510S-011	
8	W/OUT COMB GROUND FLOORING (ONS)	6-88-C555F-3300	(OPTION)
8	W/OUT COMB GROUND FLOORING (ONS)	6-88-C555F-700	(OPTION)
8	W/OUT COMB GROUND FLOORING (ONS)	6-88-M77C2-4200	(OPTION)
9	TAPE MYLAR (C)MYLAR M550J	6-40-M55J2-030	
10	ALL OVER IN DOWN V-CABLE 2MM K0000Y3000	6-23-22015-TC0	
11	DDD BRIDGE BOARD V2.0 P150EM	6-77-P15EN-D02	
12	W/RE CABLE FOR AUDIO BOARD TO HD TOP P150M	6-43-X5100-032-1	
13	MYLAR (EPOXY) FOR HD DATA HD TOP	6-40-X510S-010	
14	W/OUT COMB GROUND FLOORING (ONS)	6-77-X510L-101-2	
14	W/OUT COMB GROUND FLOORING (ONS)	6-77-X510L-201-2	
14	W/OUT COMB GROUND FLOORING (ONS)	6-77-X510L-101-3	
14	W/OUT COMB GROUND FLOORING (ONS)	6-77-X510L-201-3	
15	VGA SUPPORT RUBBER & SILICONE P150HM	6-47-X510S-010	
16	VGA SUPPORTER SUS430 X7200	6-33-X720S-040	
17	SCREW M2.5x6L KI NY FOR VGA (ARD)	6-35-Z1125-4R8-1	
18	RUBBER GROMMET SILICON FOR HD BOTTOM P150M	6-47-P15HS-010	
19	TOP HINGE COVER L PCHASS P150HM	6-42-P15E2-050	
19	TOP HINGE COVER L PCHASS P150HM	6-42-P151B-020	
20	GRANDIO HEATSINK MODULE CHANGE P150M	6-31-X510N-303	ONLY FOR M50-010
21	SCREW M4x3.5L KI112 (I-45) BZ ICT NY	6-35-B2116-3RS	
22	TOP HINGE COVER R PCHASS P150HM	6-42-P15E2-040	
22	TOP HINGE COVER R PCHASS P150HM	6-42-P151B-011	
23	AUDIO MYLAR FR83 P150HM	6-40-X510S-030	
24	AUDIO BOARD V2.0 P150EM	6-77-P15EB-D02	
25	W/RE CABLE FOR AUDIO BOARD TO HD TOP P150M	6-43-X5100-041	
26	LED BOARD V2.0 P150EM	6-77-P15E4-002	
27	SATA DVD SUPER MULTI ASSY (OPTION)	6-79-P150MD0-010	
27	SATA BLU-RAY WRITER ASSY (OPTION)	6-79-P150MDW-011	
27	SATA BLU-RAY COMBO ASSY (OPTION)	6-79-P150MDV-000	
27	W/O DDD ASS'Y P150HM	6-79-P150MD2-000	
28	PRODUCT LABEL FOR P150EM (CHANGE ADDRESS)	6-45-P150MD3-012	
28	PRODUCT LABEL FOR P150EM (CHANGE GUE)	6-45-P151C13-012	
29	W/O HDD ASS'Y P150HM	6-79-P150MD4-000	
29	W/O HDD ASS'Y P150HM	6-79-P150MD4-010	
29	2ND HDD CADDY ASSY W/HDD P150HM	6-79-P150MD4-030	
29	2ND HDD CADDY ASSY W/O HDD P150HM	6-79-P150MD4-040	
30	HDD COVER MODULE P150HM	6-42-X510J-102	
31	CPU COVER MODULE P150EM	6-42-P15EB-100	
32	SCREW M4x4 KI NY FOR SPEAKER	6-35-Z1120-6R2	
33	SPEAKER SUPPORTER BRACKET FOR P150EM P150M	6-23-SPISE-0W1	
34	W/OUT COMB GROUND FLOORING (ONS)	6-31-X720S-101	
35	VIBRATION GSD HEATSINK MODULE P150EM	6-31-P15EN-300	
36	SCREW M4x4 KI112 (I-45) BZ KI NY	6-35-B6120-5R0	
37	BOTTOM CASE MODULE P150EM	6-39-P15E3-012	
38	W/OUT COMB GROUND FLOORING (ONS)	6-23-AX510-012	
39	W/O HDD ASS'Y P150HM	6-47-X510S-4J72	(OPTION)
39	W/O HDD ASS'Y P150HM	6-47-X510S-4D72	(OPTION)
40	MYLAR VGA CHIP NV P270WM	6-40-P270S-030	

Figure A - 5
Bottom

LCD


Figure A - 6
LCD

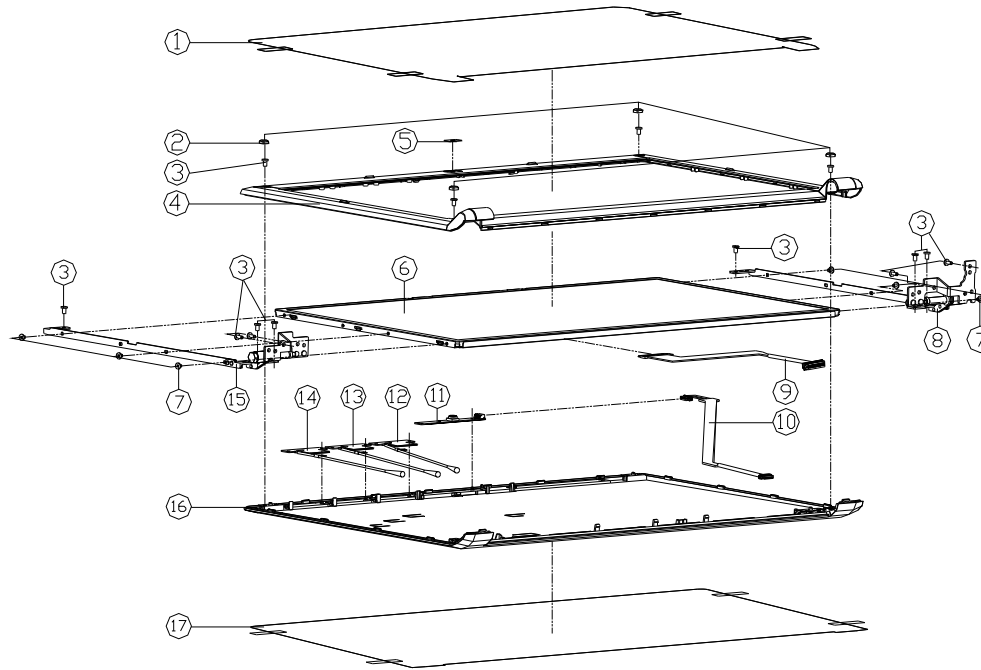

ITEM	PART NAME	PART NO	REMARK
1	LCD FRONT COVER PROTECTION FILM (P150EH)	6-40-B51M8-010	
2	LCD HINGE SCREW RUBBER SLICEN P150HM	6-47-X5101-021	
3	SCREW M2.5x5L KI BK/YZ ICT NY	6-39-B6125-5RA	
4	LCD FRONT COVER MODULE (CHANGED) P150HM	6-39-X5101-013	
5	CCD LENS PC P150HM	6-40-X5101-010	
5	W/D CCD LENS PC P150HM	6-40-X5101-020	
6	LCD BACK COVER PROTECTION FILM (P150EH)	6-50-L-B257-G05	
6	LCD BACK COVER PROTECTION FILM (P150EH)	6-50-L-B257-L05	
6	LCD BACK COVER PROTECTION FILM (P150EH)	6-50-L-B257-L02	
7	SCREW M2x3L KI NI ICT NY (304#45.01#A)	6-35-B1120-3RE	
8	LCD HINGE R SECC P150EH	6-33-P15E1-0R0	FOR P150EH
8	LCD HINGE R SECC P150HM	6-33-X5101-012	FOR P150HM
9	WIRE CABLE FOR LCD TO MAIN UNIT (CONDUCTIVE CONTACT) P150HM	6-43-X5101-01-3A	FOR P150EH
9	WIRE CABLE FOR LCD TO MAIN UNIT (CONDUCTIVE CONTACT) P150HM	6-43-X5101-01-3J	FOR P150EH
10	WIRE CABLE FOR CCD SP P150HM (HL)	6-43-X510T-011	
11	WIRE CABLE FOR CCD SP P150HM (HL)	6-88-P17EC-4900	
12	WIRE CABLE FOR LCD TO MAIN UNIT (CONDUCTIVE CONTACT) P150HM	6-23-7X510-032	
13	WIRE CABLE FOR LCD TO MAIN UNIT (CONDUCTIVE CONTACT) P150HM	6-23-7X510-042	
14	WIRE CABLE FOR LCD TO MAIN UNIT (CONDUCTIVE CONTACT) P150HM	6-23-7X510-022	
15	LCD HINGE L SECC P150EH	6-33-P15E1-0L0	FOR P150EH
15	LCD HINGE L SECC P150HM	6-33-X5101-022	FOR P150EH
16	LCD BACK COVER MODULE P150HM	6-39-X5101-022	FOR P150EH
16	LCD BACK COVER MODULE P150HM	6-39-P1511-021	FOR P150EH
17	BACK COVER PRO SH715 P150HM	6-40-X5101-070	


DVD-Dual Drive

Figure A - 8
DVD-Dual Drive

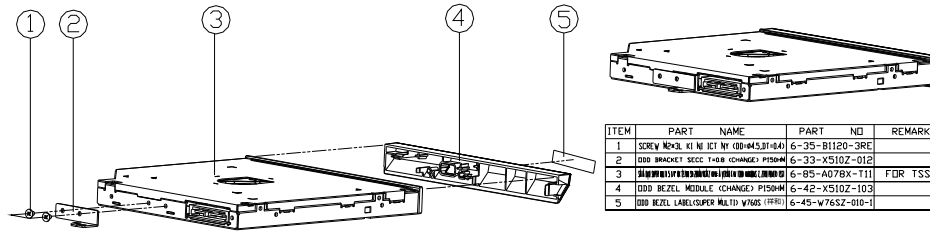

ITEM	PART NAME	PART NO	REMARK
1	SCREW M3X4 KI NI (CL) NY (00)M5J14-A	6-35-B1120-3RE	
2	DDD BRACKET SECC (FDR) (CHANGE) P150M4	6-33-X510Z-012	
3	DDD BEZEL MODULE (CHANGE) P150M4	6-85-A078X-111	FDR TSST
4	DDD BEZEL MODULE (CHANGE) P150M4	6-42-X510Z-103	
5	DDD BEZEL LABEL(SUPER MULTI) W765Z (FR)	6-45-W765Z-010-1	

HDD

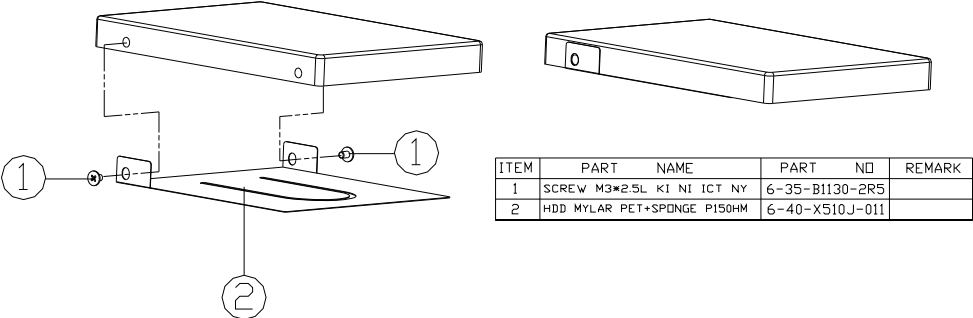


ITEM	PART NAME	PART NO	REMARK
1	SCREW M3*2.5L KI NI ICT NY	6-35-B1130-2R5	
2	HDD MYLAR PET+SPONGE P150HM	6-40-X510J-011	

Figure A - 9
HDD

2nd HDD

Figure A - 10
2nd HDD

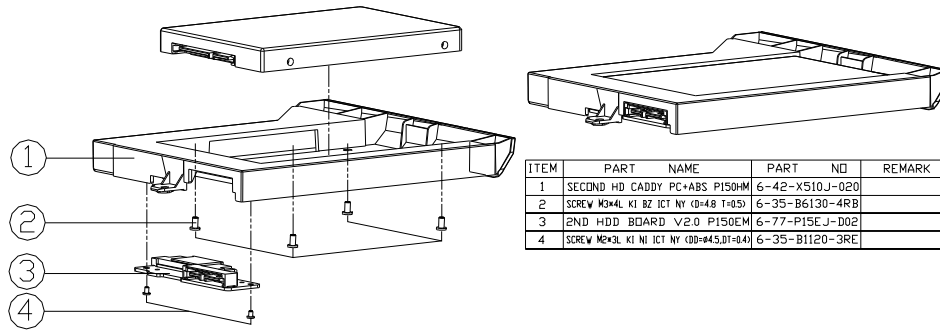

ITEM	PART NAME	PART NO	REMARK
1	SECOND HD CADDY PC*ABS P150HM	6-42-X510J-020	
2	SCREW M3*4L KI BZ ICT NY (D=4.8 T=0.5)	6-35-B6130-4RB	
3	2ND HDD BOARD V2.0 P150EM	6-77-P15EJ-D02	
4	SCREW M2*3L KI NI ICT NY (DD=#45,DT=0.4)	6-35-B1120-3RE	

Appendix B: Schematic Diagrams

This appendix has circuit diagrams of the *P150EM/P151EM1* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>PCH3/9 - DMI, FDI, PWRGD - Page B - 23</i>	<i>Power 1.5V/VTT_MEM - Page B - 44</i>
<i>TPM - Page B - 3</i>	<i>PCH 4/9 - LVDS, DDI, CRT - Page B - 24</i>	<i>Power IV, 1.8VS - Page B - 45</i>
<i>Processor 1/7 - Page B - 4</i>	<i>PCH 5/9 - PCI, USB, RSVD - Page B - 25</i>	<i>Power V-Core 1 - Page B - 46</i>
<i>Processor 2/7 - Page B - 5</i>	<i>PCH 6/9 - GPIO, CPU - Page B - 26</i>	<i>Power V-Core 2 - Page B - 47</i>
<i>Processor 3/7 - Page B - 6</i>	<i>PCH 7/9 - Power - Page B - 27</i>	<i>AC_In, Charger - Page B - 48</i>
<i>Processor 4/7 - Page B - 7</i>	<i>PCH 8/9 - Power - Page B - 28</i>	<i>Power 0.85VS - Page B - 49</i>
<i>Processor 5/7 - Page B - 8</i>	<i>PCH 9/9 - GND - Page B - 29</i>	<i>Audio Board - Page B - 50</i>
<i>Processor 6/7 - Page B - 9</i>	<i>USB+eSATA, USB Charging - Page B - 30</i>	<i>P150 ODD Board - Page B - 51</i>
<i>Processor 7/7 - Page B - 10</i>	<i>USB 2.0, CCD, Mini PCIE, LID - Page B - 31</i>	<i>P150 Click Board - Page B - 52</i>
<i>DDRIII CHA SO-DIMM_0 - Page B - 11</i>	<i>LED, Hotkey, LID SW, Fan - Page B - 32</i>	<i>P150 LED 1 Board - Page B - 53</i>
<i>DDRIII CHA SO-DIMM_1 - Page B - 12</i>	<i>RJ 45 - Page B - 33</i>	<i>P150 LED 2 Board - Page B - 54</i>
<i>DDRIII CHB SO-DIMM_0 - Page B - 13</i>	<i>Codec Realtek ALC892 - Page B - 34</i>	<i>P150 LED 3 Board - Page B - 55</i>
<i>DDRIII CHB SO-DIMM_1 - Page B - 14</i>	<i>APA2607-TPA2008D2 - Page B - 35</i>	<i>P170 HDD & ODD Board - Page B - 56</i>
<i>MXM PCI-E - Page B - 15</i>	<i>KBC-ITE IT8518E - Page B - 36</i>	<i>P170 LED Board - Page B - 57</i>
<i>Panel, Inverter, CRT - Page B - 16</i>	<i>Backlight Keyboard - Page B - 37</i>	<i>P170 Click Board - Page B - 58</i>
<i>1394_JMB380C - Page B - 17</i>	<i>mSATA, FAN, TP, FP, MULTI-CON - Page B - 38</i>	<i>P170 Fingerprint Board - Page B - 59</i>
<i>DVI - Page B - 18</i>	<i>Card Reader RTL8411 - Page B - 39</i>	<i>P170 Fingerprint Board - Page B - 59</i>
<i>Display Port - Page B - 19</i>	<i>USB 3.0 - Page B - 40</i>	<i>P150 HDD Board - Page B - 60</i>
<i>HDMI - Page B - 20</i>	<i>VDD3, VDD5 - Page B - 41</i>	<i>P150 LED Board_L - Page B - 61</i>
<i>PCH 1/9 - RTC, HDA, SATA - Page B - 21</i>	<i>5VS, 3.3VS, 1.5VS - Page B - 42</i>	<i>P150 LED Board_R - Page B - 62</i>
<i>PCH 2/9 - PCIE, SMBUS, CLK - Page B - 22</i>	<i>Power 1.05VS - Page B - 43</i>	<i>Power on Sequence - Page B - 63</i>

Table B - 1
**Schematic
Diagrams**




Version Note

The schematic diagrams in this chapter are based upon version 6-7P-P15EE-002. If your mainboard (or other boards) are a later version, please check with the Service Center for updated diagrams (if required).

System Block Diagram


Sheet 1 of 61
System Block
Diagram

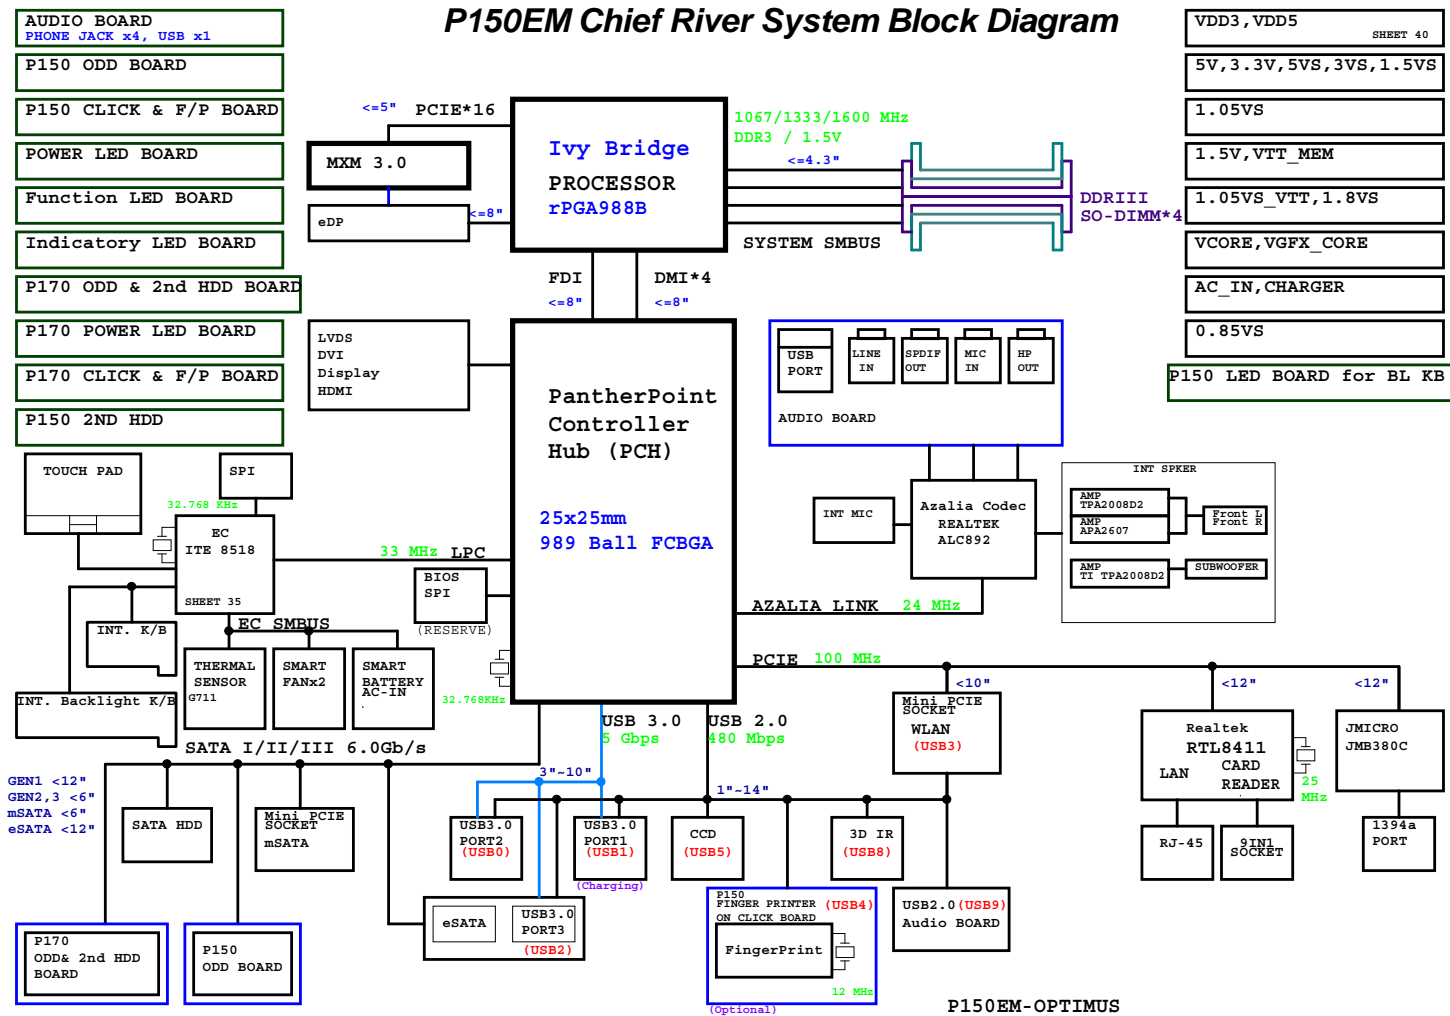

TPM

TPM 1.2

TPM Function 接続図


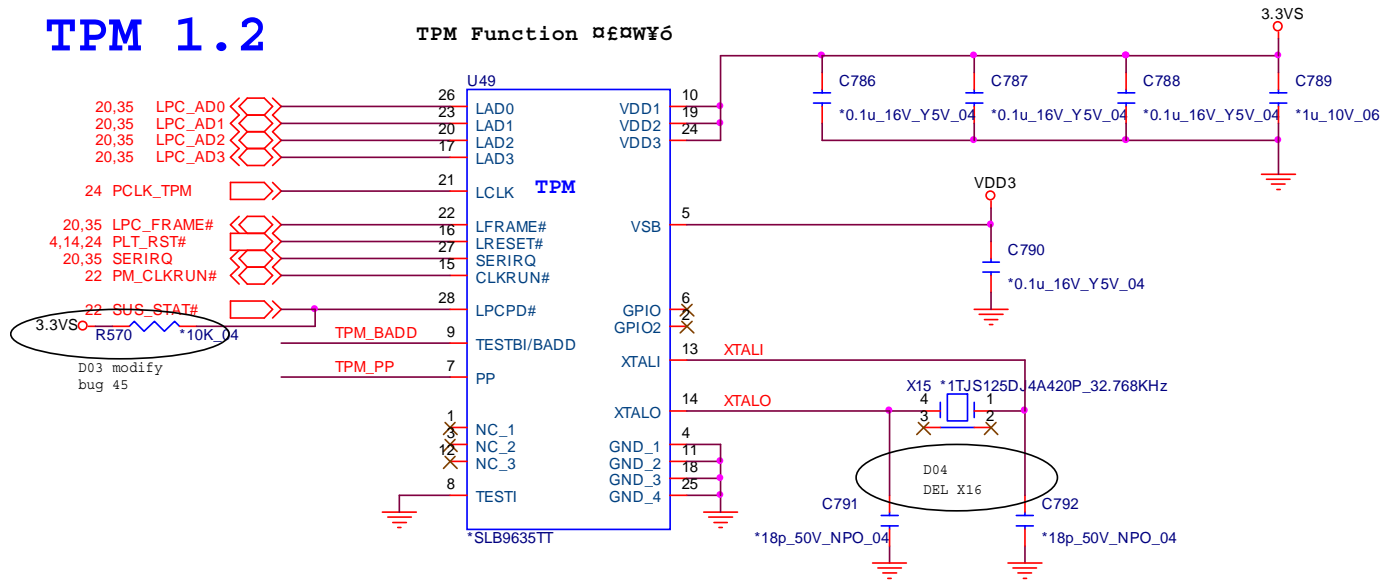


Asserted before entering S3

LPC reset timing:

LPCPD# inactive to LRST# inactive 32~96us

TPM_PP	Hi: ACCESS Low: NORMAL (Internal PD)
TPM_BADD	Hi: 4E/ 4F H Low: 2E/ 2F H

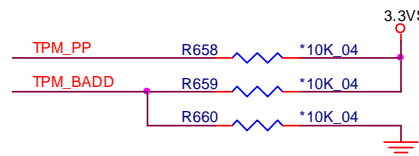

20,30,35,37,38,40,41,47 VDD3
4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,45,48 3.3VS


Sheet 2 of 61
TPM

Processor 1/7

Ivy Bridge Processor 1/7 (DMI,PEG,FDI)


B.Schematic Diagrams

Sheet 3 of 61
Processor 1/7


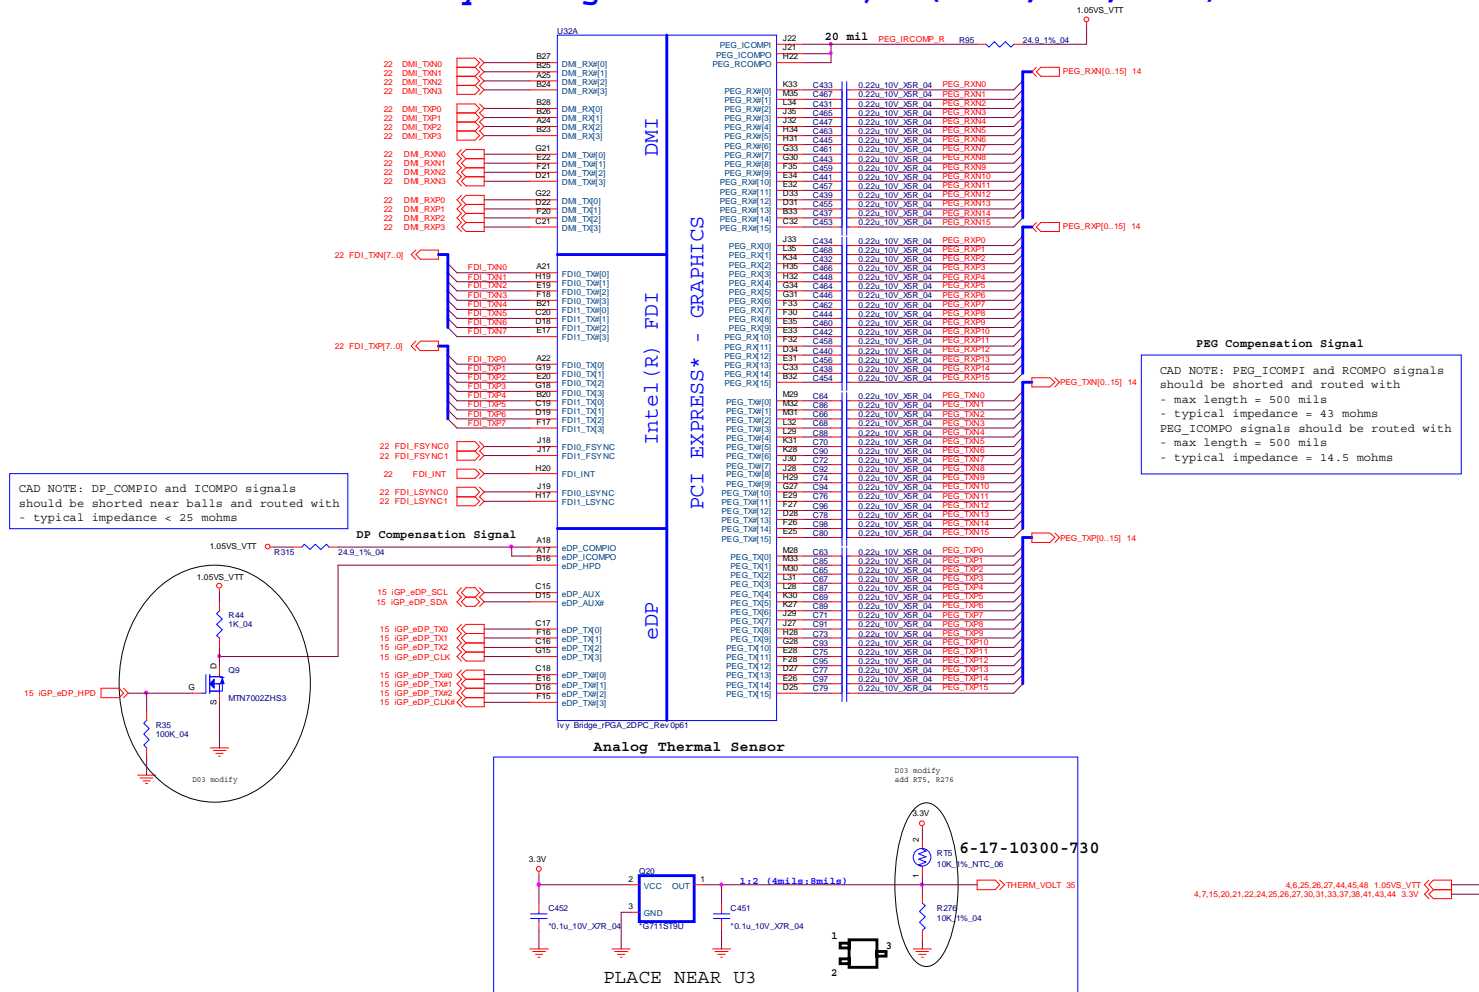


Processor 2/7


Ivy Bridge Processor 2/7 (CLK,MISC,JTAG)

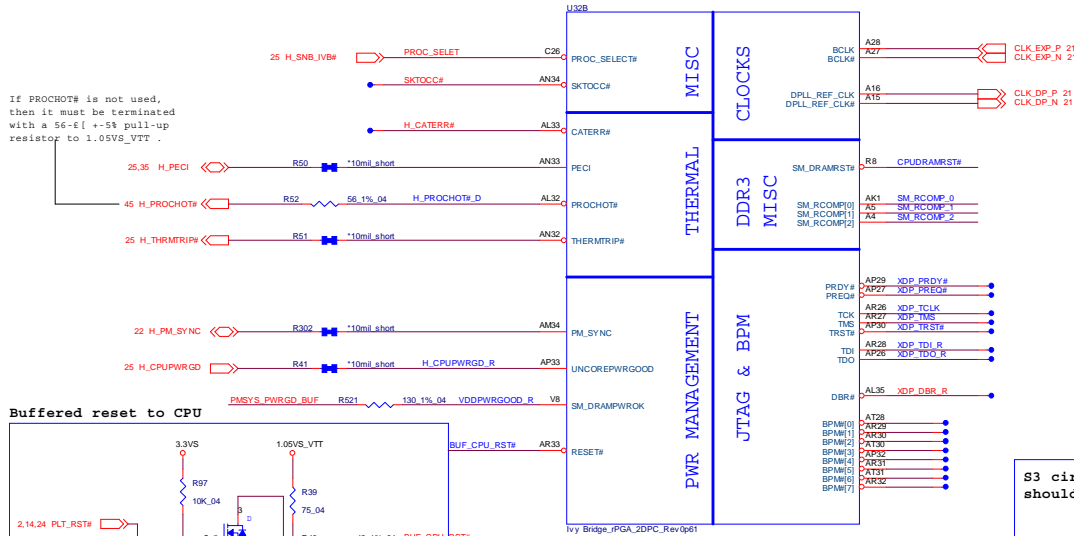


Buffered reset to CPU

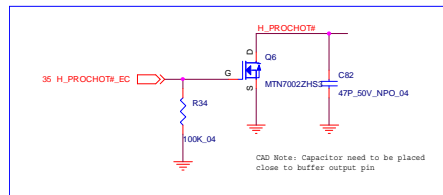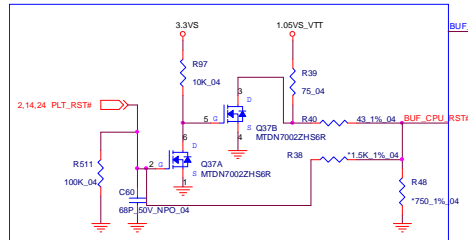




S3 circuit:- DRAM PWR GOOD logic

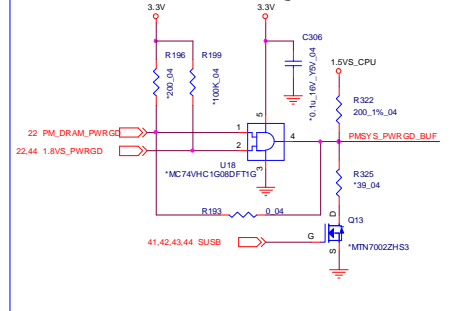

S3 circuit:- DRAM RST# to memory should be high during S3

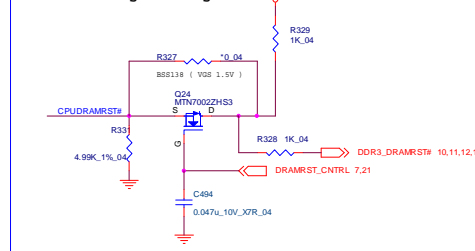

- 3.3VS 2,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,45,48
- 3.3V 3,7,15,20,21,22,24,25,26,27,30,31,33,37,38,41,43,44
- 1.5V 7,10,11,12,13,27,31,41,43
- 1.5VS_CPU 7,41
- 1.05VS_VTT 3,6,25,26,27,44,45,48

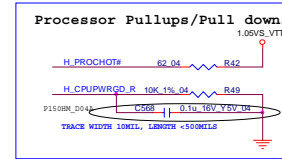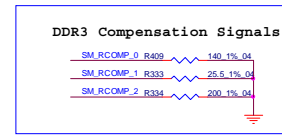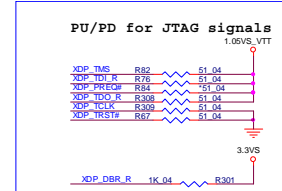


Sheet 4 of 61
Processor 2/7

B.Schematic Diagrams

Processor 4/7

Ivy Bridge Processor 4/7 (POWER)

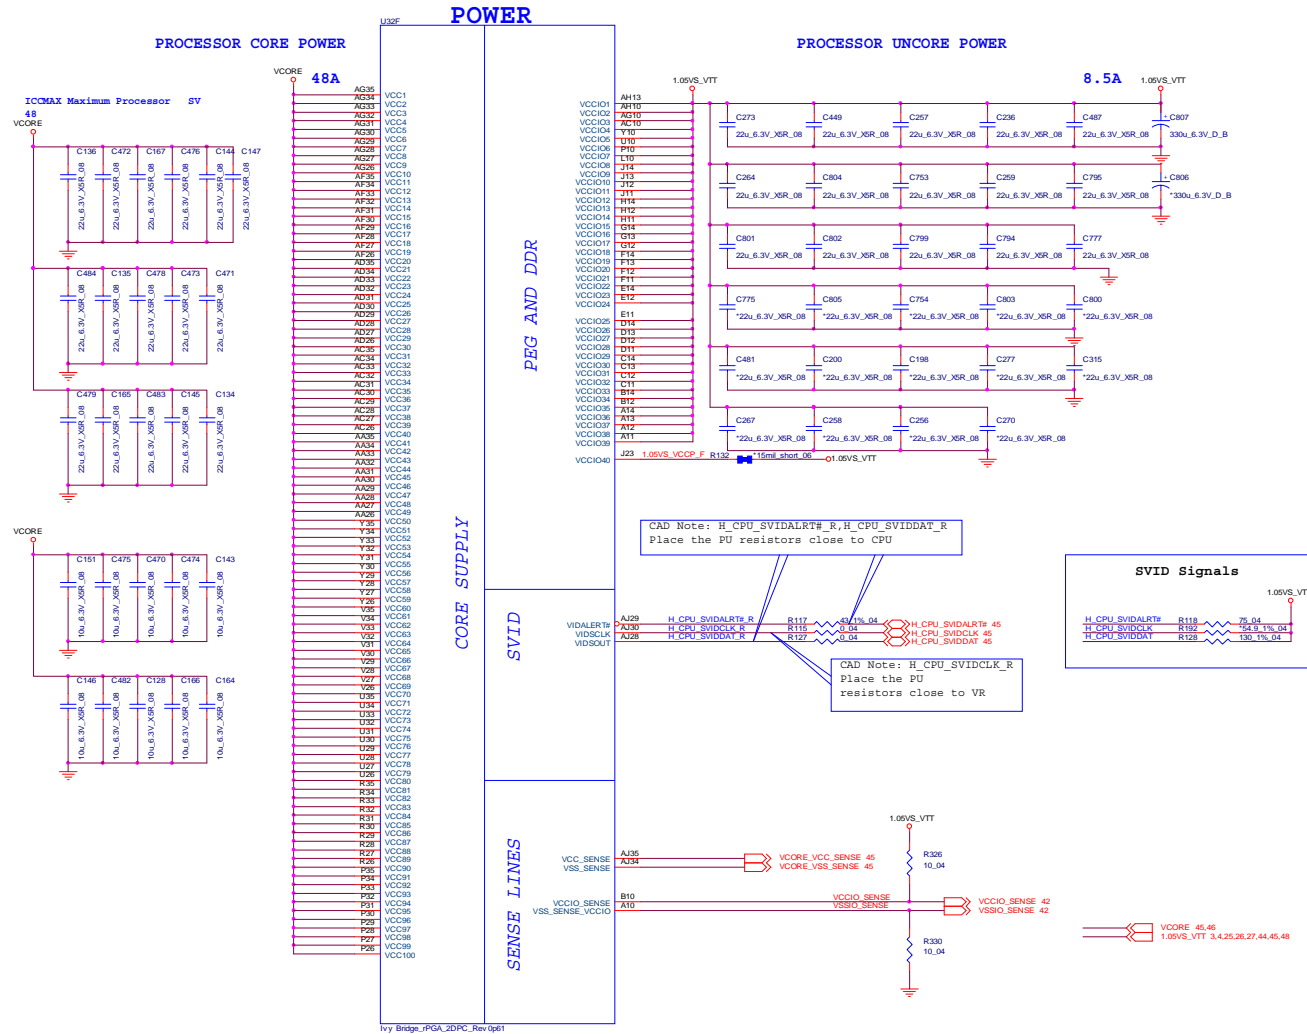


Sheet 6 of 61
Processor 4/7

B.Schematic Diagrams

Processor 6/7

Ivy Bridge Processor 6/7 (GND)

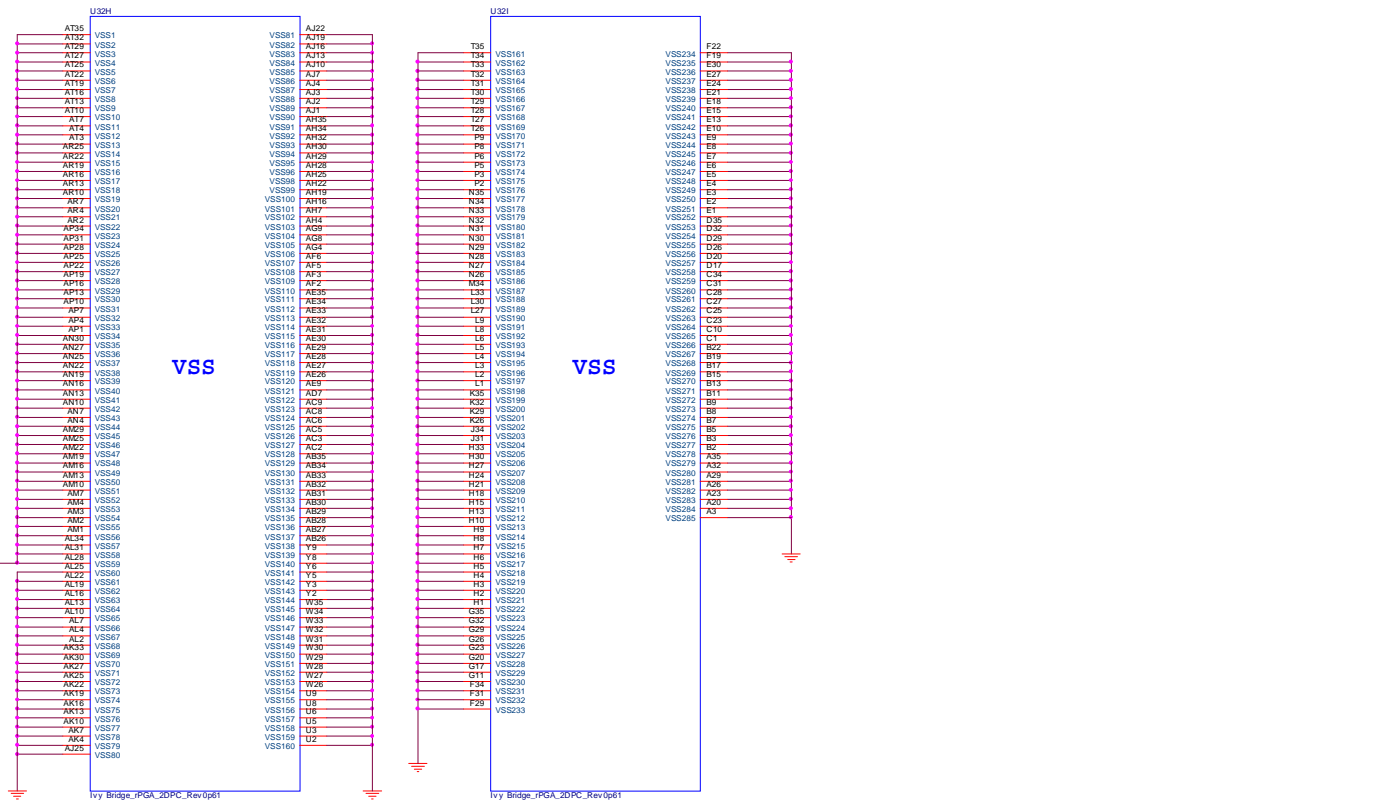

Sheet 8 of 61
Processor 6/7

B.Schematic Diagrams


Processor 7/7

Ivy Bridge Processor 7/7 (RESERVED)


Sheet 9 of 61
Processor 7/7

CFG Straps for Processor


PEG Static Lane Reversal - CFG2 is for the 16x	
CFG2	1: (Default) Normal Operation; Lane # definition matches socket pin map definition 0: Lane Reversed





Display Port Presence Strap	
CFG4	1: (Default) Disabled; No Physical Display Port attached to Embedded Display Port 0: Enabled; An external Display Port device is connected to the Embedded Display Port



PCIe Port Bifurcation Straps	
CFG [6 : 5]	11: (Default) x16 - Device 1 functions 1 and 2 disabled 10: x8, x8 - Device 1 function 1 enabled ; function 2 disabled 01: Reserved - (Device 1 function 1 disabled ; function 2 enabled) 00: x8,x4,x4 - Device 1 functions 1 and 2 enabled




PEG DEFER TRAINING	
CFG7	1: (Default) PEG Train immediately following xxRESETB de assertion 0: PEG Wait for BIOS for training

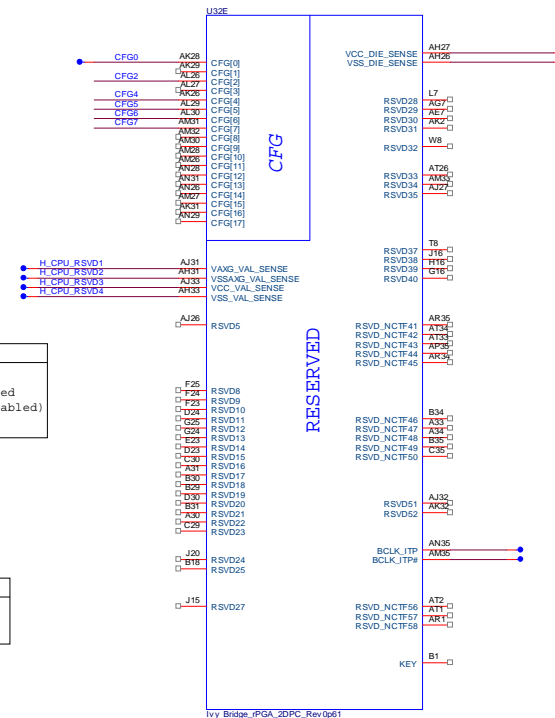

Ivy Bridge_IPGA_2DPC_Rev0p61

DDRIII CHB SO-DIMM_0

Channel B SO-DIMM 0

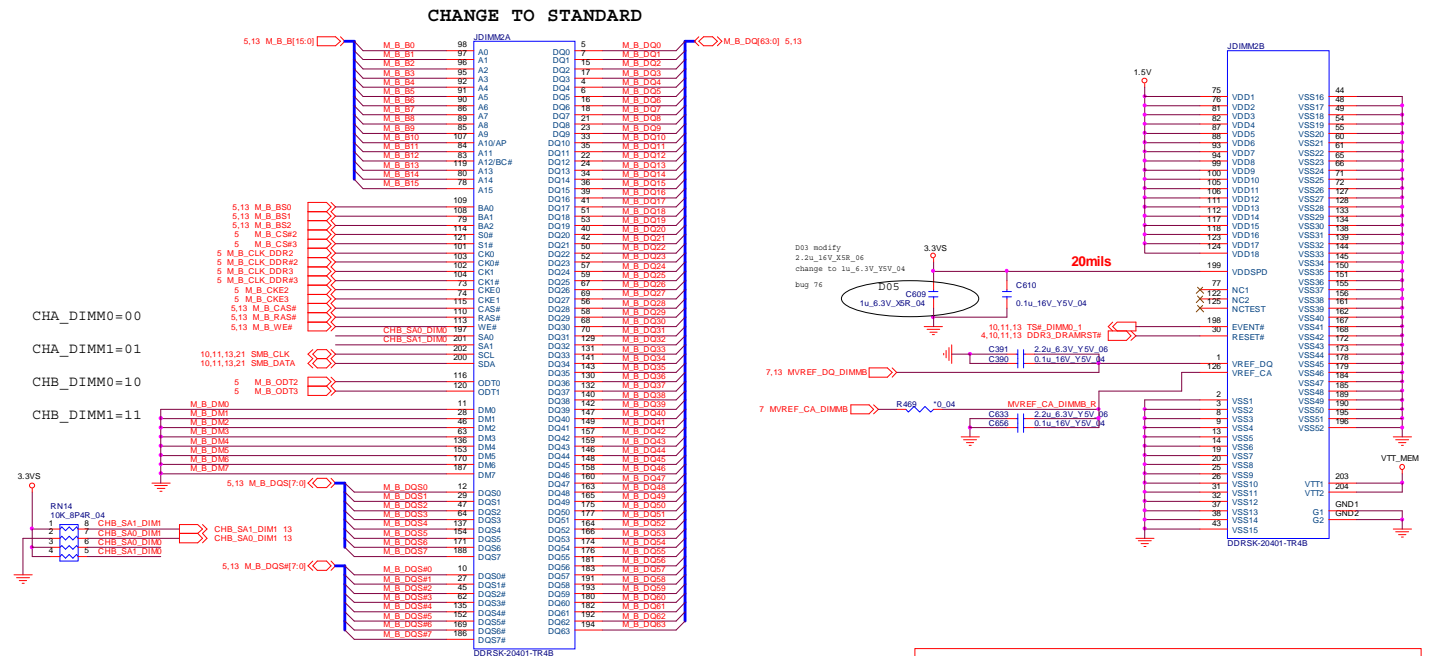


DDRIII CHB SO-DIMM_1


Channel B SO-DIMM 1

CHANGE TO STANDARD


Sheet 13 of 61
DDRIII CHB SO-DIMM_1

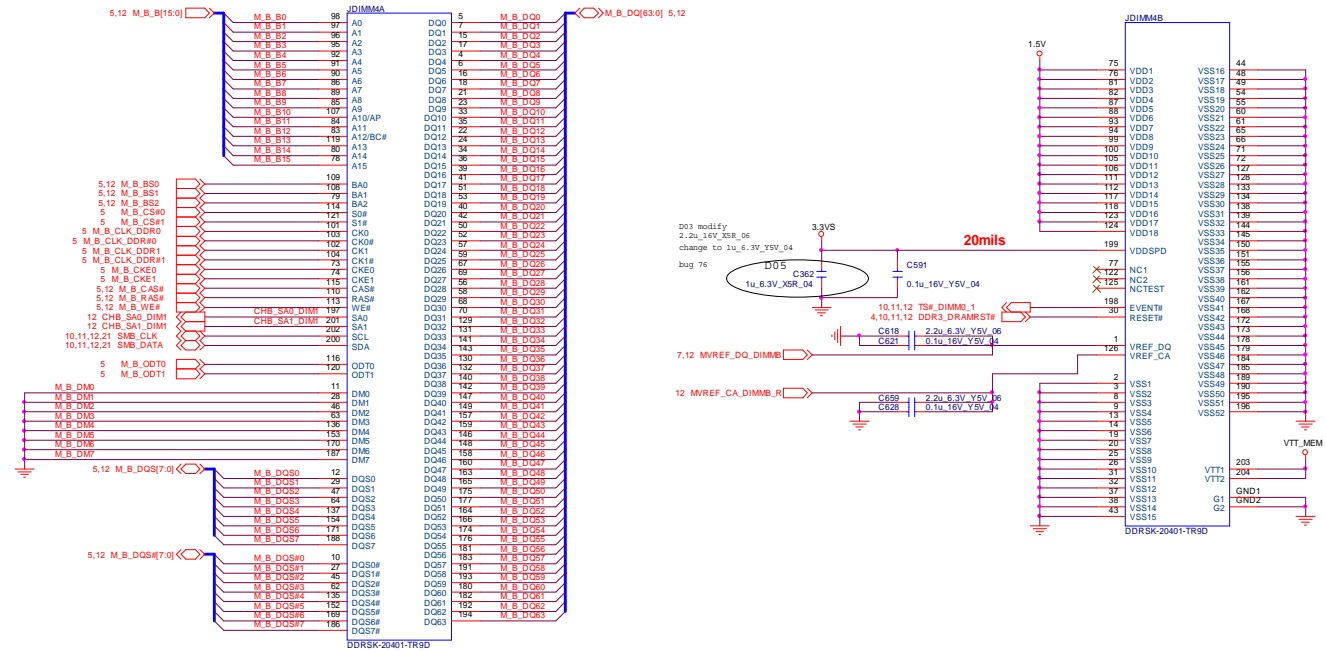

Layout Note:
SO-DIMM_1 is placed farther from the GMCH than SO-DIMM_0

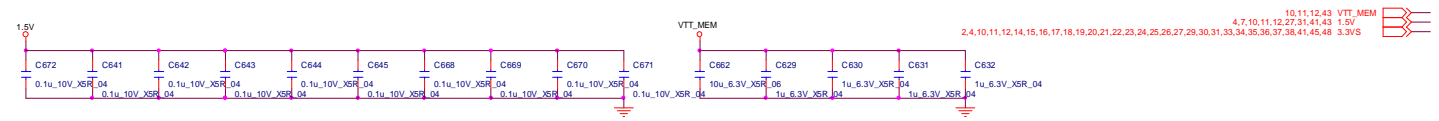

1394_JMB380C

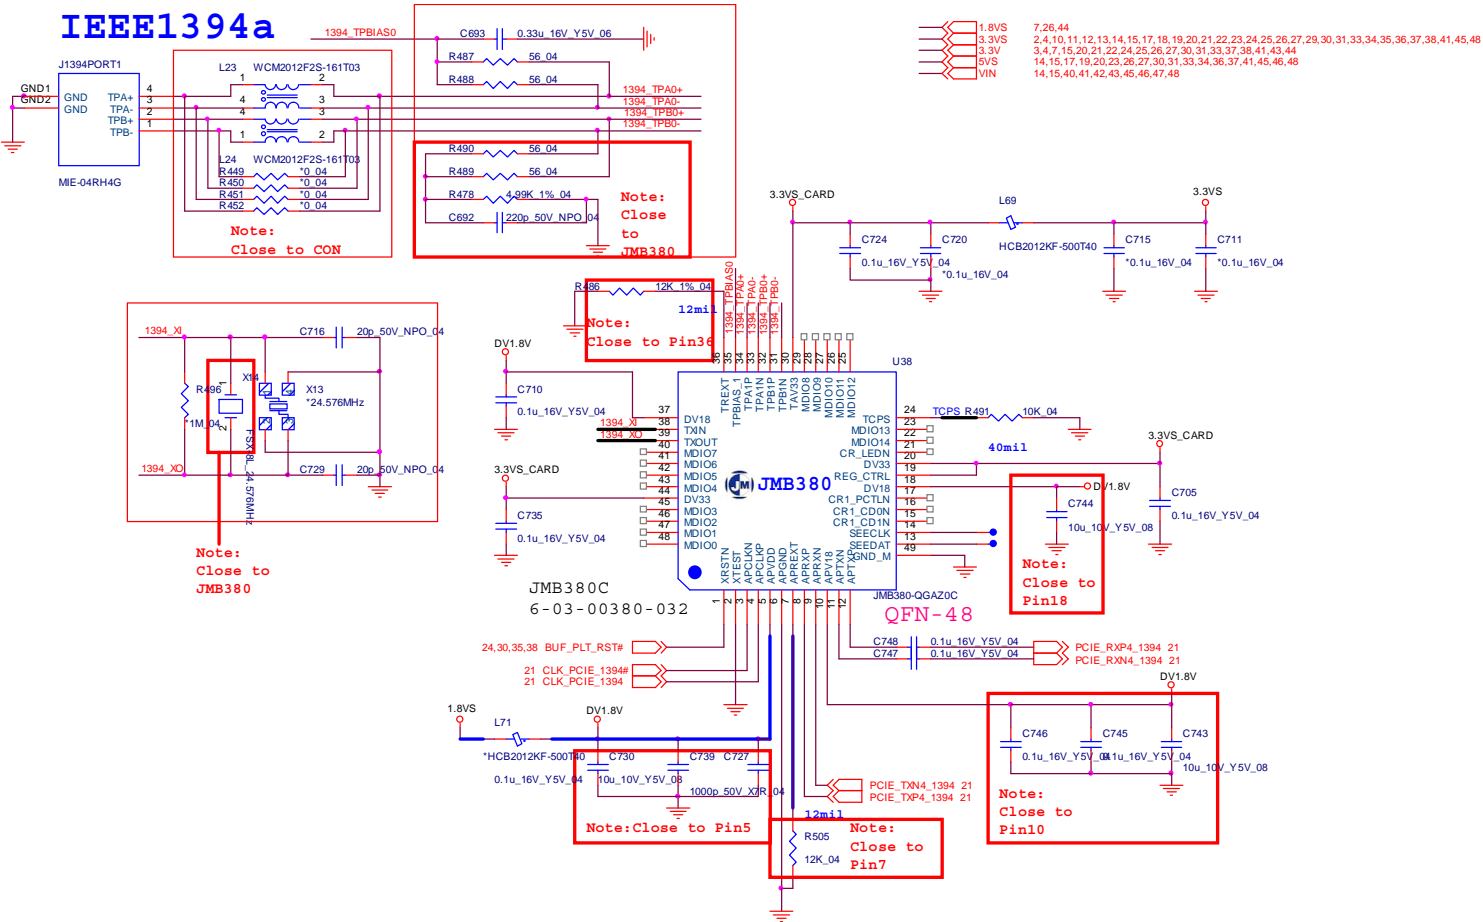


Sheet 16 of 61
1394_JMB380C


B.Schematic Diagrams

Schematic Diagrams




DVI

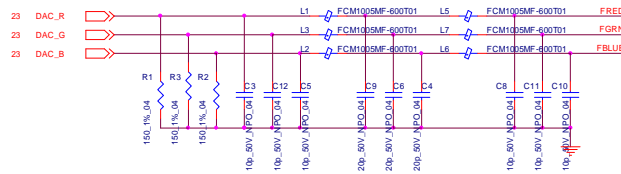

PLEASE CLOSE TO CONNECTOR

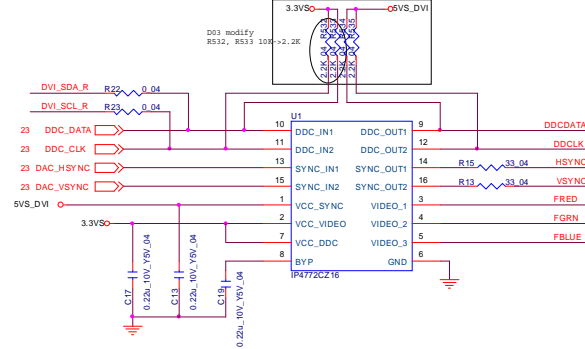

PLEASE CLOSE TO CONNECTOR

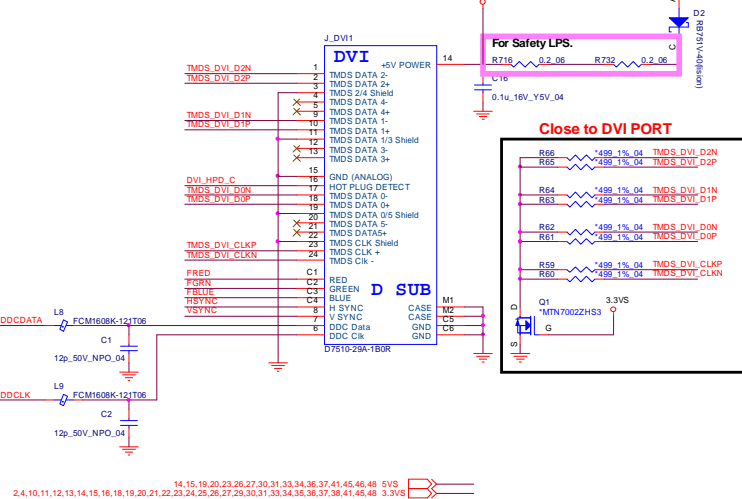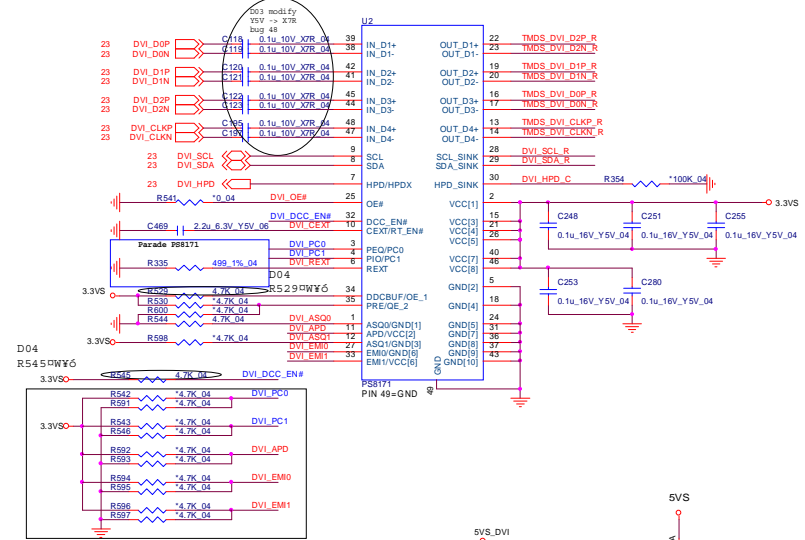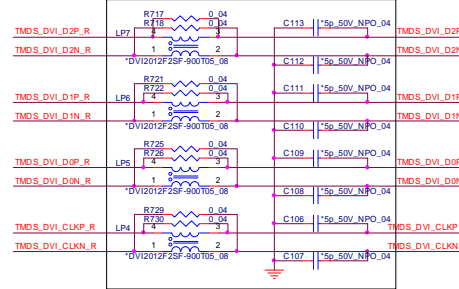


Sheet 17 of 61
DVI

B.Schematic Diagrams

Schematic Diagrams


HDMI

HDMI CONNECTOR

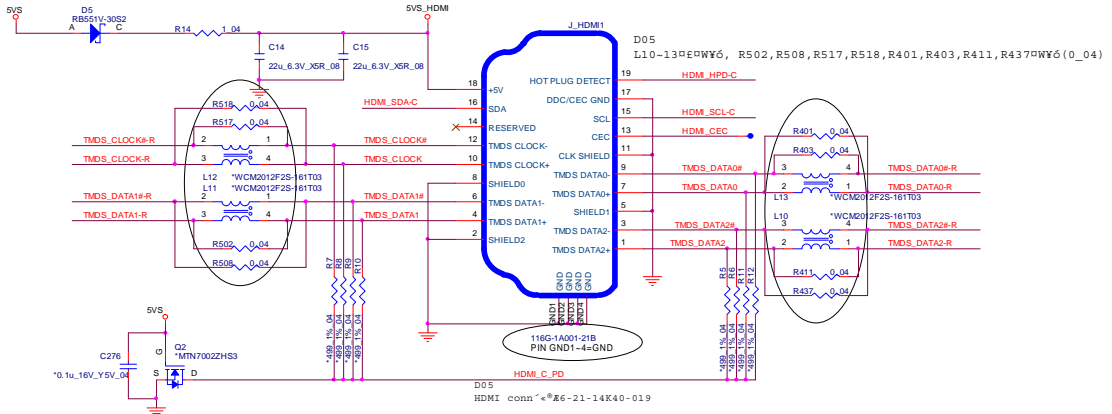


Sheet 19 of 61
HDMI

B.Schematic Diagrams

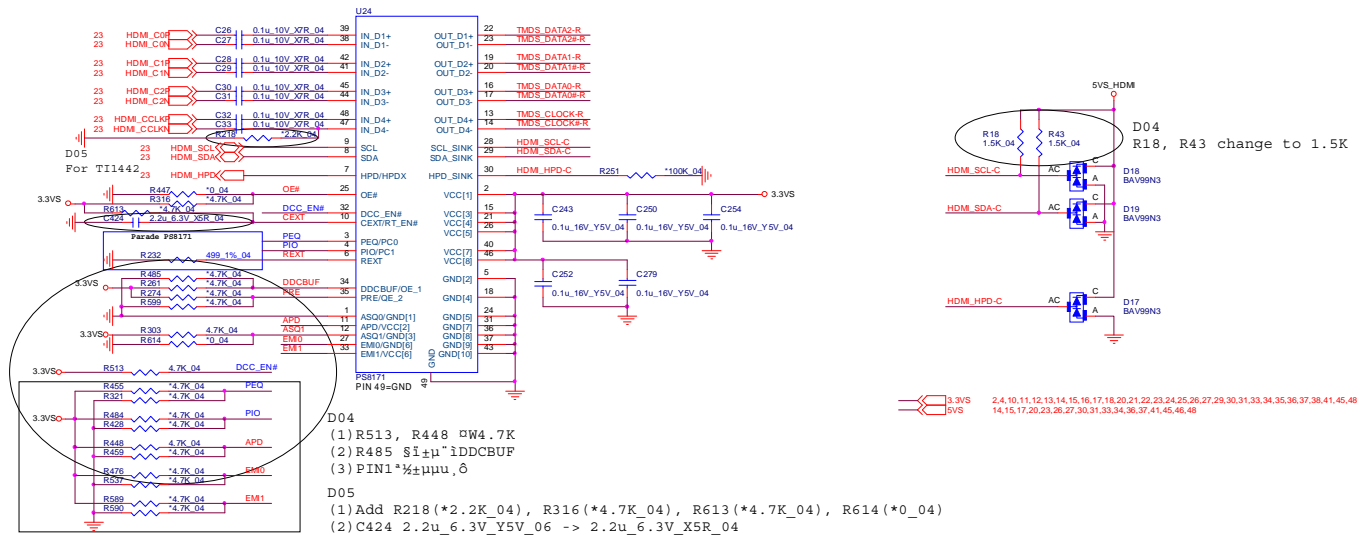

PCH 1/9 - RTC, HDA, SATA

PantherPoint - M (HDA, JTAG, SPI, SATA)

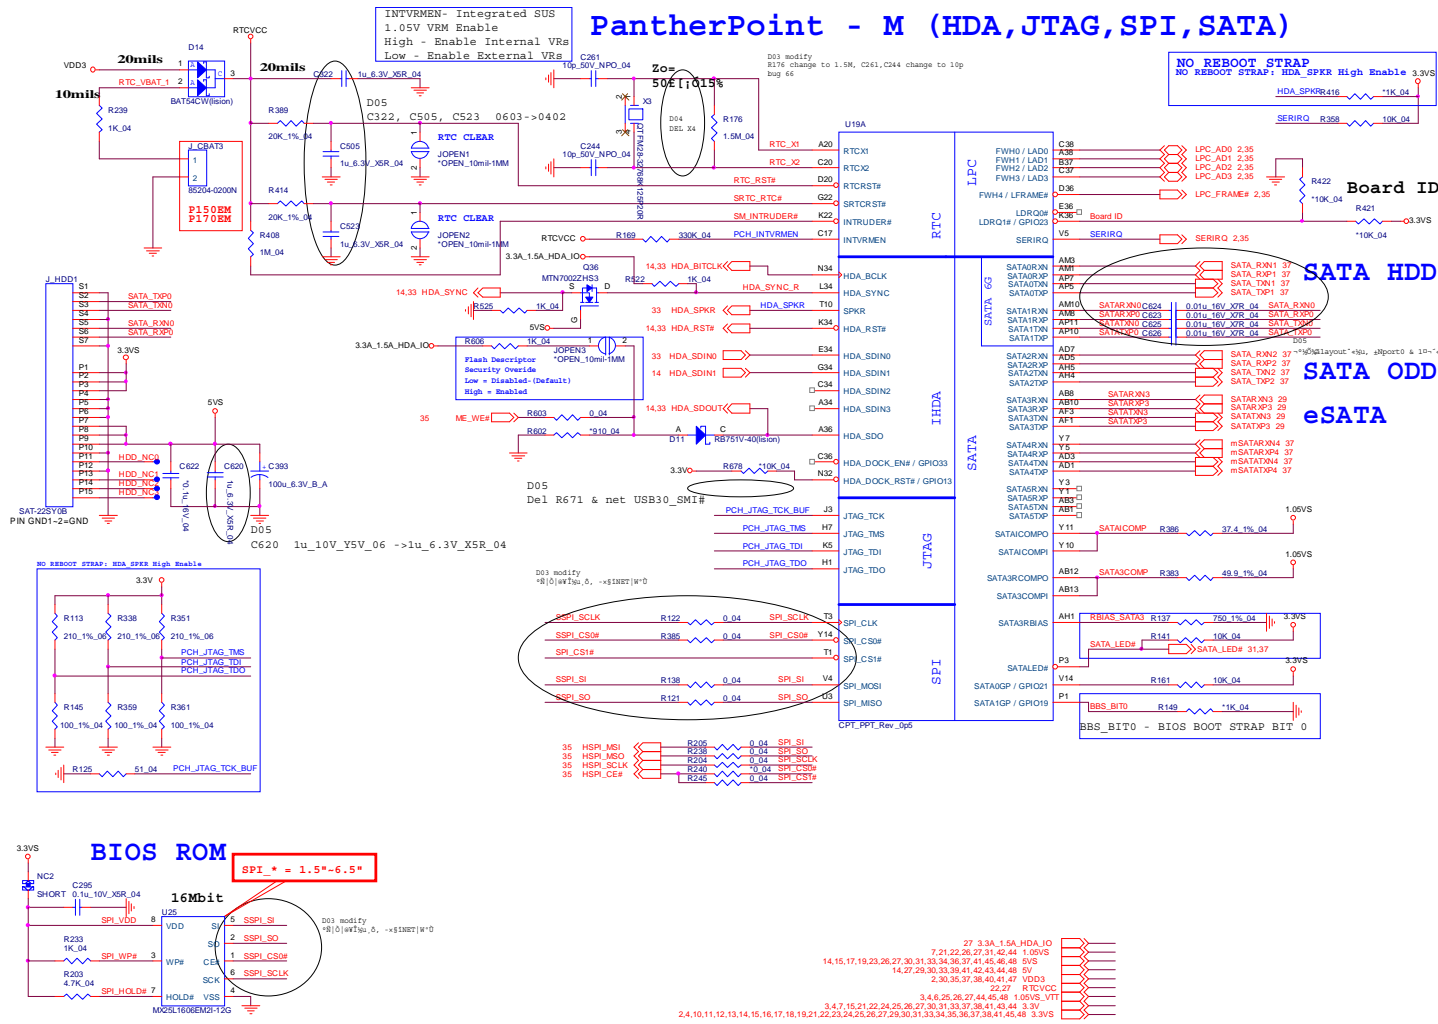


Sheet 20 of 61
PCH 1/9 - RTC,
HDA, SATA

B.Schematic Diagrams

PCH3/9 - DMI, FDI, PWRGD

PantherPoint - H (DMI, FDI, GPIO)

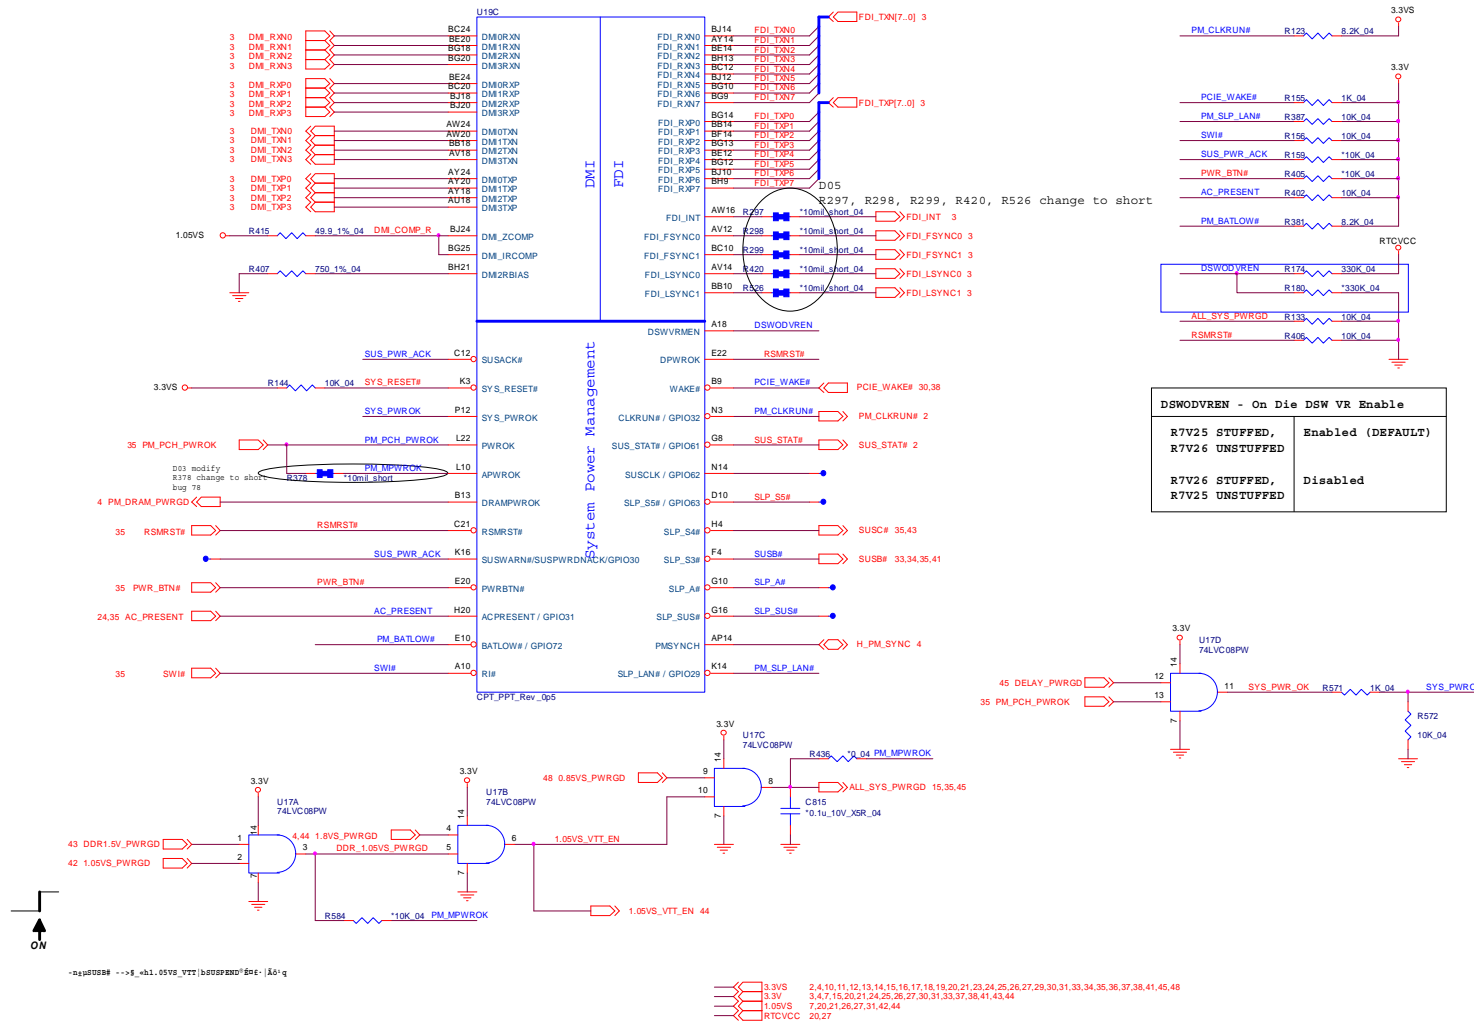

Sheet 22 of 61
PCH 3/9 - DMI, FDI,
PWRGD


Schematic Diagrams

PCH 4/9 - LVDS, DDI, CRT

PantherPoint - H (LVDS, DDI)

B.Schematic Diagrams

Sheet 23 of 61
PCH 4/9 - LVDS,
DDI, CRT

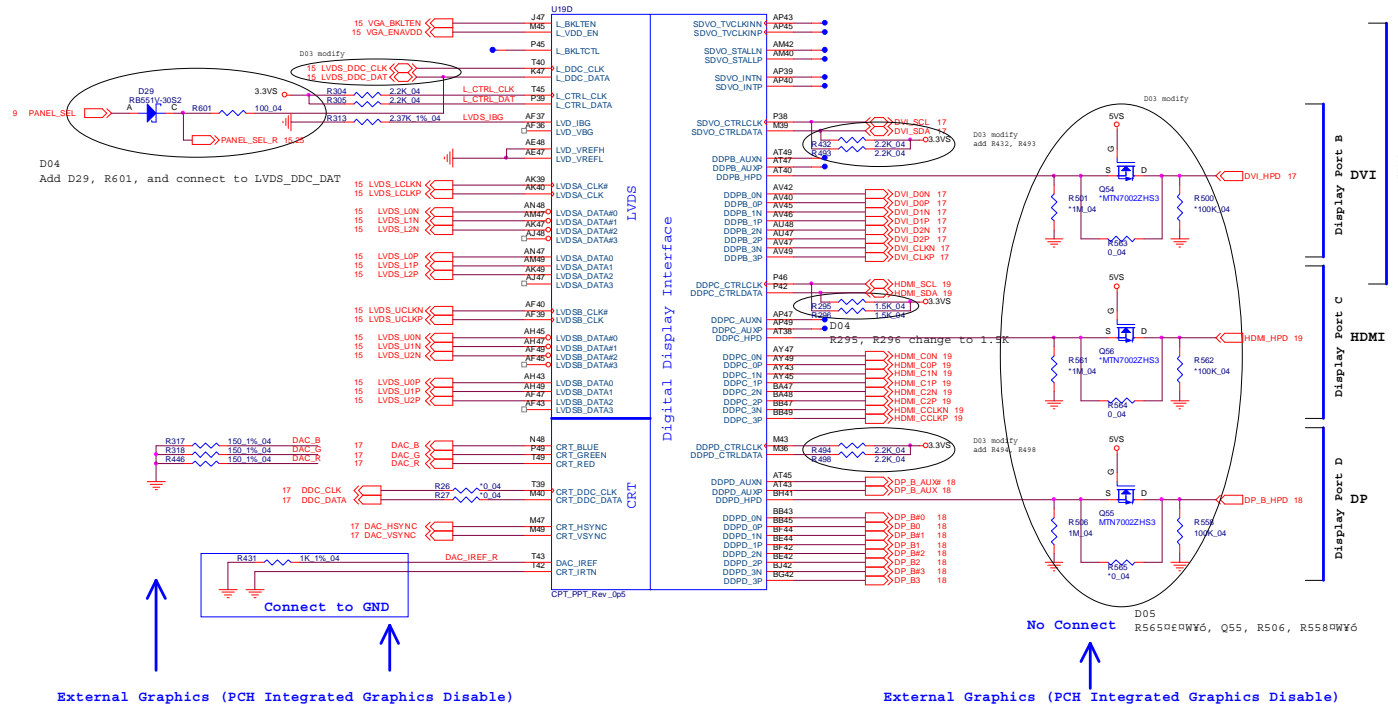


14, 15, 17, 19, 20, 26, 27, 30, 31, 33, 34, 36, 37, 41, 45, 46, 48 5V5
2, 4, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20, 21, 22, 24, 25, 26, 27, 29, 30, 31, 33, 34, 35, 36, 37, 38, 41, 45, 48 3.3V5

PCH 5/9 - PCI, USB, RSVD

Boot BIOS Strap		
BBS_BIT1	BBS_BIT0	Boot BIOS Location
0	0	LPC
0	1	Reserved (NAND)
1	0	PCI
1	1	SPI




Flash Descriptor security override strap	
PCI_GNT#3	LOW = PCI_GNT#3 swap override HIGH = Default




Understand the RED FONT define


MPC Switch Control
MPC OFF -- 0 DEFAULT
MPC ON -- 1

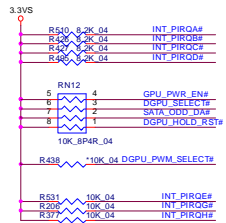

PIN PLT_RST# to Buffer

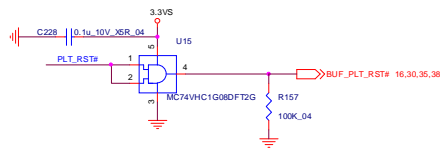

PantherPoint - H (PCI,USB,NVRAM)

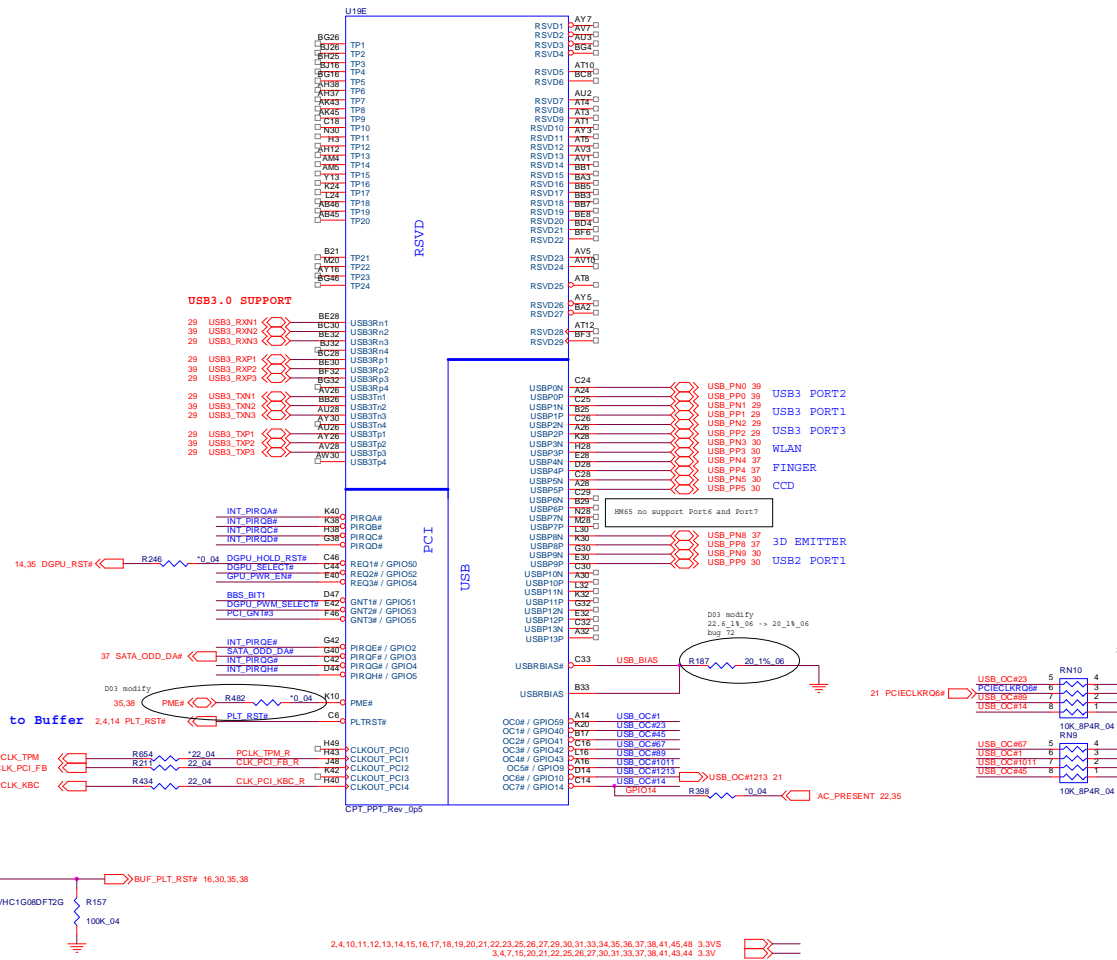

Sheet 24 of 61
PCH 5/9 - PCI, USB,
RSVD


Schematic Diagrams

PCH 6/9 - GPIO, CPU

Sheet 25 of 61
PCH 6/9 - GPIO,
CPU


PantherPoint - H (GPIO,VSS_NCTF,RSVD)

	HIGH	LOW
PANEL_SEL_R	LVDS	eDP

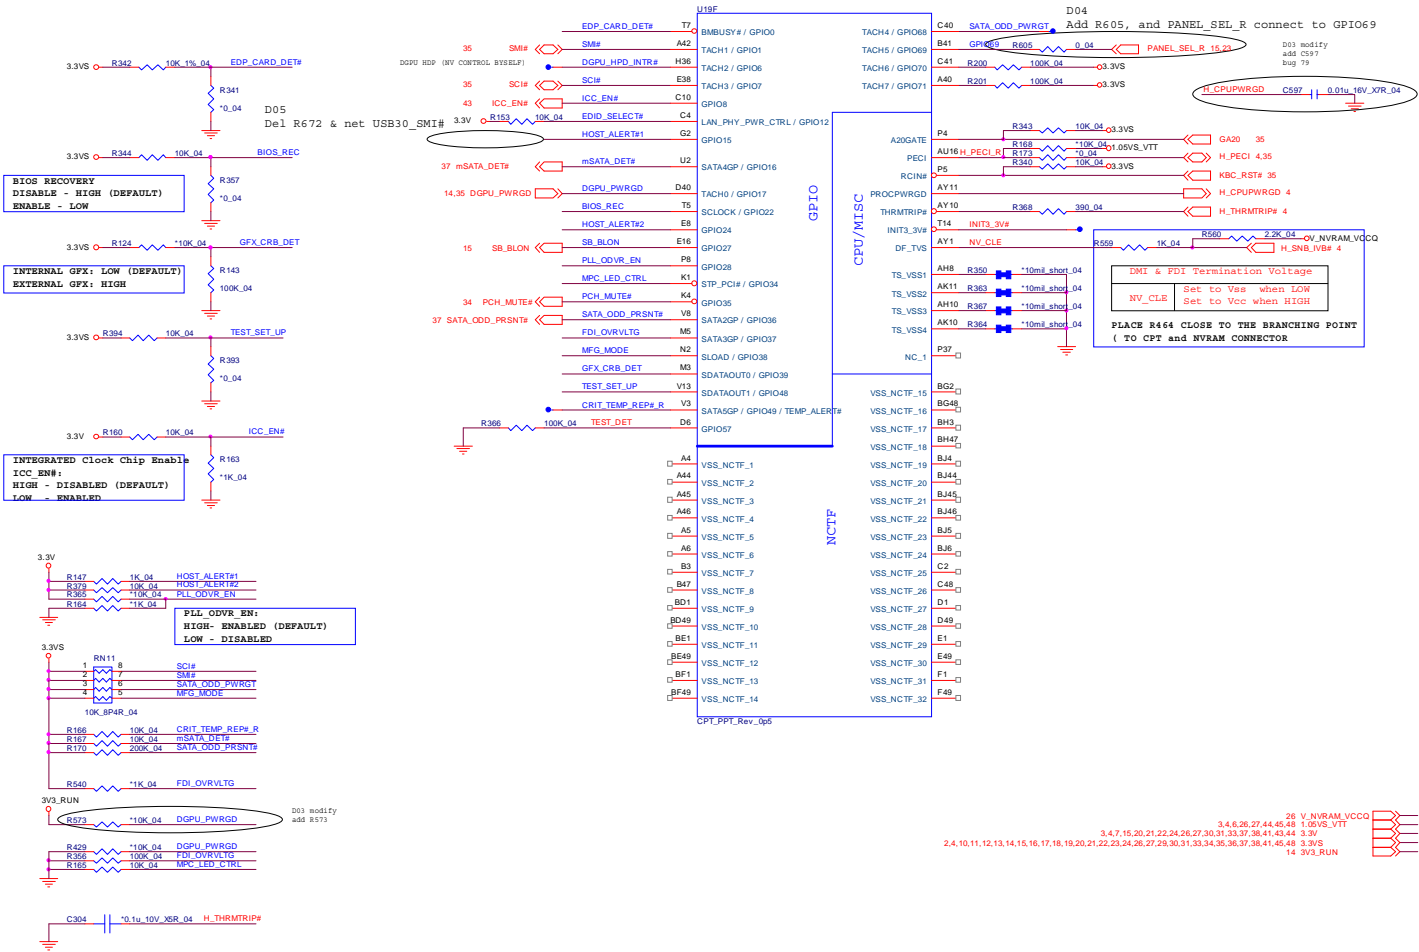

PCH 9/9 - GND

PantherPoint - H (GND)

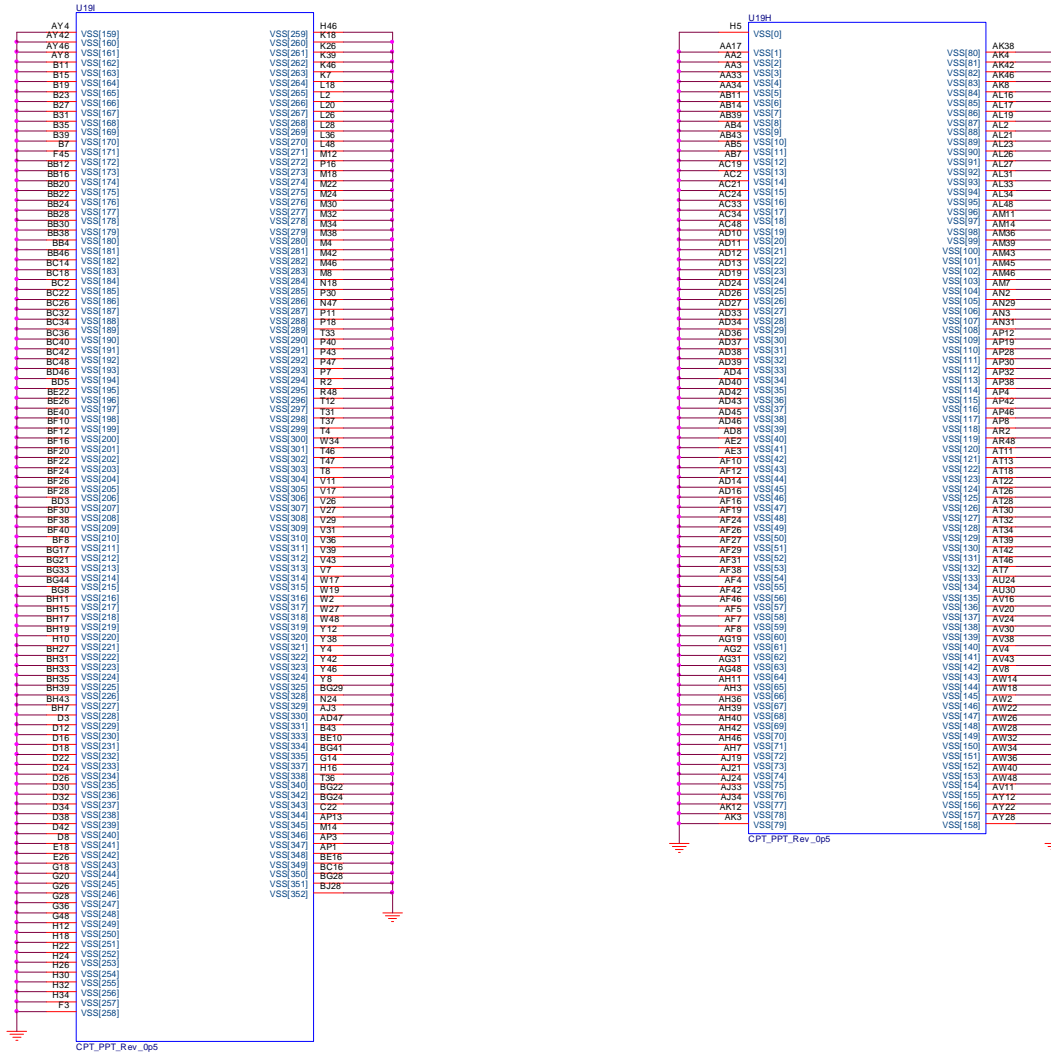


Sheet 28 of 61
PCH 9/9 - GND




B.Schematic Diagrams

USB+eSATA, USB Charging


Sheet 29 of 61
USB+eSATA, USB
Charging

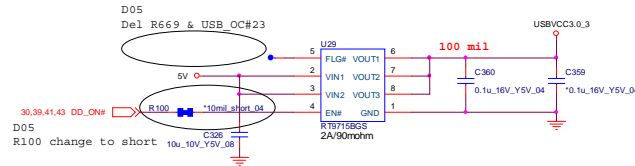

USB3.0 PORT3 + eSATA

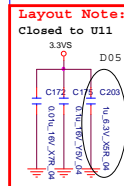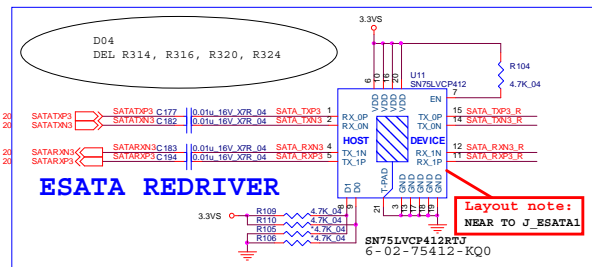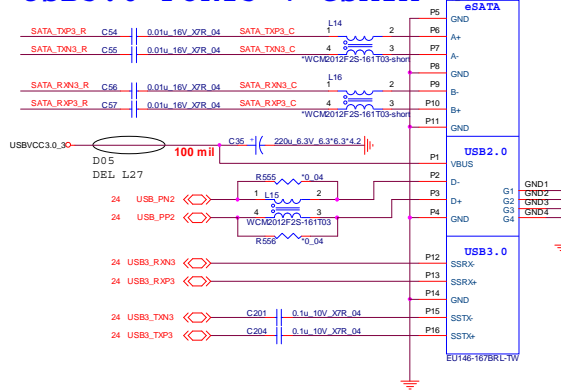


TPS2540 USB CHARGING PORT

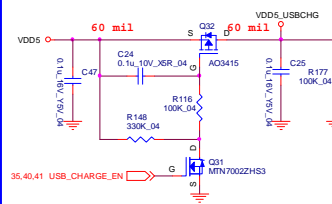


		(DD_ON) CTL1	(VDD5) CTL2	(VDD5) CTL3
Mode 1	Power off & Discharge	0	0	0
Mode 2	Power off & Charge	0	1	1
Mode 3	Power off & Charge	1	0	1
Mode 4	Power on & Charge	1	1	1

CTL1 CTL2 CTL3: 0 0 0----> Out discharge, power switch Off
 CTL1 CTL2 CTL3: 0 x 1----> Dedicated charging port, auto-detect
 CTL1 CTL2 CTL3: 1 0 1----> Dedicated charging port, Divider Mode only
 CTL1 CTL2 CTL3: 1 1 1----> Charging downstream port, BC1.2.

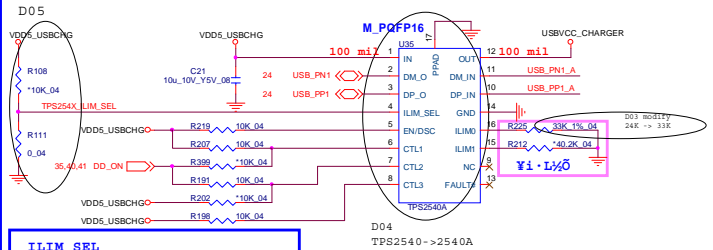


ILIM SEL
 (FOR TPS2543/TPS2540 | 3 | 0 | 0 | P)
 ILIM SEL=HI , FOR TPS2543
 ILIM SEL=LOW, FOR TPS2540A

USB3.0 PORT1

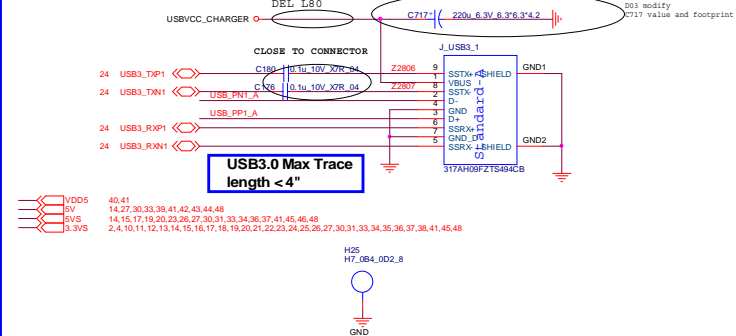


LED, Hotkey, LID SW, Fan


CPU FAN CONTROL

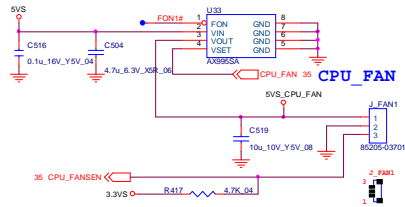



VGA FAN CONTROL

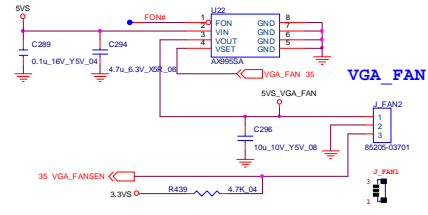

Sheet 31 of 61
LED, Hotkey, LID
SW, Fan




P150 only

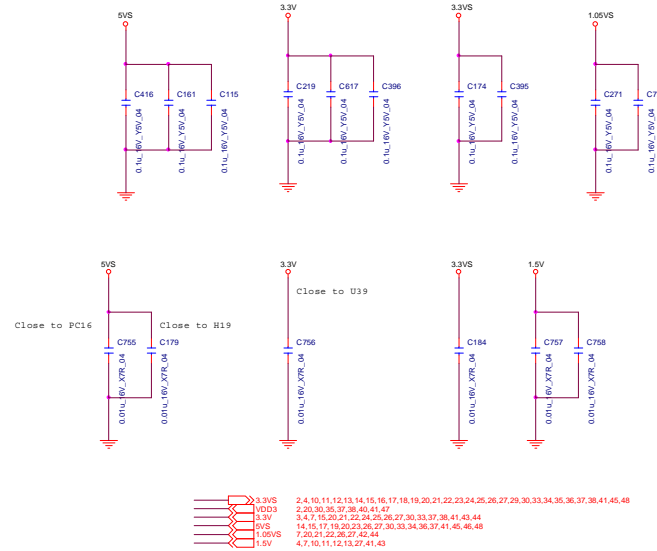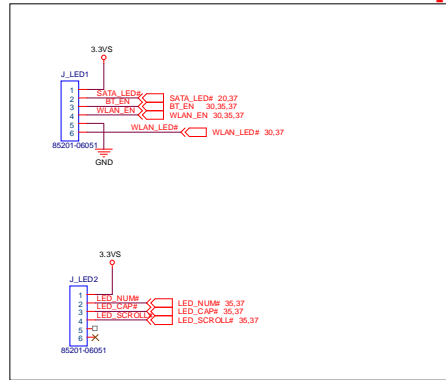

Codec Realtek ALC892


Sheet 33 of 61
Codec Realtek
ALC892

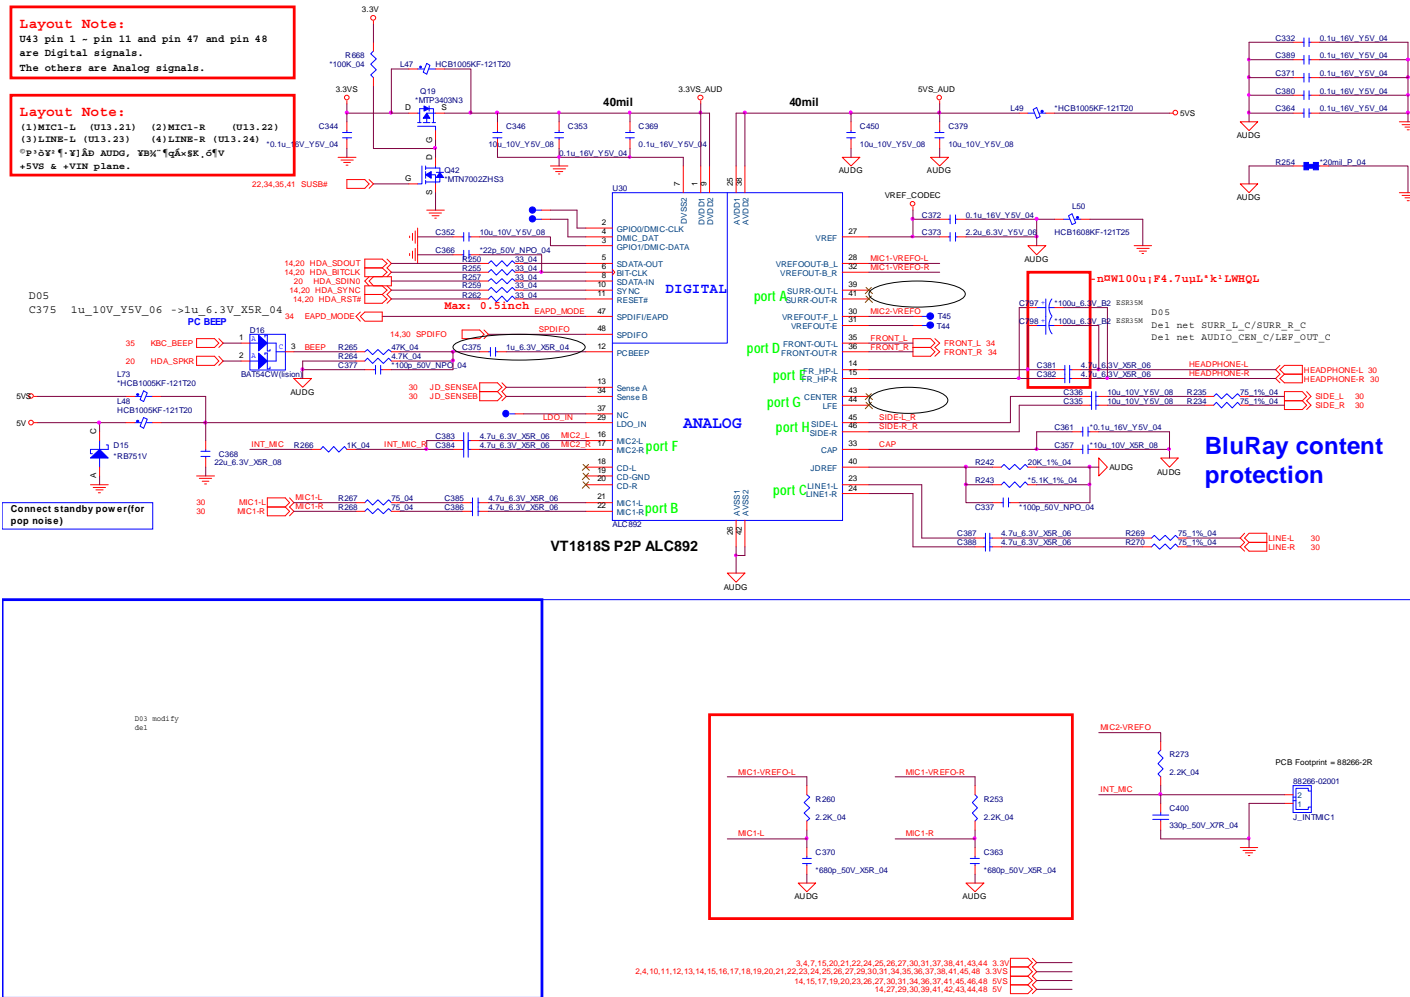

KBC-ITE IT8518E


B.Schematic Diagrams

Sheet 35 of 61
KBC-ITE IT8518E


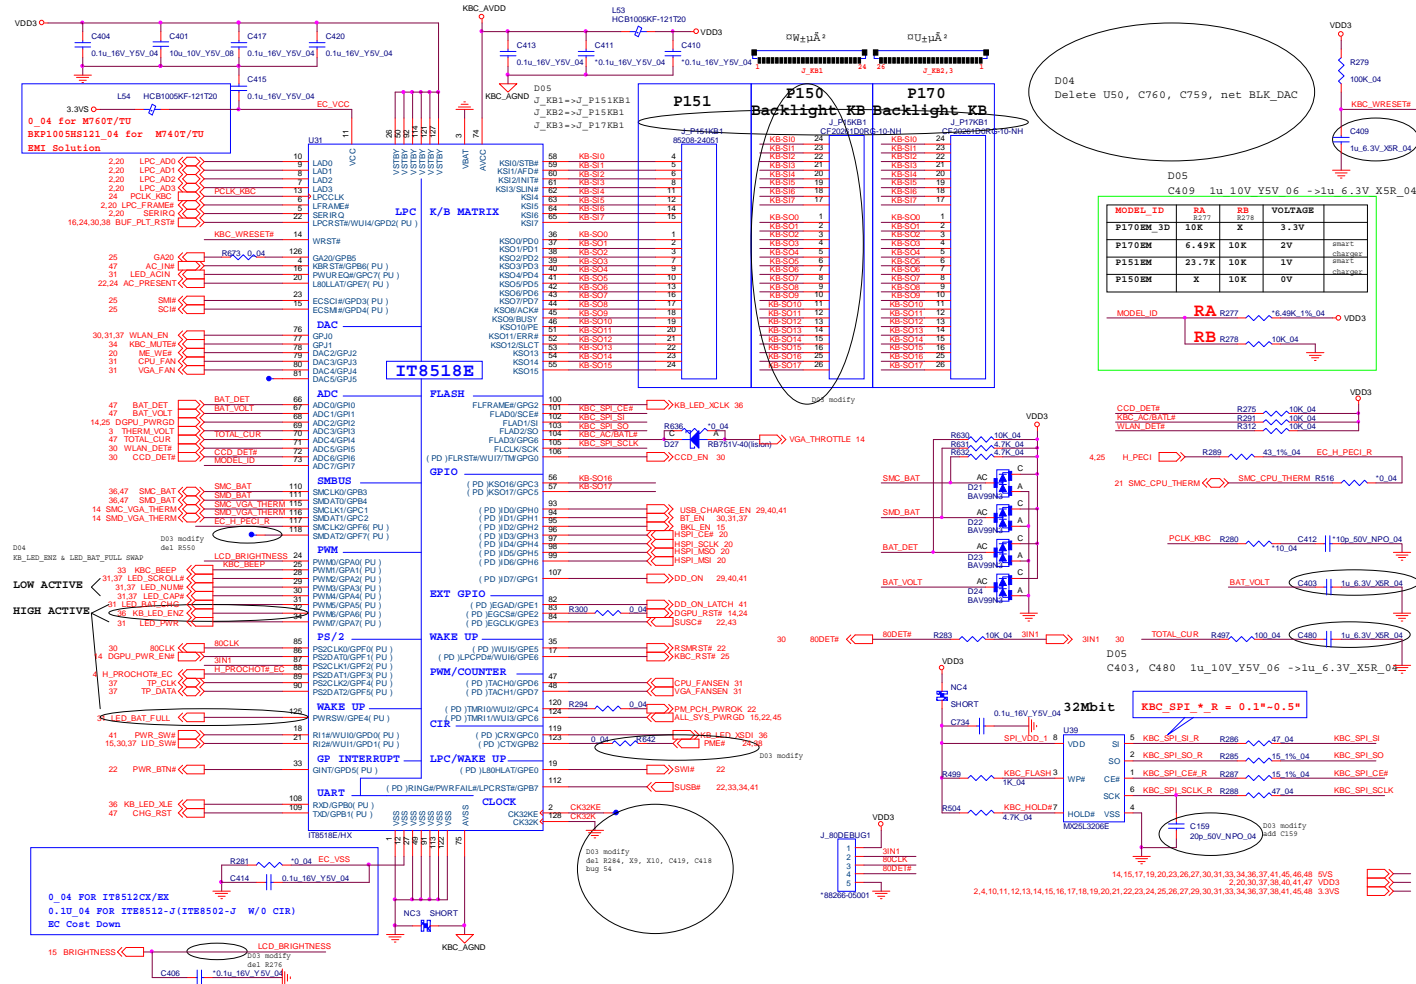


Backlight Keyboard


B.Schematic Diagrams

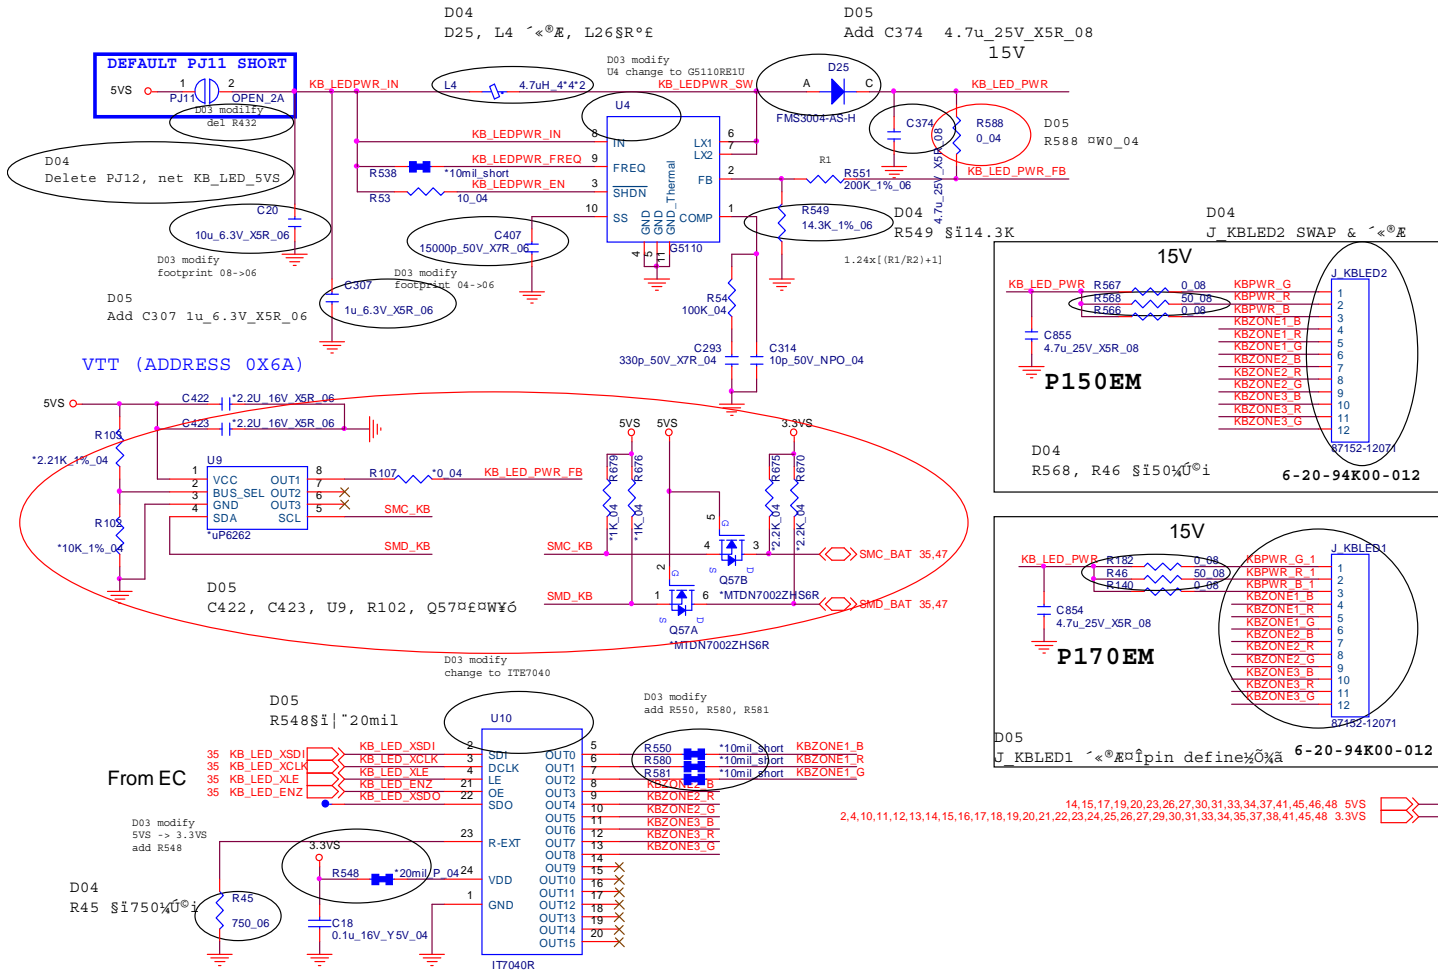

Sheet 36 of 61
Backlight
Keyboard

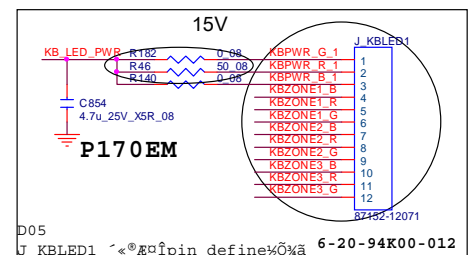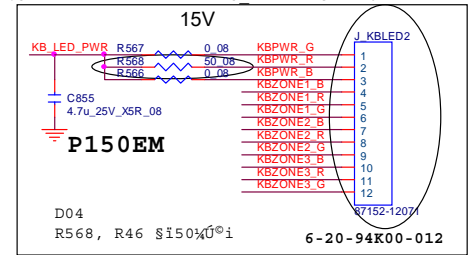

Card Reader RTL8411

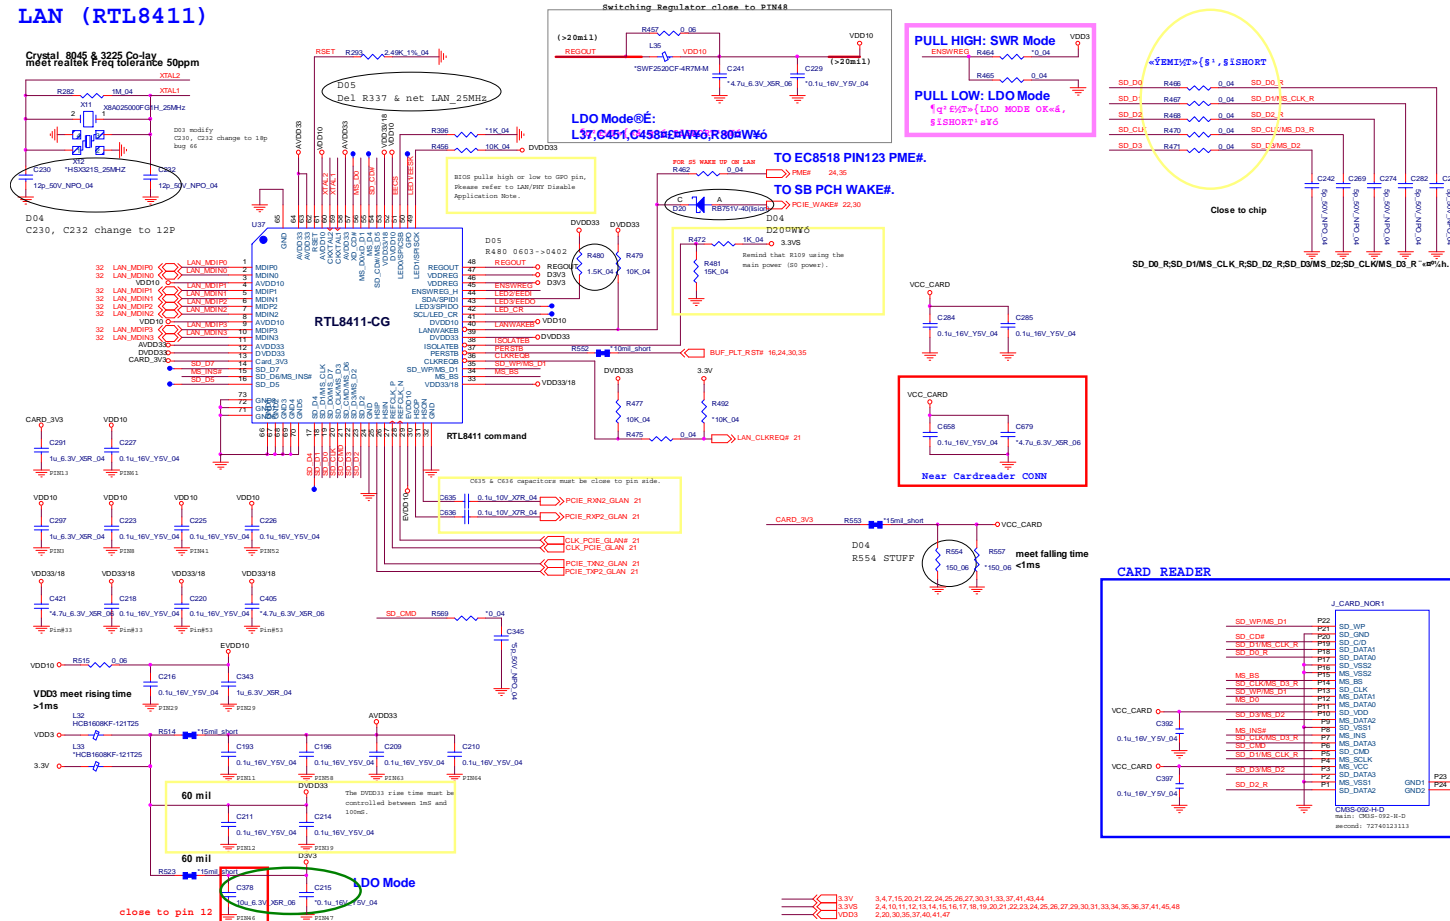


Sheet 38 of 61
Card Reader
RTL8411

B.Schematic Diagrams

USB 3.0


Sheet 39 of 61
USB 3.0

USB3.0 PORT2

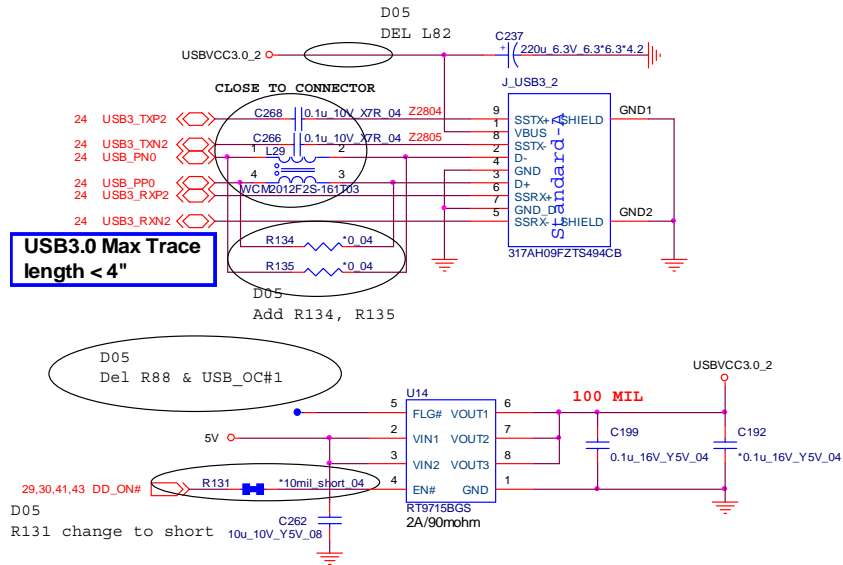

14,27,29,30,33,41,42,43,44,48 5V

VDD3, VDD5



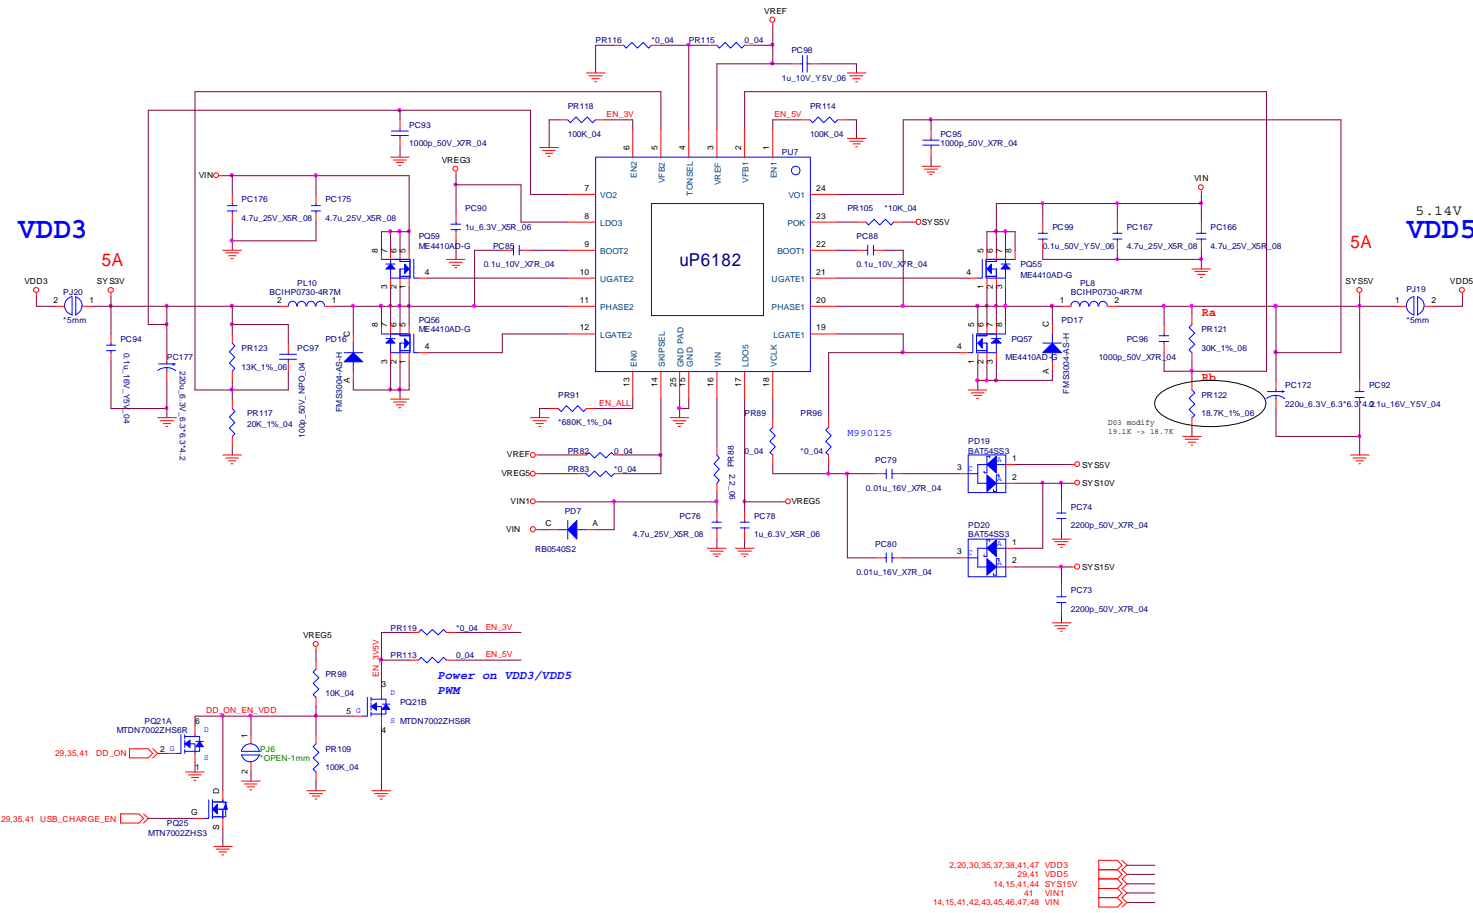


Sheet 40 of 61
 VDD3, VDD5


Schematic Diagrams

5VS, 3.3VS, 1.5VS







Sheet 41 of 61
5VS, 3.3VS, 1.5VS

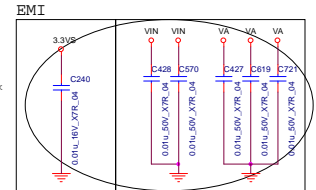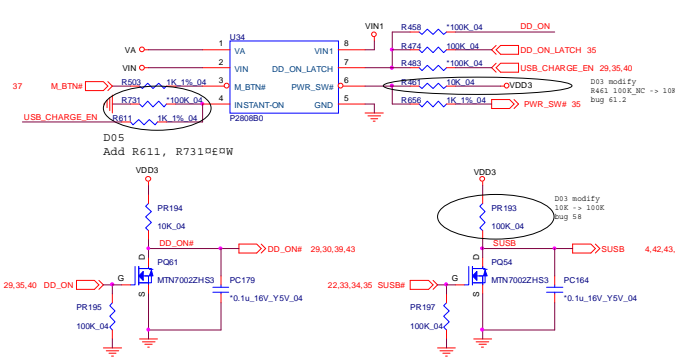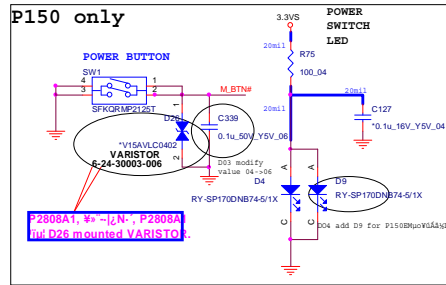

D05
C240: 0.1u_16V_Y5V_04 -> 0.01u_16V_X7R_04
C428, C570, C427, C619, C721:
0.1u_50V_Y5V_06 -> 0.01u_50V_X7R_04




D05
Add C600, C491, C627 0.01u_50V_X7R_04

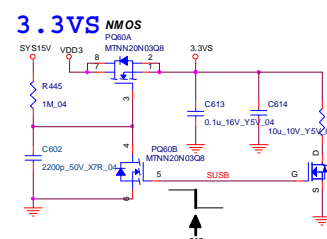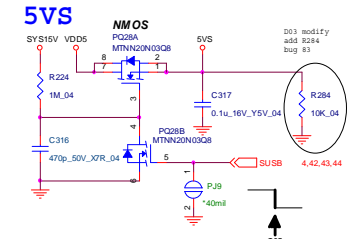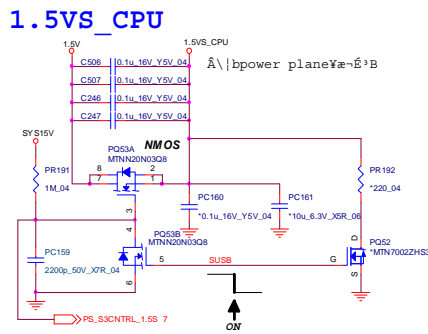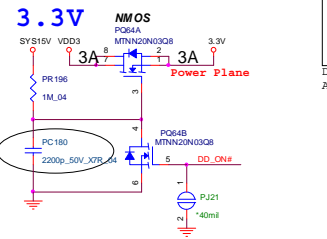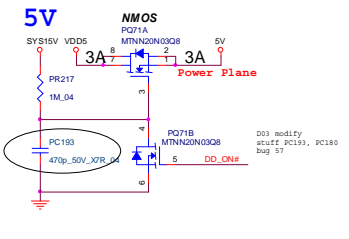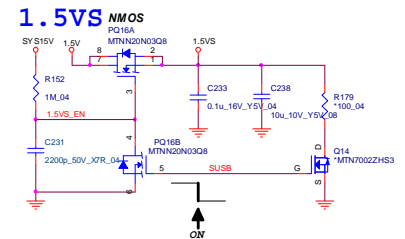

40	VIN1
47	VA
14,15,40,42,43,45,46,47,48	VIN
47	1.5VS_CPU
4,7,10,11,12,13,27,31,43	1.5VS
26,37	1.5VS
14,15,40,44	SY515V
29,40	VDD3
2,20,30,35,37,38,40,47	VDD3
14,15,17,18,20,23,26,27,30,31,33,34,36,37,45,46,48	5V
3,4,7,15,20,21,22,24,25,26,27,30,31,33,37,38,43,44	3.3V
2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,45,46	3.3VS

Power 1.05VS

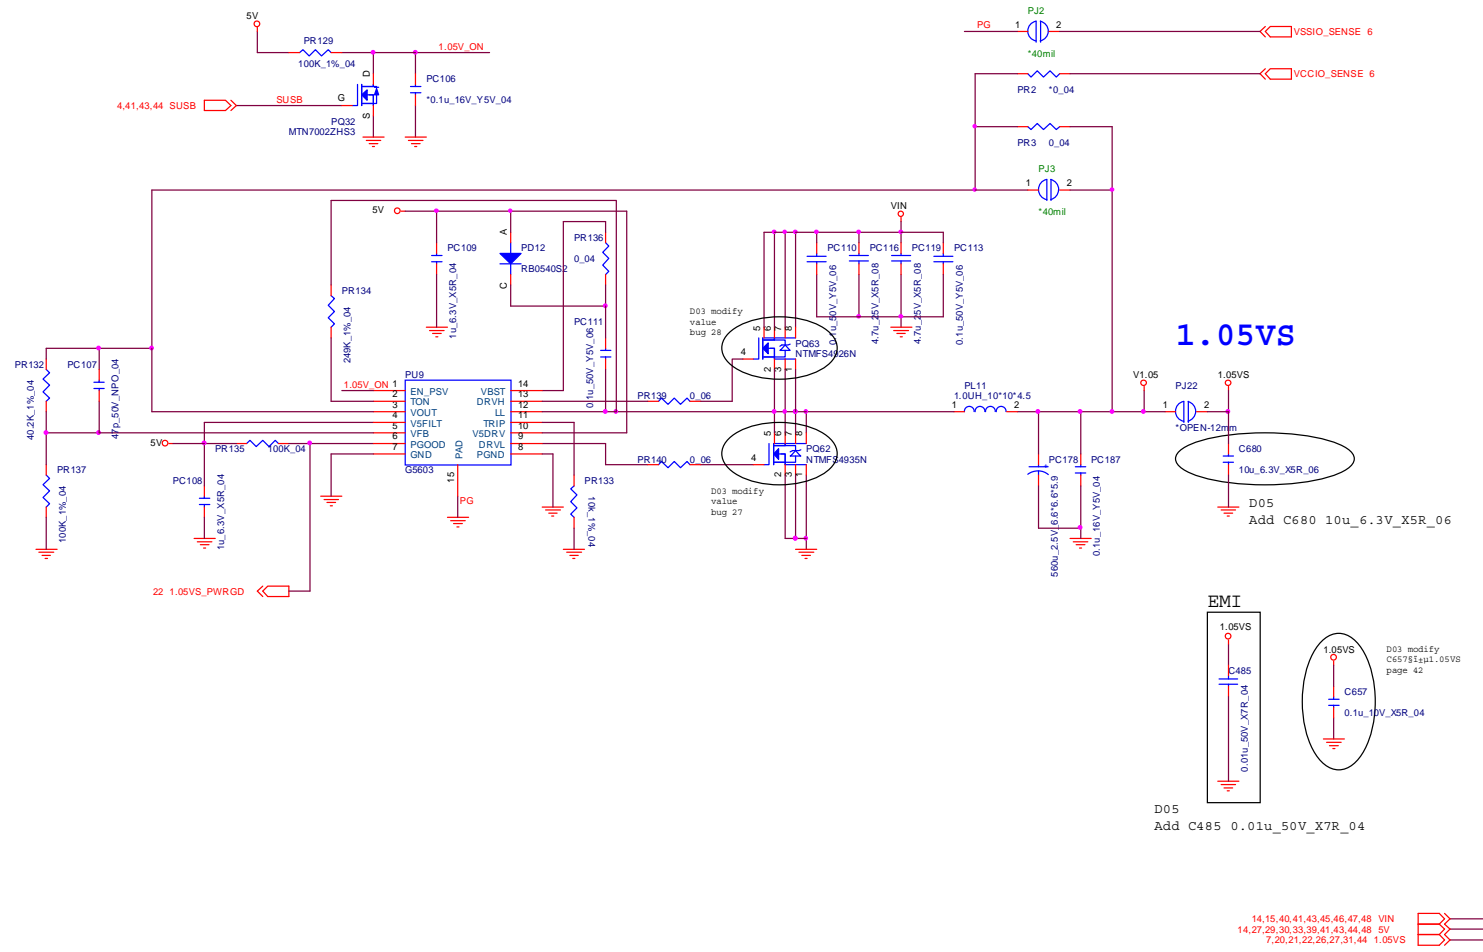




Sheet 42 of 61
Power 1.05VS

Schematic Diagrams


Power 1.5V/VTT_MEM

B.Schematic Diagrams

Sheet 43 of 61
Power 1.5V/
VTT_MEM

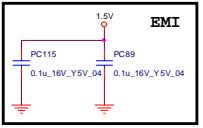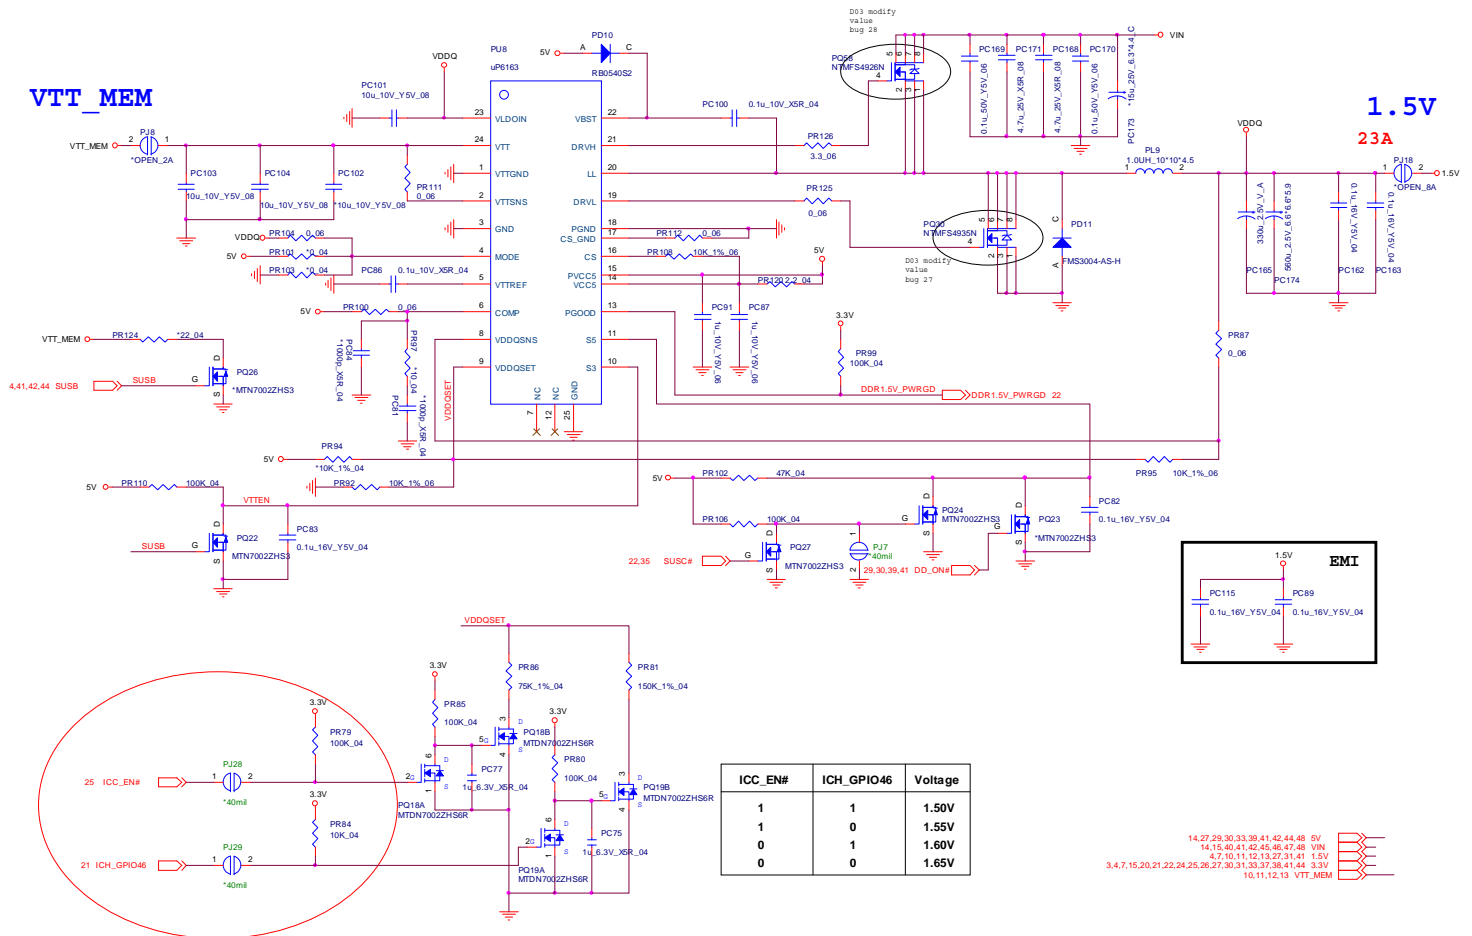


Power 1V, 1.8VS

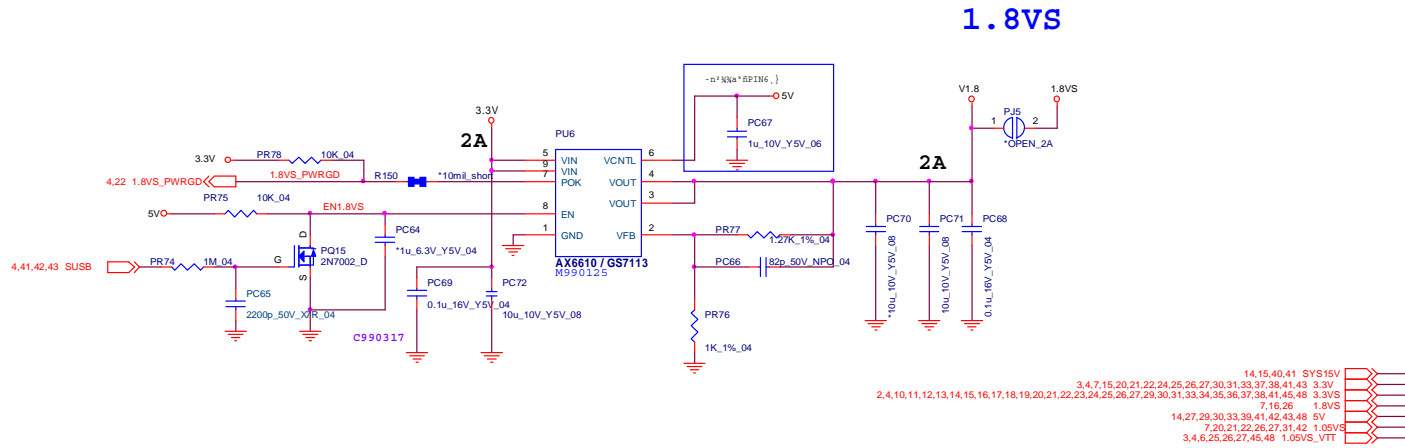

Sheet 44 of 61
Power 1V, 1.8VS


D04
1.05VS_VTT re-design

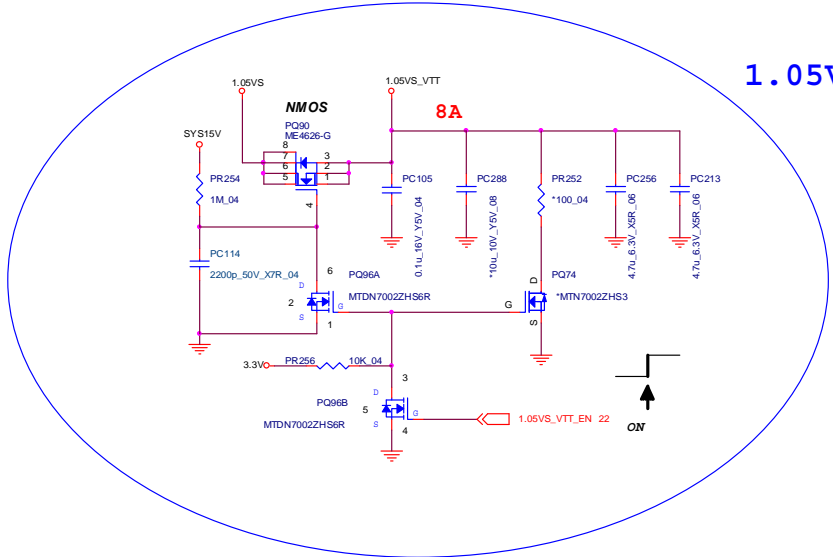

1.05VS_VTT

B.Schematic Diagrams

Power V-Core 2

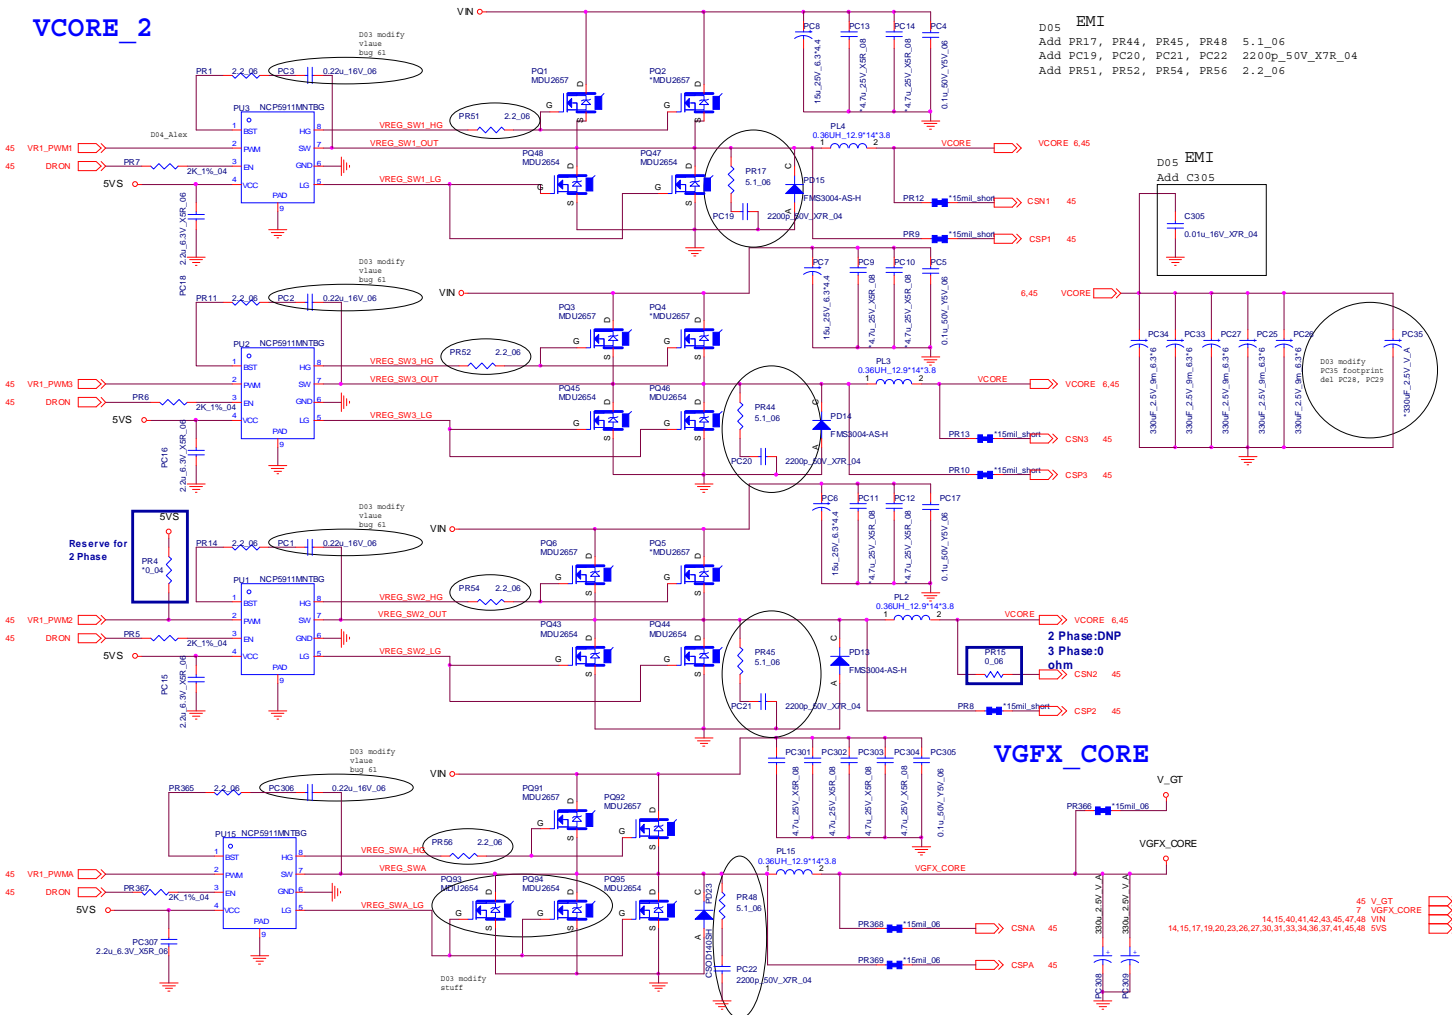



Sheet 46 of 61
Power V-Core 2

B.Schematic Diagrams

Schematic Diagrams

AC_In, Charger

Sheet 47 of 61
AC_In, Charger

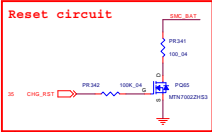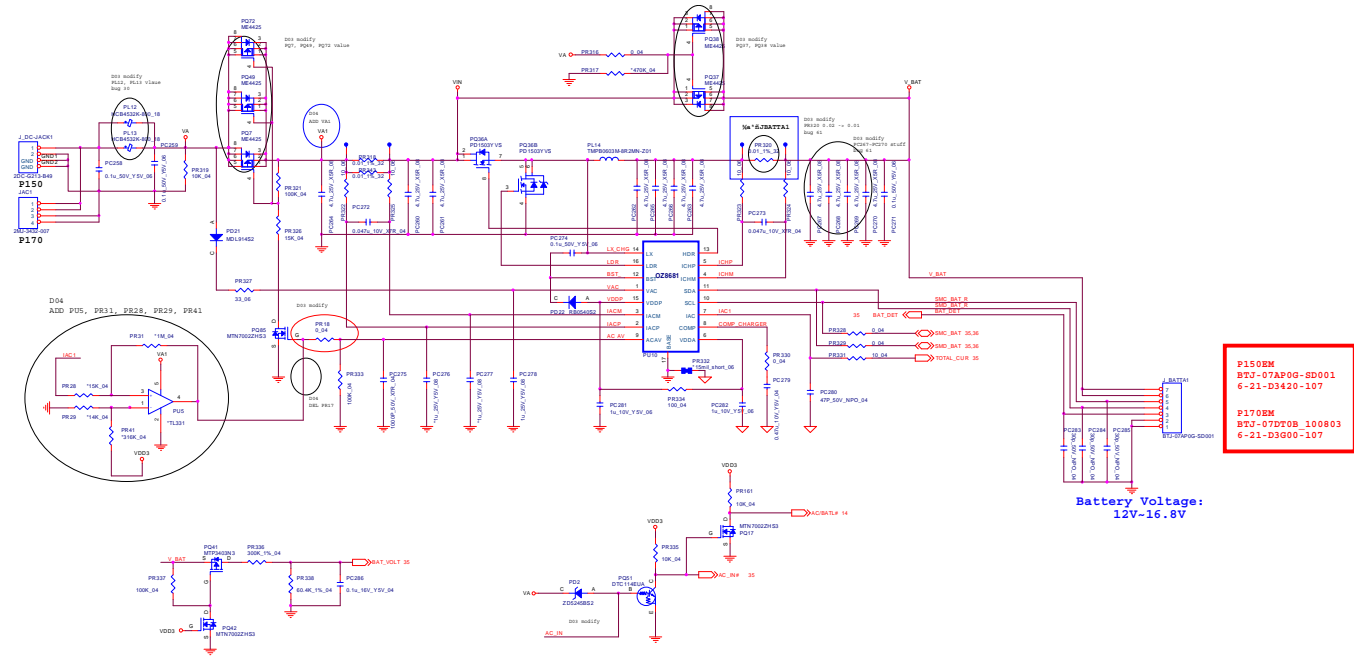

- PCB Layout notes**
- 1) All power traces should be routed on the outer layers
GNDP, VAD, VBY, SL, LX, VCHG, VBATT
 - 2) Use Kelvin connections for R1, R6
(separated force and measurement traces)
 - 3) R23 and R24 are dummy resistors, for layout purposes only
(serves as single point connection between GNDP & GNDN)
 - 4) Footprint TO-236 is equivalent to SOT-23
 - 5) Footprint SRF1P is a single hole axial pad
 - 6) All resistors, capacitors and semiconductors are SMD
 - 7) Potentiometers, and test points are axial devices



P150EM
BTJ-07AP0G-SD001
6-21-D3420-107

P170EM
BTJ-07DFOB_100803
6-21-D3G00-107

Battery Voltage:
12V-16.8V



Power 0.85VS

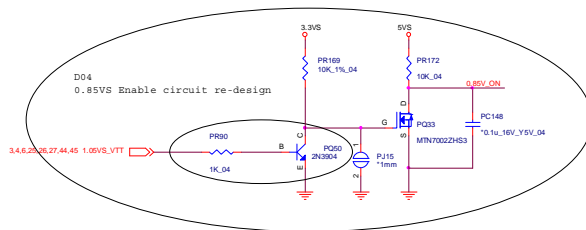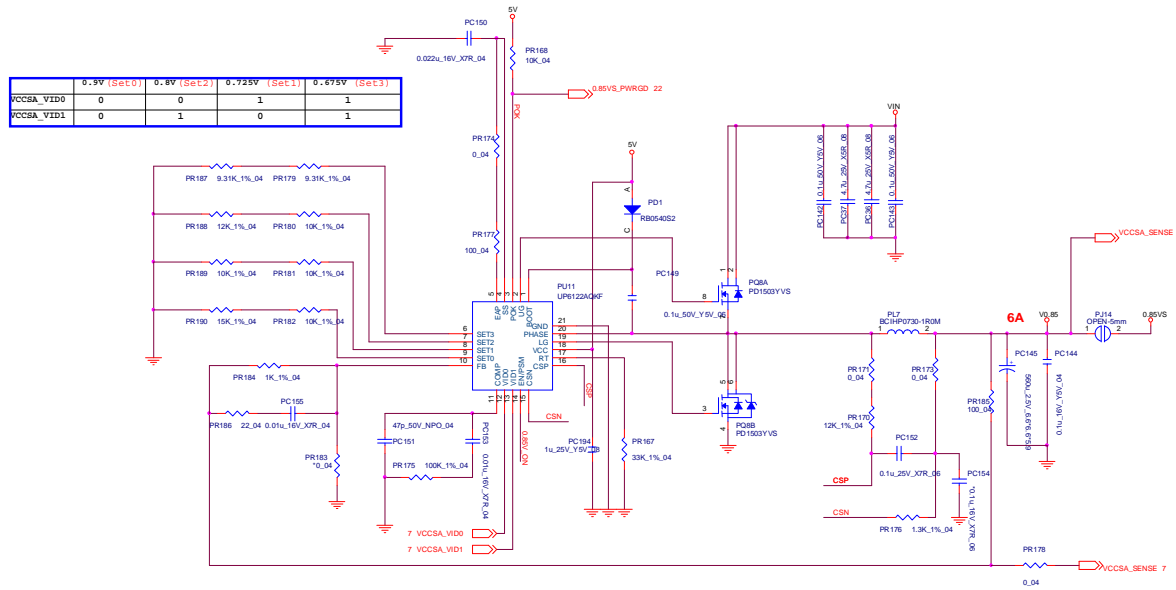

- 5V 14,16,17,18,20,23,26,27,30,31,33,34,36,37,41,45,46
- 3.3V 2,4,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24,25,26,27,29,30,31,33,34,35,36,37,38,41,45
- 5V 14,27,29,30,33,39,41,42,43,44
- 0.85VS 7
- VIN 14,15,40,41,42,43,45,46,47


Sheet 48 of 61
Power 0.85VS

B.Schematic Diagrams


Audio Board

Sheet 49 of 61
Audio Board


USB PORT

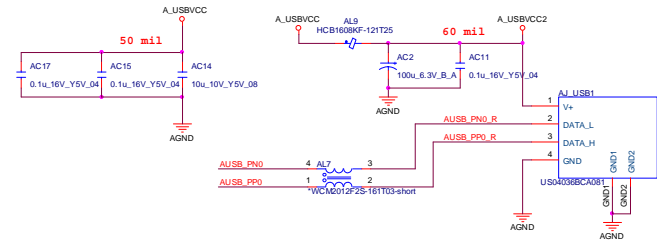


AUDIO JACK

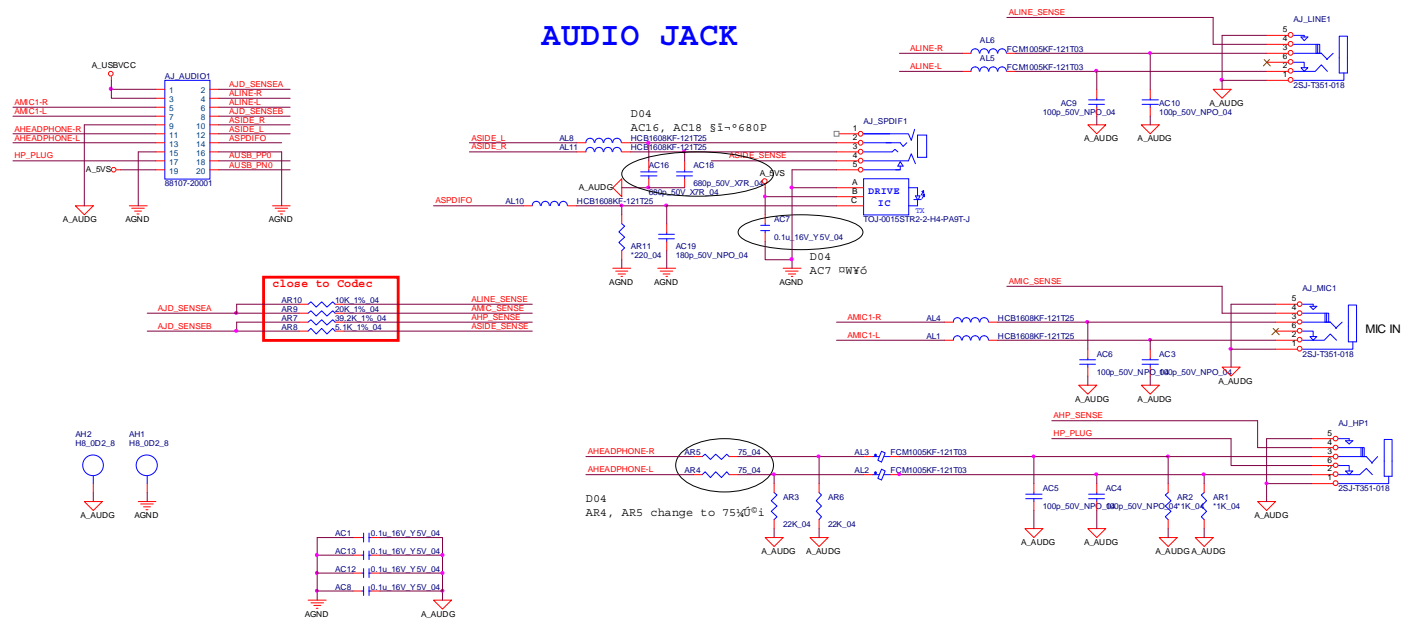

P150 ODD Board

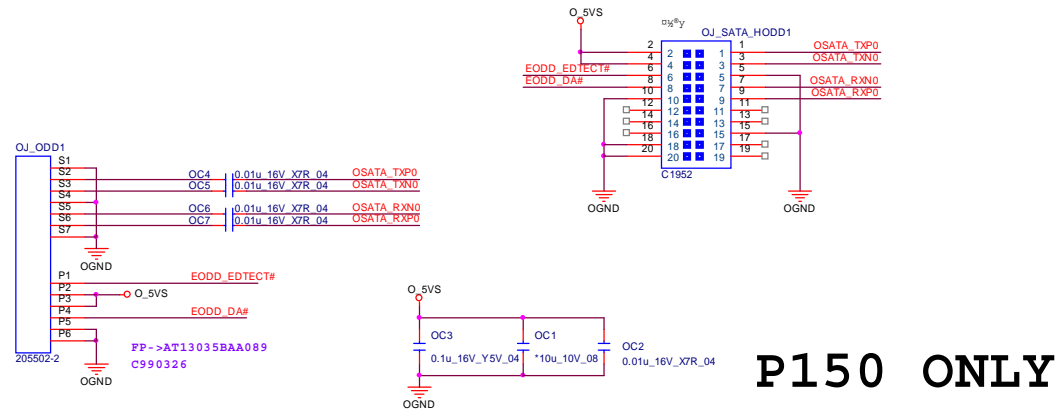

P150 ONLY

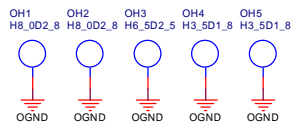


Sheet 50 of 61
P150 ODD Board


B.Schematic Diagrams

Schematic Diagrams

P150 Click Board



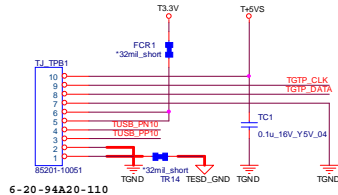


6-20-94A.20-110
 It is strongly recommended that the TESD_GND has a dedicated connection to the system chassis or cable shield.

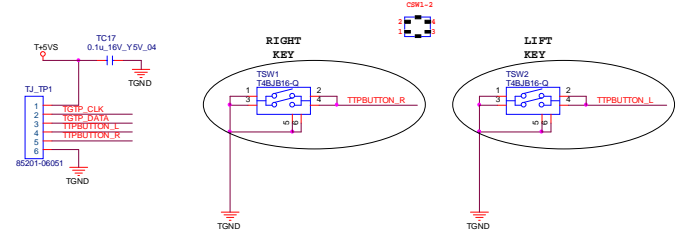

B.Schematic Diagrams

Sheet 51 of 61
 P150 Click Board


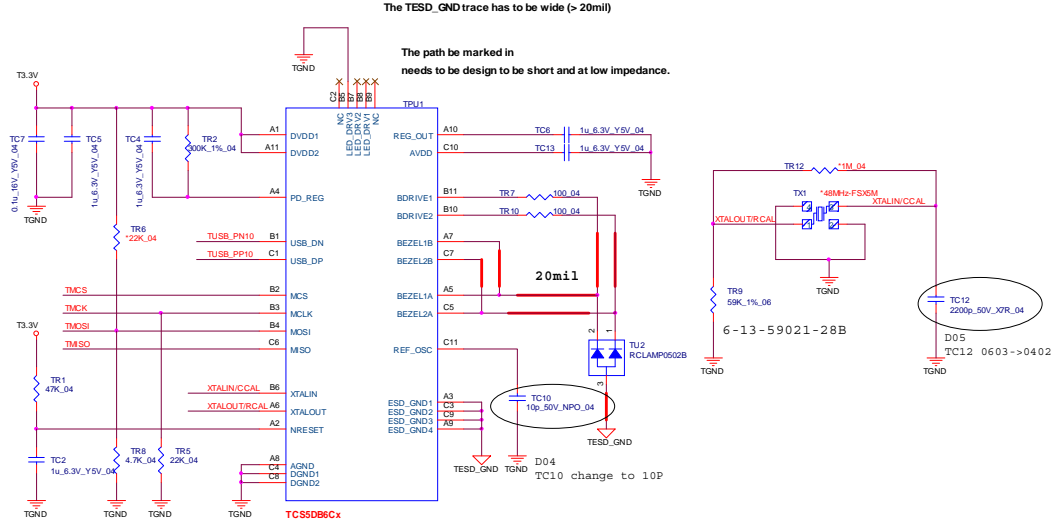
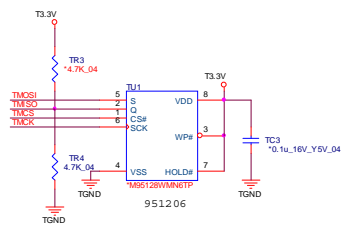


P150 ONLY

W/O finger printer P/N: 6-71-P15E2-D01-1

P150 LED 1 Board






P17&P15

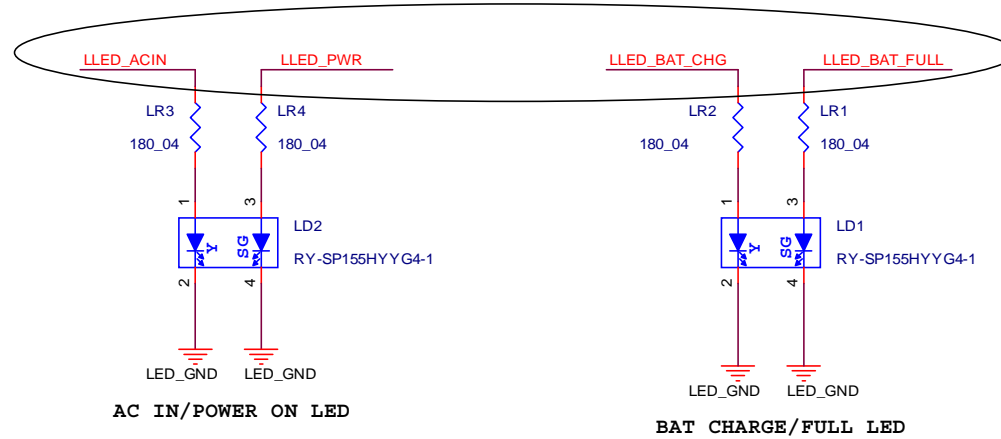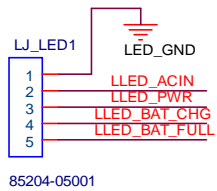

Sheet 52 of 61
P150 LED 1 Board





P150 LED 2 Board

Sheet 53 of 61
P150 LED 2 Board

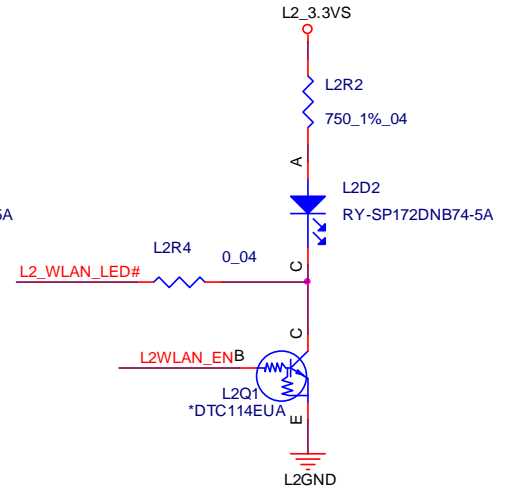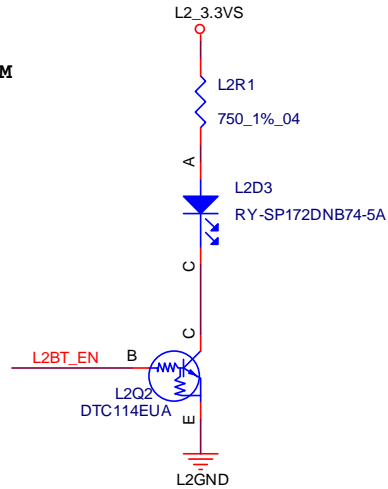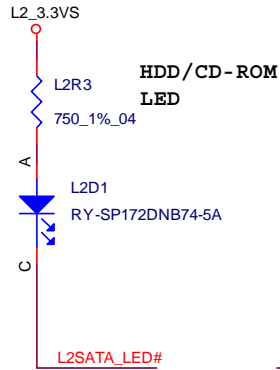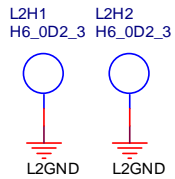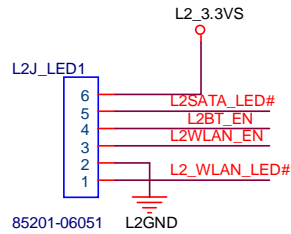


LED

P150 LED 3 Board

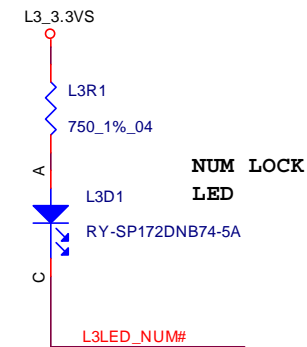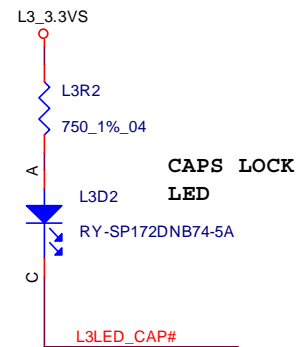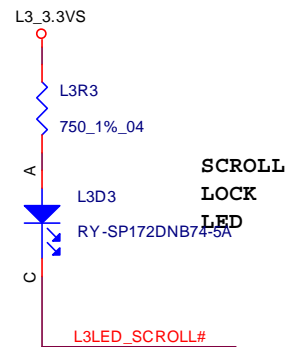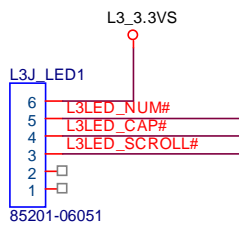



Sheet 54 of 61
 P150 LED 3 Board

B.Schematic Diagrams

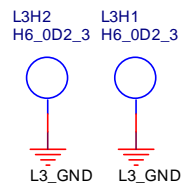

Schematic Diagrams



P170 HDD & ODD Board

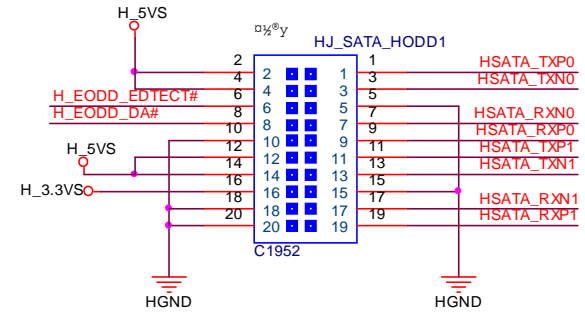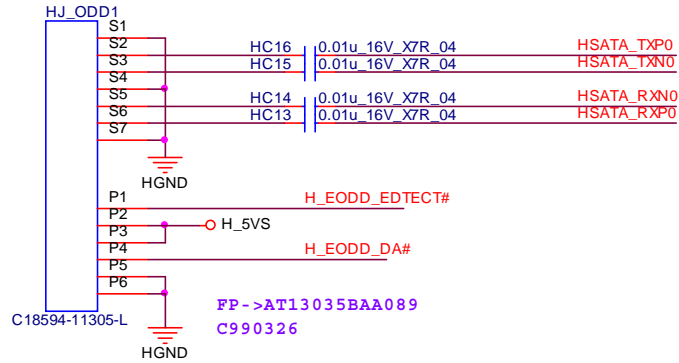











B.Schematic Diagrams

Sheet 55 of 61
P170 HDD& ODD
Board

P170 ONLY

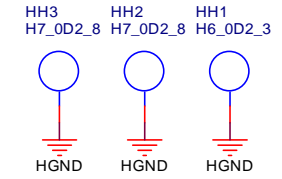
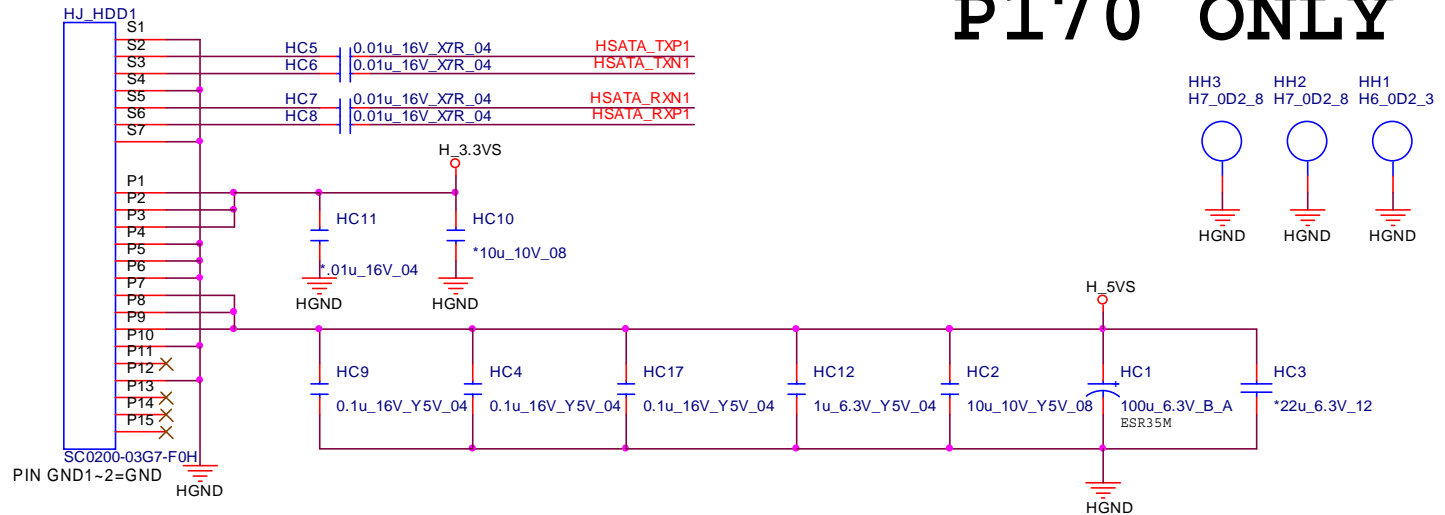


P170 LED Board

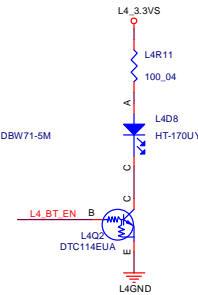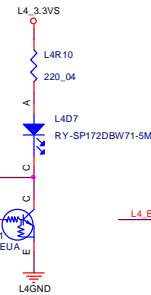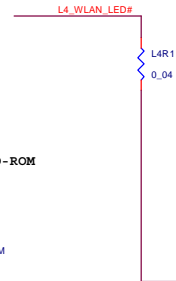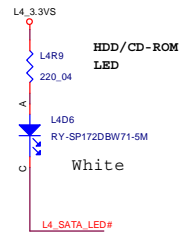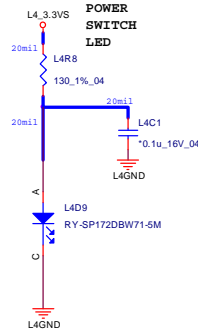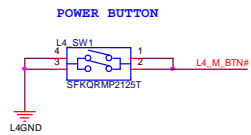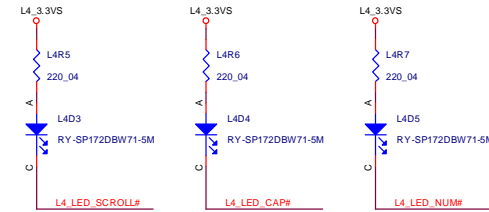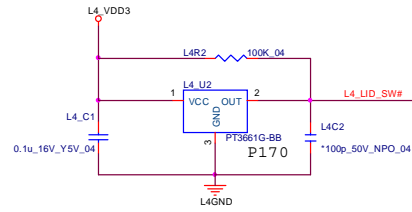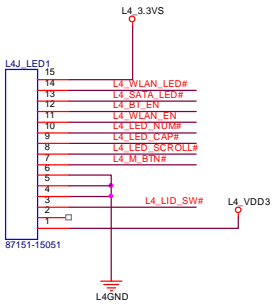


Sheet 56 of 61
P170 LED Board

P170 Fingerprint Board

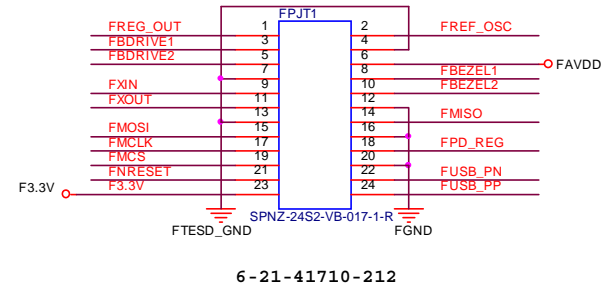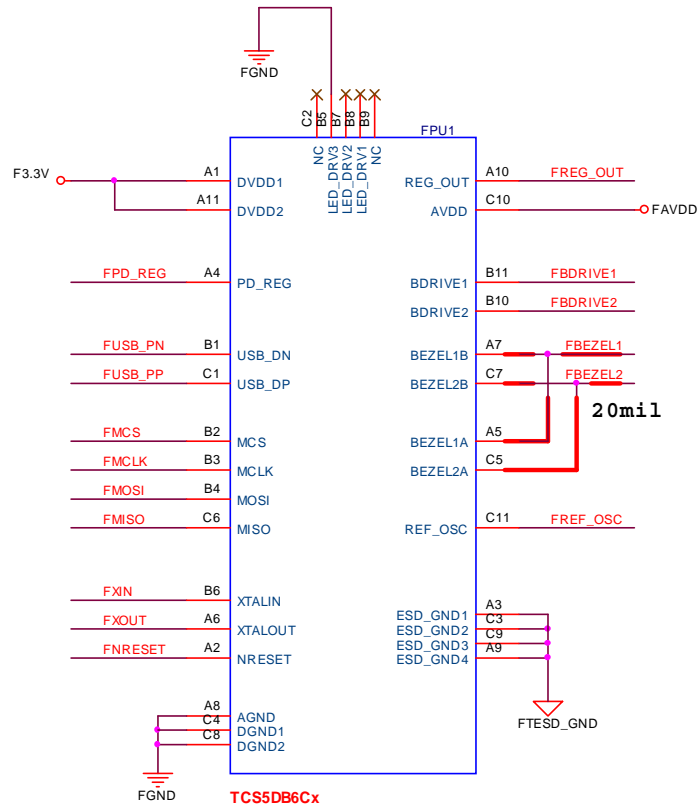


P170 ONLY







Sheet 58 of 61
P170 Fingerprint Board

P150 HDD Board

Sheet 59 of 61
P150 HDD Board

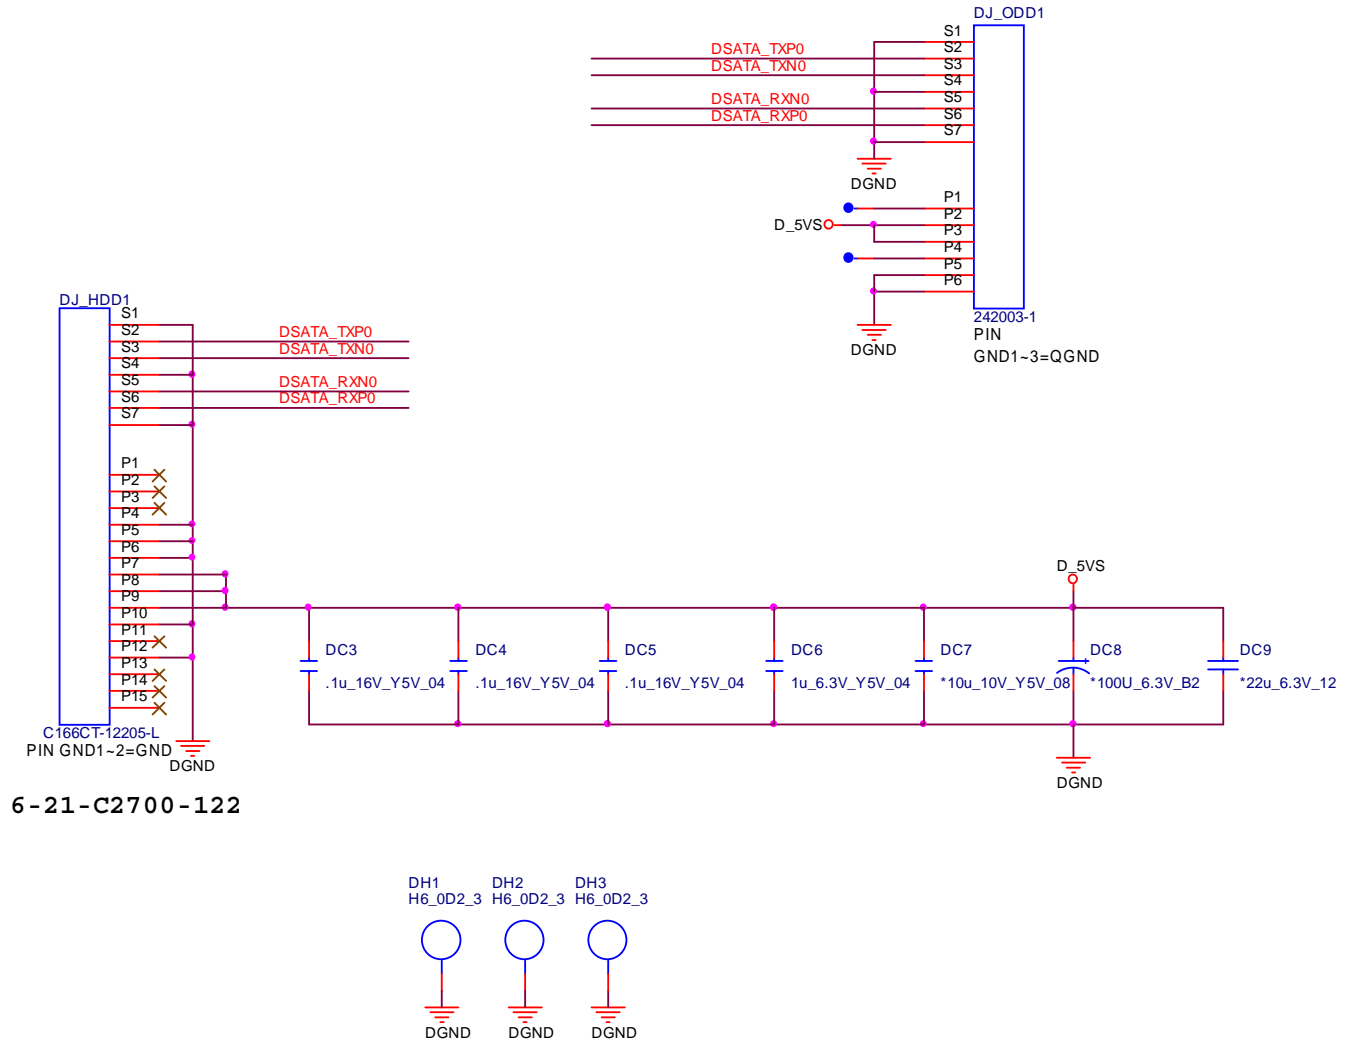


P150 LED Board_L

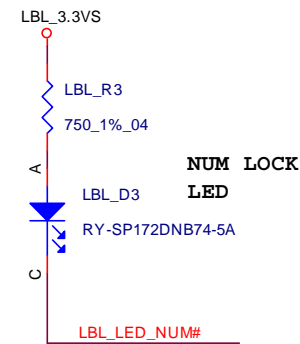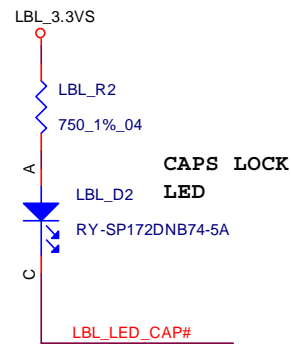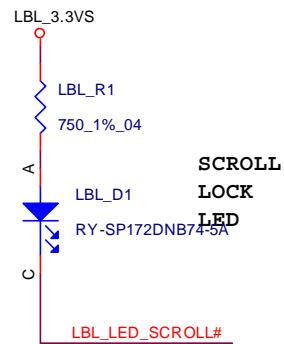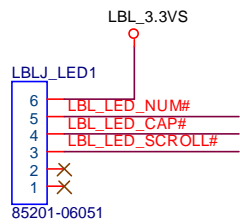






Sheet 60 of 61
P150 LED Board_L

B.Schematic Diagrams

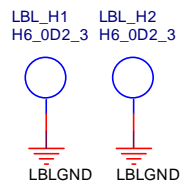

P150 LED Board_R


Sheet 61 of 61
P150 LED Board_R

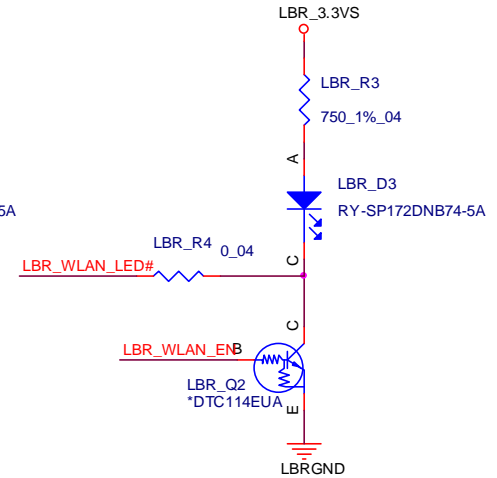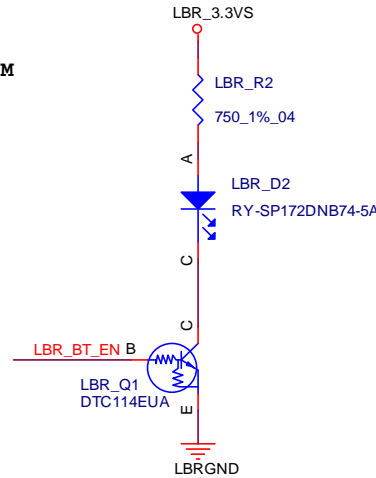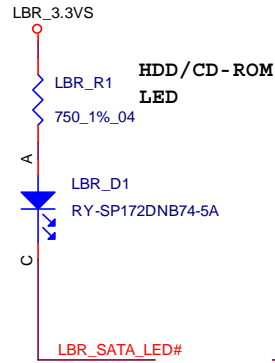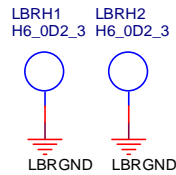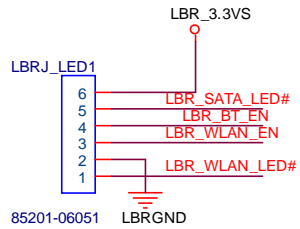

LED

Power on Sequence

P150EM_D02 POWER on SEQUENCE

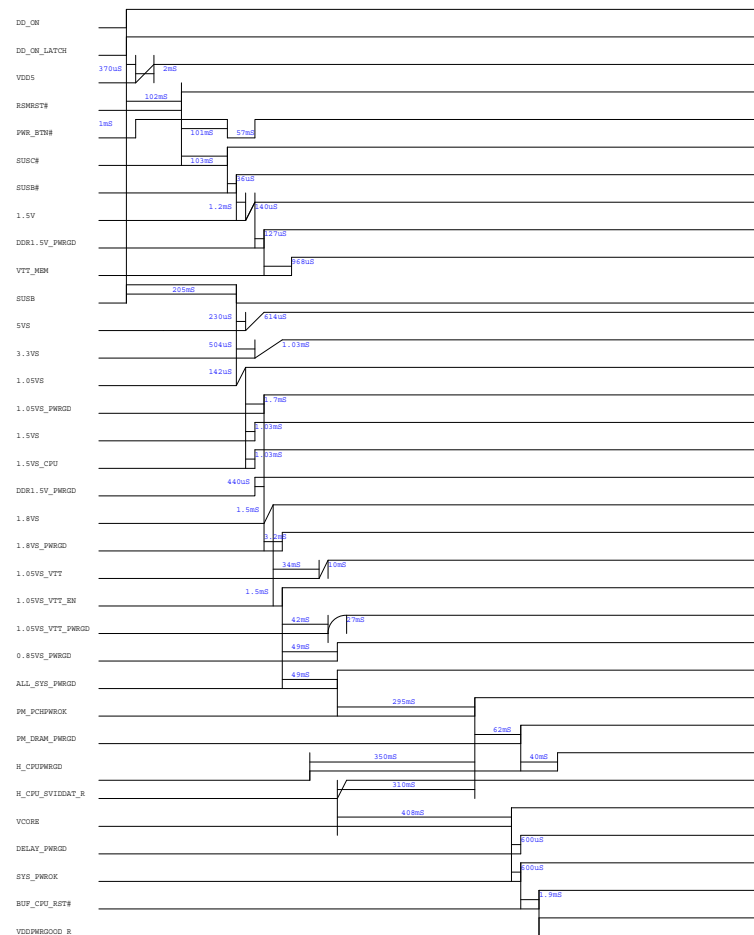

Sheet 62 of 61
Power on
Sequence

Schematic Diagrams

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS, you must:

- Download the BIOS update from the web site.
- Unzip the files onto a bootable CD/DVD/USB Flash Drive.
- Reboot your computer from an external CD/DVD/USB Flash Drive.
- Use the flash tools to update the flash BIOS using the commands indicated below.
- Restart the computer booting from the HDD and press **F2** at startup enter the BIOS.
- Load setup defaults from the BIOS and save the default settings and exit the BIOS to restart the computer.
- After rebooting the computer you may restart the computer again and make any required changes to the default BIOS settings.

Download the BIOS

1. Go to www.clevo.com.tw and point to **E-Services** and click **E-Channel**.
2. Use your user ID and password to access the appropriate download area (BIOS), and download the latest BIOS files (the BIOS file will be contained in a batch file that may be run directly once unzipped) for your computer model (see sidebar for important information on BIOS versions).

Unzip the downloaded files to a bootable CD/DVD/ or USB Flash drive

1. Insert a bootable CD/DVD/USB flash drive into the CD/DVD drive/USB port of the computer containing the downloaded files.
2. Use a tool such as Winzip or Winrar to unzip all the BIOS files and refresh tools to your bootable CD/DVD/USB flash drive (you may need to create a bootable CD/DVD with the files using a 3rd party software).

Set the computer to boot from the external drive

1. With the bootable CD/DVD/USB flash drive containing the BIOS files in your CD/DVD drive/USB port, restart the computer and press **F2** (in most cases) to enter the BIOS.
2. Use the arrow keys to highlight the **Boot** menu.
3. Use the “+” and “-” keys to move boot devices up and down the priority order.
4. Make sure that the CD/DVD drive/USB flash drive is set first in the boot priority of the BIOS.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.



BIOS Version

Make sure you download the latest correct version of the BIOS appropriate for the computer model you are working on.

You should only download BIOS versions that are **V1.01.XX or higher** as appropriate for your computer model.

Note that BIOS versions are not backward compatible and therefore **you may not downgrade your BIOS to an older version** after upgrading to a later version (e.g if you upgrade a BIOS to ver 1.01.05, you **MAY NOT** then go back and flash the BIOS to ver 1.01.04).

BIOS Update

Use the flash tools to update the BIOS

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt e.g: DISK C:\> (C is the designated drive letter for the CD/DVD drive/USB flash drive).
3. **Type the following command** at the DOS prompt:

C:\> Flash.bat

4. The utility will then proceed to flash the BIOS.
5. You should then be prompted to press any key to restart the system or turn the power off, and then on again but make sure you remove the CD/DVD/USB flash drive from the CD/DVD drive/USB port before the computer restarts.

Restart the computer (booting from the HDD)

1. With the CD/DVD/USB flash drive removed from the CD/DVD drive/USB port the computer should restart from the HDD.
2. Press **F2** as the computer restarts to enter the BIOS.
3. Use the arrow keys to highlight the **Exit** menu.
4. Select **Load Setup Defaults** (or press **F3**) and select “**Yes**” to confirm the selection.
5. Press **F4** to save any changes you have made and exit the BIOS to restart the computer.

Your computer is now running normally with the updated BIOS

You may now enter the BIOS and make any changes you require to the default settings.