

HISTORY INFORMATION FOR THE FOLLOWING MANUAL:

SERVICE MANUAL (COMMON)

RB2G CHASSIS

Segment: HM

Version	Date	Subject
1	01/2014	1 st Issue.
2	04/2014	Model Addition : Add 60" Models (Model List , pg 45-46)

LCD TV
SONY[®]
9-888-150-02

For SM - Unique , please refer :
9-888-150-A1 (America)
9-888-150-C1 (China)
9-888-150-E1 (Europe)
9-888-150-P1 (Pan Asia)

SERVICE MANUAL (COMMON)

RB2G CHASSIS

Segment: HM

LCD TV
SONY[®]

MODEL LIST

THIS SERVICE MANUAL CONTAINS COMMON INFORMATION FOR BELOW REGIONS AND MODELS:

REGION

ASIA CHINA AMERICA JAPAN EUROPE

MODEL

<i>KDL-40W580B</i>	<i>KDL-48W580B</i>	<i>KDL-60W600B</i>
<i>KDL-40W590B</i>	<i>KDL-48W585B</i>	<i>KDL-60W605B</i>
<i>KDL-40W600B</i>	<i>KDL-48W590B</i>	<i>KDL-60W607B</i>
<i>KDL-40W605B</i>	<i>KDL-48W600B</i>	<i>KDL-60W608B</i>
<i>KDL-40W607B</i>	<i>KDL-48W605B</i>	<i>KDL-60W610B</i>
<i>KDL-40W608B</i>	<i>KDL-48W607B</i>	<i>KDL-60W630B</i>
	<i>KDL-48W608B</i>	<i>KDL-60WM15B</i>
	<i>KDL-48WM15B</i>	

TABLE OF CONTENTS


<u>Section Title</u>	<u>Page</u>	<u>Section Title</u>	<u>Page</u>
1. SAFETY NOTES		4. SERVICE ADJUSTMENTS	
1-1. Warnings and Caution.....	5	4-1. Accessing Service Mode	28
1-2. Caution Handling of LCD Panel	5	4-2. Transition of Each Micro's Service Mode.....	28
1-3. Caution About the Lithium Battery.....	6	4-3. Change Data by Service Mode 1.....	28
1-4. Safety Check Out	6	4-4. Change Data by Service Mode 2.....	29
1-5. Leakage Test	6	4-5. Restore WB / Gamma Adj. Data to B Board.....	30
1-6. How to Find a Good Earth Ground.....	7	4-6. WB Adjustment by Service Mode.....	31
1-7. Lead Free Information.....	7	4-7. VCOM Adjustment (NFR-AUO/SDC/FXC Panel)	31
1-8. Handling the Flexible Flat Cable (FFC).....	7	4-8. VCOM Adjustment (HFR-AUO /FXC Panel)	32
2. SELF DIAGNOSTIC FUNCTION		4-9. REC Setting.....	32
2-1. Overview of Control Buttons	8	4-10. Reset Panel Operation Time.....	33
2-2. LED Display Control	9	4-11. Set to Shipping Condition.....	33
2-3. LED Pattern.....	9	4-12. Summary of Service Control.....	33
2-4. Standby LED Error Display.....	9	4-13. Service Menu Tree.....	34
2-5. Triage Chart	10	4-14. How to Enter Self Diagnosis Display.....	35
3. TROUBLE SHOOTING		5. DIAGRAMS	
3-1. No Power.....	11	5-1. Circuit Board Location	38
3-2. LED Blinking.....	12	5-2. Block Diagram.....	39
3-3. No Sound.....	20	5-3. Connector Diagram	44
3-4. No Picture.....	21		
3-5. Side Buttons Malfunction.....	23		
3-6. IR Remote Commander Malfunction.....	23		
3-7. Light Sensor Error.....	23		
3-8. Network Malfunction: Ethernet (Wired).....	24		
3-9. 3D-Glasses (Active) malfunction.....	25		
3-10. Wireless Network Malfunction.....	26		
3-11. Bluetooth Malfunction.....	27		

Please refer Service Manual – Unique for below information :

- Safety Warnings
- Wire Dressing
- Circuit Board Location
- Disassembly and Exploded View.

SECTION 1 SAFETY NOTES

1-1. Warnings and Caution

- 1) These servicing instructions are for use by qualified service personnel only.
- 2) To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- 3) An isolation transformer should be used during any service to avoid Possible shock hazard, because of live chassis. The chassis of this receiver is directly connected to the ac power line.
- 4) Be sure to follow these guidelines to protect your property and avoid causing serious injury :
 - Carry the TV with an adequate number of people; larger size TVs require two or more people.
 - Correct hand placement while carrying the TV is very important for safety and to avoid damages.
- 5) Components identified by shading and  mark on the exploded views, and in the parts list are critical for safe operation. Replace these components with Sony parts whose part numbers appear as shown in this manual or in supplements published by Sony. Circuit adjustments that are critical for safe operation are identified in this manual. Follow these procedures whenever critical components are replaced or improper operation is suspected.

1-2. Caution Handling of LCD Panel

When repairing the LCD Panel, make sure you are grounded with a wrist band. When repairing the LCD Panel on the wall, the panel must be secured using the 4 mounting holes on the rear cover.

- 1) Do not press the panel or frame edge to avoid the risk of electric shock.
- 2) Do not scratch or press on the panel with any sharp objects.
- 3) Do not leave the module in high temperature or in areas of high humidity for an extended period of time.
- 4) Do not expose the LCD panel to direct sunlight.
- 5) Avoid contact with water. It may cause short circuit within the module.
- 6) Disconnect the AC power when replacing the backlight (CCFL) or inverter circuit. (High voltage occurs at the inverter circuit at 650Vrms)
- 7) Always clean the LCD panel with a soft cloth material.
- 8) Use care when handling the wires or connectors of the inverter circuit. Damaging the wires may cause a short circuit.
- 9) Protect the panel from ESD to avoid damaging the electronic circuit (C-MOS).
- 10) During the repair, DO NOT leave the Power On or Burn-in period for more than 1 hour while the TV is face down on a cloth.

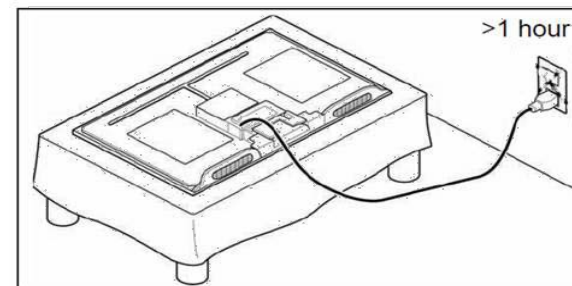


Figure 1. TV is faced down on a cloth during repair.

1-3. Caution About the Lithium Battery

1) Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

2) Outer case broken battery should not contact to water.

1-4. Safety Check-Out

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:-

- 1) Check the area of your repair for unsoldered or poorly soldered connections. Check the entire board surface for solder splashes and bridges.
- 2) Check the inter board wiring to ensure that no wires are pinched or contact high-wattage resistors.
- 3) Check all control knobs, shields, covers, ground straps and mounting hardware have been replaced. Be absolutely certain you have replaced all the insulators.
- 4) Look for unauthorized replacement parts, particularly transistors that were installed during a previous repair. Point them out to the customer and recommend their replacement.
- 5) Look for parts which, though functioning show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
- 6) Check the line cords for cracks and abrasion. Recommend the replacement of any such line cord to the customer.
- 7) Check the antenna terminals, metal trim, metalized knobs, screws and all other exposed metal parts for AC leakage. Check leakage test as described next.
8. For safety reasons, repairing the Power board and/or Inverter board is prohibited.

1-5. Leakage Test

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis must not exceed 0.5mA (500 microamperes).

Leakage current can be measured by any one of the three methods:-

- 1) A commercial leakage tester such as the SIMPSON 229 or RCA WT540A. Follow the manufacturers instructions to use those instructions.
- 2) A battery-operated AC milliammeter The DATA PRECISION 245 digital multimeter is suitable for this job.

3) Measuring the voltage drop across a resistor by means of a VOM or battery operated AC voltmeter. The 'limit' indication is 0.75V so analog meters must have an accurate low voltage scale. The SIMPSON'S 250 and SANWA SH-63TRD are examples of passive VOMs that are suitable. Nearly all battery operated digital multimeter that have a 2 VAC range are suitable. (see Figure 2.)

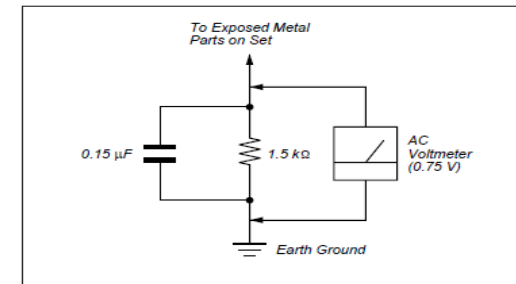


Figure 2. AC voltmeter to check AC leakage

1-6. How to Find a Good Earth Ground

- 1) A cold-water pipe is a guaranteed earth ground; the cover-plate retaining screw on most AC outlet boxes is also at earth ground.
- 2) If the retaining screw is to be used as your earth ground, verify that it is at ground by measuring the resistance between it and a cold-water pipe with an ohmmeter. The reading should be zero ohms.
- 3) If a cold-water pipe is not accessible, connect a 60- to 100-watt trouble-light (not a neon lamp) between the hot side of the receptacle and the retaining screw. Try both slots, if necessary, to locate the hot side on the line; the lamp should light at normal brilliance if the screw is at ground potential (see Figure 3).

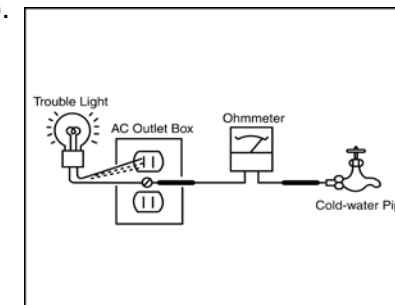


Figure B. Checking for earth ground.

Figure 3. Checking for earth ground.

1-7. Lead Free Information

The circuit boards used in these models have been processed using Lead Free Solder. The boards are identified by the LF logo located close to the board designation.



Figure 4: LF Logo


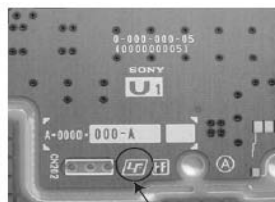


Figure 5: LF logo on circuit board

The servicing of these boards requires special precautions. It is strongly recommended to use Lead Free Solder material in order to guarantee optimal quality of new solder joints.

1-8. Handling the FLEXIBLE FLAT CABLE (FFC)


- When you insert / pull out FFC, please grasp a reinforcement board and main body of FFC.

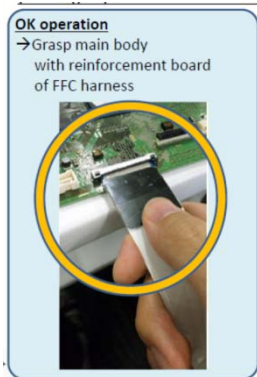


<GOOD>







<NG>

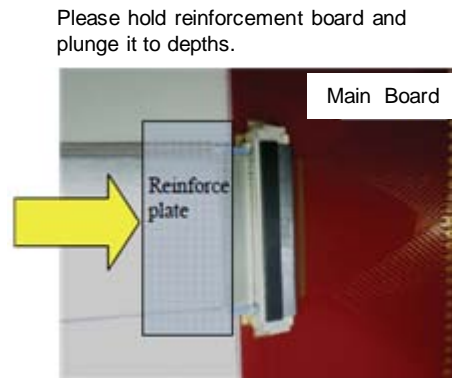

< Insertion >

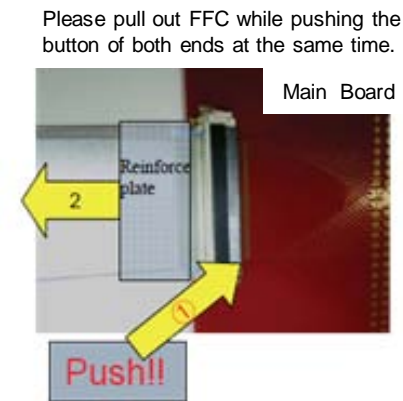


< Pull out >

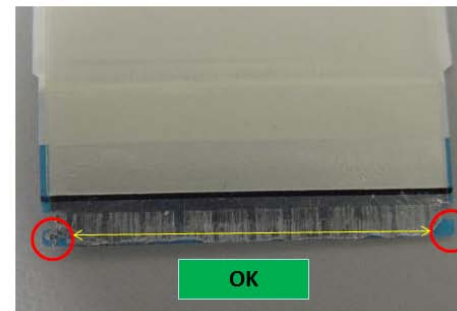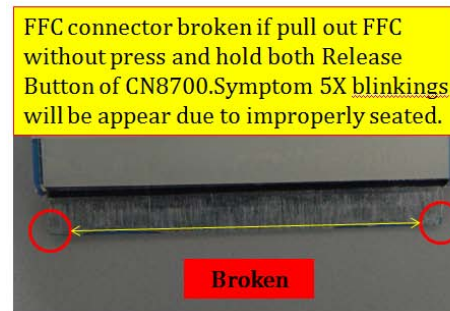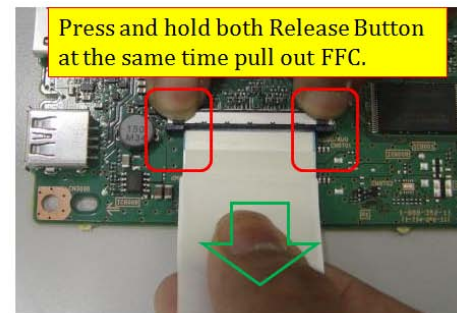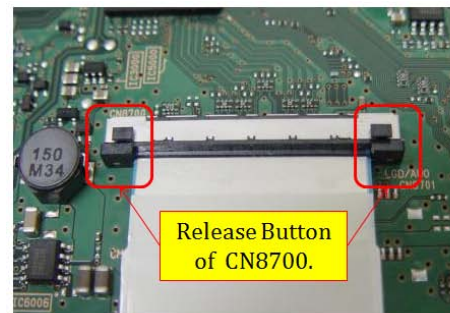


SECTION 2 SELF DIAGNOSTIC FUNCTION

2-1. Overview of Control Buttons

2-1-1. (EXCEPT CHINA)

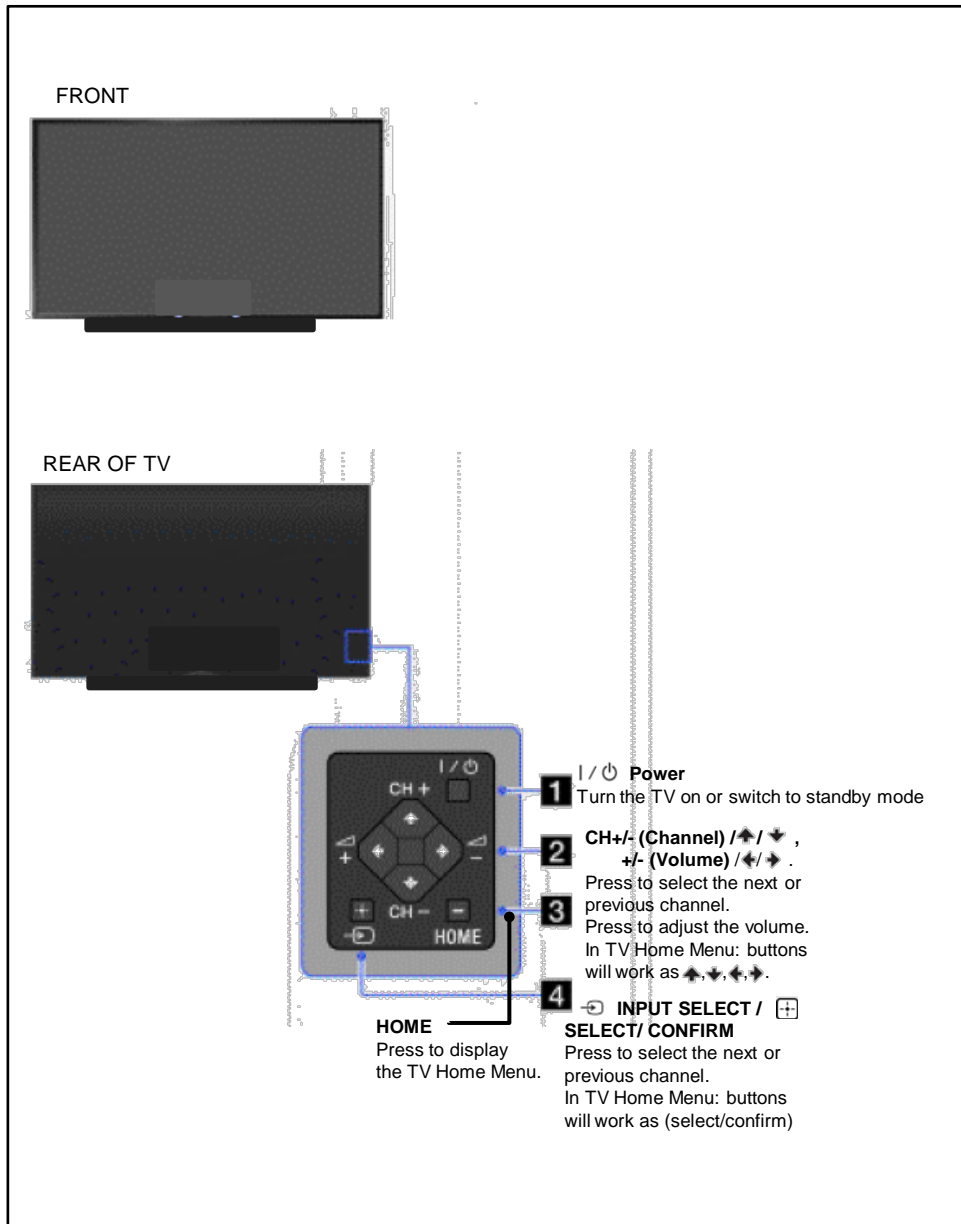

2-1-2. (CHINA)

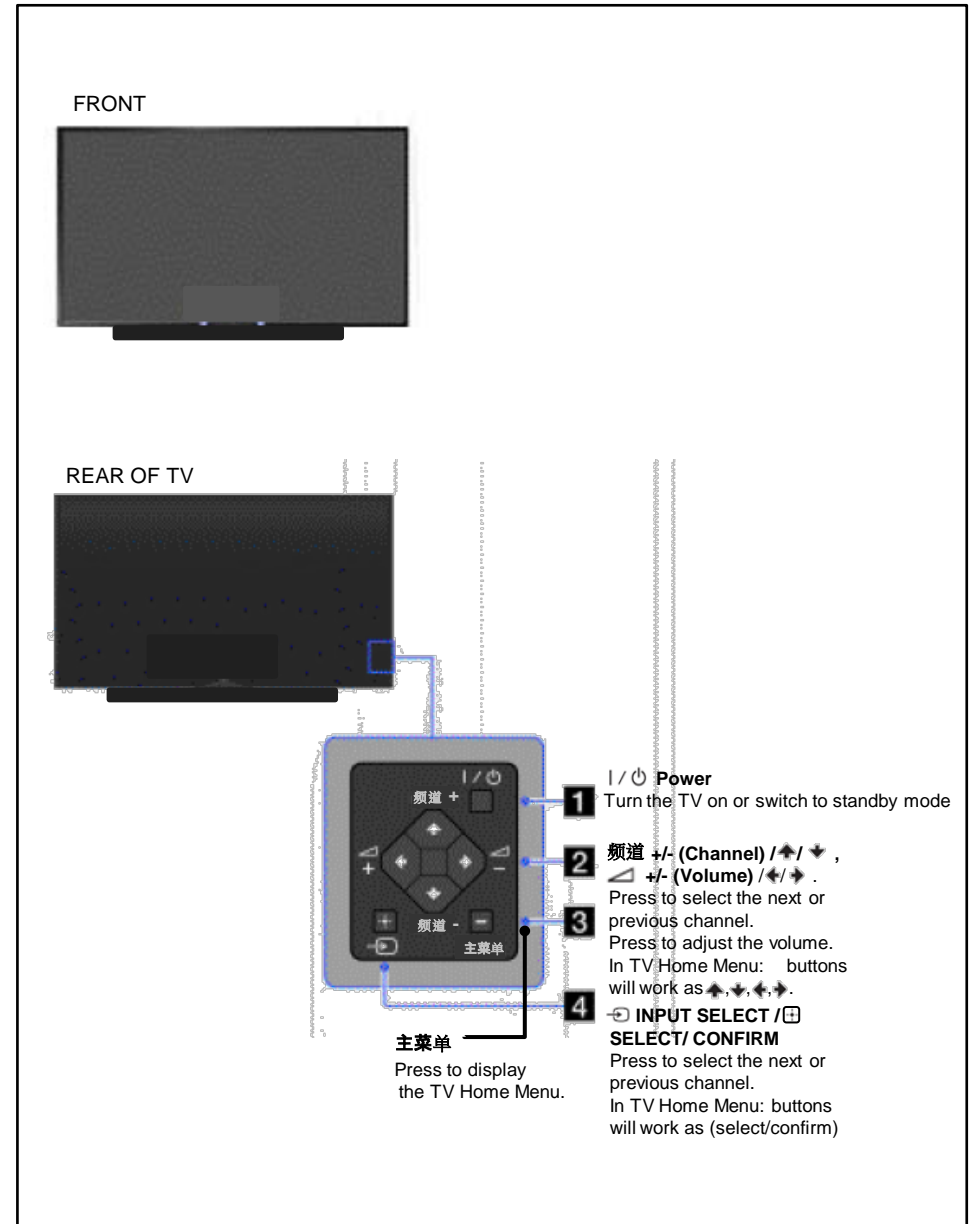


2-2. LED Display Control

Status	White Center LED (applicable for HSC2 only)	Side RGB LED	Side Amber LED	Remarks
Power Off (by power saving switch off and *1)	-	Off	Off	*1 power switch off (by side key)
Power On	-	Green Lit	Off	
STBY/i.LINK STBY/PC STBY (by remote control off only)	-	Off	Off	
Skype Call Receive	-	White one shot	Off	
Picture Off	-	White one shot	Off	
Device Connection	-	Cyan one shot	Off	
Power ON Animation	-	White one shot	Off	
Sleep Timer/On Timer/Reminder/REC Timer/Photo Frame (Power On)	-	Amber Lit*2, *6	Off	*2 One Shot is only user action. *6 The actual data behaviour is "One Shot->Lit" to solve issue related to LED priority.
On Timer/Reminder/REC Timer (Deep Standby)	-	Off	Amber	After 5 minutes, side amber LED On
Failure	-	Red Blinking	Off	The number of LED blinking indicates cause of failure (refer to Led Error / Triage chart)
Aging mode	-	Green Blinking	Off	Blinking:0.5sec On / 0.5sec Off
End of Aging mode	-	Green Blinking	Off	Blinking:3sec On / 3sec Off
Software Updating	-	white blinking	off	
Software Updating finish	-	Blue lit	off	
Test Reset	-	white blinking	Amber blinking	
Error of panel ID	-	Green Blinking	Amber Blinking	Blinking:0.5sec On / 0.5sec Off
REC (SCART REC & HDD REC/LIVE PAUSE) [AEP/J only]	-	Red(Pink) Lit*2, *6	Off	*2 One Shot is only user action. *6 The actual data behaviour is "One Shot->Lit" to solve issue related to LED priority.
ePOP/ Shop Illumination	-	Cyan loop	Off	One shot Center White when feature change.

2-3. LED Pattern

When safety shutdown occurs, Standby LED display reports the cause by using the lightning patterns as indicated below

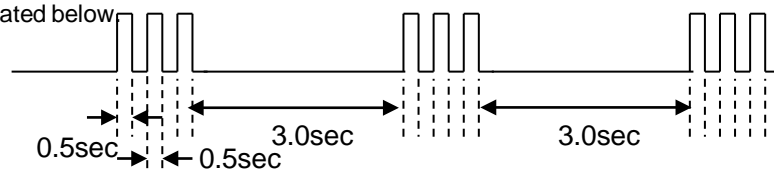

Example: The figure above shows LED display when SHUTDOWN is caused by Audio Error. It repeats flashing for a specified number of times in 0.5sec/cycle and has a 3 seconds interval of lighting off. Please note that a 3 seconds interval of lighting off is fixed regardless of abnormal state types.

2-4. Standby LED Error Display

RED LED blinking count	Detection Items	Board Error Item
2x	Main 12V failure [MAIN_POWE] * This failure is not saved	<ul style="list-style-type: none"> G** Board Error BAX_L Board Error
3x	Main 5.0/3.3/1.8/1.0/ 1.1V failure [DC_ALERT] * 5.0/1.0V failures are not saved.	<ul style="list-style-type: none"> BAX_L Board Error
	Audio amp. protection [AUD_ERR]	<ul style="list-style-type: none"> BAX_L Board Error Speaker
	HDMI equalizer/switch I2C NACK [HDMI_EQ] * There is Temp. sensor on the same I2C bus.	<ul style="list-style-type: none"> BAX_L Board Error
	Tuner or demodulator I2C NACK [TU_DEMOD]	<ul style="list-style-type: none"> BAX_L Board Error Tuner Board Error
	AFE device I2C NACK [AFE_I2C]	<ul style="list-style-type: none"> BAX_L Board Error Tuner Board Error
4x	AFE device error SPI NACK [AFE_SPI] * only for AEP,CH	<ul style="list-style-type: none"> BAX_L Board Error Tuner Board Error
	LED driver failure [LD_ERR]	<ul style="list-style-type: none"> LED Driver (LD) Board Error Panel module
	LED voltage error [VLED]]	<ul style="list-style-type: none"> LED Driver (LD) Board Error Panel module
5x	Panel ID EEPROM I2C NACK (Also panel power failure is a suspect) [P_ID_ERR]	<ul style="list-style-type: none"> Panel module Tcon board G** Board Error BAX_L Board Error
6x	Backlight failure [BACKLIGHT]	<ul style="list-style-type: none"> Panel module G** Board Error BAX_L Board Error
	Backlight converter OVP [BACKLIGHT]	<ul style="list-style-type: none"> Panel module Tcon board G** Board Error BAX_L Board Error
7x	Over temperature protection [TEMP_ERR] Temp. sensor I2C NACK [TEMP_ERR] * There is HDMI Eq on the same I2C bus.	<ul style="list-style-type: none"> BAX_L Board Error
8x	Software Error (Also the main board's memory or CAM module is a suspect)	<ul style="list-style-type: none"> BAX_L Board Error
9x	Tuner Board Error [TU_BOARD]	<ul style="list-style-type: none"> Tuner Board Error

Size	G** Board Type	Tuner Board	
		America/Pan Asia/China/Europe	Japan
40"	Not applicable	TUS	TUW
48"	Not applicable	TUS	TUW

2-5. Triage Chart

Reference	Symptoms - Shutdown. Power LED blinking red diagnostics sequences									No Power	Video - missing or distorted			Remote	Network	Audio	Skype	Smart Core	Bluetooth (BT)
	2	3	4	5	6	7	8	9	10	No White Power LED & does not reponse to remote (Dead Set)	Stationary colored lines or dots	No video One of Inputs	No video all Inputs	No Remote	Wireless can't connect	No Audio	Skype Can't Work	Smart Core no LED (Set is still alive)	Bluetooth / One Step Remote (OSR) can't connect
B* Board	▲	●		▲	▲	●	●			▲	▲	●	●	▲	▲	●	▲	▲	▲
TU board		▲					▲	●			▲	●	●			▲			
G* Board	●	▲		▲	●					●						▲			
H* Board														●				●	
Speaker		▲														●			
Skype Module																		●	
Camera Module																		▲	
Mic. Module																		●	
Wifi Module							●								●			▲	
BT Module																			●
LD* Board			●										▲						
LVDS FFC				▲	▲						▲		▲						
Tcon			▲	●	▲				▲		▲		▲						
LCD Panel			●	●	●	▲					●		▲						
Problem	Power	Power	LD	Panel (Tcon)	Panel (Backlight)	TEMP	Soft-ware		Emitter										
		Audio				FAN (N/A)													
		Local I2C																	


Size	G** Board Type	TU Board	
		America/Pan Asia/China/Europe	Japan
40"	Not applicable	TUS	TUW
48"	Not applicable	TUS	TUW

- Most likely defective part
- ▲ Secondary possible defective part

SECTION 3 TROUBLESHOOTING


3-1. NO POWER



3-1-1. NO POWER → AC ADAPTER

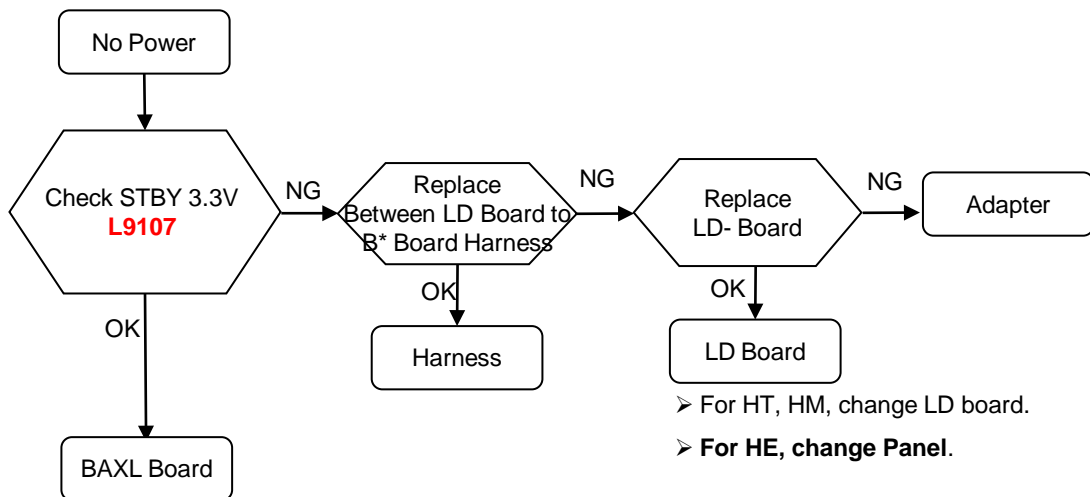

Note :
-B* Board – BAXL Board

3-1-2. NO POWER – AYU2/AYU2L failure

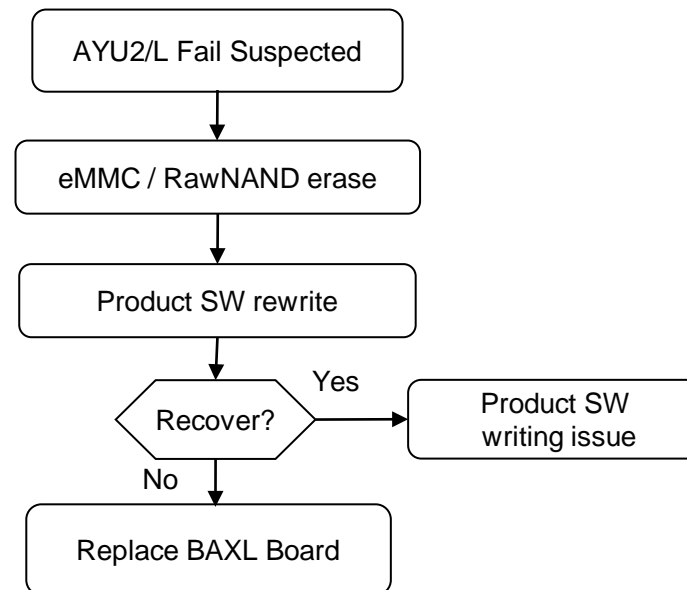


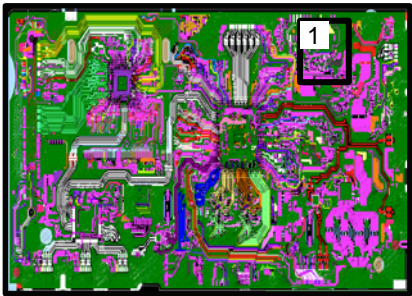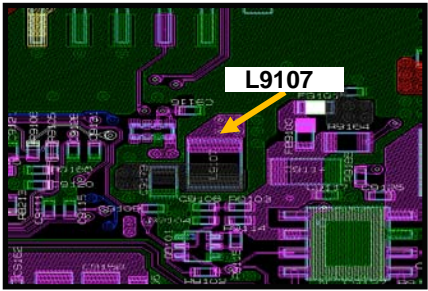Parts	Board PWB (BAXL- A side)	Detail
(L9107)		

3-2. LED BLINKING

3-2-1. LED Blinking: 3x (DC Alert & Communication Error)







Note: For location details, refer to troubleshooting Reference for parts location.

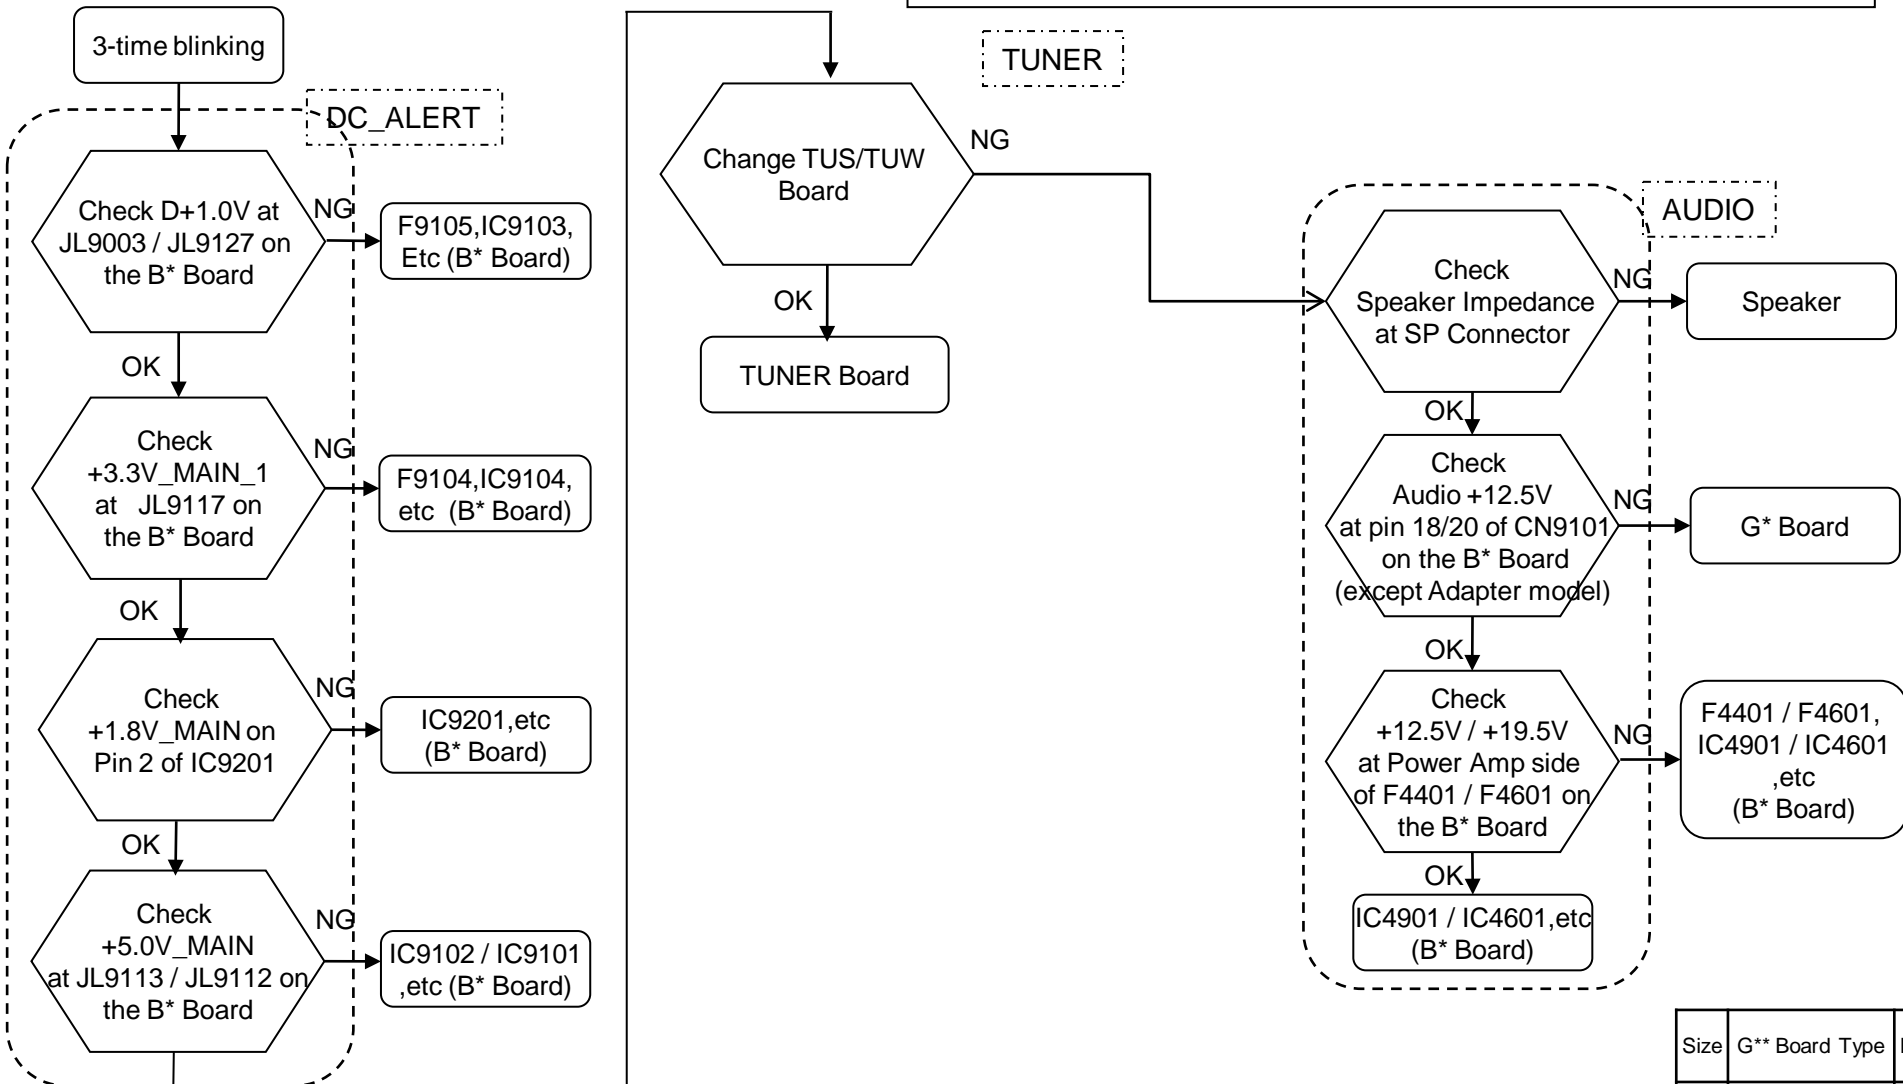

Size	G** Board Type	B* Board
40"	Not applicable	BAX_L
48"	Not applicable	BAX_L





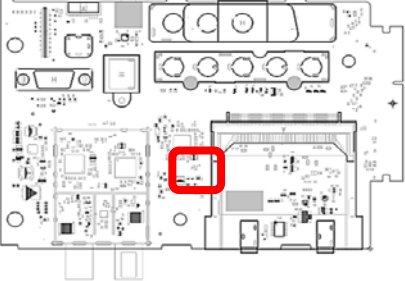
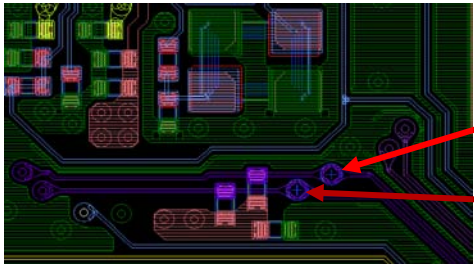
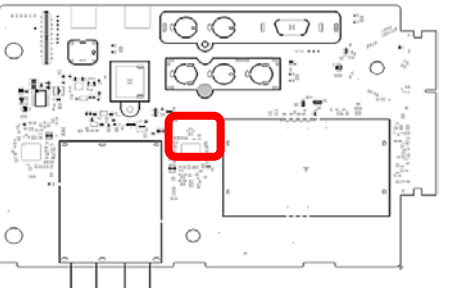
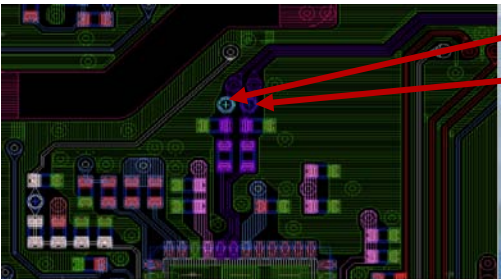
3-2-1. LED Blinking: 3x (DC Alert & Communication Error)

Troubleshooting References (a)

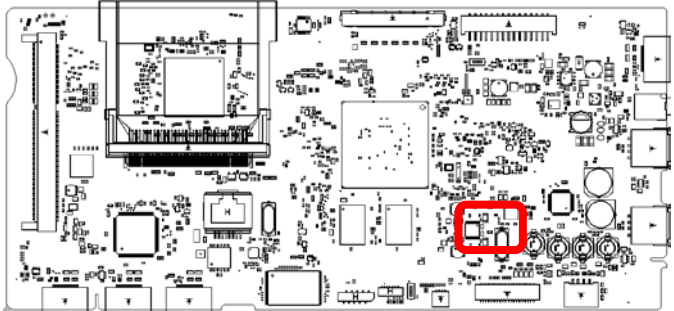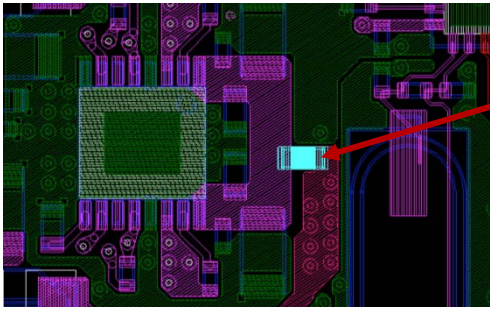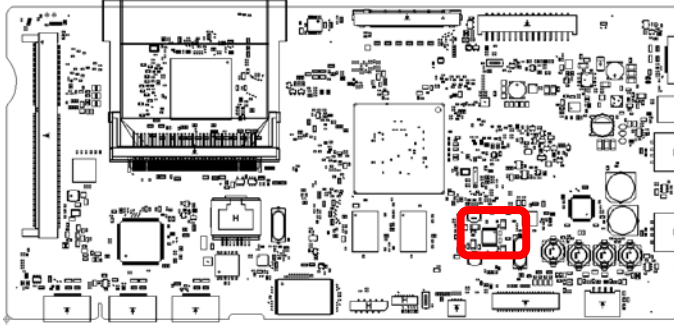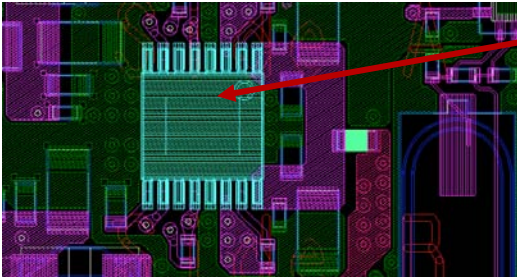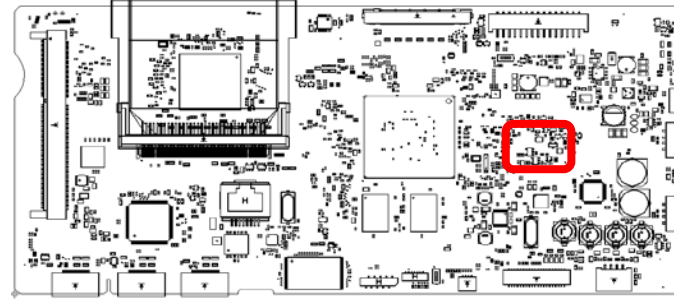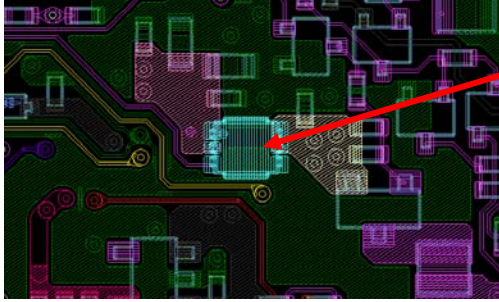Board / Parts	Board PWB (A side)	Detail
BAXL (F9104)		 <p data-bbox="1659 456 1733 480">F9104</p>
BAXL (IC9104)		 <p data-bbox="1659 738 1733 762">IC9104</p>
BAXL (IC9201)		 <p data-bbox="1659 1121 1733 1145">IC9201</p>







3-2-1. LED Blinking: 3x (DC Alert & Communication Error)

Troubleshooting References (b)

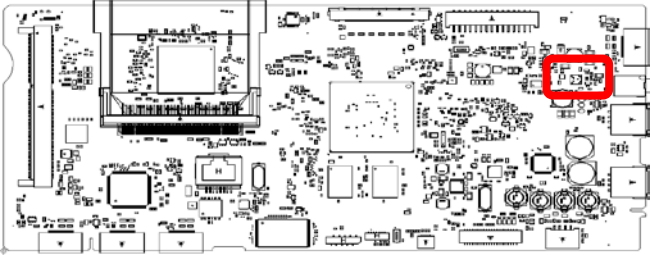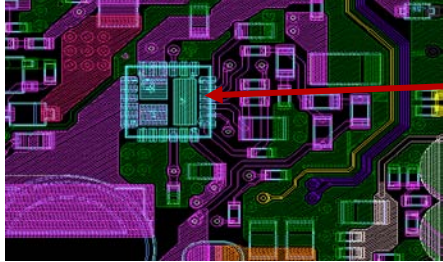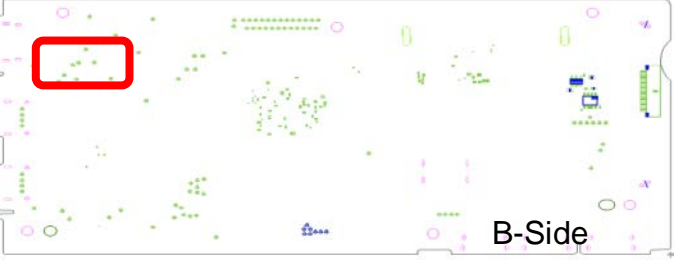Board / Parts	Board PWB (A side) (B side)	Detail
BAXL (IC9101)		 <p>IC9101</p>
BAXL (JL9112)	 <p>B-Side</p>	 <p>JL9112</p>
TU-S (Others) (CL2101, CL2102)		 <p>CL2102</p> <p>CL2101</p>
TU-W (Japan) (CL2318, CL2319)		 <p>CL2318</p> <p>CL2319</p>





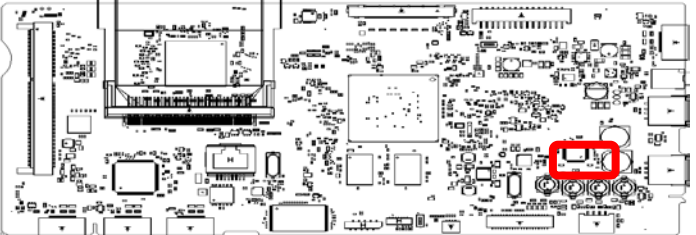
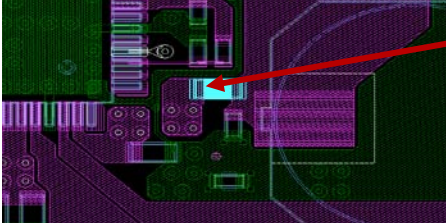
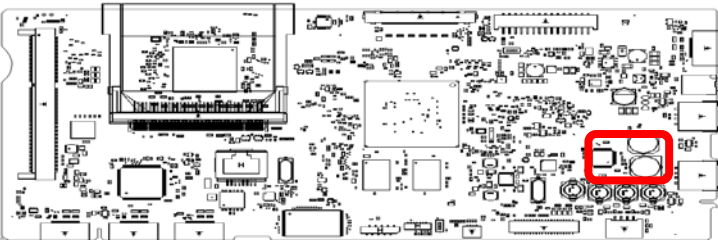

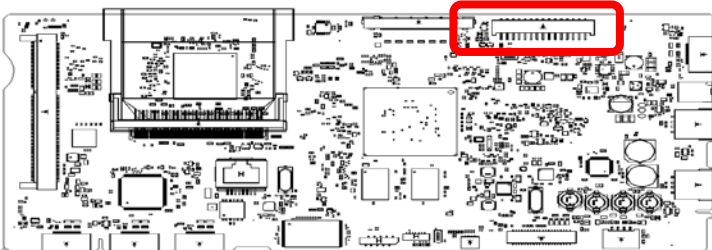

3-2-1. LED Blinking: 3x (DC Alert & Communication Error)

Troubleshooting References (c)

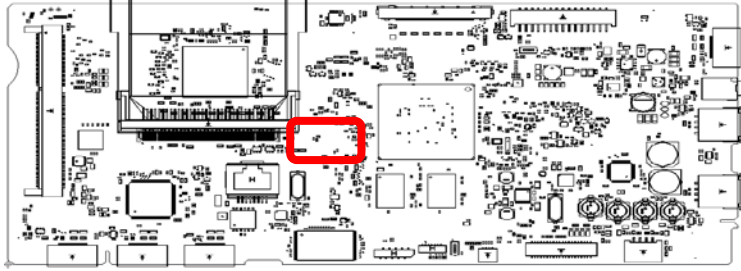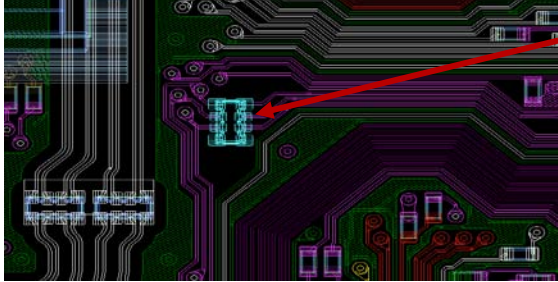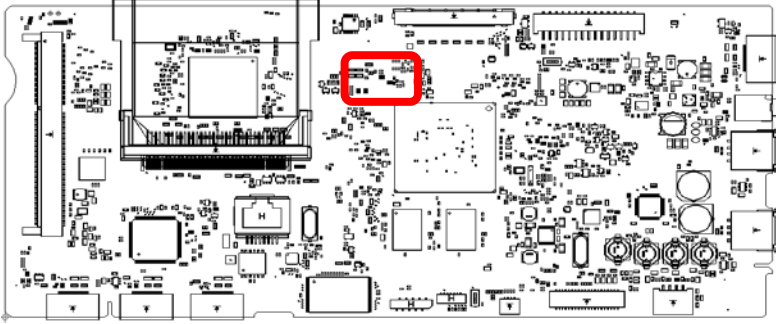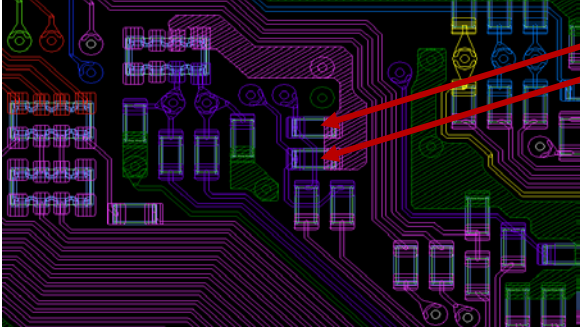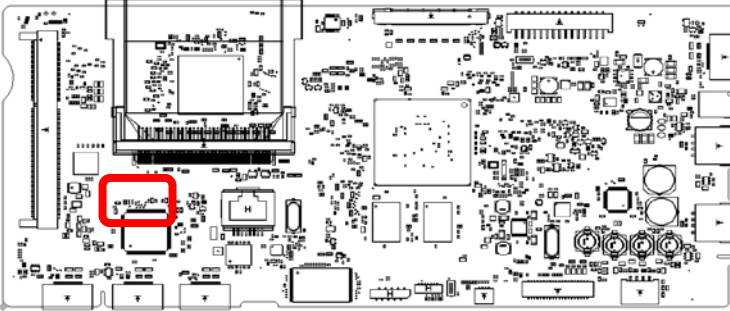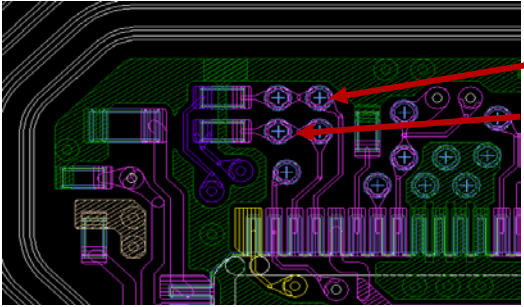
Board /Parts	Board PWB (A side)	Detail
BAXL (RB8517)		 <p>RB8517</p>
BAXL (R8546, R8547)		 <p>R8546 R8547</p>
BAXL (CL5023, CL5024)		 <p>CL5024 CL5023</p>


3-2-1. LED Blinking: 3x (DC Alert & Communication Error)

Troubleshooting References (d)

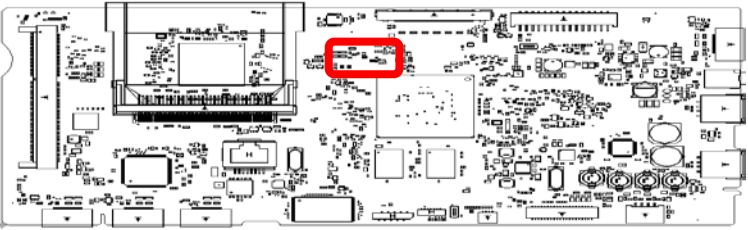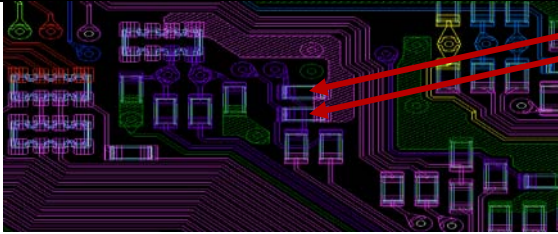
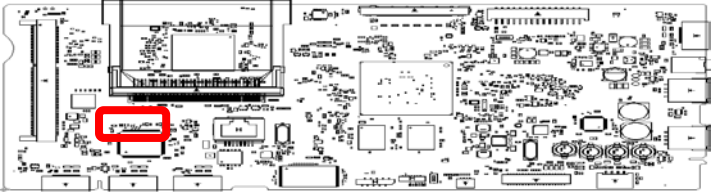
Board /Parts	Board PWB (A side)	Detail
BAXL (R8546, R8547)		 <p>R8546 R8547</p>
BAXL (CL5023, CL5024)		 <p>CL5024 CL5023</p>
BAXL (F4601)		 <p>F4601</p>
BAXL (IC4601)		 <p>IC4601</p>
BAXL (CN9101)		 <p>CN9101</p>

3-2-3. LED BLINKING 4x (LED Voltage Error)

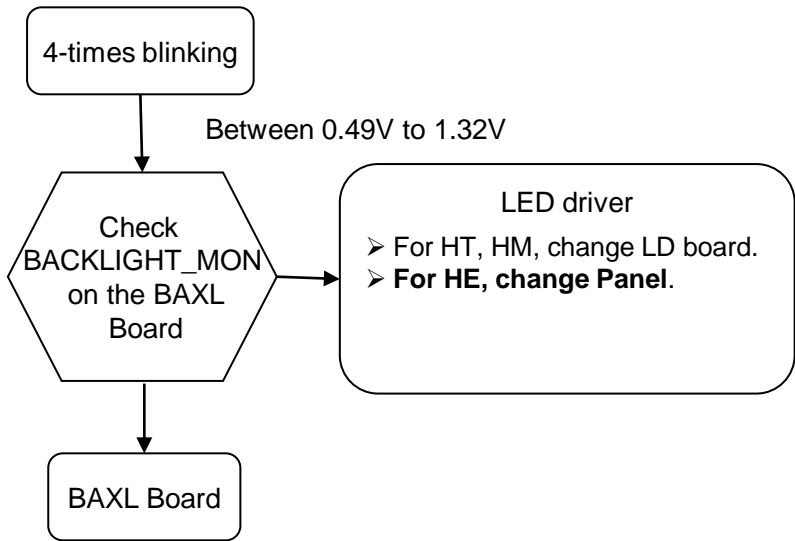

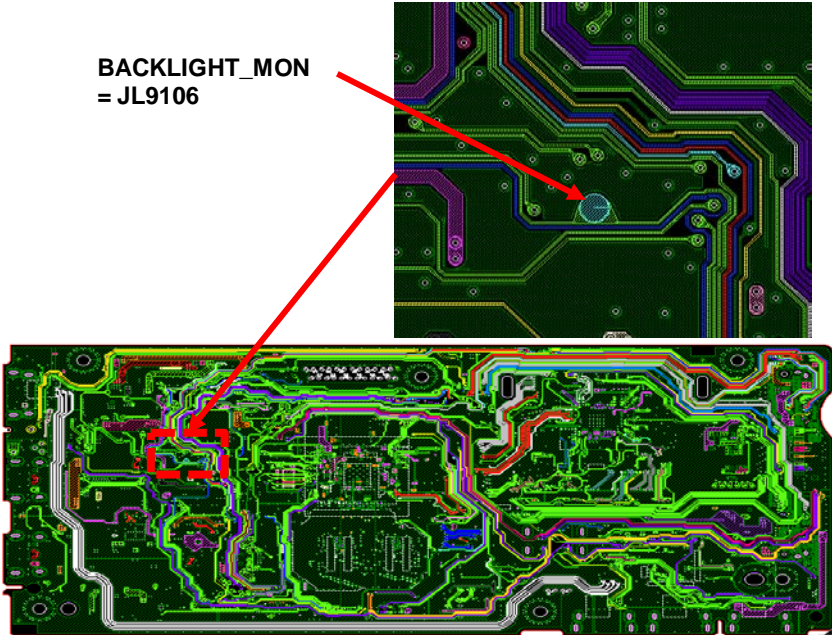
Board /Parts	Board PWB (BAX-L – B SIDE)
<p>BAXL BACKLIGHT_MON = JL9106</p>	 <p>BACKLIGHT_MON = JL9106</p>


3-2-3. LED BLINKING 5x (T-Con Error)

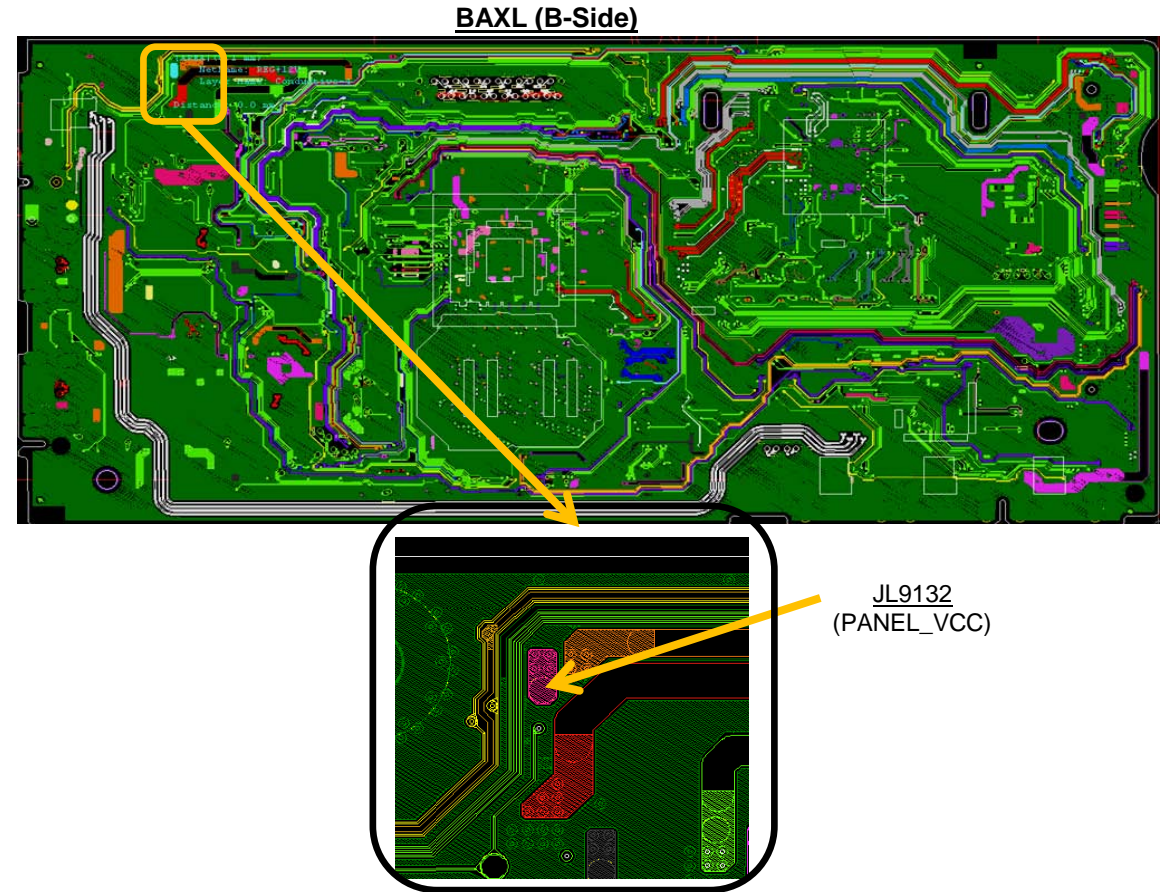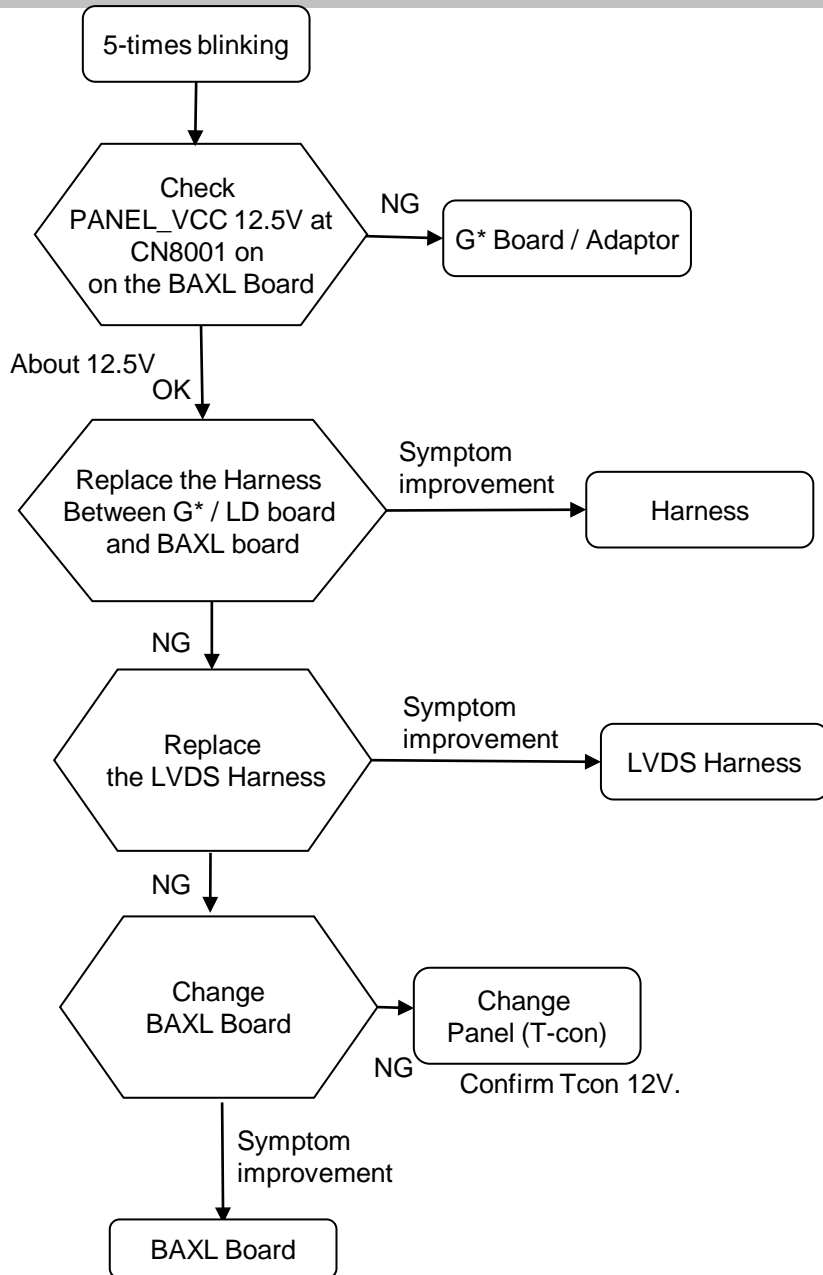

Size	G* Board Type
40"	Not applicable
48"	Not applicable


3-2-4. LED BLINKING 6x (Backlight Error)

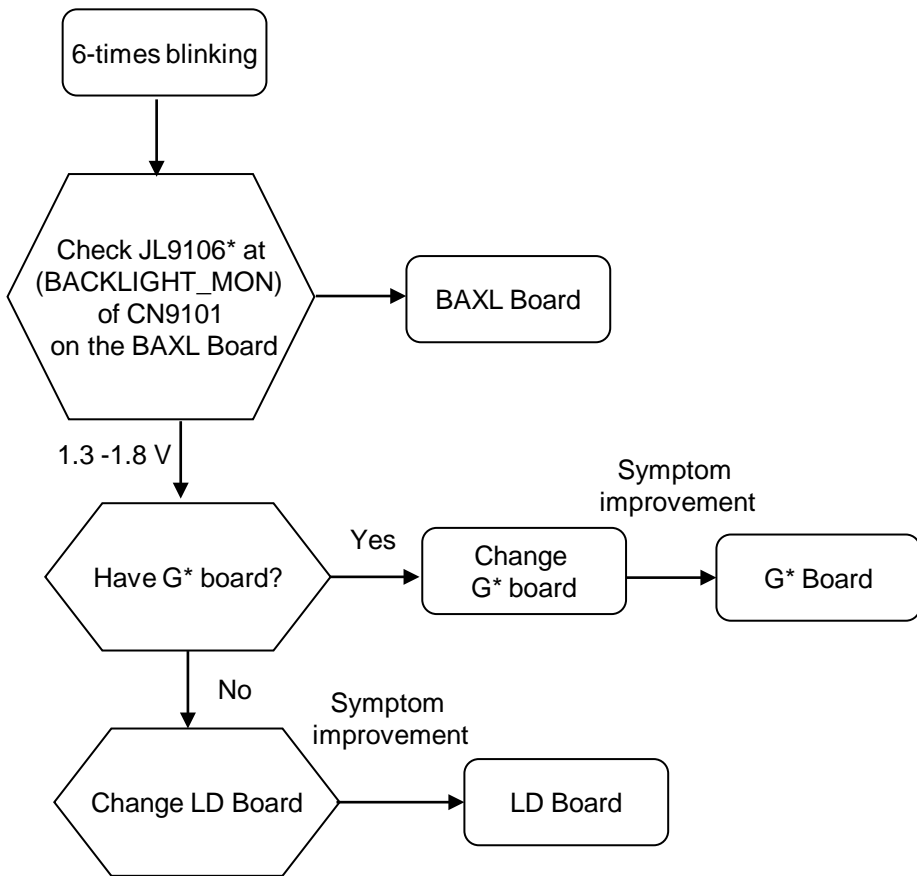


Parts	Board PWB (BAXL- B side)
(JL9106)	 <p>The diagram shows a green printed wiring board (PWB) with various components. A black box highlights a specific area, and a callout points to a component labeled 'JL9106'. Other labels like 'AYU2' are visible on the board.</p>

Size	G* Board Type
40"	Not applicable
48"	Not applicable

3-2-5. LED BLINKING 7x (Temperature Error)

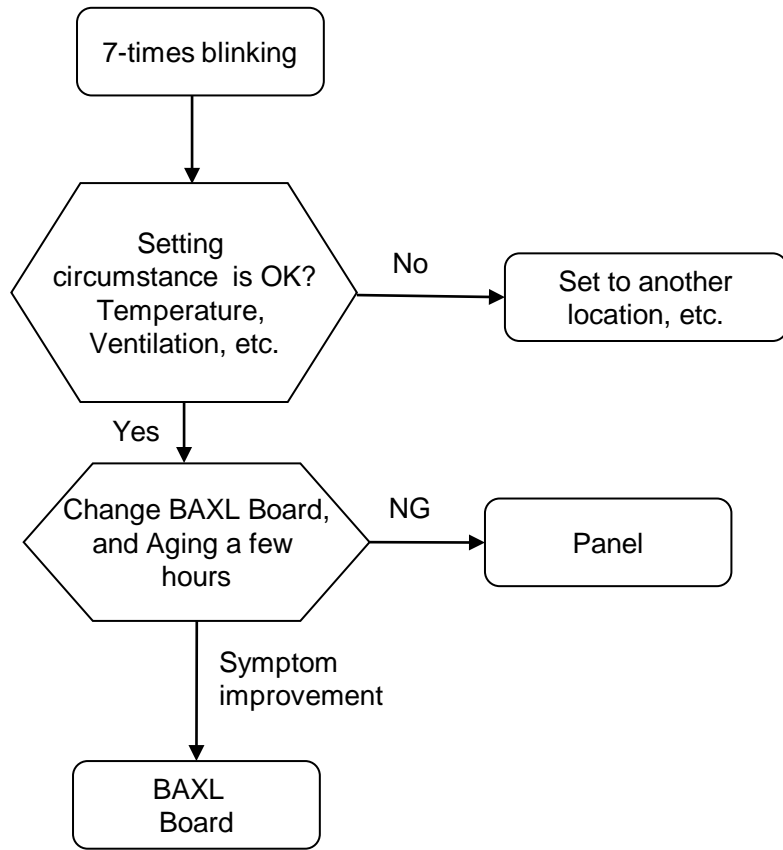


3-3. No Sound

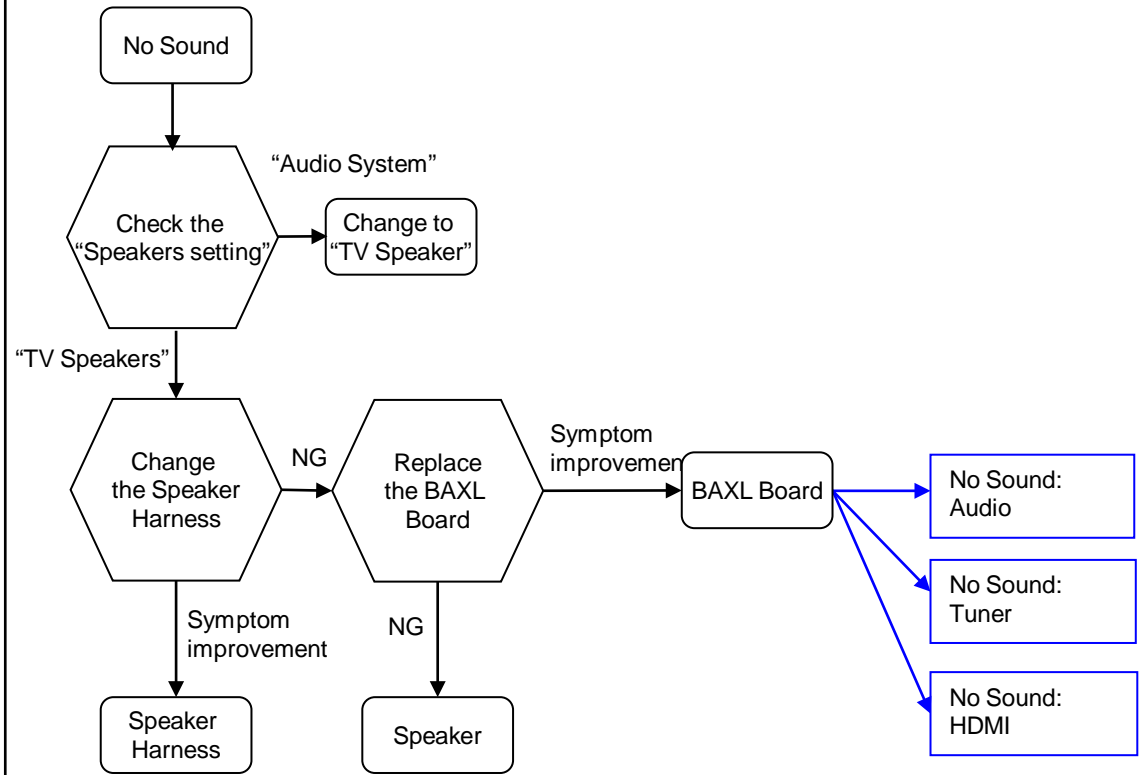


3-4.. NO PICTURE

3-4-1. NO PICTURE: LD Models only

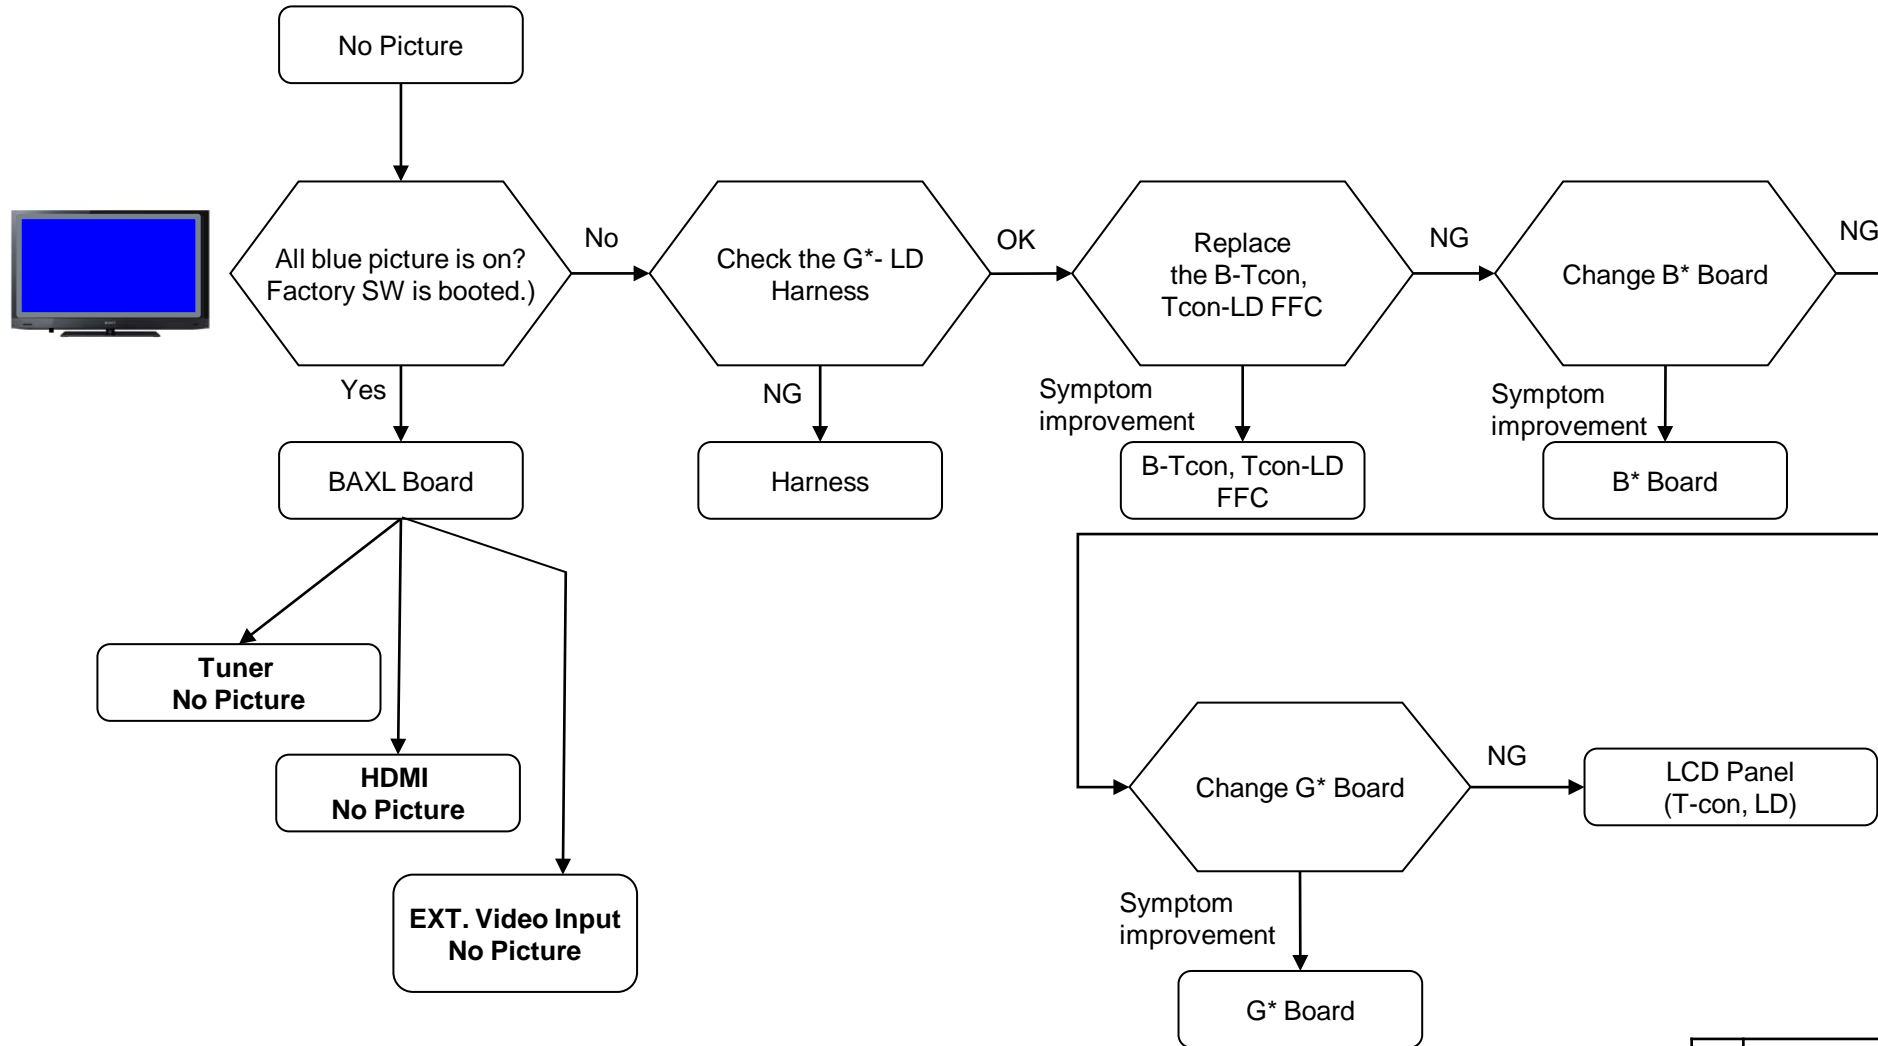


Size	G* Board Type	B* Board
40"	Not applicable	BAX_L
48"	Not applicable	BAX_L

3-4-2. NO PICTURE: (All Model)

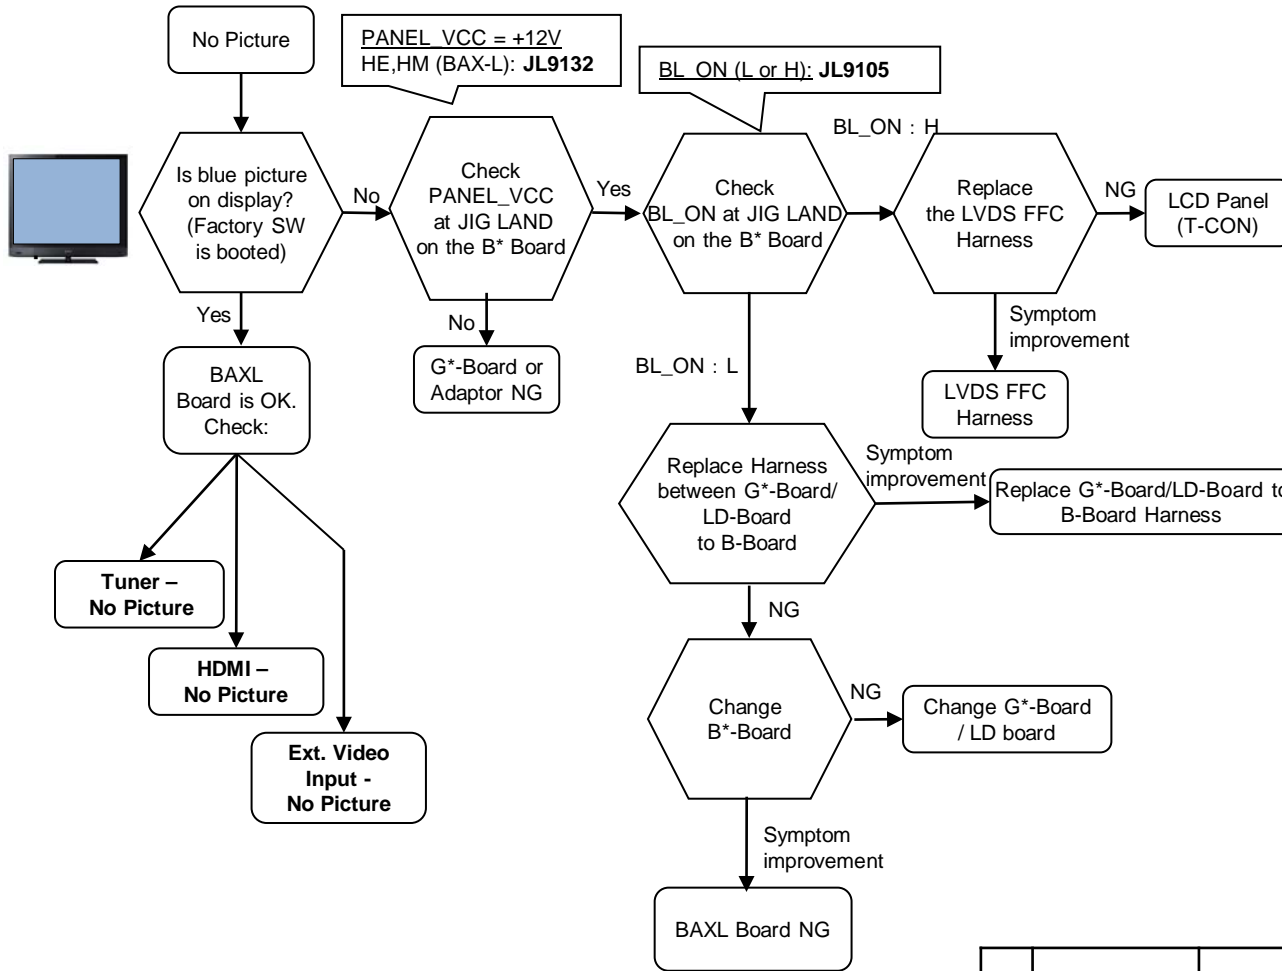


Size	G* Board Type	B* Board
40"	Not applicable	BAX_L
48"	Not applicable	BAX_L

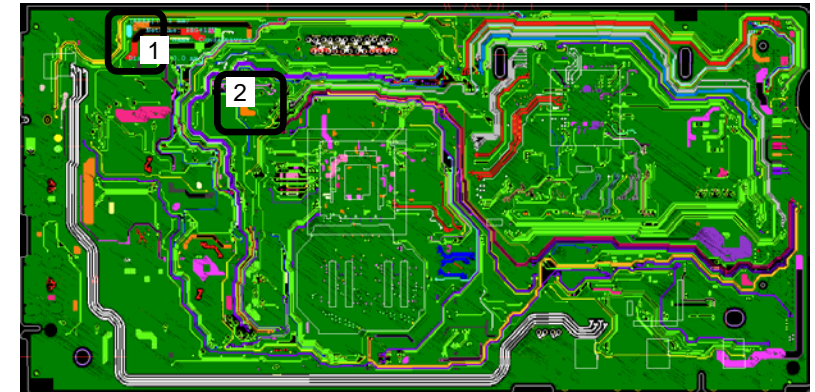


<BAXL- B SIDE>

Parts Location/Parts	Detail
(1) JL9132 (PANEL_VCC)	JL9132 (PANEL_VCC)
(2) JL9105 (BL_ON)	JL9105 (BL_ON)

3-5. SIDE BUTTONS MALFUNCTION

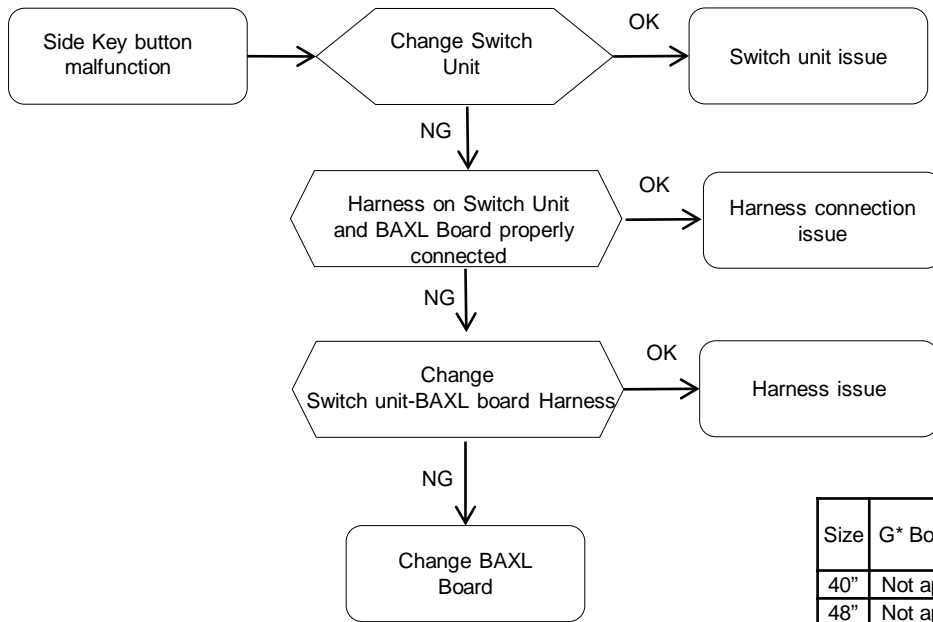


3-6. IR REMOTE COMMANDER MALFUNCTION

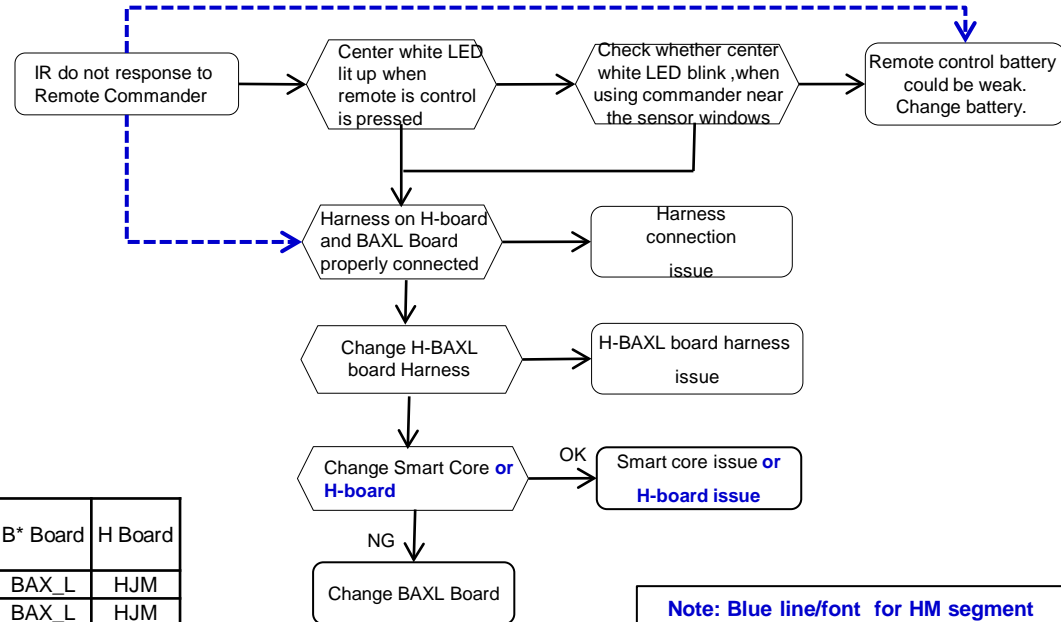


Size	G* Board Type	B* Board	H Board
40"	Not applicable	BAX_L	HJM
48"	Not applicable	BAX_L	HJM

Note: Blue line/font for HM segment


3-7. Light Sensor Error

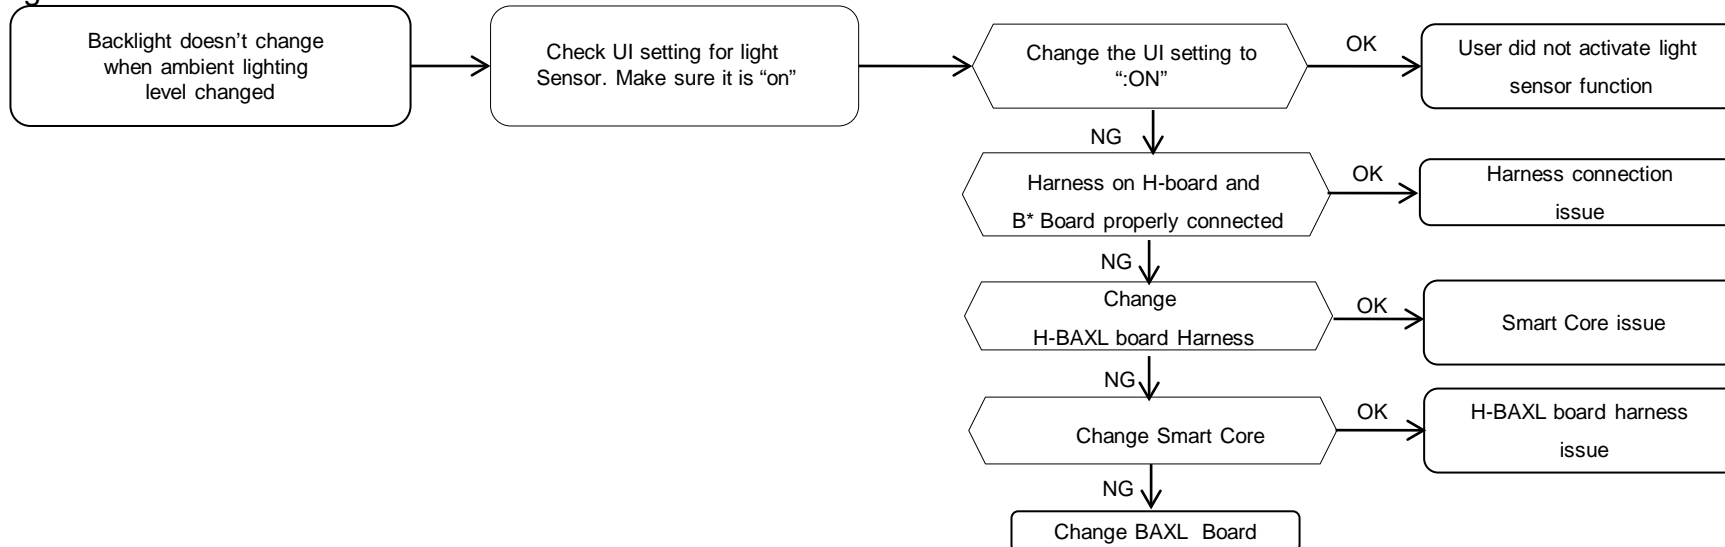

3-8. Network Malfunction: Ethernet (Wired)


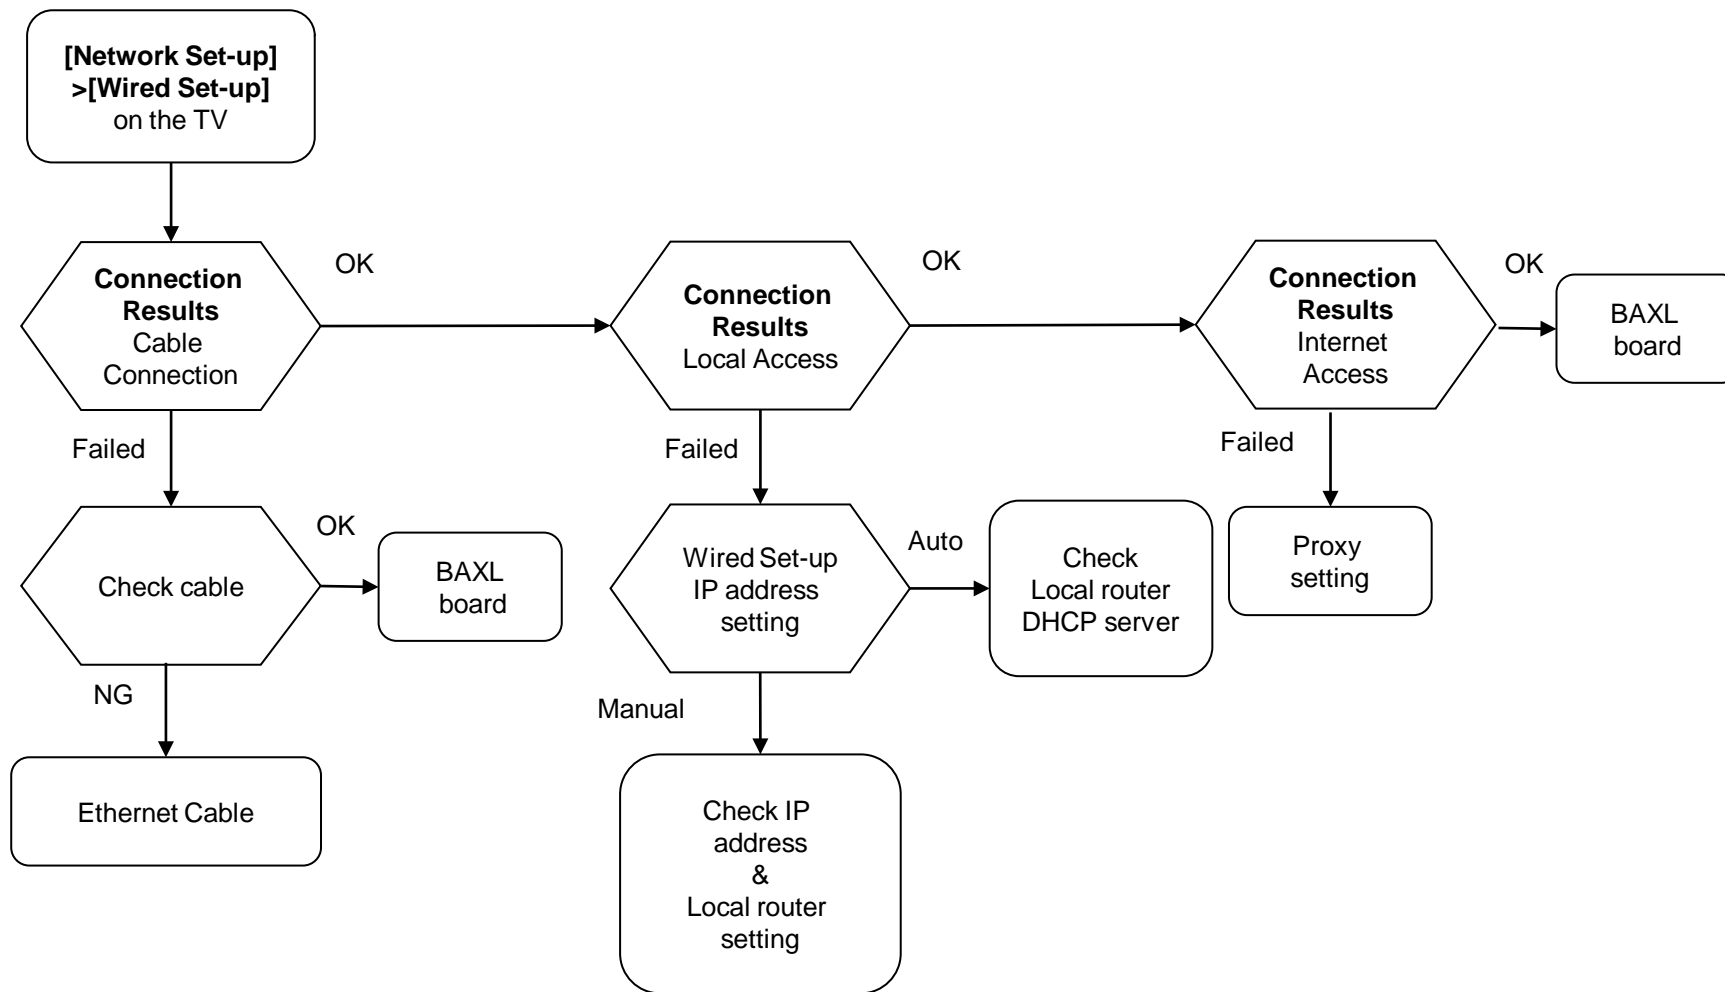


3-9. 3D-Glasses(Active) malfunction

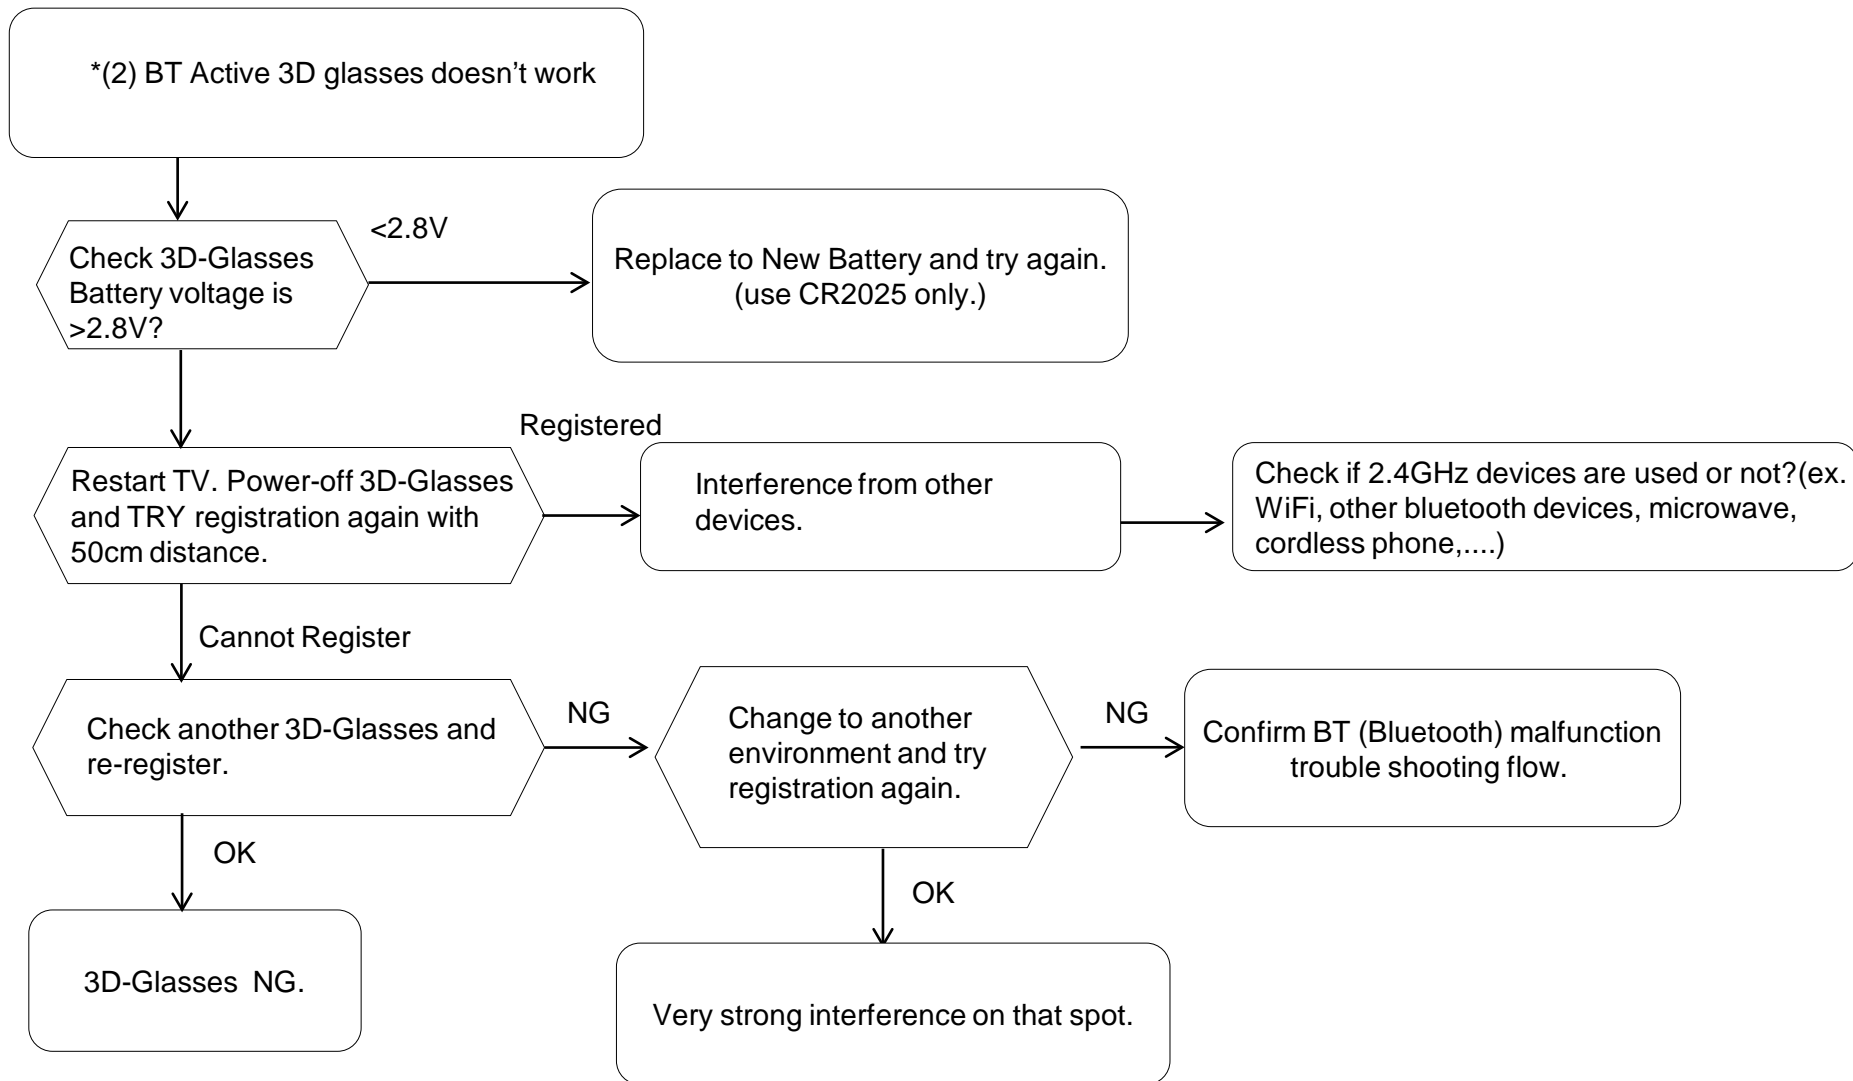

3-10. Wireless Network malfunction


1) Internal Wireless Network malfunction

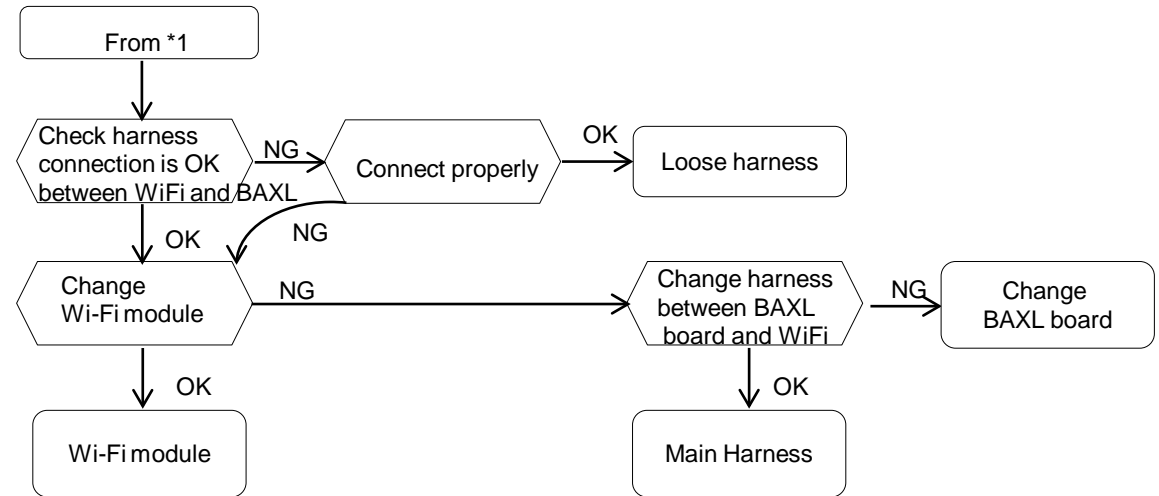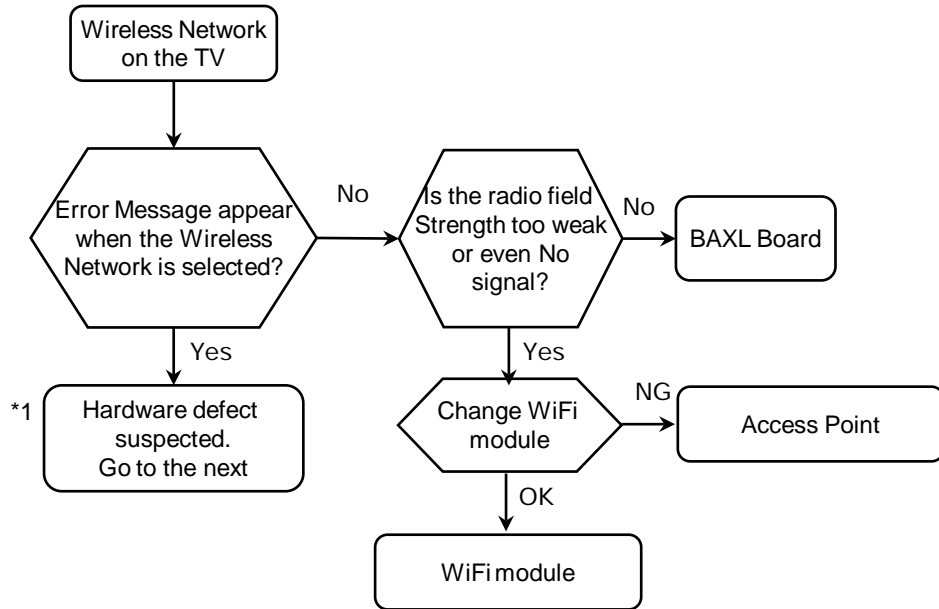

If Wi-Fi malfunction happens,

- Wi-Fi module
- Harness between WiFi and BAXL
- BAXL board are suspected.

3-11. Bluetooth malfunction

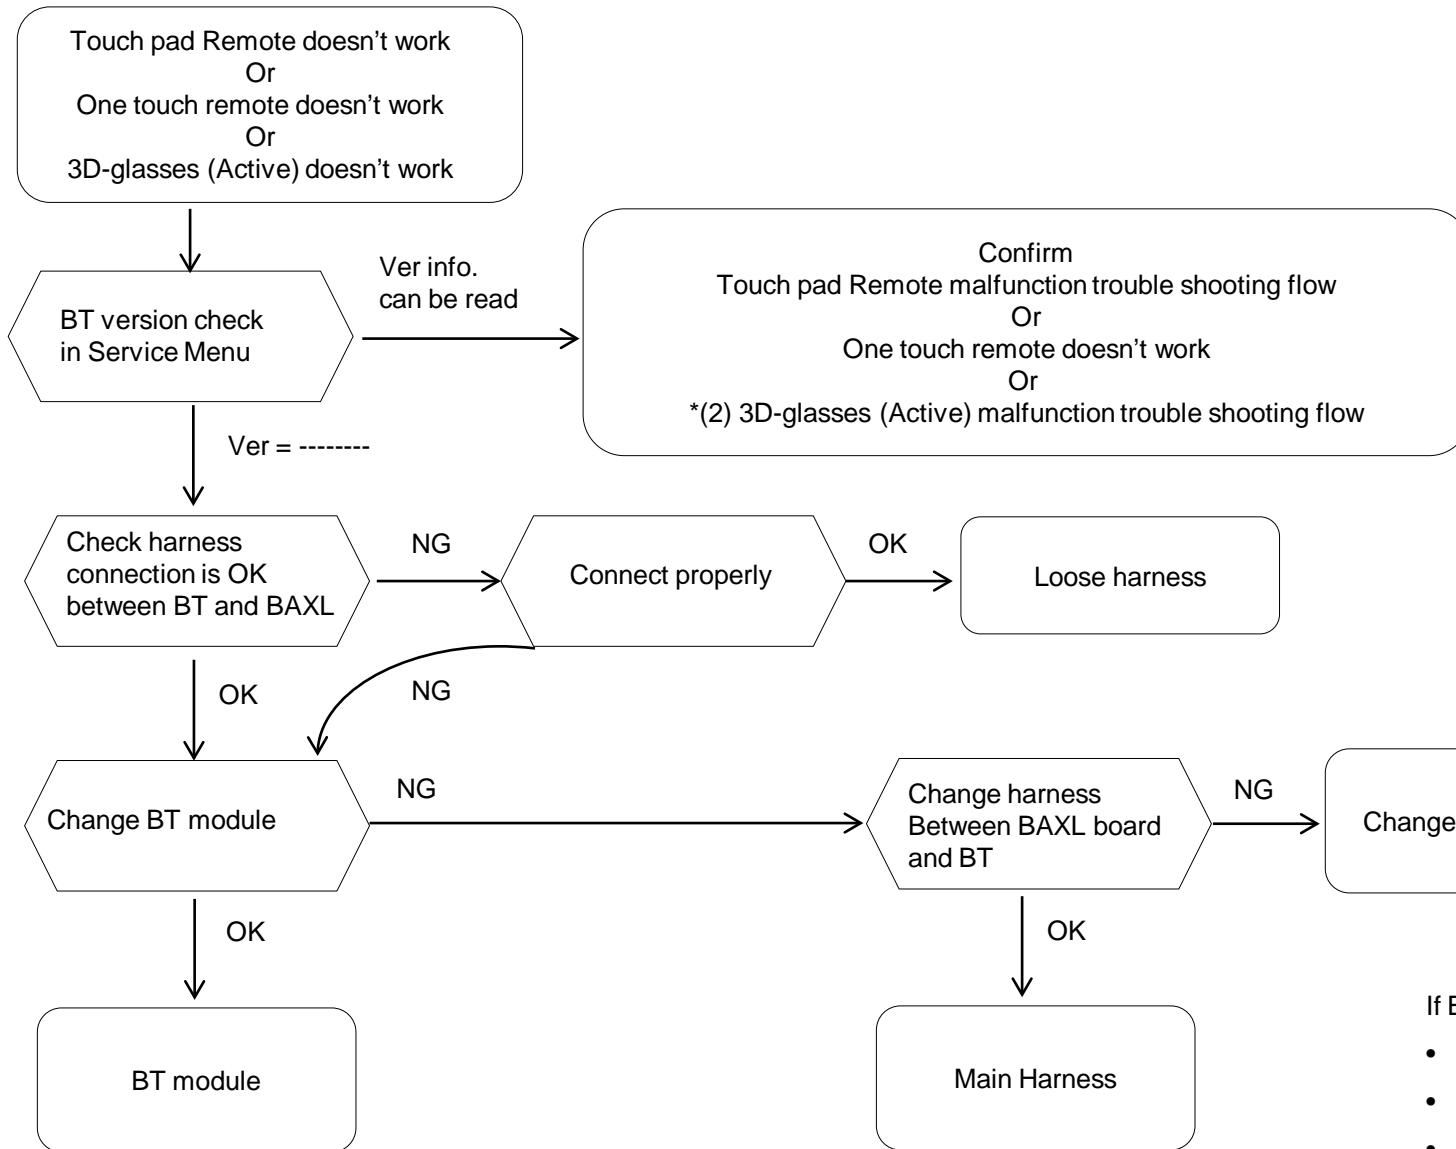

```

001 OP
000 VERS

<MAIN>      <EXT>
DM0.001JPA   WF: 3.0.0.1021
WF0.300W00AA WF: -----
DF2.070W00AA FD: 0.003
YM0.619W00AA          BT:
M4.922C             1.2.14.848
(DM0.0J00AA)        BT Version info.
DD0.320W00AA   EFR:-----
PK0.320W00AA
AM0.030JP

MID: 04A3B50F
PID: 0F051040
PNL:
DQ3Y400LN0101
  
```

If Bluetooth malfunction happens,


- BT module
- Harness between BT module and BAXL
- BAXL board are suspected.

SECTION 4 SERVICE ADJUSTMENTS

4-1. Accessing Service Mode

- 1) Go to TV standby condition by remote commander.
- 2) Press "i+ (info)", "5", "Volume +" then "TV power" on remote.
- 3) You can see Service Mode on display.



* The above operation should be finished within 15 seconds after the set go to STBY mode

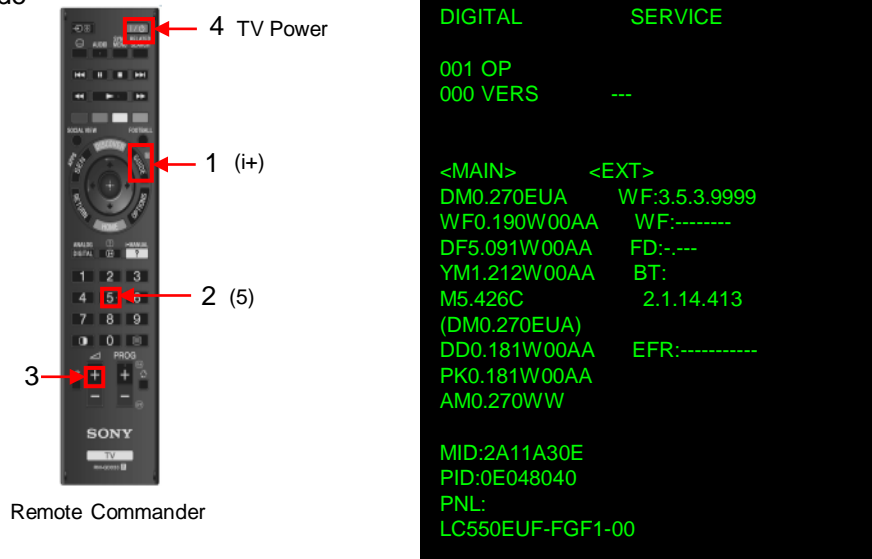

Screen Sample

4-2. Transition of Each Micro's Service Mode


1. First of all, when you enter Service Mode, you can see "Digital" service mode.
2. Whenever you press "OPTIONS" on remote, service mode is changed according to the flow below:

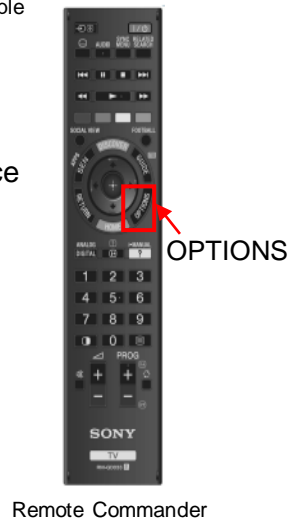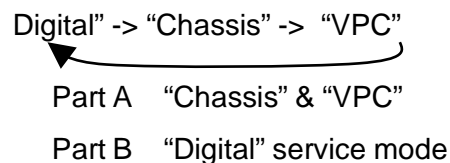

Remote Commander

4-3. Change Data by Service Mode 1 (Part A)

1. Change Data of "Chassis" or "VPC" service mode
 - a. Press "2 / 5" on remote to select (up / down) category.
 - b. Press "1 / 4" on remote to select (up / down) item.
 - c. Press "3 / 6" on remote to change (up / down) data.

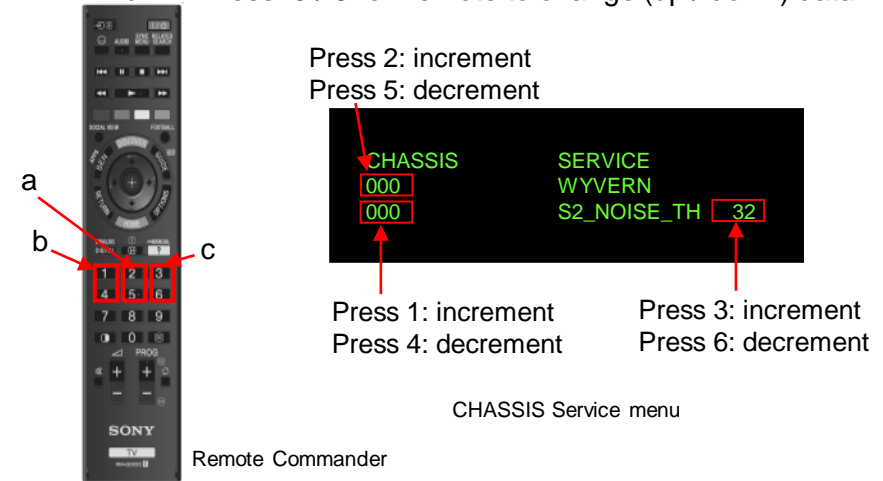


CHASSIS Service menu

Remote Commander

Save Changing Data by Service Mode 1

2. Write data for "Chassis" or "VPC" service mode.
 - a. Press "Mute" on remote. It shows green "SERVICE" changes to green "WRITE".
 - b. Press "0" on remote. Green "WRITE" changes to red "WRITE". It indicate writing is processing.
 - c. After a while, red "WRITE" changes to green "SERVICE". Writing process is done at this point.
3. TV reboot is necessary for applying data change.

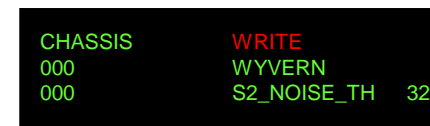

CHASSIS Service menu




Remote Commander


4-4. Change Data by Service Mode 2 (Part B)

1. Change Data of **“Digital”** service mode (except “003 DIG_SRV_MODE” category)
 - a. Press “2 / 5” on remote to select (up / down) category.
 - b. Press “1 / 4” on remote to select (up / down) Item.
 - c. Press “3 / 6” on remote to change (up / down) data.

“Digital” service mode don’t have to Save. (except “002 MODEL”)

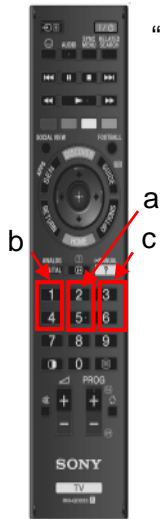


Remote Commander

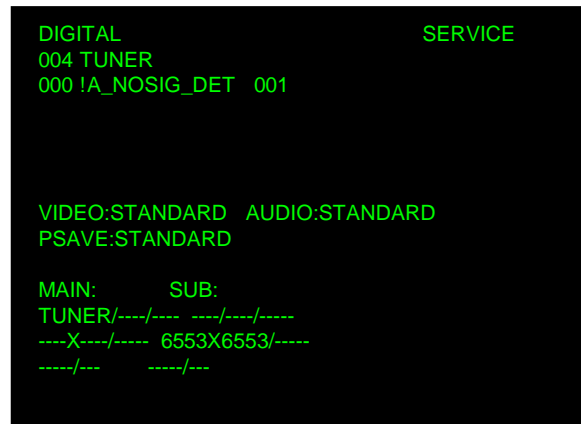


DIGITAL Service menu

2. Change Data of **“Digital”** service mode (“003 DIG_SRV_MODE” category). “003 DIG_SRV_MODE” is one category of “Digital” service mode. Please note because this operation is special.
 - a. Press “2 / 5” on remote to select “003 DIG_SRV_MODE”.
 - b. Press “1 / 4” on remote to select (up / down) Item.
 - c. Press “0 / 10” on remote to select item.
 - d. Press number key “1”~“9” directly. “*” stamp move.
 - e. Press “12 / enter / select” to decide and advance to the next step. Press “return”, to return to the previous page.

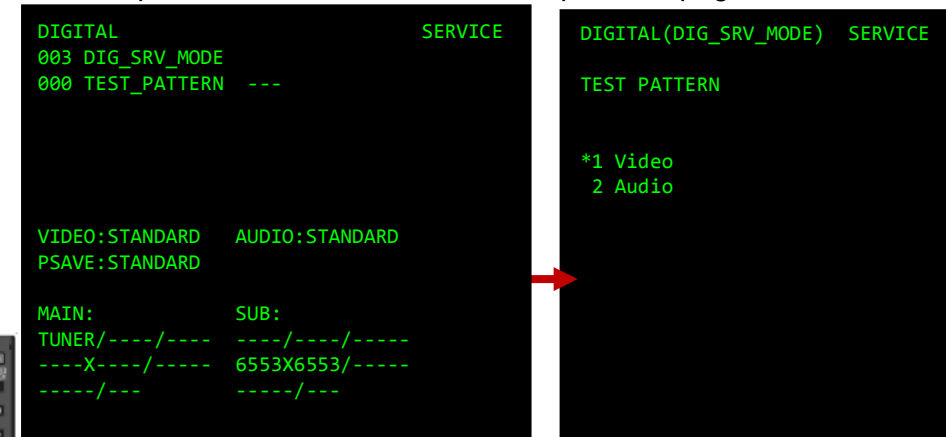


DIGITAL Service menu

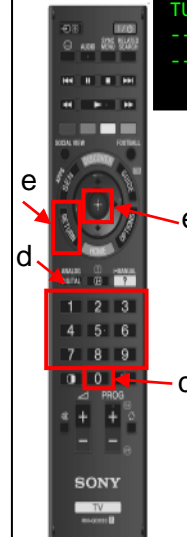

Remote Commander

Checking Board Information

1. In "Digital" service mode ("002 MODEL" category)
2. Press "0 / 10" on remote to select item.

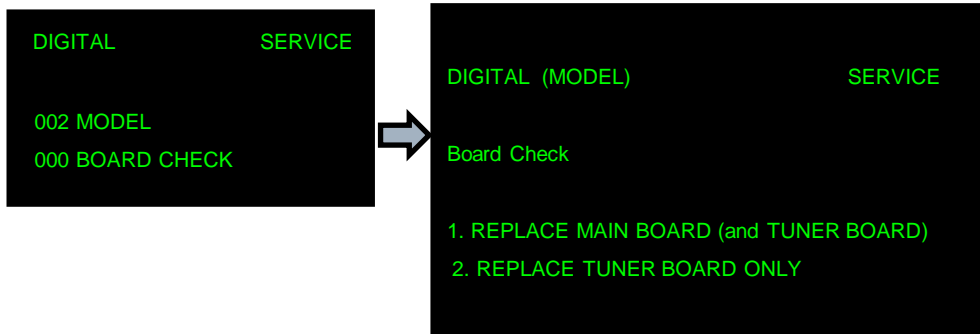


3. Press "1" on Remote.

Note : Check the Result. Result 1 : NG ,
Result 2: OK, Result 3 : OK (With "TUNER BOARD OPTION is changed correctly") comment


- This value is below;
- Standard
 - C4
 - PCA
 - HTL
 - PCA/Dsub
 - PCA/Dsub/HTL
 - Dsub
 - PCA/HTL



This case is NG. The main board is mismatch to the tuner board.
The value of Tuner Board Option was kept.

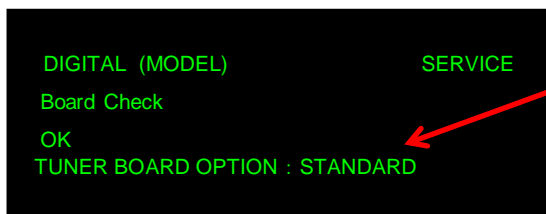


This case is OK.
The value of Tuner Board Option was kept..

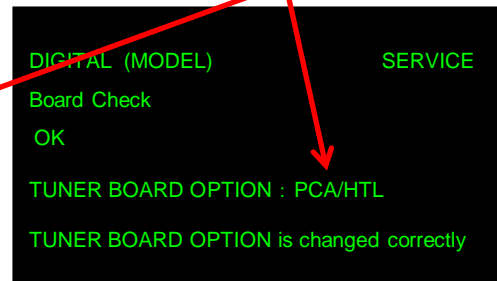


This case is OK.
-Only when TUNER BOARD OPTION part of model ID has been changed
-The value of Tuner Board Option was changed automatically.

4. Press "Return" on Remote
5. Press "2" on Remote.

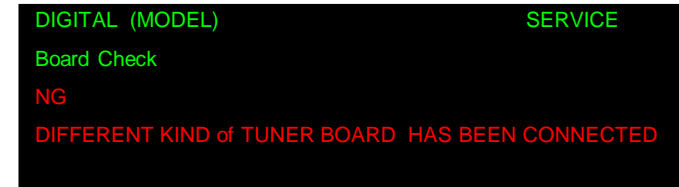

This case is NG.
The main board is mismatch to the tuner board.
The value of Tuner Board Option was kept.

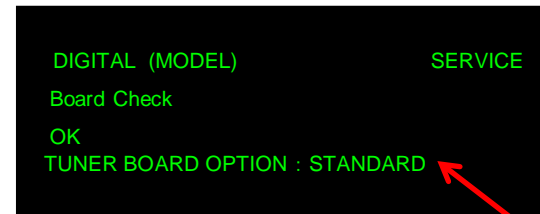

This case is OK.
The value of Tuner Board Option was kept.
In this case, The value of Tuner Board Option is never changed automatically.


- This value is below;
- Standard
 - C4
 - PCA
 - HTL
 - PCA/Dsub
 - PCA/Dsub/HTL
 - Dsub
 - PCA/HTL

6. Press "Return" on Remote.


IF "OK" Go to
Save Changing Data by Service Mode 2.

Save Changing Data by Service Mode 2 Only when B* board is replaced.

1. In **“Digital”** service mode (“002 MODEL” category)
 - 001 SEG Select segment information
 - 002 DEST Select destination information
 - 003 MODELNAME Select Model Name
 - 004 SERIAL Can be set Only Once for the new board
 - 005 SHIP_CONFIRM...Can set correct Product Code
 - 006 VAR_TYPE Select variable information
 - a. Change data for each model. (Refer to 4-4 Part B)
 - b. Press “Mute”, “0” on remote sequentially. Red **“WRITE”** is shown. This indicates writing is in process.
 - c. After a while, red **“WRITE”** disappears. Green **Done** will be displayed for a while, which means writing process is done.
 - d. For the items SEG, DEST, MODELNAME after changing each item, service save (“mute”+“0”) is required. For the item SERIAL, after inputting the serial number, press key “12” or “Enter” to save the data.
- Please save the items according to the sequence “SEG -> DEST -> MODELNAME-> VAR_TYPE”
- When Saving the item "SEG", sometimes instead of "Writing", the word "Pending" will appear. In this case, skip "SEG", saving "DEST", "MODELNAME" and "VAR_TYPE" is OK.

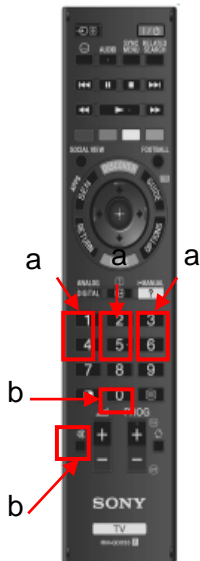

Remote Commander

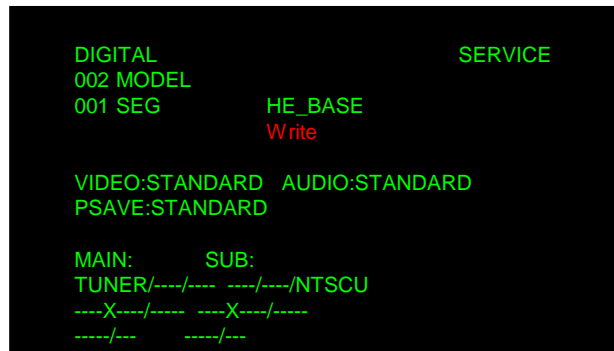


DIGITAL Service menu

4-5. Restore WB / Gamma Adj. Data to B board.


Please apply after USB-DL when B board is replaced.

HE,HS Models


- 1.in **“VPC”** service mode
 - a.Select “000 DATA_COPY” category by pressing “2 / 5” on remote.
 - b.Change data from “0” to “1” by pressing “3 / 6” on remote.
 - c.Wait until data is changed from 1 to 3.
 - d.When data is changed from 1 to 3, restoring process is finished.
 - e.In case data is changed from 1 to 2, keep default setting. (No more process is needed.)

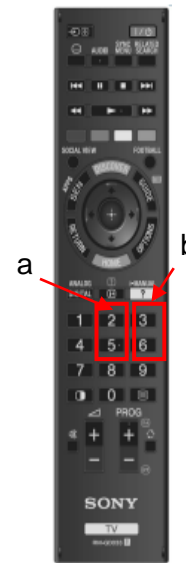

Remote Commander

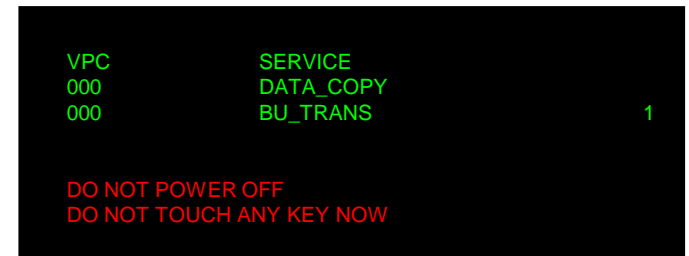

Restore process

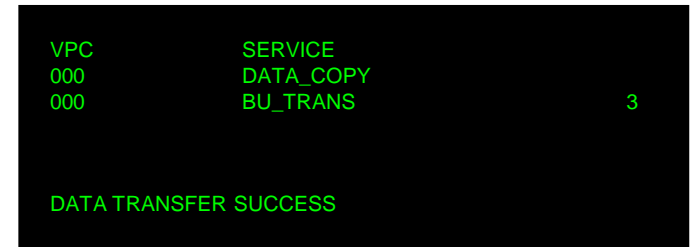

End restore process

4-6. WB Adjustment by Service Mode

1. in "VPC" service mode ("004 WB" category)
 - a. Press "1" or "4" on remote to select WB adjustment menu.
 - b. Change data by pressing "3" or "6". Each range of these items is 0~1023.
 - c. Press "mute" + "0" on remote to save the data. "SERVICE" comment is changed to "WRITE", indicating writing process.
 - d. After a while, "WRITE" comment returns to "SERVICE", which means writing process is done. (takes about a couple of seconds)

VPC 003 000	SERVICE WB R_DRV	128	VPC 003 003	SERVICE WB R_BKG	128
VPC 003 001	SERVICE WB G_DRV	128	VPC 003 004	SERVICE WB G_BKG	128
VPC 003 002	SERVICE WB B_DRV	128	VPC 003 005	SERVICE WB B_BKG	128

VPC Service menu



Remote Commander

4-7. VCOM Adjustment (NFR-AUO/SDC/FXC Panel)

4-7-1. STEP1

1. in "Digital" service mode
 - a. Select "003 DIG_SRV_MODE" category by pressing "2 / 5" on remote.
 - b. Press "0" to go to "TEST PATTERN" Mode.
 - c. Press "Enter" or "12" to go into Video TEST PATTERN.
 - d. Press "7" or "8" to select the test pattern
 - e. Press "Enter" or "12" twice to show the VCOM TEST PATTERN.

DIGITAL (DIG_SRV_MODE)	SERVICE
TEST PATTERN	--> 1 Video
*1	White
2	Ramp
3	R Raster
4	G Raster
5	B Raster
6	Color Bar
7	VCOM Pattern1
8	VCOM Pattern2
9	Off

4-7-2. STEP2

2. in "VPC" service mode
 - a. Select "002 VCOM" category by pressing "2 / 5" on remote.
 - b. Select "000 ENABLE" item by pressing "1 / 4" on remote.
 - c. Change ENABLE from "0" to "1" by pressing "3" to enable VCOM adjustment.

VPC	SERVICE	
002	VCOM	
000	ENABLE	0

4-7-3. STEP3

3. in "VPC" service mode
 - a. Select "002 VCOM" category by pressing "2 / 5" on remote.
 - b. Select "001 ADJUST" item by pressing "1 / 4" on remote.
 - c. Change data by pressing "3 / 6" on remote.

VPC	SERVICE	
002	VCOM	
001	ADJUST	64

4-7-4. STEP4

4. in "Digital" service mode


DIGITAL	SERVICE
007 VCOM	
000	SRV_OSD_EN 1
VIDEO:STANDARD	AUDIO:STANDARD
PSAVE:STANDARD	
MAIN:	SUB:
TUNER/----/----	----/----/NTSCU
---X---/-----	---X---/-----
-----/---	-----/---

- a. Select "007 VCOM" category by pressing "2 / 5" on remote.
- b. Change data from "1" to "0" by pressing "3 or 6" on remote.
- c. Confirm the final result of the VCOM adjustment .
- d. If OK, Finish the VCOM adjustment. If NG, pressing "3 or 6" to show the OSD again and go back to VCOM adjustment Step 3.

4-8. VCOM Adjustment (HFR-AUO/FXC Panel)

4-8-1. STEP1


1. in "VPC" service mode

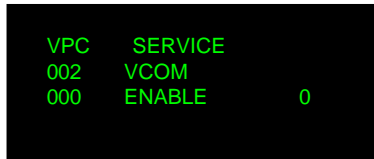

- a. Select "002 VCOM" category by pressing "2 / 5" on remote.
- b. Select "000 ENABLE" item by pressing "1 / 4" on remote..
- c. Change ENABLE from "0" to "1" by pressing "3" to enable VCOM adjustment.
-The Picture is change Vcom Pattern and you can't see OSD

4-8-2. STEP2


2. in "VPC" service mode (There is no OSD.)

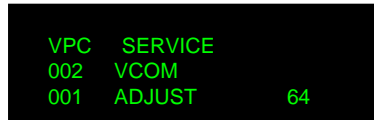

- a. Select "002 VCOM" category by pressing "2 / 5" on remote.
- b. Select "001 ADJUST" item by pressing "1 / 4" on remote.
- c. Change data by pressing "3 / 6" on remote.
- d. Finish the adjustment when the picture seems OK.
- e. Select "000 ENABLE" item by pressing "1 / 4" on remote.
- f. Change ENABLE from "1" to "0" by pressing "6" to disable VCOM adjustment. and you can see OSD.

4-9. REC Setting



4-9-1. STEP1

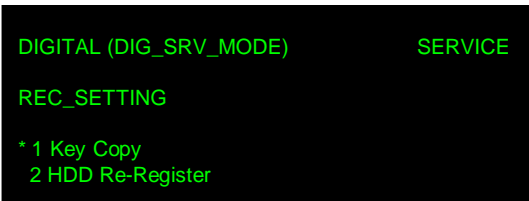

1. in "Digital" service mode
 - a. Select "003 DIG_SRV_MODE" category by pressing "2 / 5" on remote.
 - b. Select "006 REC_SETTING" item by pressing "1 / 4" on remote.
 - c. Press "0" or "10" to go to detailed REC Setting screen.

4-9-2. STEP2


2. in detailed REC setting screen
 - a. Press "1" to select "Key Copy" item
 - b. Press "Enter" or "12" twice to execute the command.
 - c. If OK, show the message "Key Copy OK". If NG, show the message "Key Copy NG (= xx)".
 - d. Press "Return" to return to previous page.

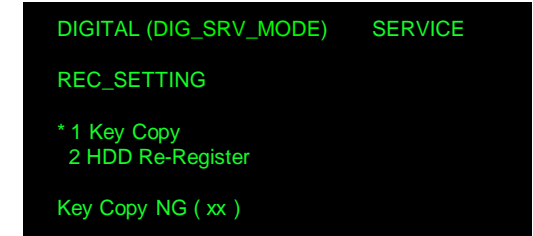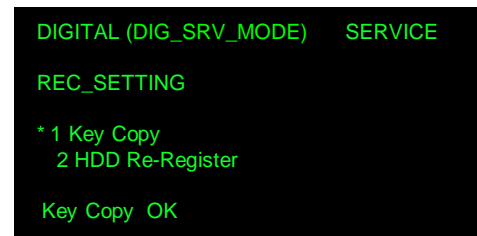

xx value representation	
0	copy success
1	decrypt error
2	file acquisition error
3	other

4-9-3. STEP3

3. in detailed REC setting screen
 - a. Press "2" to select "HDD Re-Register" Item.
 - b. Press "Enter" or "12" twice to execute the command.
 - c. If OK, xx= x+1. If NG, xx=x.
 - d. Press "Return" to return to previous page.

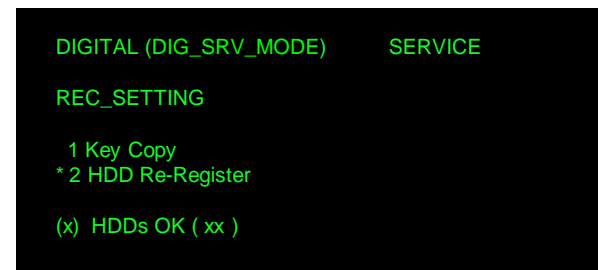

xx value representation	
0	register success
1	HDD repetition
2	file acquisition error
3	HDD info miss-match
4	other

4-10. Reset Panel Operation Time Only when Panel is replaced.

1. In Self Diagnosis Display (refer to *How to Enter Self Diagnosis Display*)
 - a. Reset Panel Operation Time <7> -> <0>


```

SELF CHECK
002 MAIN_POWE ----- 00 Model Name      : KDL-RB2
003 AFE_I2C   ----- 00 Serial Number   : 1000008
003 DC_ALERT  ----- 00 Package Number  : PKG0.270EUA
003 AUD_ERR   ----- 00 Device ID       : B0:00:01:EF:4B:C6
003 HDMI_EQ   ----- 00 Wired MAC       : D8:D4:3C:17:84:3E
003 TU_DEMOD  ----- 00 Wireless MAC    : N/A
003 AFE_SPI   ----- 00 USB dongle     : N/A
004 VLED      ----- 00
004 LD_ERR    ----- 00 <MAIN>         <EXT>
005 TCON_ERR  120823132523 ----- 01 DM0.270EUA    WF:3.5.3.99
005 P_ID_ERR  ----- 00 WF0.190W0AA    WF:-----
005 FRCTC_I2C ----- 00 DF5.091W00AA  FD:-.---
006 BACKLIGHT ----- 00 YM1.212W00AA  BT:2.1.14.413
007 TEMP_ERR  ----- 00 M5.426C
007 FAN_ERR   ----- 00 (DM0.270EUA)  EFR : -----
008 VPC_WDT   ----- 00 DD0.181W00AA
008 MEPS_WDT  ----- 00 PK0.181W00AA
008 HOST_WDT  ----- 00 AM0.270WW
008 STBY_WDT  ----- 00
008 AFE_WDT   ----- 00 MID:2A11A30E
009 TU_BOARD  ----- 00 PID:0E048040
                                PNL:LC550EUF-FGF1
00021-10573-00025  00000000000000600-0000000000000000
    
```

Diagnosis Display

4-11. Set to Shipping Condition

1. How to do shipping condition.
 - a. Move to “**Digital**” service mode.
 - b. Press “8” on remote. It shows green “SERVICE” changes to green “RST-”.
 - c. Press “mute” on remote. Added green “EXE” after green “RST-”.
 - d. Press “0” on remote. Green “EXE-RST” changes to red “EXE-RST”. It indicate writing is processing.
 - e. After a while, red “EXE-RST” changes to green “SERVICE”.
 - f. And blink Smart Core WHITE LED. Writing process is done at this point.

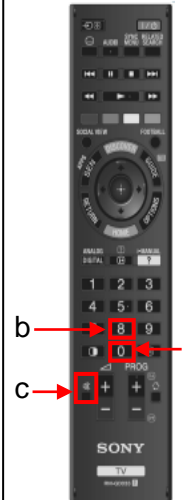

<Another way>

You can set to shipping condition w/o entering Service Mode.
-> “Cursor Up” + “Power Key” on remote.

Remote Commander

4-12. Summary of Service Control

Function	The flow of control
Service mode on	<Test>+<TV>/<Display><5><Vol Up><Power>
Service mode off	<Other> / <Power off + on>
Item up / down	<1>/<4>
Category up / down	<2>/<5>
Data up / down	<3>/<6>
Test reset (テストリセット)	<8> + <Mute> + <0>
HDD Deregistration (HDD登録削除)	From UI Menu: HDD登録削除 (JPモデル) HDD Deregistration (AEP Model)
Execute (実行)	<10 or 0>
Write data (書込み)	<Mute> + <0>
Change module (モジュール変更)	<Jump> / <Option>


4-13. Service Menu Tree

4-13-1. Tree 1

- “Digital”
 - 001 OP
 - 000 VERS ...Software version
 - 002 MODEL
 - 000 BOARD CHECK ...Check the main board and tuner board combination
 - 001 SEG ...Select segment information
 - 002 DEST ...Select destination information
 - 003 MODELNAME ...Select Model Name
 - 004 SERIAL ...Can be set Only Once for the new board
 - 005 SHIP_CONFIRM ...Can set correct Product Code
 - 006 VAR_TYPE
 - 003 DIG_SRV_MODE
 - 000 TEST_PATTERN ...Main Chip Test Pattern
 - 001 MONITOR_MODE ...Tuner Monitor
 - 002 FACT_SETTING ...Factory shipment settings
 - 003 MODEL_DATA
 - 004 NETWORK
 - 005 TT84 ...Only for AEP
 - 006 REC_SETTING
 - 004 TUNER
 - 000 A_NOSIG_DET ...Analog-RF No signal detection
 - 001 SCAN_COPY ...Copy the scan data to USB.
 - 003 ASCOT
 - 004 WYVERN_1
 - 007 VCOM ...Service item for VCOM Adjustment
 - 000 SRV_OSD_EN
 - 008 WIFI ...Service item for WIFI (only WiFi model)
 - 000 PING
 - 001 MONITOR
 - 009 BT MODE
 - 000 MONITOR

4-13-2. Tree 2

- “Chassis”
 - 000 WYVERN
 - <omission>
 - 001 TUNING
 - <omission>
 - 002 D_DEMOD
 - <omission>
 - 003 SATELLITE
 - <omission>
 - 004 AUDIO
 - 000 MPEG_LV ...Level OFFSET for MPEG1-L1/L2.
 - 001 HEAAC_LV ...Level OFFSET for HE-AAC.
 - 005 TEMPSEN
 - <omission>
 - 006 DL
 - 000 PID_DATA_MISMATCH
 - 007 BT_MODE ... Service Item for BT (only BT model)
 - 000 FEATURE
 - 001 FIRST_DIS_CH
 - 002 LAST_DIS_CH
 - 003 3D_BEACON_ENABLE1
 - 004 BT_DEBUG
 - 008 CAM ... Service Item for CI (only AEP/CH/HK model)
 - 000 CAM_TS_FORMAT
 - 009 OBI
 - 000 RSTBOT

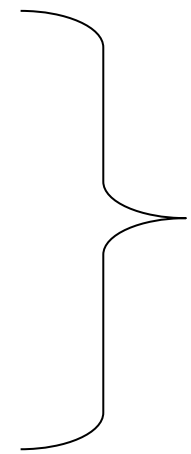

No use for Service.


4-13-3. Tree 3

“VPC”

- 000 DATA_COPY ...WB Data Restore Function (Tcon board-to-B board).
 - 000 BU_TRANS
- 001 DATA_BAKUP ...WB Data Backup Function (B board-to-Tcon board).
 - 000 BU_FLASH
- 002 DATA_INIT ...WB Data initialization (B board-to-Tcon board).
 - 000 WB_INIT
 - 001 ADJUST
- 003 VCOM ...VCOM Adjustment Function.
 - 000 ENABLE
 - 001 ADJUST
- 004 WB ...W/B adjustment
 - <omission>
- 005 TEST_PTN <omission>
- 006 PANEL <omission>

4-14. How to Enter Self Diagnosis Display

1. Go to TV standby condition by remote commander.
2. Press “i+ (info)”, “5”, “Volume-” then “TV power” on remote.
3. You can see Self Diagnosis Display.
4. To Exit , Press Power Off and On.

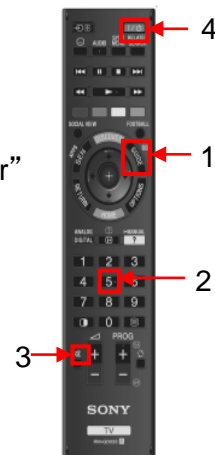

Remote Commander

SELF CHECK	Description on Part i	Description on Part ii
002 MAIN_POWE	-----	00 Model Name : KDL-46W90AA
003 AFE_I2C	-----	00 Serial Number : -----
003 DC_ALERT	-----	00 Package Number : PKG0.280JPA
003 AUD_PROT	-----	00 Wired MAC : 30:F9:ED:04:2C:17
003 HDMI_EQ	-----	00 Wireless MAC : F0:F0:02:AA:82:DA
003 TU_DEMOD	-----	00 USB dongle : N/A
003 AFE_SPI	-----	00
004 VLED	-----	00 <MAIN> <EXT>
004 LD_ERR	-----	00 DM1.301JPA WF:2.0.0.99
005 TCON_ERR	-----	00 WF1.003W00AA WF:0B
005 P_ID_ERR	-----	00 DF1.001W00AA FD:-.---
006 BACKLITE	-----	00 YM1.010W00AA BT:1.2.14.848
007 TEMP_ERR	120823132523 -----	01 M4.992C
007 FAN_ERR	-----	00 (DM1.301W00AA)
008 VPC_WDT	-----	00 DD1.016W00AA
008 MEPS_WDT	-----	00 PK1.016W00AA
008 HOST_WDT	-----	00 AM01.300JP
008 STBY_WDT	-----	00
008 AFE_WDT	-----	00 MID:1C117081
009 TU_BOARD	-----	00 PID:04020000
010 EMIT_ERR	-----	00 PNL:LC470EUF-FFP1
00081-000671-00088 00000000000000000570-000000000000 0000132		

Self Diagnosis Display

Self Diagnosis Display [Part i]

Format of error time stamps

YYMMDDhhmmss (in UTC)

Example:

120823132523 -> Aug 23 2012 13:25:23 UTC

* Only when time is set, an error timestamp is saved.

*Following error is invalid in RB1.

- FAN_ERR
- EMIT_ERR
- TCON_ERR

Error history clear

<8> -> <0>

Panel operation time clear

<7> -> <0>

Smart Core Red LED blinking count

Total Operation Time [hr] – Boot Count – Panel Operation Time [hr]

SELF CHECK	Error Naming	Error count
002 MAIN_POWE	Error timestamp for last recorded error	Error timestamp for 3rd last recorded error
003 AFE_I2C	-----	-----
003 DC_ALERT	-----	-----
003 AUD_PROT	-----	-----
003 HDMI_EQ	-----	-----
003 TU_DEMOD	-----	-----
003 AFE_SPI	-----	-----
004 VLED	-----	-----
004 LD_ERR	-----	-----
005 TCON_ERR	-----	-----
005 P_ID_ERR	-----	-----
006 BACKLITE	-----	-----
007 TEMP_ERR	120823132523	01
007 FAN_ERR	-----	-----
008 VPC_WDT	-----	-----
008 MEPS_WDT	-----	-----
008 HOST_WDT	-----	-----
008 STBY_WDT	-----	-----
008 AFE_WDT	-----	-----
009 TU_BOARD	-----	-----
010 EMIT_ERR	-----	-----
00081-000671-00088	0000000000000570-000000000000132	

•Panel Operation Time is recorded every 30 min, but Total Operation Time is recorded every 1 hr. Therefore, the panel op. time might become larger than the total op. time.

Count of writing to NAND device:
As vfat partition– As ext4 partition

Self Diagnosis Display (Part ii)

USB dongle:

1. When no Wi-Fi USB dongle is connected, NA is displayed.
2. If you insert/disconnect Wi-Fi USB Dongle during Self Diagnosis Display, press <1> - > <4> on remote commander to refresh MAC address displayed on “USB dongle”.
- Alternatively, you can re-display Self Diagnosis Display to update the information.

Main CPU information


MAC address of Wi-Fi USB dongle.

External module information


Model Name	: KDL-46W90AA
Serial Number	: -----
Package Number	: PKG0.280JPA
Wired MAC	: 30:F9:ED:04:2C:17
Wireless MAC	: F0:F0:02:AA:82:DA
USB dongle	: N/A
<MAIN>	<EXT>
DM1.301JPA	WF:2.0.0.99
WF1.003W00AA	WF:0B
DF1.001W00AA	FD:.-.-
YM1.010W00AA	BT:1.2.14.848
M4.992C	
DM1.301W00AA	
DD1.016W00AA	
PK1.016W00AA	
AM01.300JP	
MID:1C117081	
PID:04020000	
PNL:LC470EUF-FFP1	

5-1. CIRCUIT BOARD LOCATION


5-1-1. KDL- 40W*B

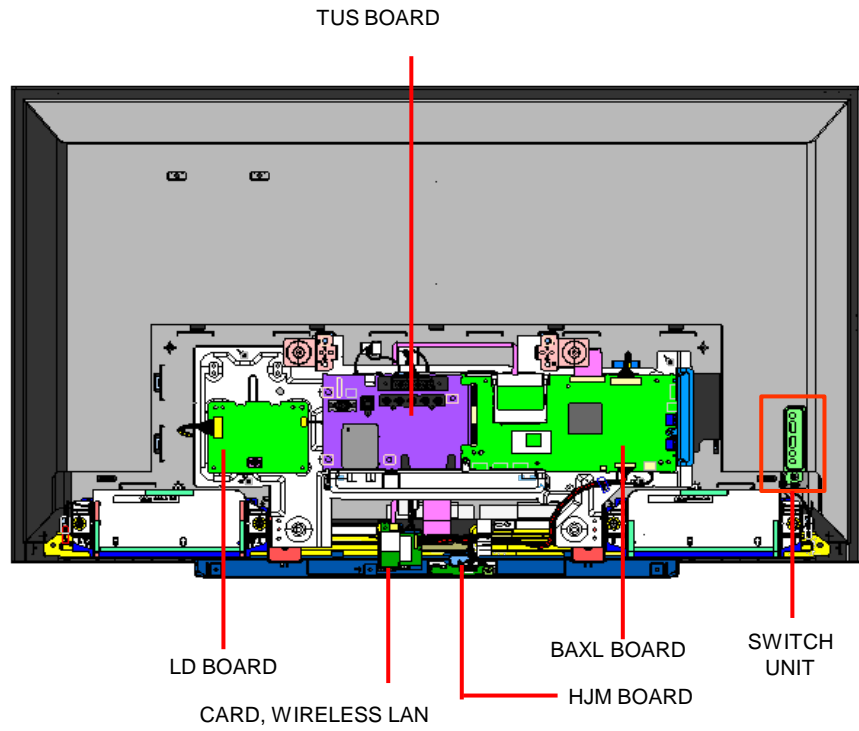

5-1-2. KDL-48W*B

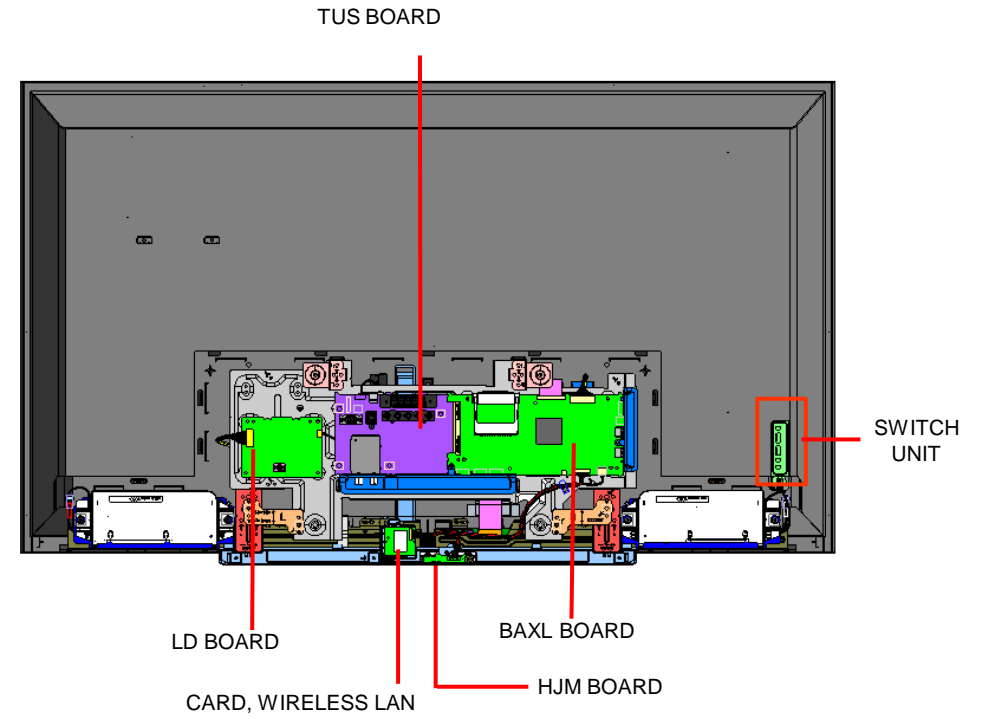


5-2. Block Diagram
5-2-1. AEP based

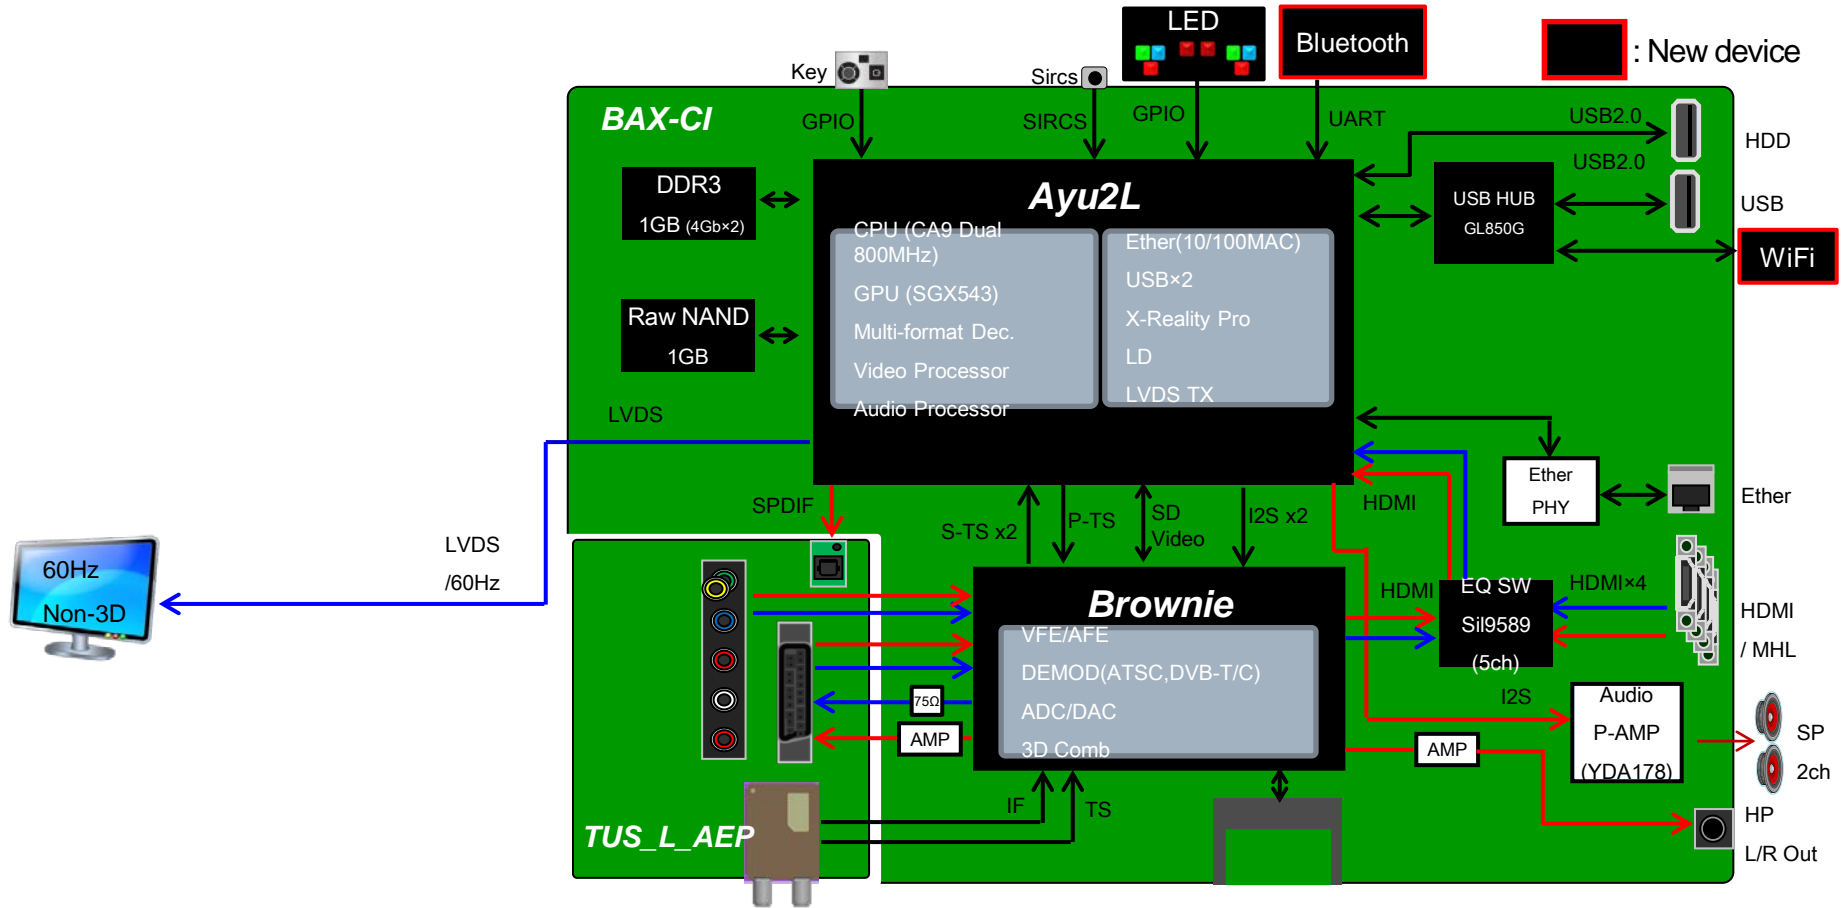


5-2. Block Diagram


5-2-2. BR, AR, LA_ISDB

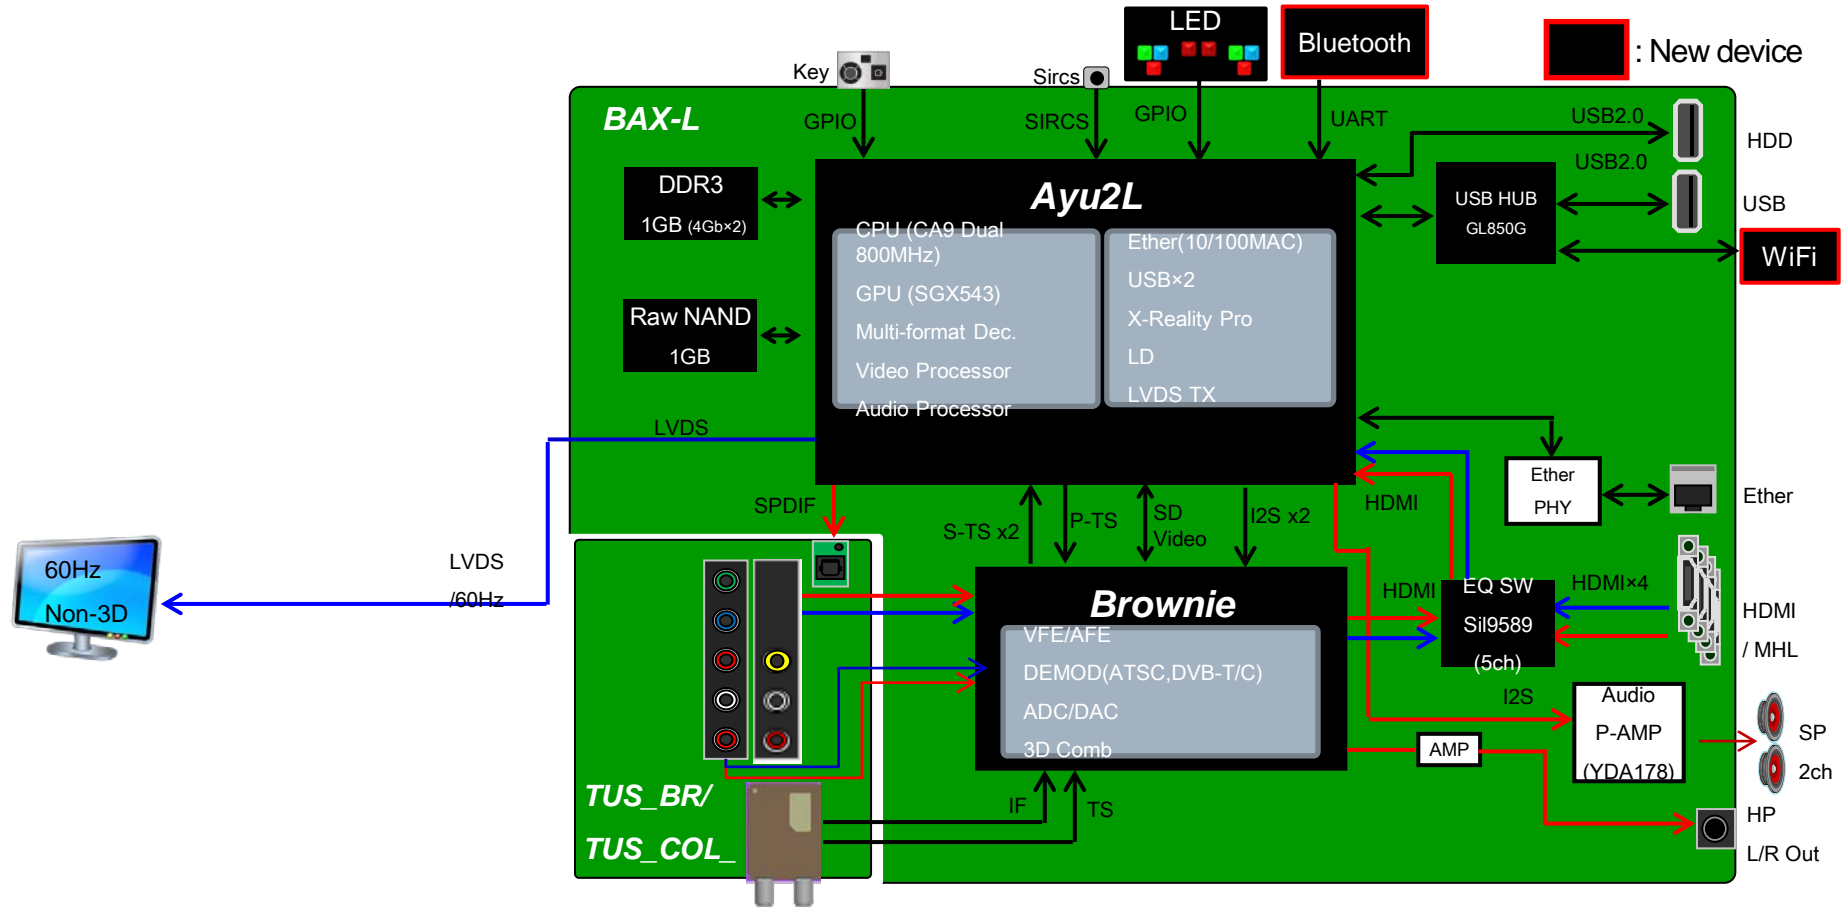


5-2. Block Diagram
5-2-3. JP

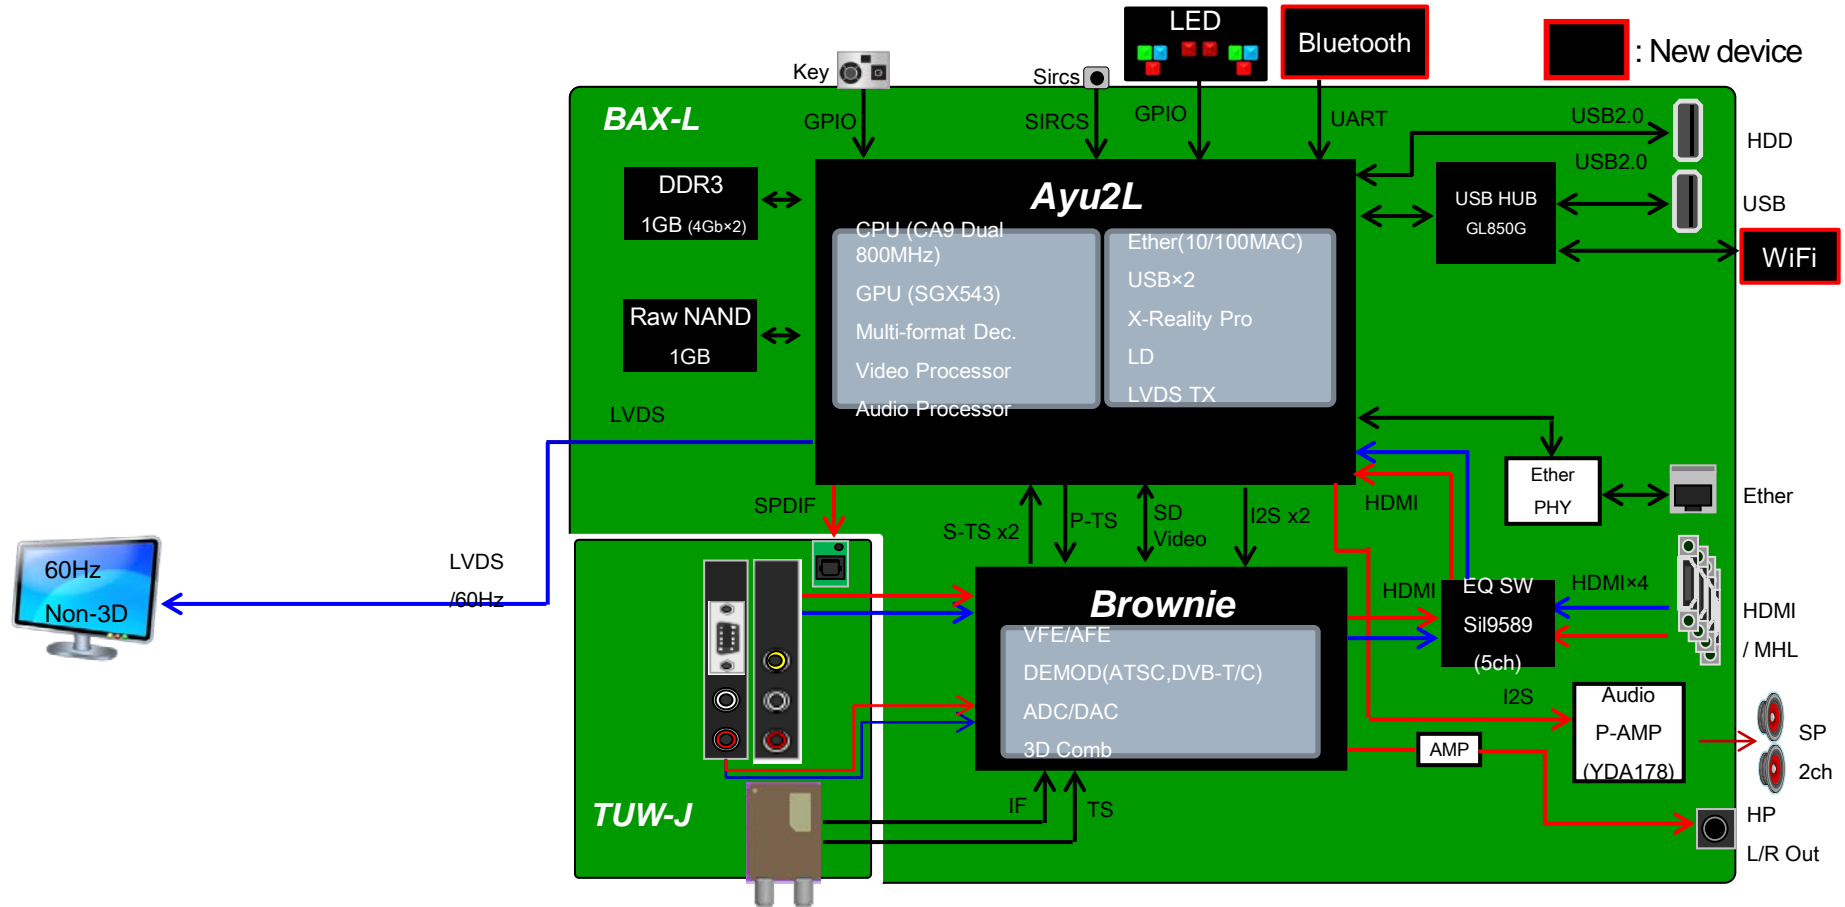

5-2. Block Diagram
5-2-4. CH, HK, TW

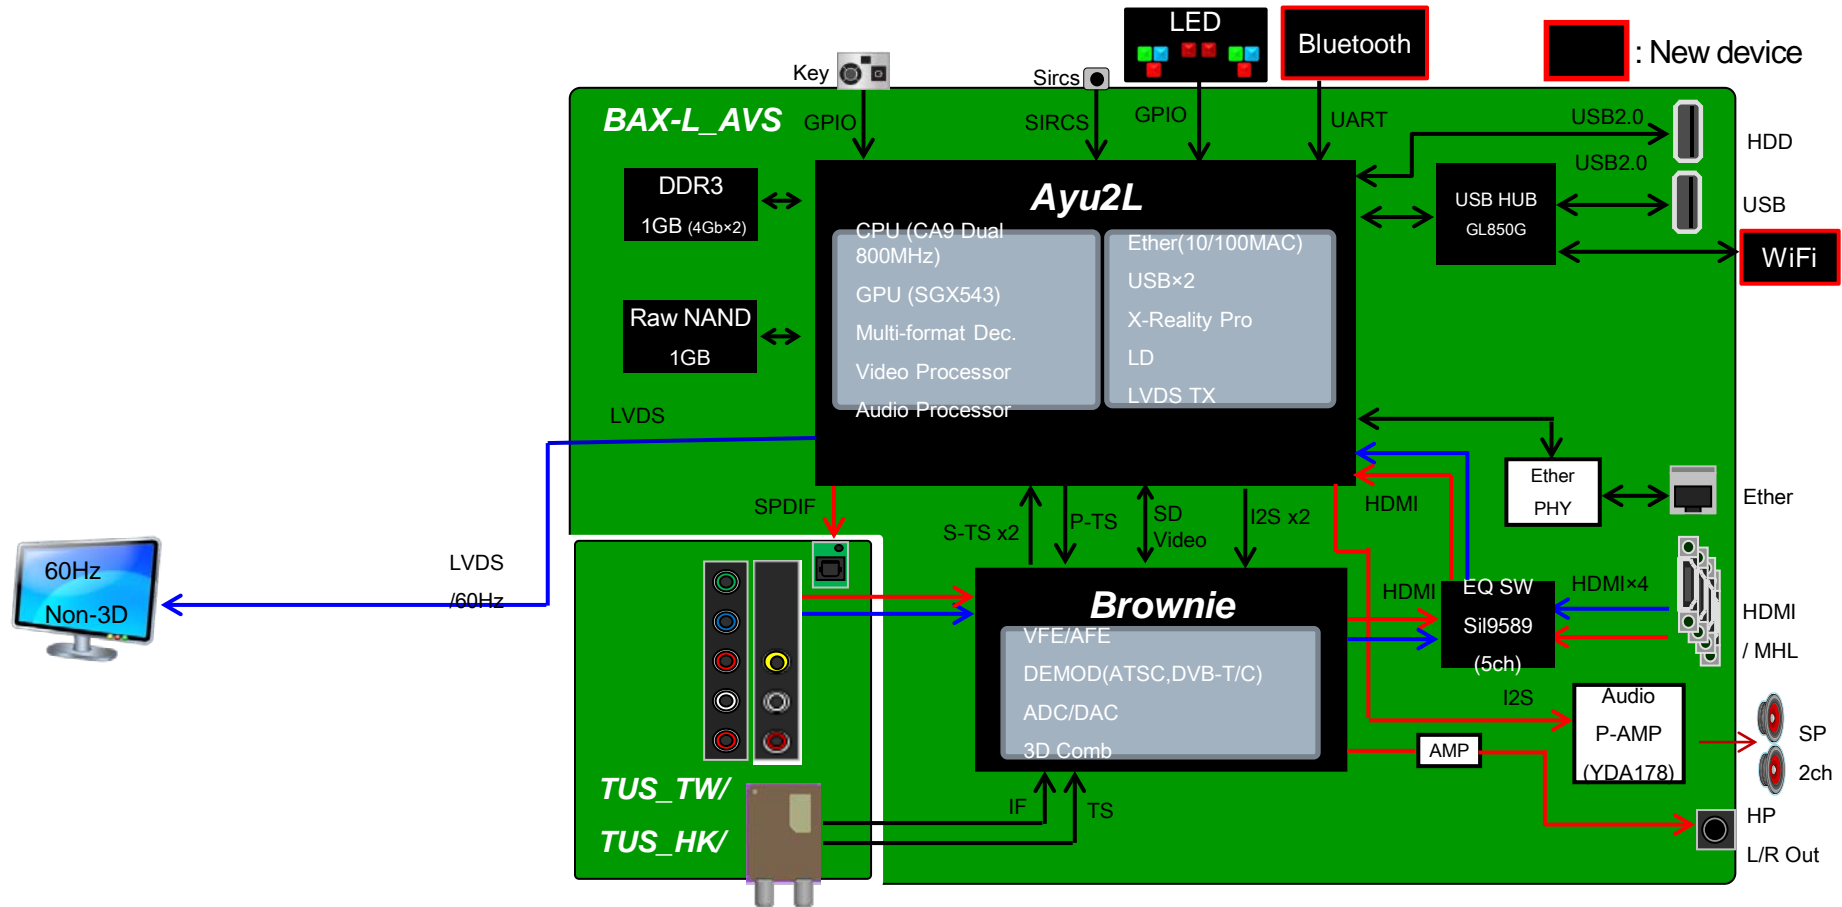


5-2. Block Diagram
5-2-5 UC

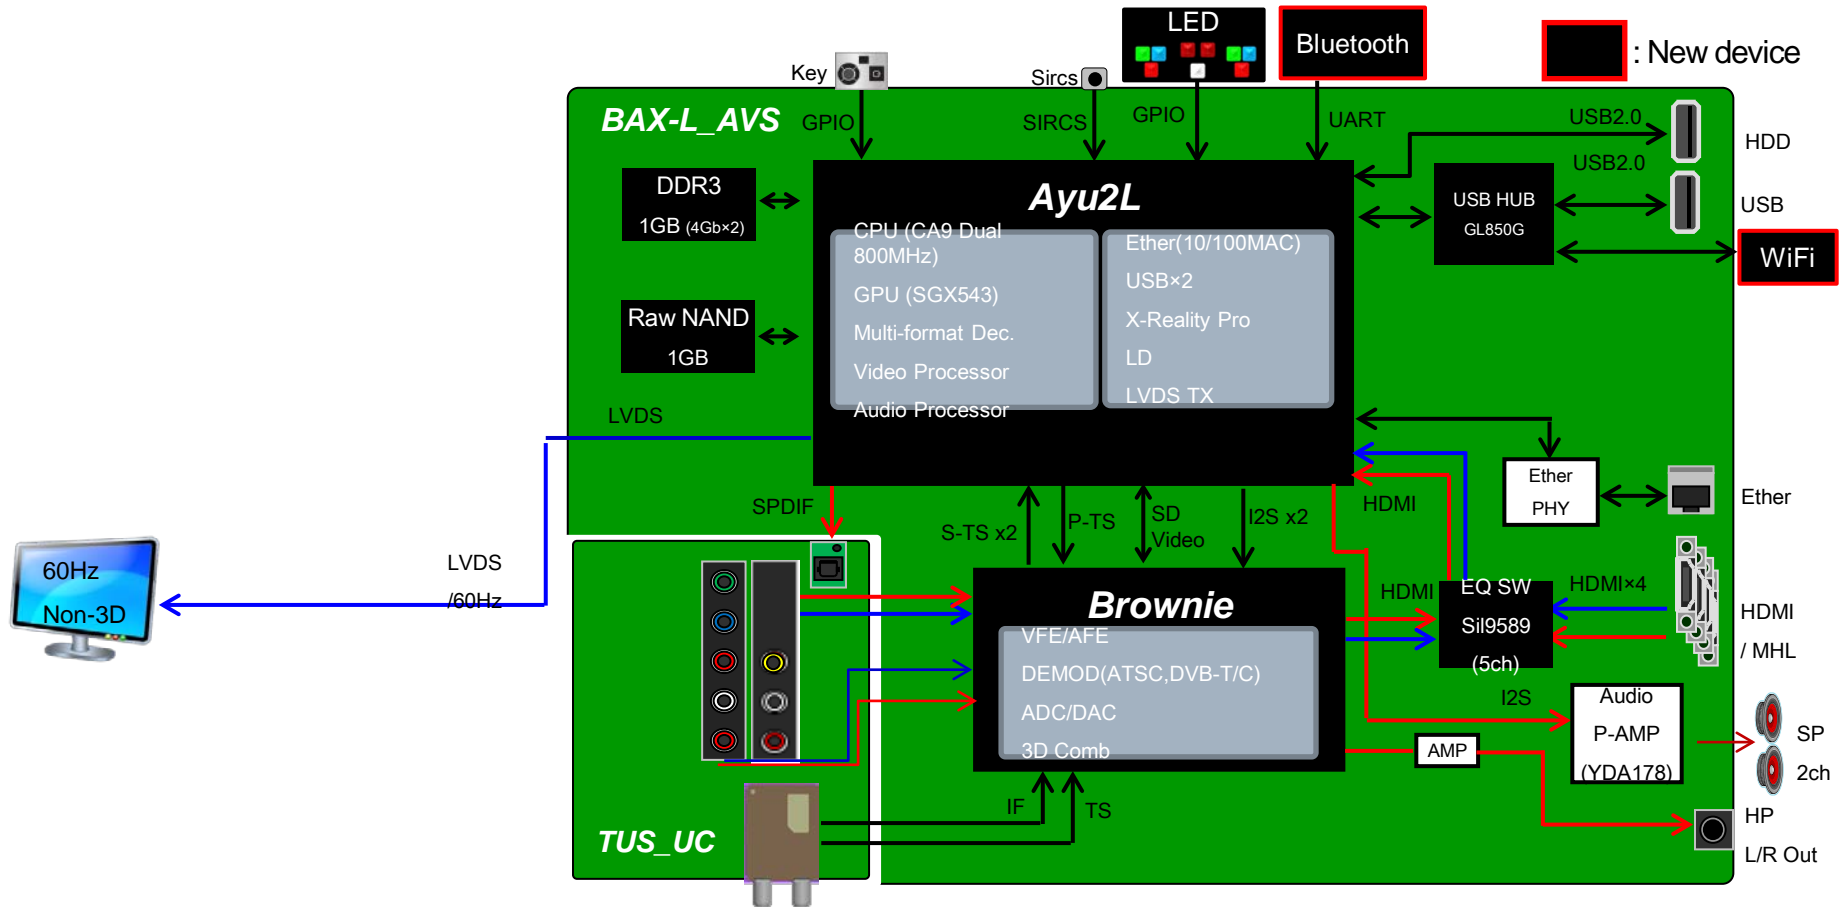

Supp-1: KDL-60W600B

5-1.CIRCUIT BOARD LOCATION

5-1-3. KDL- 60W*B

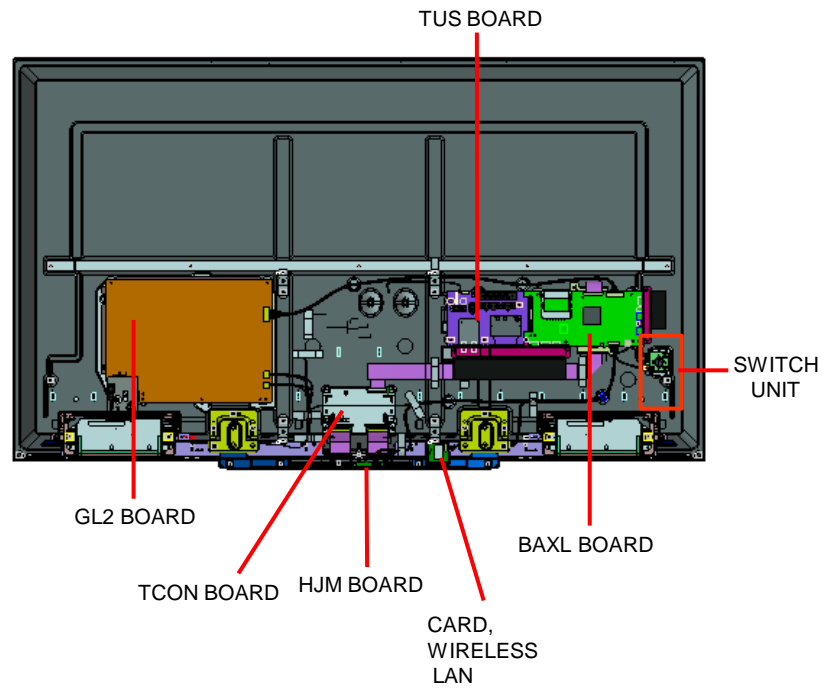

5-3. Connector Diagram

5-3-2. 60" W*B

