

# JVC


## SERVICE MANUAL

### COLOUR TELEVISION

BASIC CHASSIS

CM-II'

# AV-21F9<sub>(NS)</sub>

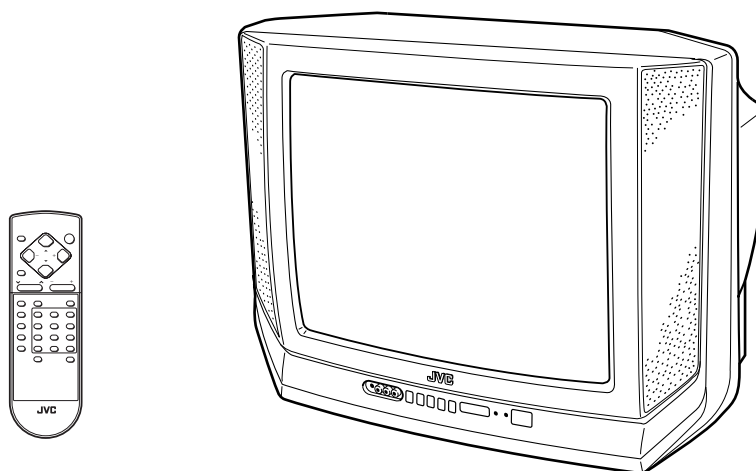

## CONTENTS

■ SPECIFICATIONS .....	2
■ SAFETY PRECAUTIONS .....	3
■ FEATURES .....	4
★ OPERATING INSTRUCTIONS (APPENDED) .....	1-1
■ SPECIFIC SERVICE INSTRUCTIONS .....	4
■ SERVICE ADJUSTMENTS .....	10
★ STANDARD CIRCUIT DIAGRAM (APPENDED) .....	2-1
■ PARTS LIST .....	27

# REPLACEMENT OF MEMORY IC

## 1. MEMORY IC

This TV uses the following memory IC.

**Memory IC: IC1702 on MAIN PW Board**

The memory IC memorizes data for correctly operating the video and deflection circuits. When replacing the memory IC, be sure to use the same type IC written with the initial values of data. In other words, use the specific IC listed in "PRINTED WIRING BOARD PARTS LIST". For its mounting location, refer to "ADJUSTMENT LOCATIONS".

## 2. PROCEDURE FOR REPLACING MEMORY IC

### (1) Power off

Switch the power off and unplug the power cord from the wall outlet.

### (2) Replacing the memory IC

Replace the memory IC with new one. Be sure to use the memory IC written with the initial data values.

### (3) Power on

Plug the power cord into the wall outlet and switch the power on.


### (4) Check and setting of SYSTEM CONSTANT SET:

- 1) Press the DISPLAY key and the PICTURE MODE key on the remote control unit simultaneously. The SERVICE MENU screen will be displayed. (See Fig. 1.)
- 2) In the SERVICE MENU, press the DISPLAY key and PICTURE MODE key simultaneously. Then, the SYSTEM CONSTANT SET screen will be displayed. (See Fig. 2.)
- 3) Check whether the setting values of the SYSTEM CONSTANT SET are the same as those indicated in Table 1. If the value is different, select the setting item with the MENU  $\nabla/\Delta$  key, and set the correct value with the MENU - / + key.
- 4) Press the DISPLAY key twice to return to the normal screen.

### (5) Receive channel setting

Refer to the **OPERATING INSTRUCTIONS** and set the receive channels (channels preset).

### NAME OF REMOTE CONTROL KEYS

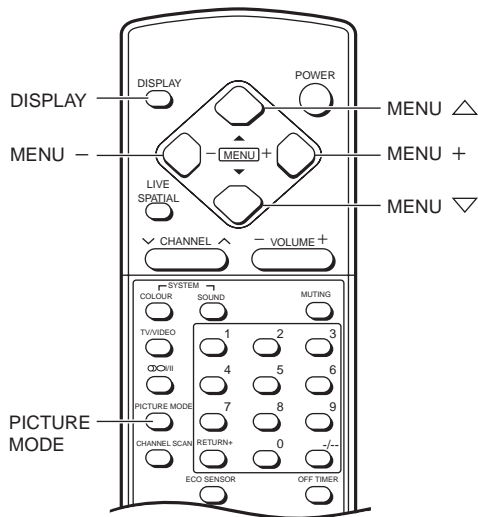

### (6) User setting

Check the user setting values in Table 2, and if setting value is different, set the correct value.

For setting, refer to the **OPERATING INSTRUCTIONS**.

### (7) Setting of SERVICE MENU

Verify the setting for each setting item in the SERVICE MENU. (See Table 3.) If readjustment is necessary, perform adjustment referring to "SERVICE ADJUSTMENTS".

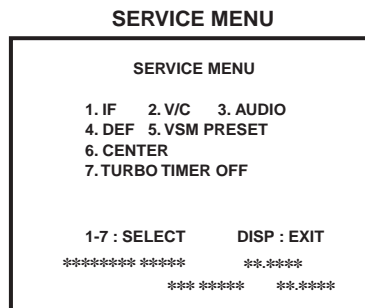


Fig. 1

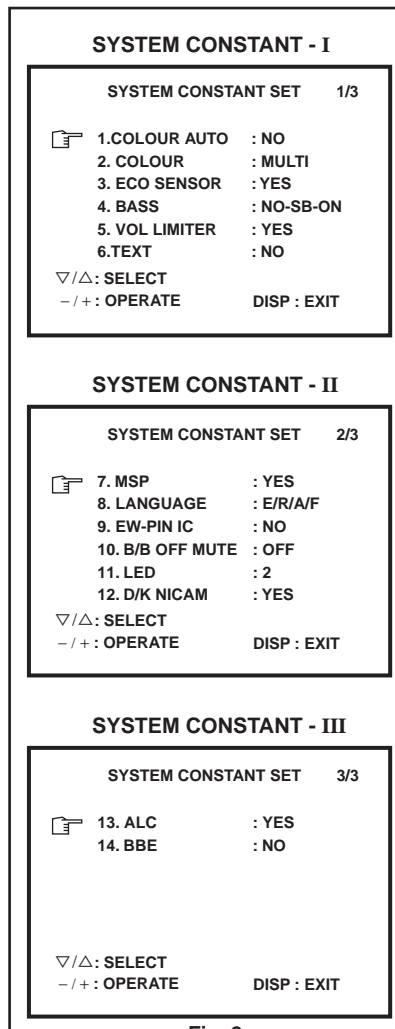


Fig. 2

## SETTING OF SYSTEM CONSTANT SET

Table 1

Setting item	Setting contents	Setting value
1. COLOUR AUTO	<input type="checkbox"/> YES → <input type="checkbox"/> NO	NO
2. COLOUR	<input type="checkbox"/> MULTI. → <input type="checkbox"/> TRIPLE → <input type="checkbox"/> PAL	MULTI
3. ECO SENSOR	<input type="checkbox"/> YES → <input type="checkbox"/> NO	YES
4. BASS	<input type="checkbox"/> YES-BB → <input type="checkbox"/> YES-BB-SB → <input type="checkbox"/> YES-SB <input type="checkbox"/> NO-SB-OFF ← <input type="checkbox"/> NO-SB-ON ← <input type="checkbox"/> YES-BA	NO-SB-ON
5. VOL. LIMITER	<input type="checkbox"/> YES → <input type="checkbox"/> NO	YES
6. TEXT	<input type="checkbox"/> YES → <input type="checkbox"/> NO	NO
7. MSP	<input type="checkbox"/> YES → <input type="checkbox"/> NO → <input type="checkbox"/> NO-A2	YES
8. LANGUAGE	<input type="checkbox"/> E/R/A/F → <input type="checkbox"/> E/A/F → <input type="checkbox"/> E/A → <input type="checkbox"/> E/F	E/R/A/F
9. EW-PIN IC	<input type="checkbox"/> YES → <input type="checkbox"/> NO	NO
10. B/B OFF MUTE	<input type="checkbox"/> ON → <input type="checkbox"/> OFF	OFF
11. LED	<input type="checkbox"/> 2 → <input type="checkbox"/> 3	2
12. D/K NICAM	<input type="checkbox"/> YES → <input type="checkbox"/> NO	YES
13. ALC	<input type="checkbox"/> YES → <input type="checkbox"/> NO	YES
14. BBE	<input type="checkbox"/> YES → <input type="checkbox"/> NO	NO

## USER SETTING VALUES

Table 2

Setting item	Setting value	Setting item	Setting value
SUB POWER	ON	TREBLE	CENTER
CHANNEL POSITION	1 POSITION	BASS	CENTER
CHANNEL PRESET	Refer to OPERATING INSTRUCTIONS	BALANCE	CENTER
VOLUME	Appropriate sound volume	VNR	OFF
TV/VIDEO	TV	OFF TIMER	OFF
ON SCREEN DISPLAY	POSITION NUMBER DISPLAY	AUTO SHUTOFF	OFF
COLOUR SYSTEM	AUTO PAL	ECO SENSOR	OFF
SOUND SYSTEM	B / G	LANGUAGE	ENGLISH
BILINGUAL MODE	STEREO	ALC	HIGH
PICTURE MODE (VSM)	BRIGHT	BLUE BACK	OFF
LIVE SPATIAL	OFF	ON TIMER	PR1 0:00
		CHILD LOCK	OFF

**SERVICE MENU SETTING ITEMS**

Table 3

Service menu	Setting item	Service menu	Setting item
1. IF	1. VCO 2. DELAY POINT	3. AUDIO	1. ERROR LIMIT 2. A2 ID THR <b>Do not adjust.</b> 3. SOUND SYSTEM
2. V / C	1. CUTOFF(R/G/B) 2. DRIVE(R/B) 3. BRIGHT 4. CONT. 5. COLOUR 6. TINT 7. BLACK OFFSET(R-Y/B-Y) 8. SHARP 9. TEXT(RGB)CONT. 10. B.S. OFF 11. B.S. POINT 12. DC TRAN RATE 13. APA-CON FO/SW 14. VSM PHASE 15. VSM GAIN <b>Do not adjust.</b> 16. CLL SW 17. CLL LEVEL 18. ABL POINT 19. ABL GAIN 20. Y-DL(TV/VIDEO/S) 21. P. ACL SW 22. WPL SW 23. Y GAMMA	4. DEF	2. V-SHIFT 3. V-SIZE 4. H-CENT 7. V-S. CR 10. V-LINE
		5. VSM PRESET (BRIGHT/STD/SOFT)	1. TINT 2. COLOUR 3. BRIGHT <b>Do not adjust.</b> 4. CONT. 5. SHARP
		6. CENTER ADJUST	TREBLE <b>Do not adjust.</b> BASS
		7. TURBO TIMER	ON/OFF Should be set to OFF. (When you turn the TV power off, the Turbo Timer is automatically set to OFF.)

# SERVICE ADJUSTMENTS

## BEFORE STARTING SERVICE ADJUSTMENT

1. There are 2 ways for adjusting this TV: One is with the REMOTE CONTROL UNIT and the other is the conventional method using adjustment parts and components.
2. The setting (adjustment) using the REMOTE CONTROL UNIT is made on the basis of the initial setting values. The setting values which adjust the screen to the optimum condition can be different from the initial setting values.
3. Make sure that connection is correctly made to AC power source.
4. Turn on the power of the TV and measuring instrument for warming up for at least 30 minutes before starting adjustment.
5. If the receive or input signal is not specified, use the most appropriate signal for adjustment.
6. Never touch parts (such as variable resistors, transformers and capacitors) not shown in the adjustment items of this service adjustment.

7. Preparation for adjustment (presetting):

Unless otherwise specified in the adjustment items, preset the following functions with the remote control unit.

Function	Setting value
PICTURE MODE (VSM)	BRIGHT
COLOUR/BRIGHT/CONT./SHARP	See "VSM Preset" on page 23.
VNR	OFF
TREBLE/BASS/BALANCE	CENTER
LIVE SPATIAL	OFF
ECO SENSOR	OFF

## MEASURING INSTRUMENT AND FIXTURES

1. DC voltmeter (or Digital voltmeter)
2. Oscilloscope
3. Signal generator (Pattern generator)  
[PAL / SECAM / NTSC]
4. Remote control unit

## ADJUSTMENT/CHECK ITEMS

Adjustment/Check item	Page
B1 POWER SUPPLY Check	14
FOCUS Adjustment	14
IF CIRCUIT Adjustment	14
V/C (VIDEO/CHROMA) CIRCUIT Adjustment	15
DEFLECTION CIRCUIT Adjustment	21
VSM PRESET Adjustment	23
AUDIO Adjustment	23
CENTER Adjustment	23
PURITY, CONVERGENCE Adjustment	24

## BASIC OPERATION IN SERVICE MENU

### 1. TOOL OF SERVICE MENU OPERATION

Operate the SERVICE MENU with the remote control unit.

### 2. SERVICE MENU ITEMS

With the SERVICE MENU, various settings (adjustments) can be made, and they are broadly classified in the following items of settings:

- 1. IF ..... For entering/adjusting the setting values (adjustment values) of the IF circuit.
- 2. V/C ..... For entering/adjusting the setting values (adjustment values) of the VIDEO/CHROMA circuit.
- 3. AUDIO ..... For entering/adjusting the setting values (adjustment values) of the multiplicity sound circuit.  
(Do not adjust the preset values.)
- 4. DEF ..... For entering/adjusting the setting values (adjustment values) of the DEFLECTION circuit.
- 5. VSM PRESET ..... For setting the values of STANDARD, SOFT and BRIGHT (Do not adjust the preset values.)  
(VSM: video status memory)
- 6. CENTER ..... For setting the CENTER ADJUST values of TREBLE and BASS. (Do not adjust the preset values.)
- 7. TURBO TIMER ..... For quick setting the values of TIMER COUNT — adjustable not only by minutes but also by second. If it is ON, the time in TIMER mode changes from 1 minute into 1 second temporarily. (Applicable to OFF TIMER, ON TIMER and AUTO SHUTOFF)

**Note:** When you turn the TV power off, the Turbo Timer is automatically set to OFF.

### 3. BASIC OPERATION IN SERVICE MENU

#### (1) How to enter SERVICE MENU

Press the DISPLAY key and the PICTURE MODE key on the remote control unit simultaneously.  
The SERVICE MENU screen will be displayed. (See Fig. 1.)

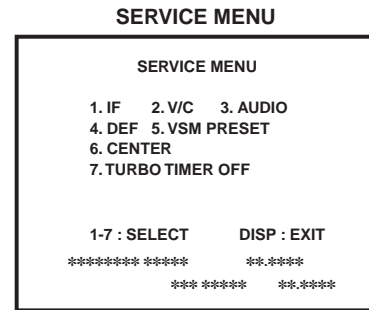


Fig. 1

#### (2) Selection of SUB MENU SCREEN

Press one of the keys 1 ~ 7 on the remote control unit, and select the SUB MENU SCREEN from the SERVICE MENU. (See Fig. 2 on the next page.)

SERVICE MENU → SUB MENU	<b>1. IF</b>
	<b>2. V / C</b>
	<b>3. AUDIO</b>
	<b>4. DEF</b>
	<b>5. VSM PRESET</b>
	<b>6. CENTER</b>
	<b>7. TURBO TIMER</b>

#### (3) Method of Setting

\*Once the setting values are set, they are memorized automatically.

\*It must not adjust without inputting a signal.

##### 1) 1. IF

[1. VCO]

- (a) 1 Key ..... Select **1. IF**.
- (b) 1 Key ..... Select **1. VCO (CW)**
- (c) VCO(CW) TRANSF. .... Adjust VCO(CW) while watching the colour (yellow/blue) of the characters on the screen.
- (d) DISPLAY Key ..... When this is pressed twice, you will return to the SERVICE MENU.

[2. DELAY POINT]

- (a) 1 Key ..... Select **1. IF**.
- (b) 2 Key ..... Select **2. DELAY POINT**.
- (c) MENU - / + Key ..... Adjust the setting value.
- (d) DISPLAY Key ..... When this is pressed twice, you will return to the SERVICE MENU.

##### 2) 2. V/C, 3. AUDIO, 4. DEF, 5. VSM PRESET and 6. CENTER

- (a) 2 ~ 6 Keys ..... Select one from **2. V/C, 3. AUDIO, 4. DEF, 5. VSM PRESET and 6. CENTER**.
- (b) MENU ▽/△ key ..... Select setting items.
- (c) MENU - / + Key ..... Adjust the setting values of the setting items.
  - Use the number keys on the remote control unit for setting of WHITE BALANCE and BLACK OFFSET. For the setting, refer to each item concerned.
- (d) DISPLAY Key ..... When this is pressed, you will return to the SERVICE MENU.

##### 3) 7. TURBO TIMER

- (a) 7 Key ..... Each time you press the key, ON/OFF state of TURBO TIMER changes. (Should be set to OFF.)

#### (4) Release of SERVICE MENU

After completing the setting, return to the SERVICE MENU by pressing the DISPLAY key, then again press the DISPLAY key to return to the normal screen.

SUB MENU SCREEN

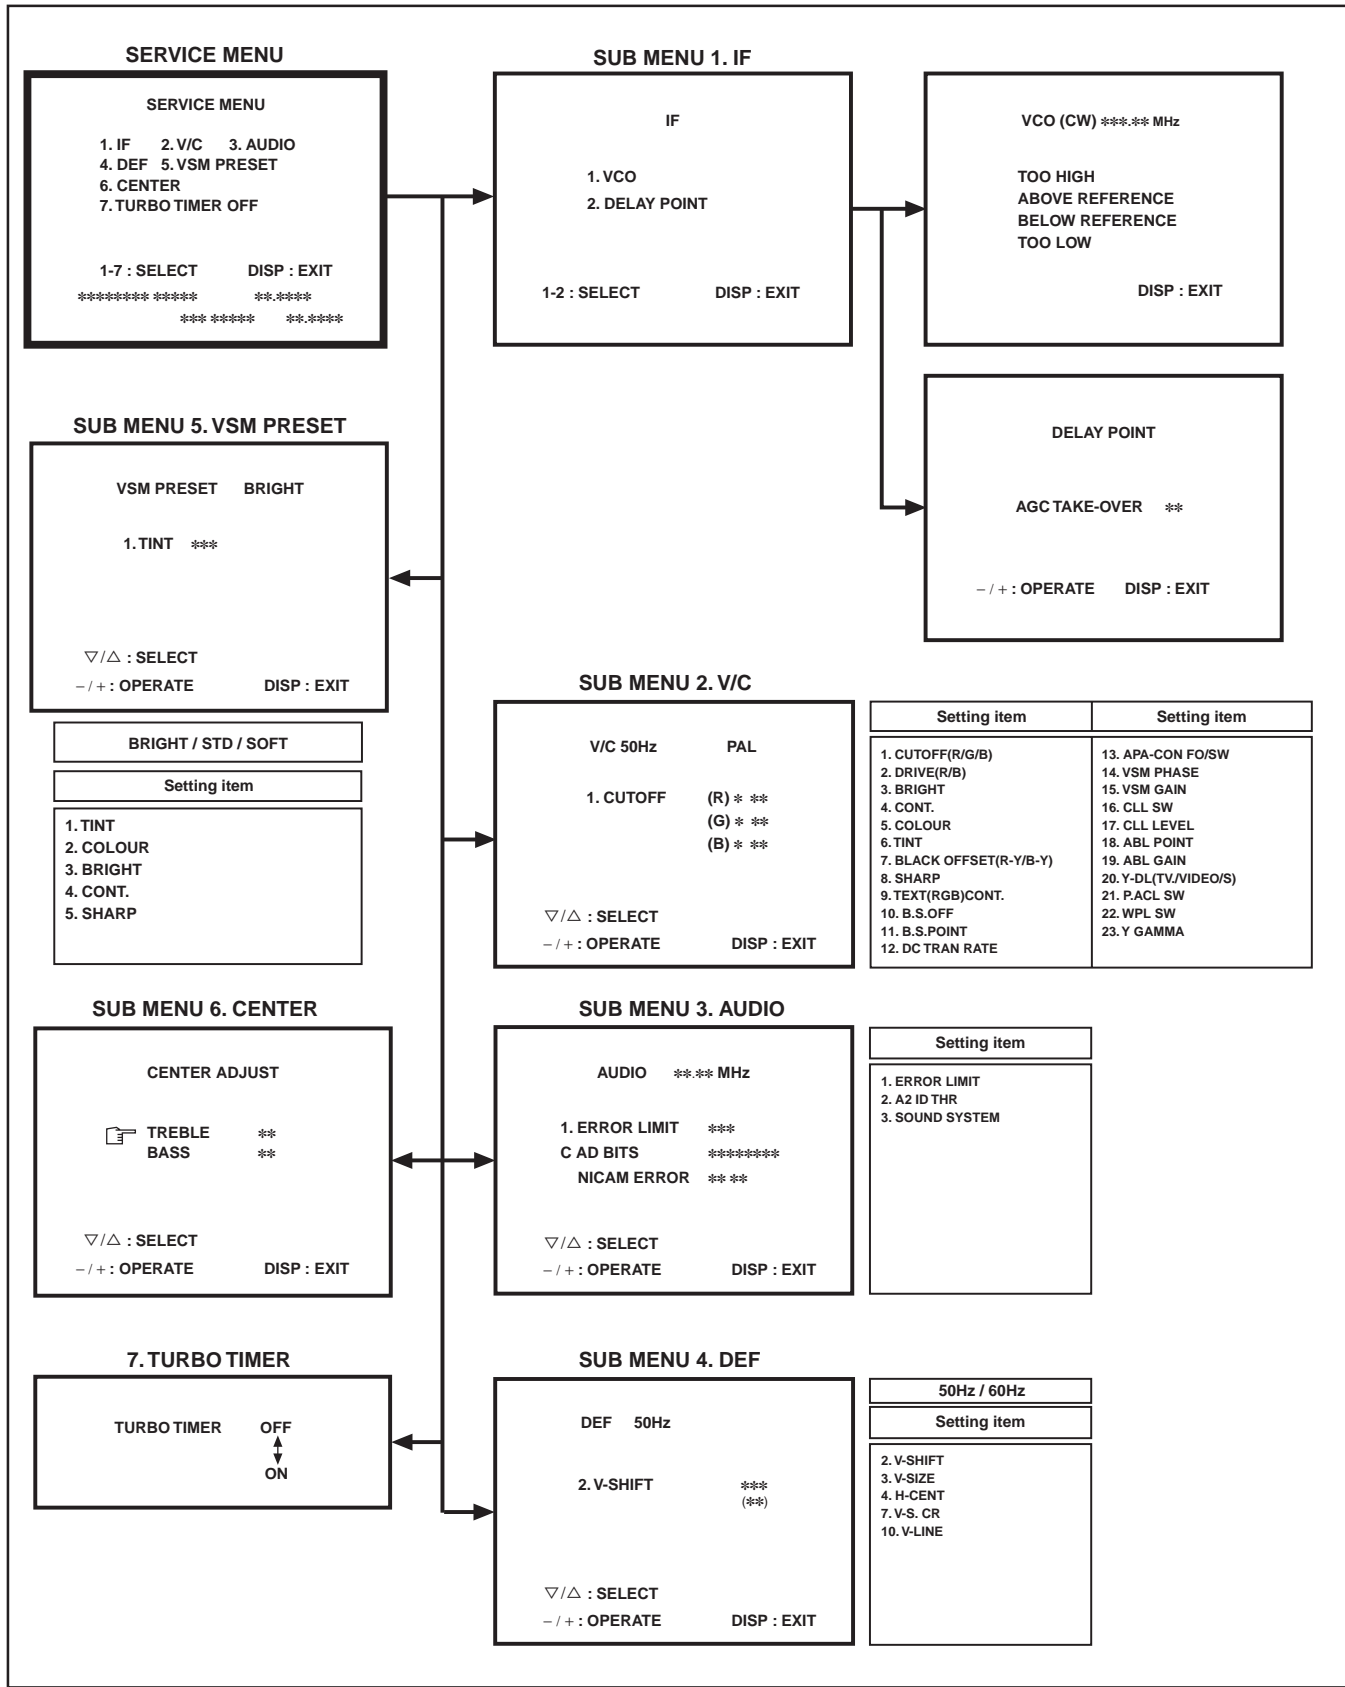


Fig. 2

# ADJUSTMENTS

## B1 POWER SUPPLY

Item	Measuring instrument	Test point	Adjustment part	Description
Check of B1 POWER SUPPLY	Signal Generator DC Voltmeter	TP-91 (B1) TP-E (↗) [S1 connector]		<ol style="list-style-type: none"> <li>1. Receive a whole black signal.</li> <li>2. Connect a DC voltmeter between TP-91 (B1) and TP-E (↗) (between pins 1 and 5 of the connector S1).</li> <li>3. Make sure that the voltage is <b>DC113.3 ± 1.5V</b>.</li> </ol>

## FOCUS ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of FOCUS	Signal generator		FOCUS VR [In HVT]	<ol style="list-style-type: none"> <li>1. Receive a cross-hatch signal.</li> <li>2. While watching the screen, adjust the FOCUS VR to make the vertical and horizontal lines as fine and sharp as possible.</li> <li>3. Make sure that, when the screen is darkened, the lines remain in good focus.</li> </ol>

## IF CIRCUIT ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description																						
Adjustment of VCO (CW)	Remote control unit		VCO (CW) TRANSF. [On IF PWB]	<p>● <b>Under normal conditions, no adjustment is required.</b></p> <ol style="list-style-type: none"> <li>1. Select <b>1. IF</b> from the SERVICE MENU.</li> <li>2. Press the <b>1</b> key to select <b>1. VCO</b>.</li> <li>3. Select a receivable broadcast channel with the CHANNEL key.</li> <li>4. Turn the core of VCO(CW) TRANSF. until the colour of the characters "TOO HIGH" displayed on the screen changes from blue to <b>yellow</b>. (Step 1)</li> <li>5. Then slowly turn the core of VCO(CW) TRANSF. counterclockwise until the characters "ABOVE REFERENCE" changes from blue to <b>yellow</b>. (Step 2)</li> <li>6. Further slowly turn the core of VCO(CW) TRANSF. until the colour of the characters "BELOW REFERENCE" changes from blue to <b>yellow</b>. (Step 3)</li> <li>7. Press the DISPLAY key three times to return to normal screen.</li> <li>8. Perform CHANNEL PRESET again, and make sure that each broadcast is being received properly.</li> </ol>																						
<table border="1"> <thead> <tr> <th rowspan="2">Screen display</th> <th colspan="3">Step</th> </tr> <tr> <th>1 →</th> <th>2 →</th> <th>3</th> </tr> </thead> <tbody> <tr> <td>TOO HIGH</td> <td><b>Yellow</b> →</td> <td>Blue →</td> <td>Blue</td> </tr> <tr> <td>ABOVE REFERENCE</td> <td>Blue →</td> <td><b>Yellow</b> →</td> <td>Blue</td> </tr> <tr> <td>BELOW REFERENCE</td> <td>Blue →</td> <td>Blue →</td> <td><b>Yellow</b></td> </tr> <tr> <td>TOO LOW</td> <td>Blue →</td> <td>→</td> <td>Blue</td> </tr> </tbody> </table>		Screen display	Step			1 →	2 →	3	TOO HIGH	<b>Yellow</b> →	Blue →	Blue	ABOVE REFERENCE	Blue →	<b>Yellow</b> →	Blue	BELOW REFERENCE	Blue →	Blue →	<b>Yellow</b>	TOO LOW	Blue →	→	Blue		
Screen display	Step																									
	1 →	2 →	3																							
TOO HIGH	<b>Yellow</b> →	Blue →	Blue																							
ABOVE REFERENCE	Blue →	<b>Yellow</b> →	Blue																							
BELOW REFERENCE	Blue →	Blue →	<b>Yellow</b>																							
TOO LOW	Blue →	→	Blue																							



Item	Measuring instrument	Test point	Adjustment part	Description	
Adjustment of DELAY POINT	Remote control unit		DELAY POINT (AGC TAKE-OVER)	<ol style="list-style-type: none"> <li>1. Receive a black and white signal (colour off).</li> <li>2. Select <b>1. IF</b> from the SERVICE MENU.</li> <li>3. Select <b>2. DELAY POINT</b> by pressing the <b>2</b> key on the remote control.</li> <li>4. Adjust the MENU – or + key until video noise disappears.</li> <li>5. Press the DISPLAY key three times to return to the normal screen.</li> <li>6. Turn to other channels and make sure that there are no irregularities.</li> </ol>	
					Setting (Adjustment) item
			DELAY POINT (AGC TAKE-OVER)	0 ~ 63	19




### V/C (VIDEO/CHROMA) CIRCUIT ADJUSTMENT

The setting (adjustment) using the remote control unit is made on the basis of the initial setting values.  
 The setting values which adjust the screen to the optimum condition can be different from the initial setting values.  
 ● Do not change the initial setting values of the setting (adjustment) items not listed in "ADJUSTMENT".

[SUB MENU 2. V/C]   : Do not adjust.

Setting item	Colour system	Variable range	Initial setting value			
			PAL	SECAM	NTSC 3.58	NTSC 4.43
1. CUT OFF (R / G / B)		-128 ~ +127	0	←	←	←
2. DRIVE (R / B)		-128 ~ +127	0	←	←	←
3. BRIGHT		-128 ~ +127	+19	←	←	←
4. CONT.		-42 ~ +42	-4	←	←	←
5. COLOUR		-60 ~ +68	+11	+3	+5	0
6. TINT	TV / VIDEO	-64 ~ +63	—	—	+12 / -4	-4 / -4
7. BLACK OFFSET (R-Y / B-Y)		-8 ~ +7	—	+4 / +2	—	—
8. SHARP	TV / VIDEO	-32 ~ +31	-7 / +1	←	←	←
9. TEXT (RGB) CONT.		-128 ~ +77	+30	←	←	←
10. B.S.OFF		0 ~ +1	0	←	←	←
11. B.S.POINT		0 ~ +7	+5	←	←	←
12. DC TRAN RATE		0 ~ +7	+3	←	←	←
13. APA-CON FO/SW		0 ~ +3	+1	←	←	←
14. VSM PHASE		0 ~ +3	+2	←	←	←
15. VSM GAIN		0 ~ +3	+1	←	←	←
16. CLL SW		0 ~ +1	+1	←	←	←
17. CLL LEVEL		0 ~ +3	+2	←	←	←
18. ABL POINT		0 ~ +7	+2	←	←	←
19. ABL GAIN		0 ~ +7	+2	←	←	←
20. Y-DL (TV / VIDEO / S)		0 ~ +7	+2 / +4 / +2	+3 / +3 / +2	+4 / +4 / +2	←
21. P.ACL SW		0 ~ +1	+1	←	←	←
22. WPL SW		0 ~ +1	0	←	←	←
23. Y GAMMA		0 ~ +1	0	←	←	←


Item	Measuring instrument	Test point	Adjustment part	Description										
<p><b>Adjustment of WHITE BALANCE (Low light)</b></p>	<ul style="list-style-type: none"> <li>● Signal generator</li> <li>● Remote control unit</li> </ul>		<p><b>1. CUTOFF (R)</b> <b>CUTOFF (G)</b> <b>CUTOFF (B)</b></p> <p><b>SCREEN VR</b> <b>(In HVT)</b></p>	<ol style="list-style-type: none"> <li>1. Receive a black and white signal (colour off).</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>1. CUTOFF (R), (G) and (B)</b> with MENU <math>\nabla/\Delta</math> key, and set each value to initial setting value with <b>4 ~ 9</b> keys on the remote control unit.</li> <li>4. Press the <b>1</b> key on the remote control unit to produce a single horizontal line.</li> <li>5. Turn the SCREEN VR fully counterclockwise, then slowly turn it clockwise to where a red, blue, or green colour is faintly visible.</li> <li>6. Use keys <b>4 ~ 9</b> on the remote control unit and adjust the other 2 colours to where the single horizontal line appears white.</li> <li>7. Turn the SCREEN VR to where the single horizontal line glows faintly.</li> <li>8. Press the <b>2</b> key to return to <b>1. CUTOFF</b> screen.</li> <li>9. Press the DISPLAY key twice to return to the normal screen.</li> </ol> <table border="1" data-bbox="797 772 1398 989" style="width: 100%; border-collapse: collapse; margin-top: 20px;"> <thead> <tr> <th>Setting (Adjustment) item</th> <th>Variable range</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td rowspan="3">1. CUT OFF</td> <td>R</td> <td>-128 ~ +127</td> </tr> <tr> <td>G</td> <td>-128 ~ +127</td> </tr> <tr> <td>B</td> <td>-128 ~ +127</td> </tr> </tbody> </table>	Setting (Adjustment) item	Variable range	Initial setting value	1. CUT OFF	R	-128 ~ +127	G	-128 ~ +127	B	-128 ~ +127
Setting (Adjustment) item	Variable range	Initial setting value												
1. CUT OFF	R	-128 ~ +127												
	G	-128 ~ +127												
	B	-128 ~ +127												
<p><b>Adjustment of WHITE BALANCE (High light)</b></p>	<ul style="list-style-type: none"> <li>● Signal generator</li> <li>● Remote control unit</li> </ul>		<p><b>2. DRIVE (R)</b> <b>DRIVE (B)</b></p>	<ol style="list-style-type: none"> <li>1. Receive a black and white signal (colour off).</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>2. DRIVE (R) / (B)</b> with MENU <math>\nabla/\Delta</math> key, and set each value to initial setting value with <b>4 and 7</b> keys, or <b>6 and 9</b> keys on the remote control unit.</li> <li>4. Use the keys <b>4 and 7</b> or <b>6 and 9</b> to produce a white screen.</li> <li>5. Press the DISPLAY key twice to return to the normal screen.</li> </ol> <table border="1" data-bbox="797 1566 1398 1740" style="width: 100%; border-collapse: collapse; margin-top: 20px;"> <thead> <tr> <th>Setting (Adjustment) item</th> <th>Variable range</th> <th>Initial setting value</th> </tr> </thead> <tbody> <tr> <td rowspan="2">2. DRIVE</td> <td>R</td> <td>-128 ~ +127</td> </tr> <tr> <td>B</td> <td>-128 ~ +127</td> </tr> </tbody> </table>	Setting (Adjustment) item	Variable range	Initial setting value	2. DRIVE	R	-128 ~ +127	B	-128 ~ +127		
Setting (Adjustment) item	Variable range	Initial setting value												
2. DRIVE	R	-128 ~ +127												
	B	-128 ~ +127												

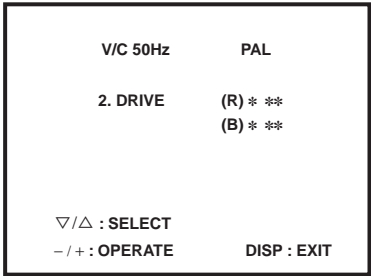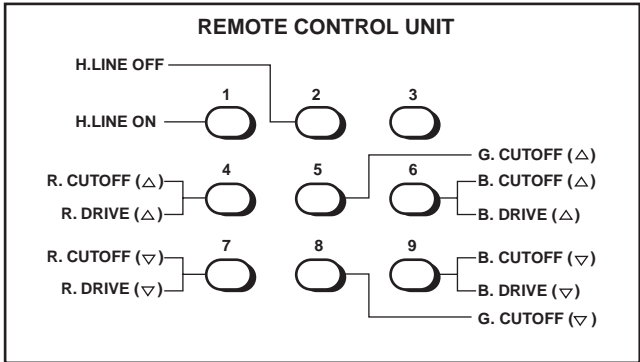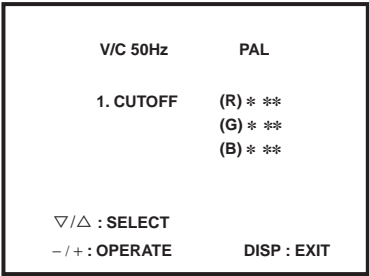

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SUB BRIGHT	Remote control unit		3. BRIGHT	<ol style="list-style-type: none"> <li>1. Receive any broadcast.</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>3. BRIGHT</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value with the MENU – or + key.</li> <li>5. If the brightness is not the best with the initial set value, make fine adjustment until you get the best brightness.</li> <li>6. Press the DISPLAY key twice to return to the normal screen.</li> </ol>
Adjustment of SUB CONT.	Remote control unit		4. CONT.	<ol style="list-style-type: none"> <li>1. Receive any broadcast.</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>4. CONT.</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value with the MENU – or + key.</li> <li>5. If the contrast is not the best with the initial set value, make fine adjustment until you get the best contrast.</li> <li>6. Press the DISPLAY key twice to return to the normal screen.</li> </ol>
Adjustment of SUB COLOUR-I	Remote control unit		5. COLOR	<b>[Method of adjustment without measuring instrument]</b>
			PAL COLOUR	<b>(PAL COLOUR)</b> <ol style="list-style-type: none"> <li>1. Receive a PAL broadcast.</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>5. COLOUR</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value for PAL COLOUR with the MENU – or + key.</li> <li>5. If the colour is not the best with the initial set value, make fine adjustment until you get the best colour.</li> <li>6. Press the DISPLAY key twice to return to the normal screen.</li> </ol>
			SECAM COLOUR	<b>(SECAM COLOUR)</b> <ol style="list-style-type: none"> <li>1. Receive a SECAM broadcast.</li> <li>2. Make fine adjustment of SECAM COLOUR in the same way as for "PAL COLOUR".</li> </ol>
			NTSC 3.58 COLOUR	<b>(NTSC 3.58 COLOUR)</b> <ol style="list-style-type: none"> <li>1. Receive a NTSC 3.58MHz broadcast.</li> <li>2. Make similar fine adjustment of NTSC 3.58 COLOUR in the same way as for "PAL COLOUR".</li> </ol>
				<b>(NTSC 4.43 COLOUR)</b> When adjustment is done for NTSC 3.58 COLOUR, appropriate values are automatically set for NTSC 4.43 COLOUR.



Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of SUB TINT-I	Remote control unit		6. TINT	<b>[Method of adjustment without measuring instrument]</b>
			NTSC 3.58 TINT	<b>(NTSC 3.58 TINT)</b> 1. Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white). 2. Select <b>2. V/C</b> from the SERVICE MENU. 3. Select <b>6. TINT</b> with the MENU ▽/△ key. 4. Set the initial setting value of NTSC 3.58 with the MENU – or + key. 5. If you cannot get the best tint with the initial setting value, make fine adjustment until you get the best tint. 6. Press the DISPLAY key twice to return to the normal screen.
				<b>(NTSC 4.43 COLOUR)</b> When adjustment is done for NTSC 3.58 TINT, appropriate values are automatically set for NTSC 4.43 TINT.
Adjustment of SUB TINT-II	<ul style="list-style-type: none"> <li>● Signal generator</li> <li>● Oscilloscope</li> <li>● Remote control unit</li> </ul>	TP-47G TP-E (↯) [CRT SOCKET PWB]	6. TINT	<b>[Method of adjustment using measuring instrument]</b>
			NTSC 3.58 TINT	<b>(NTSC 3.58 TINT)</b> 1. Receive a NTSC 3.58 colour bar signal (full field colour bar 75% white). 2. Select <b>2. V/C</b> from the SERVICE MENU. 3. Select <b>6. TINT</b> with the MENU ▽/△ key. 4. Set the initial setting value of NTSC 3.58 with the MENU – or + key. 5. Connect the oscilloscope between TP-47G and TP-E. 6. Adjust NTSC 3.58 TINT to set the value <b>(B)</b> in the figure to <b>+10V (W &amp; Cy)</b> . 7. Press the DISPLAY key twice to return to the normal screen.
				<b>(NTSC 4.43 TINT)</b> When adjustment is done for NTSC 3.58 TINT, appropriate values are automatically set for NTSC 4.43 TINT.

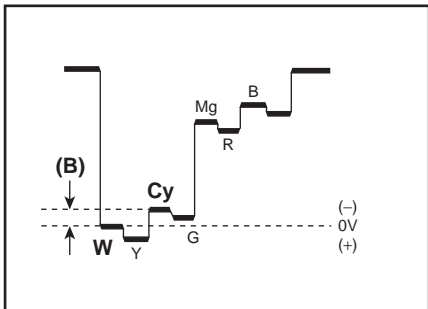

Item	Measuring instrument	Test point	Adjustment part	Description
<b>Adjustment of BLACK OFFSET-I (SECAM)</b>	Remote control unit		<b>7. BLACK OFFSET (R-Y) (B-Y)</b>	<p><b>[Method of adjustment without measuring instrument]</b></p> <ol style="list-style-type: none"> <li>1. Receive a SECAM broadcast.</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>7. BLACK OFFSET</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value for BLACK OFFSET (R-Y) and (B-Y) with <b>4</b> and <b>7</b> or <b>6</b> and <b>9</b> keys on the remote control unit.</li> <li>5. If the picture is not the best with the initial setting value, make fine adjustment until you get the best picture.</li> <li>6. Press the DISPLAY key twice to return to the normal screen.</li> </ol>
<p><b>REMOTE CONTROL UNIT</b></p>				<p><b>[Method of adjustment using measuring instrument]</b></p> <ol style="list-style-type: none"> <li>1. Receive a SECAM COLOUR bar signal (full field colour bar 75% white).</li> <li>2. Select <b>2. V/C</b> from the SERVICE MENU.</li> <li>3. Select <b>7. BLACK OFFSET</b> with the <math>\nabla/\Delta</math> key.</li> <li>4. Connect the oscilloscope between pin <b>35</b> of IC 201 and TP-E.</li> <li>5. By using <b>4</b> and <b>7</b> keys on the remote control unit, adjust the BLACK OFFSET (R-Y) so that the waveform changes from <b>(a)</b> to <b>(b)</b> as shown in the figure.</li> <li>6. Connect the oscilloscope between pin <b>36</b> of IC 201 and TP-E.</li> <li>7. By using <b>6</b> and <b>9</b> keys on the remote control unit, adjust the BLACK OFFSET (B-Y) so that the waveform changes from <b>(c)</b> to <b>(d)</b> as shown in the figure.</li> <li>8. If the picture is not the best with the adjusted picture, make fine adjustment until you get the best picture.</li> <li>9. Press the DISPLAY key twice to return to the normal screen.</li> </ol>
<b>Adjustment of BLACK OFFSET-II (SECAM)</b>	<ul style="list-style-type: none"> <li>● Signal generator</li> <li>● Oscilloscope</li> <li>● Remote control unit</li> </ul>	35 PIN (R-Y) 36 PIN (B-Y) IC 201 on MAIN PWB	<b>7. BLACK OFFSET (R-Y) (B-Y)</b>	<p><b>[R-Y]</b></p> <p><b>[B-Y]</b></p>

## DEFLECTION CIRCUIT ADJUSTMENT



- There are 2 modes of adjustment (initial setting value) — 50Hz mode and 60Hz mode — depending upon the kind of signals (vertical frequency 50Hz / 60Hz).
- When adjusted in 50Hz mode, 60Hz mode will be automatically set.



The setting (adjustment) using the remote control unit is made on the basis of the initial setting values.  
The setting values which adjust the screen to the optimum condition can be different from the initial setting values.

### [SUB MENU 4. DEF]

Setting item	Adjustment name	Variable range	Initial setting value	
			50Hz	60Hz
2. V-SHIFT	Vertical center	-32 ~ +31	0	0
3. V. SIZE	Vertical height	-64 ~ +63	+5	-1
4. H-CENT	Horizontal center	-16 ~ +15	-12	-9
7. V-S. CR	Vertical height correction	-64 ~ +63	0	+1
10. V-LINE	Vertical linearity	-16 ~ +15	+1	-2

Item	Measuring instrument	Test point	Adjustment part	Description
Adjustment of V-SHIFT & V-SIZE	<ul style="list-style-type: none"> <li>● Signal generator</li> <li>● Remote control unit</li> </ul>		2. V-SHIFT 3. V-SIZE	<p>[ fv : 50Hz mode]</p> <ol style="list-style-type: none"> <li>1. Receive a circle pattern signal of vertical frequency 50Hz.</li> <li>2. Select <b>4. DEF</b> from the SERVICE MENU.</li> <li>3. Select <b>2. V-SHIFT</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>4. Set the initial setting value of <b>2. V-SHIFT</b> with the MENU - / + key.</li> <li>5. Adjust V-SHIFT to make "A = B" with the MENU - / + key.</li> <li>6. Receive a cross-hatch signal.</li> <li>7. Select <b>3. V-SIZE</b> with the MENU <math>\nabla/\Delta</math> key.</li> <li>8. Set the initial setting value of <b>3. V-SIZE</b> with the MENU - / + key.</li> <li>9. Adjust V-SIZE and make the vertical screen size <b>92%</b> of the picture size with the MENU - / + key.</li> </ol> <p>(to be continued)</p>

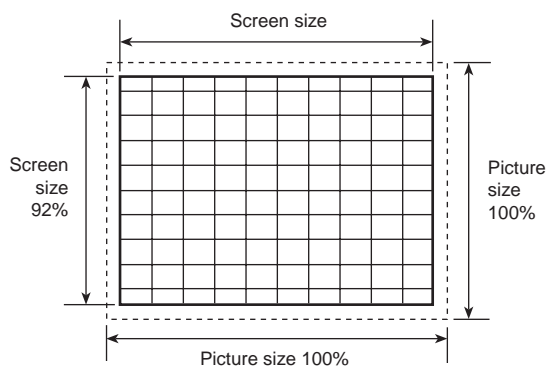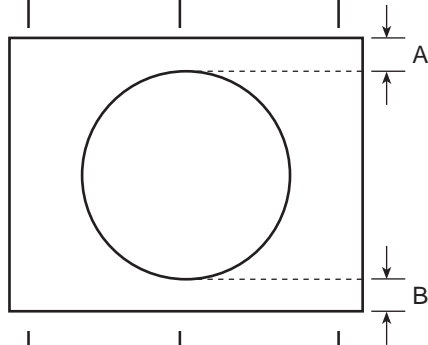

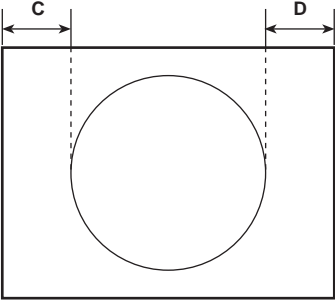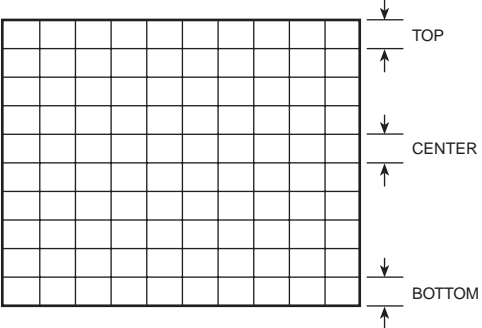Item	Measuring instrument	Test point	Adjustment part	Description
<p><b>Adjustment of H. CENTER</b></p> 			<p><b>4. H. CENT</b></p>	<p>10. Receive a circle pattern signal.            11. Select <b>4. H-CENT</b> with the MENU <math>\nabla/\Delta</math> key.            12. Set the initial setting value of <b>4. H. CENT</b> with the MENU - / + key.            13. Adjust H. CENT to make "<b>C = D</b>" with the MENU - / + key.</p>
<p><b>Adjustment of V-S.CR &amp; V-LINE</b></p> 			<p><b>7. V-S.CR</b>  <b>10. V-LINE</b></p>	<p>● <b>When the vertical linearity has been deteriorated remarkably, perform the following steps.</b></p> <p>14. Receive a cross-hatch signal.            15. Select <b>7. V-S.CR</b> with the MENU <math>\nabla/\Delta</math> key.            16. Set the initial setting value of <b>7. V-S.CR</b> with the MENU - / + key.            17. Select <b>10. V-LINE</b> with the MENU <math>\nabla/\Delta</math> key.            18. Set the initial setting value of <b>10. V-LINE</b> with the MENU - / + key.            19. Adjust V-S.CR and V-LINE so that the spaces of each line on TOP, CENTER and BOTTOM become uniform.</p>
				<p>20. Make sure that the adjustment is properly done on the screen of 60Hz mode.            21. Press the DISPLAY key twice to return to the normal screen.</p> <p><b>[NOTE]</b></p> <p>● When adjust in 60Hz mode, only 60Hz mode is adjust.</p>



## VSM PRESET ADJUSTMENT

Item	Measuring instrument	Test point	Adjustment part	Description																								
Setting of VSM PRESET	Remote control unit		1. TINT 2. COLOUR 3. BRIGHT 4. CONT. 5. SHARP	(VSM PRESET) 1. Select <b>5. VSM PRESET</b> from the SERVICE MENU. 2. Select BRIGHT with the PICTURE MODE key. 3. Adjust the MENU $\nabla/\Delta$ key and MENU – or + key to reset the set values of <b>1. TINT ~ 5. SHARP</b> to the values shown in the table. 4. Respectively select the VSM PRESET mode for SOFT and STANDARD, and make similar adjustment as in 3 above. 5. Press the DISPLAY key twice to return to the normal screen.  <b>[Setting Values for SUB MENU 5. VSM PRESET]</b> <table border="1"> <thead> <tr> <th>VSM preset mode \ VSM Setting item</th> <th>BRIGHT</th> <th>STANDARD</th> <th>SOFT</th> </tr> </thead> <tbody> <tr> <td>1. TINT SETTING VALUE</td> <td>0</td> <td>←</td> <td>←</td> </tr> <tr> <td>2. COLOUR SETTING VALUE</td> <td>0</td> <td>←</td> <td>←</td> </tr> <tr> <td>3. BRIGHT SETTING VALUE</td> <td>0</td> <td>←</td> <td>←</td> </tr> <tr> <td>4. CONT. SETTING VALUE</td> <td>+15</td> <td>+4</td> <td>-4</td> </tr> <tr> <td>5. SHARP SETTING VALUE</td> <td>0</td> <td>←</td> <td>-3</td> </tr> </tbody> </table> ◻ : Do not adjust.	VSM preset mode \ VSM Setting item	BRIGHT	STANDARD	SOFT	1. TINT SETTING VALUE	0	←	←	2. COLOUR SETTING VALUE	0	←	←	3. BRIGHT SETTING VALUE	0	←	←	4. CONT. SETTING VALUE	+15	+4	-4	5. SHARP SETTING VALUE	0	←	-3
VSM preset mode \ VSM Setting item	BRIGHT	STANDARD	SOFT																									
1. TINT SETTING VALUE	0	←	←																									
2. COLOUR SETTING VALUE	0	←	←																									
3. BRIGHT SETTING VALUE	0	←	←																									
4. CONT. SETTING VALUE	+15	+4	-4																									
5. SHARP SETTING VALUE	0	←	-3																									

**SUB MENU 5. VSM PRESET**

VSM PRESET	BRIGHT
1. TINT ***	
$\nabla/\Delta$ : SELECT -/+ : OPERATE                      DISP : EXIT	

## AUDIO ADJUSTMENT

- Do not adjust **3. AUDIO** (1. ERROR LIMIT, 2. A2 ID THR, 3. SOUND SYSTEM) in the SERVICE MENU as it requires no adjustment.

### [SUB MENU 3. AUDIO]

Setting item	Variable range	Initial setting value (fixed)
1. ERROR LIMIT (Do not adjust.)	00H ~ FFH	100H
2. A2 ID THR (Do not adjust.)	00H ~ FFH	14H
3. SOUND SYSTEM (Do not adjust.)	—	—

◻ : Do not adjust.

## CENTER ADJUSTMENT

- Do not adjust **6. CENTER** (TREBLE, BASS) in the SERVICE MENU as it requires no adjustment.

### [SUB MENU 6. CENTER]

Setting item	Initial setting value (fixed)
TREBLE (Do not adjust.)	+2
BASS (Do not adjust.)	0

◻ : Do not adjust.

## SELF-CHECK FUNCTIONS

### 1. Outline


This model has self-check functions given below. When an abnormality has been detected, the SUB POWER is turned off and the ON TIMER LED flashes to inform of the failure. An abnormality is detected by the signal input state of the control line connected to the microcomputer.

### 2. Self-check items

Check item	Details of detection	Method of detection	State of abnormality
Over-current protection	An over-current on the low B line is detected.	The main microcomputer detects the possible abnormality at 30-msec. intervals and judges the results in every 16 time. Of the 16 times, if NG is detected more than 9 times, it is judged that there is an abnormality.	When an abnormality has been detected, the SUB-POWER is turned off. While the SUB-POWER is being turned off, the POWER key on the remote control unit is not operational until the power cord is taken out and put in again.
CRT NECK protection	Operation of CRT NECK protection circuit	DITTO	DITTO

### 3. Self-check indicating function

When an abnormality has been detected at about 5 seconds after the power is turned on, the SUB POWER is turned off immediately and the ON TIMER LED flashes.

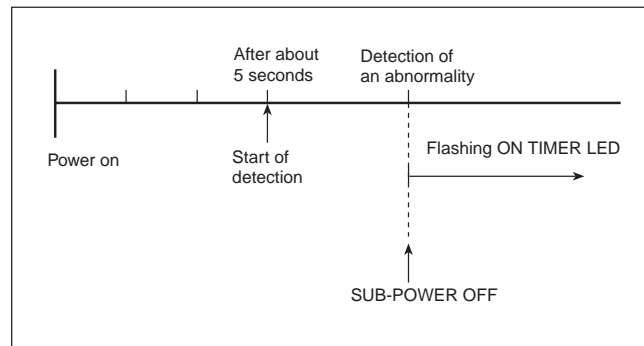

#### [ Indication by the LED ]

Item	LED flashing intervals	Priority of detection
① Over-current protection	At 0.2-second intervals	1
② CRT NECK protection	At 1-second intervals	2

**Note:** In case of ① + ②, the item ① will be indicated.

# STANDARD CIRCUIT DIAGRAM

## NOTE ON USING CIRCUIT DIAGRAMS

### 1. SAFETY

The components identified by the  $\Delta$  symbol and shading are critical for safety. For continued safety replace safety critical components only with manufactures recommended parts.

### 2. SPECIFIED VOLTAGE AND WAVEFORM VALUES

The voltage and waveform values have been measured under the following conditions.

- (1) Input signal : Colour bar signal
- (2) Setting positions of each knob/button and variable resistor : Original setting position when shipped
- (3) Internal resistance of tester : DC 20k $\Omega$ /V
- (4) Oscilloscope sweeping time : H  $\rightarrow$  20 $\mu$ S/div  
: V  $\rightarrow$  5mS/div  
: Others  $\rightarrow$  Sweeping time is specified.
- (5) Voltage values : All DC voltage values

\* Since the voltage values of signal circuit vary to some extent according to adjustments, use them as reference values.

### 3. INDICATION OF PARTS SYMBOL [EXAMPLE]

- In the PW board : R1209  $\rightarrow$  R209

### 4. INDICATIONS ON THE CIRCUIT DIAGRAM

#### (1) Resistors

- Resistance value

No unit	: [ $\Omega$ ]
K	: [K $\Omega$ ]
M	: [M $\Omega$ ]

- Rated allowable power

No indication	: 1/4 [W]
Others	: As specified

- Type

No indication	: Carbon resistor
OMR	: Oxide metal film resistor
MFR	: Metal film resistor
MPR	: Metal plate resistor
UNFR	: Non-flammable resistor
FR	: Fusible resistor

\* Composition resistor 1/2 [W] is specified as 1/2S or Comp.

#### (2) Capacitors

- Capacitance value

1 or higher	: [pF]
less than 1	: [ $\mu$ F]

- Withstand voltage

No indication	: DC50 [V]
AC indicated	: AC withstand voltage [V]
Others	: DC withstand voltage [V]

\* Electrolytic Capacitors

47/50 [Example]: Capacitance value [ $\mu$ F]/withstand voltage [V]


- Type

No indication	: Ceramic capacitor
MY	: Mylar capacitor
MM	: Metalized mylar capacitor
PP	: Polypropylene capacitor
MPP	: Metalized polypropylene capacitor
MF	: Metalized film capacitor
TF	: Thin film capacitor
BP	: Bipolar electrolytic capacitor
TAN	: Tantalum capacitor

#### (3) Coils



No unit	: [ $\mu$ H]
Others	: As specified

#### (4) Power Supply




	: B1
	: 12V
	: 9V
	: 5V

\* Respective voltage values are indicated.


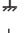


#### (5) Test point

	: Test point
	: Only test point display
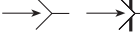
#### (6) Connecting method

	: Connector
	: Wrapping or soldering
	: Receptacle

#### (7) Ground symbol

	: LIVE side ground
	: ISOLATED (NEUTRAL) side ground
	: EARTH ground
	: DIGITAL ground

## 5. NOTE FOR REPAIRING SERVICE

This model's power circuit is partly different in the GND. The difference of the GND is shown by the LIVE (  $\perp$  ) side GND and the ISOLATED (NEUTRAL) (  $\text{⌚}$  ) side GND. Therefore, care must be taken for the following points.

- (1) Do not touch the LIVE side GND or the LIVE side GND and the ISOLATED (NEUTRAL) side GND simultaneously. If the above caution is not respected, an electric shock may be caused. Therefore, make sure that the power cord is surely removed from the receptacle when, for example, the chassis is pulled out.
- (2) Do not short between the LIVE side GND and ISOLATED (NEUTRAL) side GND or never measure with a measuring apparatus (oscilloscope, etc.) the LIVE side GND and ISOLATED (NEUTRAL) side GND at the same time. If the above precaution is not respected, a fuse or any parts will be broken.

- Since the circuit diagram is a standard one, the circuit and circuit constants may be subject to change for improvement without any notice.

# CONTENTS

**SEMICONDUCTOR SHAPES ..... 2-4**

**BLOCK DIAGRAM ..... 2-5**

**CIRCUIT DIAGRAMS**

**MAIN PWB CIRCUIT DIAGRAM..... 2-7**

**AV SW PWB CIRCUIT DIAGRAM ..... 2-9**

**IF PWB CIRCUIT DIAGRAM ..... 2-11**

**CRT SOCKET PWB CIRCUIT DIAGRAM ..... 2-13**

**FRONT CONTROL PWB CIRCUIT DIAGRAM ..... 2-15**

**PATTERN DIAGRAMS**

**FRONT CONTROL PWB PATTERN ..... 2-16**

**MAIN PWB PATTERN ..... 2-17**





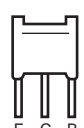
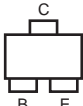
**AV SW PWB PATTERN..... 2-19**

**IF PWB PATTERN ..... 2-20**


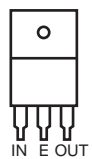
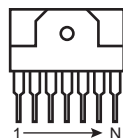
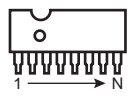
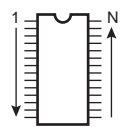
**CRT SOCKET PWB PATTERN..... 2-21**

## SEMICONDUCTOR SHAPES



### TRANSISTOR

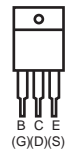BOTTOM VIEW	FRONT VIEW				TOP VIEW
					CHIP TR 


### IC

BOTTOM VIEW	FRONT VIEW			TOP VIEW
				


### CHIP IC

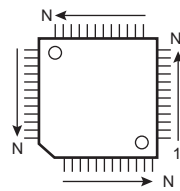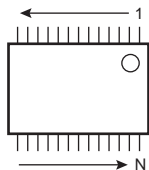TOP VIEW		
		


# BLOCK DIAGRAM

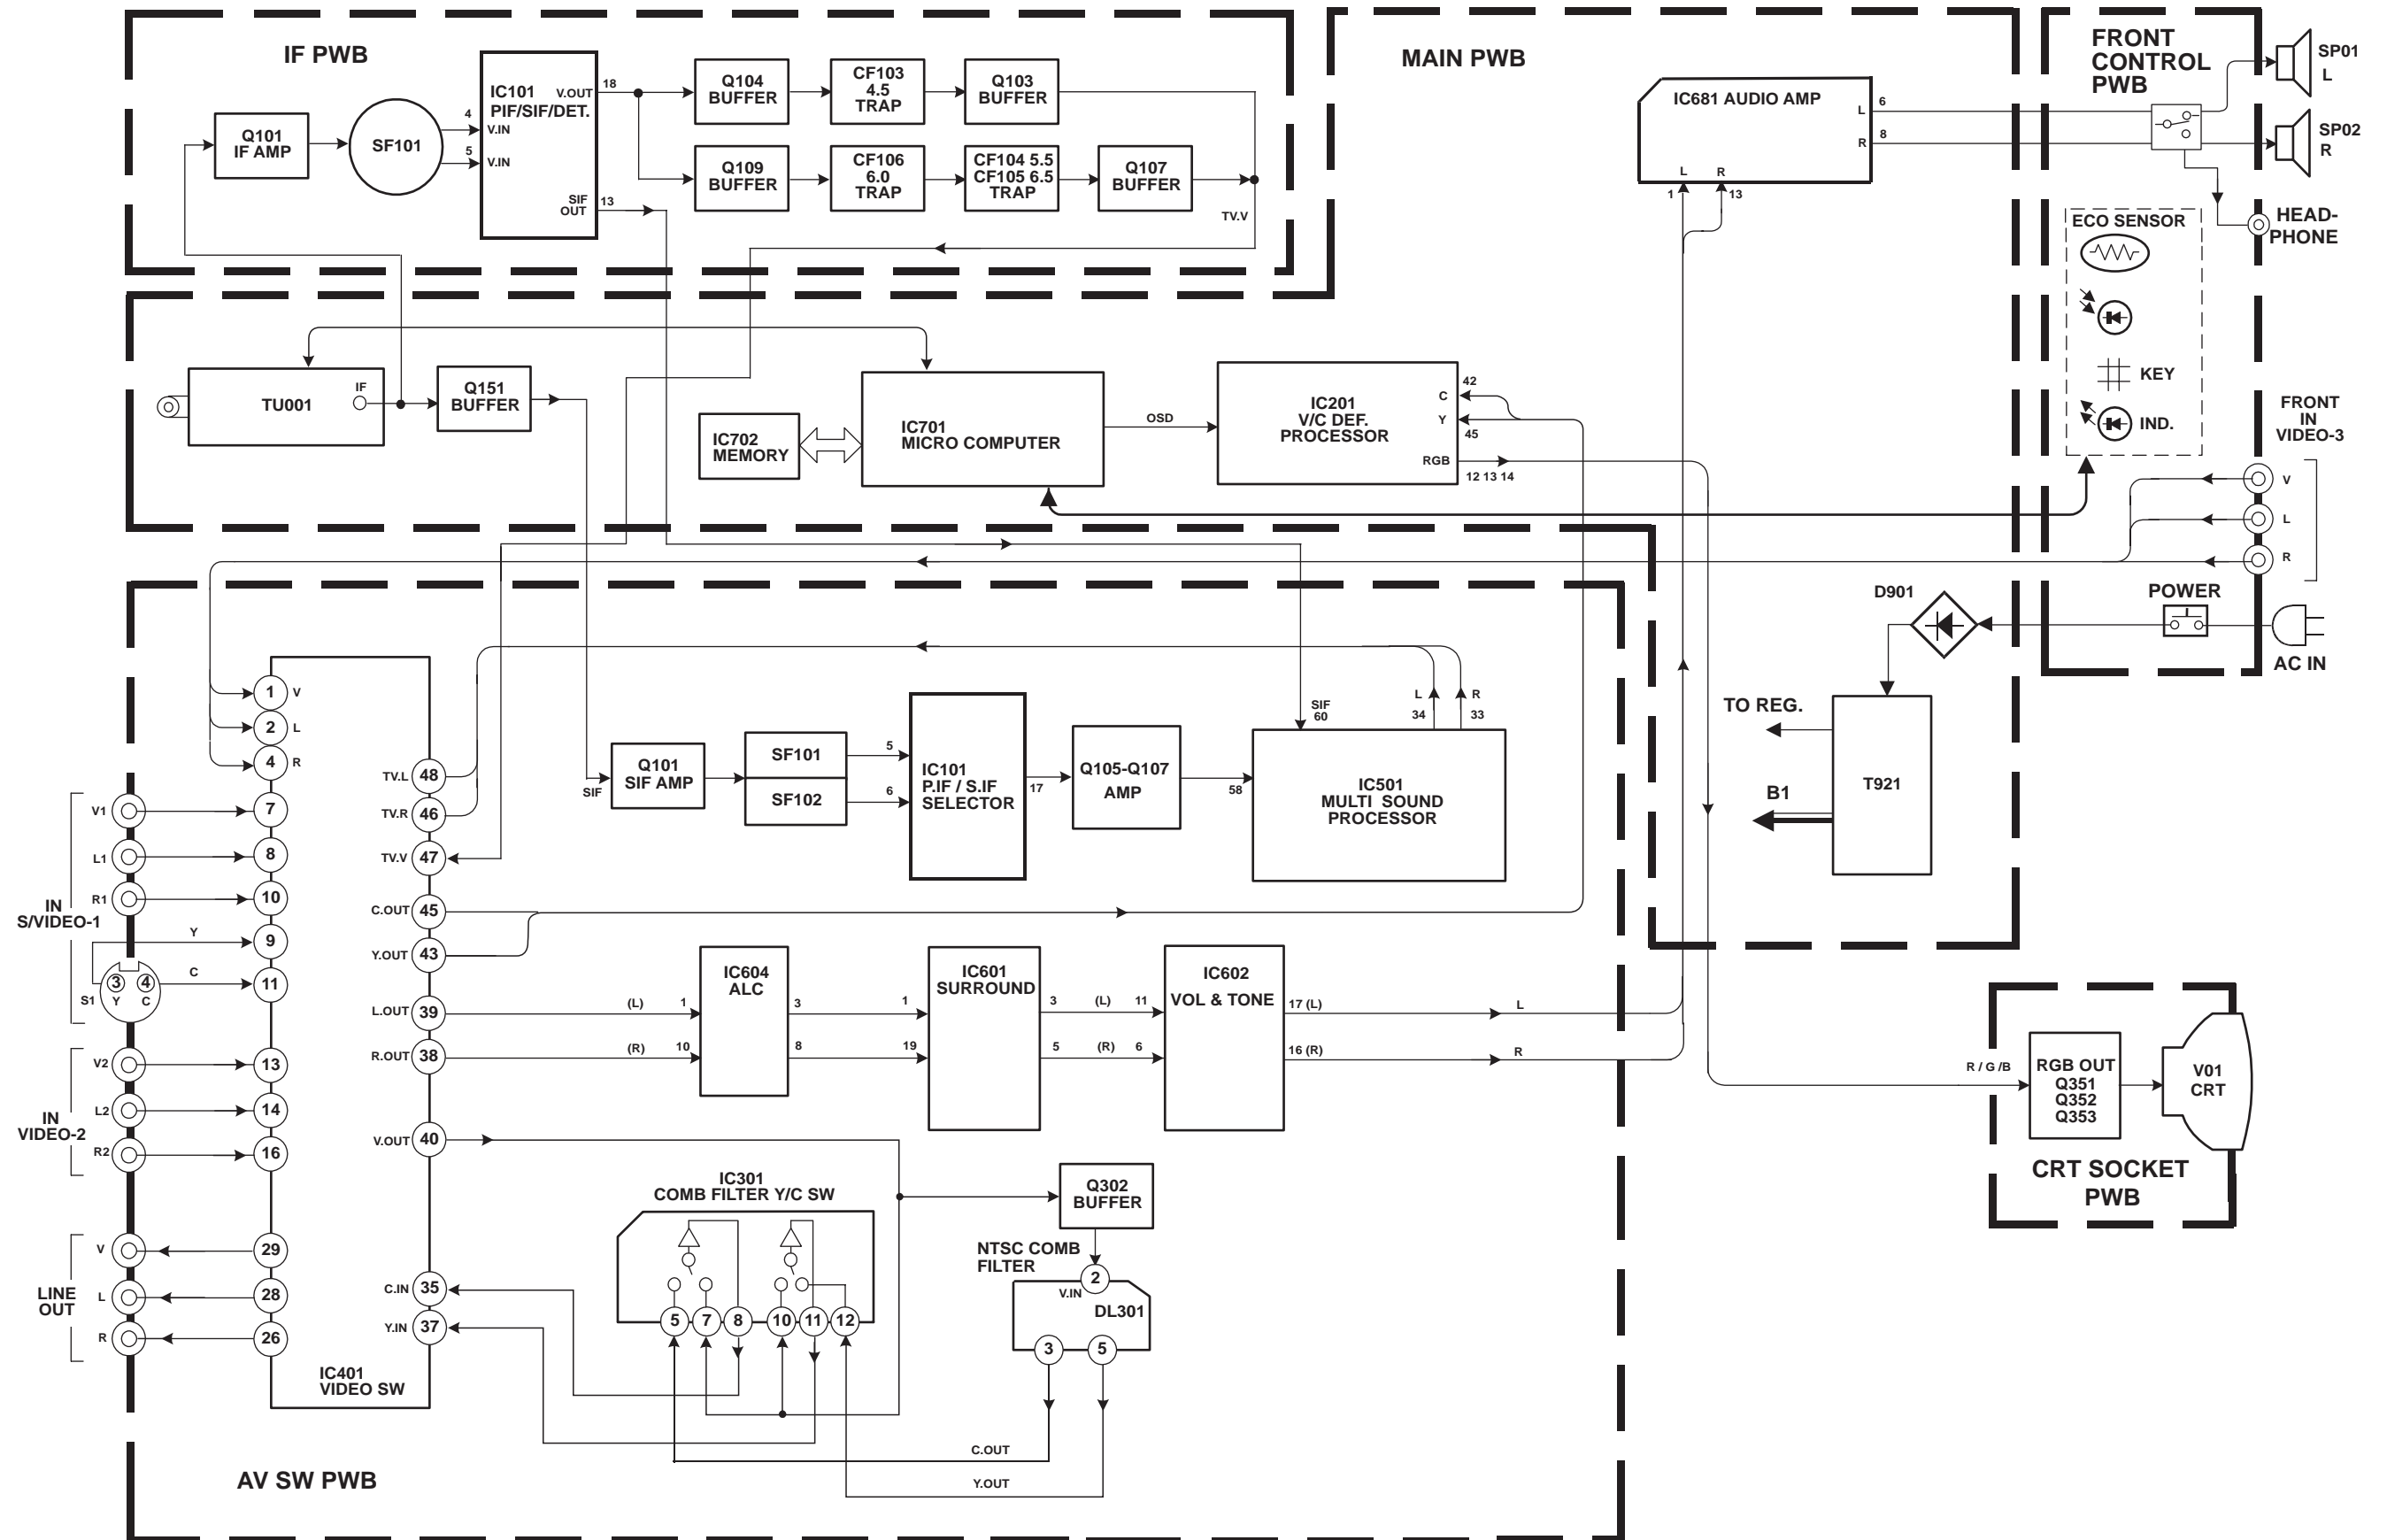

# CIRCUIT DIAGRAMS MAIN PWB CIRCUIT DIAGRAM

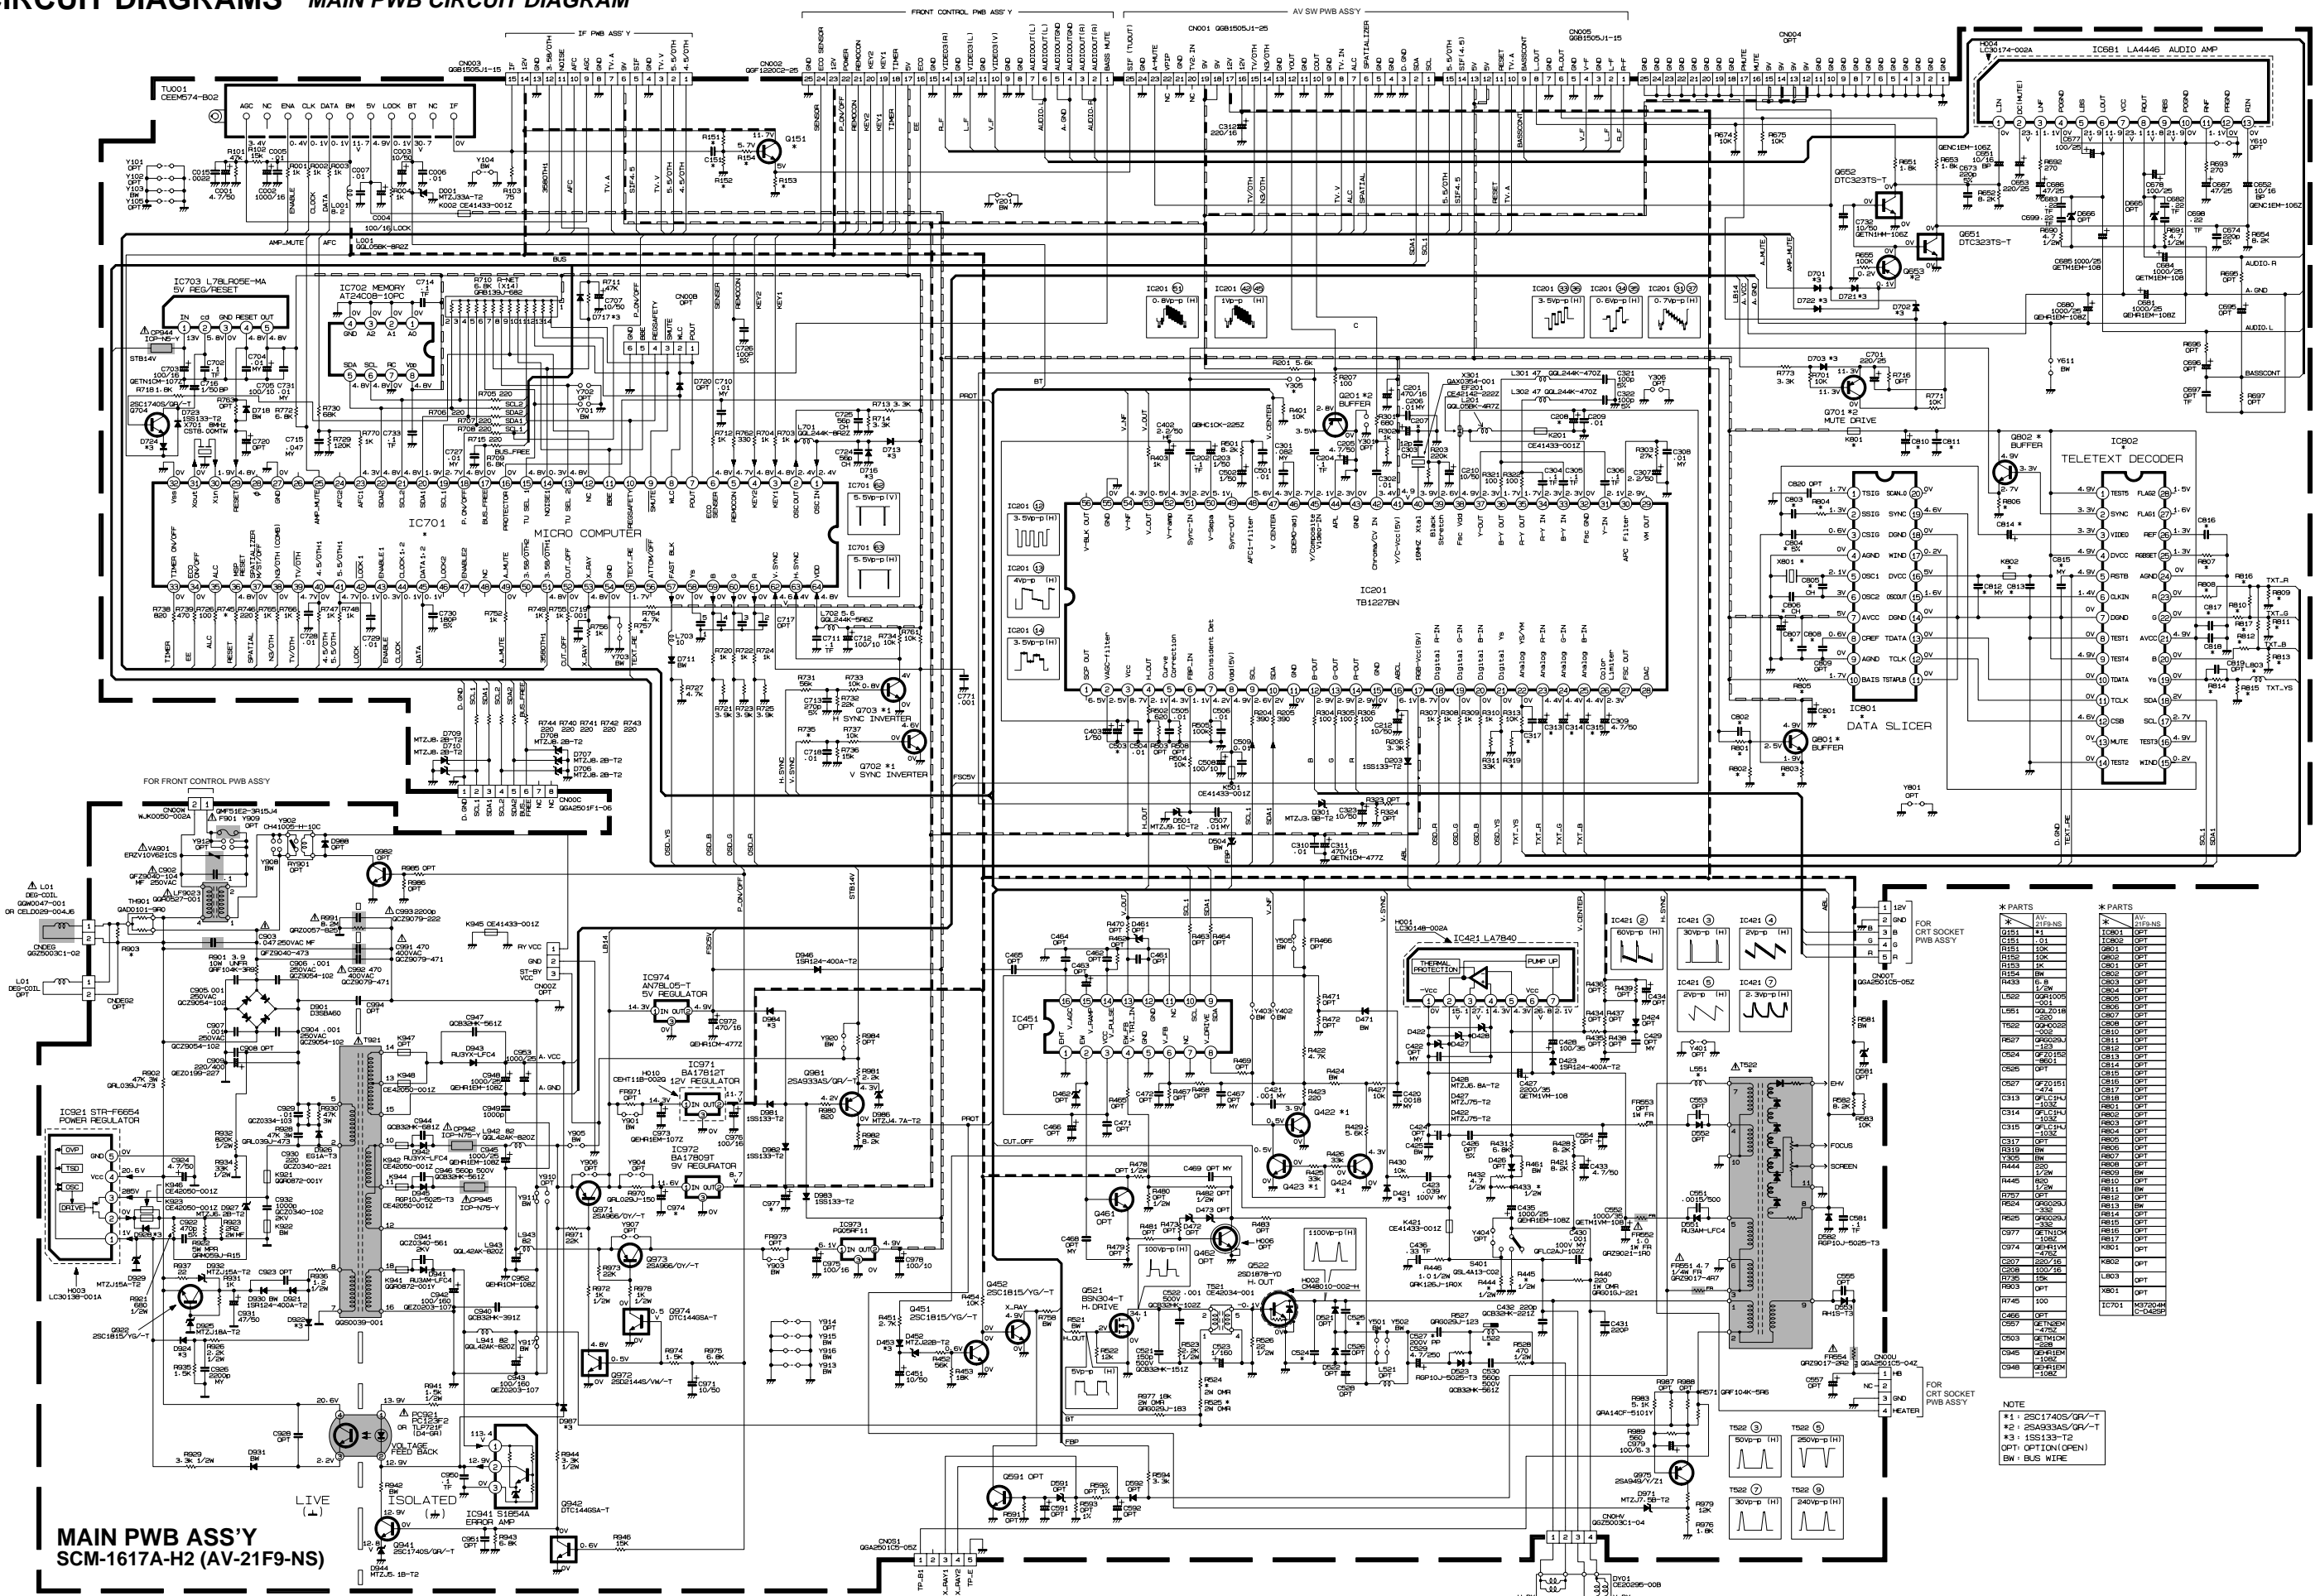

AV SW PWB CIRCUIT DIAGRAM

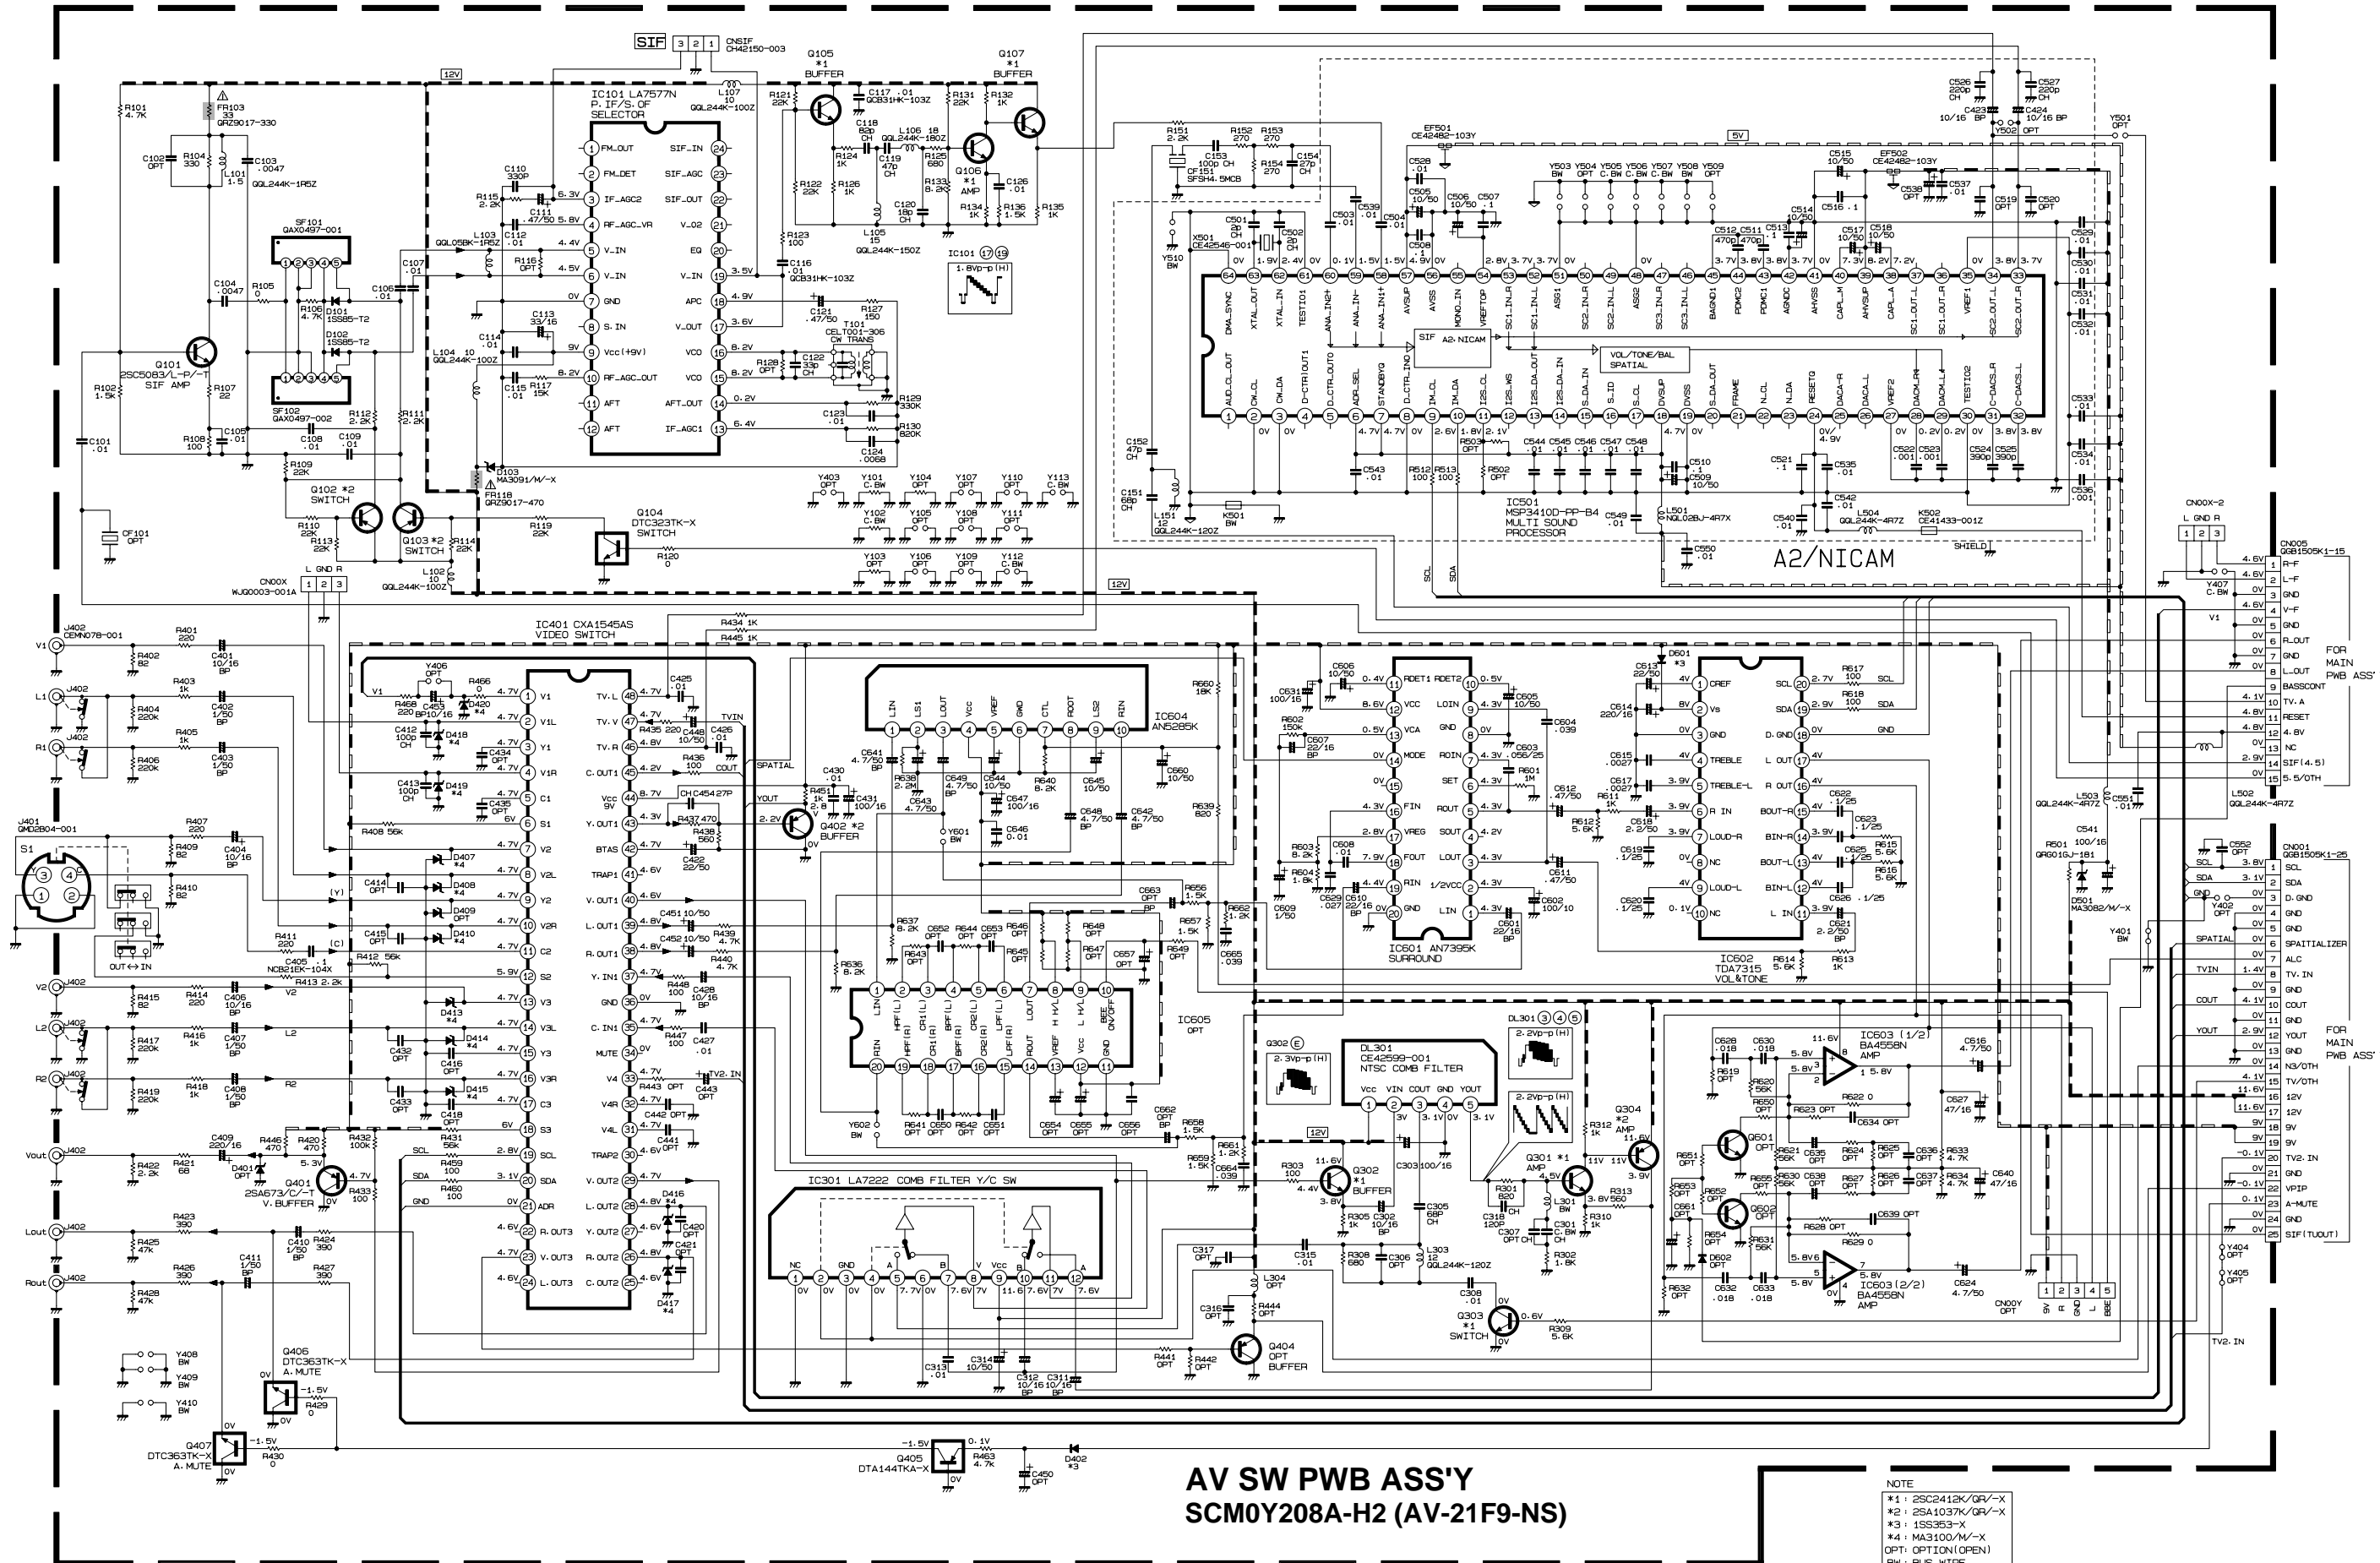

AV SW PWB ASS'Y  
SCM0Y208A-H2 (AV-21F9-NS)

- NOTE
- \*1 : 25C2412K/QR/-X
  - \*2 : 25A1037K/QR/-X
  - \*3 : 1S3535-X
  - \*4 : MA3100/M/-X
  - OPT: OPTION(OPEN)
  - BW : BUS WIFE

IF PWB CIRCUIT DIAGRAM

\* PARTS

* AV-21F9 -NS
C113 OPT
C124 OPT
Q111 OPT
R113 0
SF102 OPT
C601 OPT
C602 OPT
C603 OPT
C604 OPT
C606 OPT
C607 OPT
C608 OPT
C609 OPT
C610 OPT
C611 OPT
C612 OPT

\* PARTS

* AV-21F9 -NS
CF601 OPT
CF604 OPT
CF606 OPT
CF608 OPT
L601 OPT
Q601 OPT
Q602 OPT
Q603 OPT
Q604 OPT
Q605 OPT
Q606 *2
Q608 OPT


\* PARTS

* AV-21F9 -NS
R601 OPT
R602 OPT
R604 OPT
R605 OPT
R606 OPT
R607 OPT
R608 OPT
R609 OPT
R610 OPT
R611 OPT
R612 OPT
R615 OPT
R616 OPT
R617 OPT
R619 1k
R620 OPT

\* PARTS


* AV-21F9 -NS
R621 OPT
R622 OPT
R623 OPT
R624 OPT
R625 OPT
R626 OPT
R627 OPT
R628 OPT
C130 OPT
C131 OPT

IF PWB ASS'Y  
SCM0F201A-H2 (AV-21F9-NS)

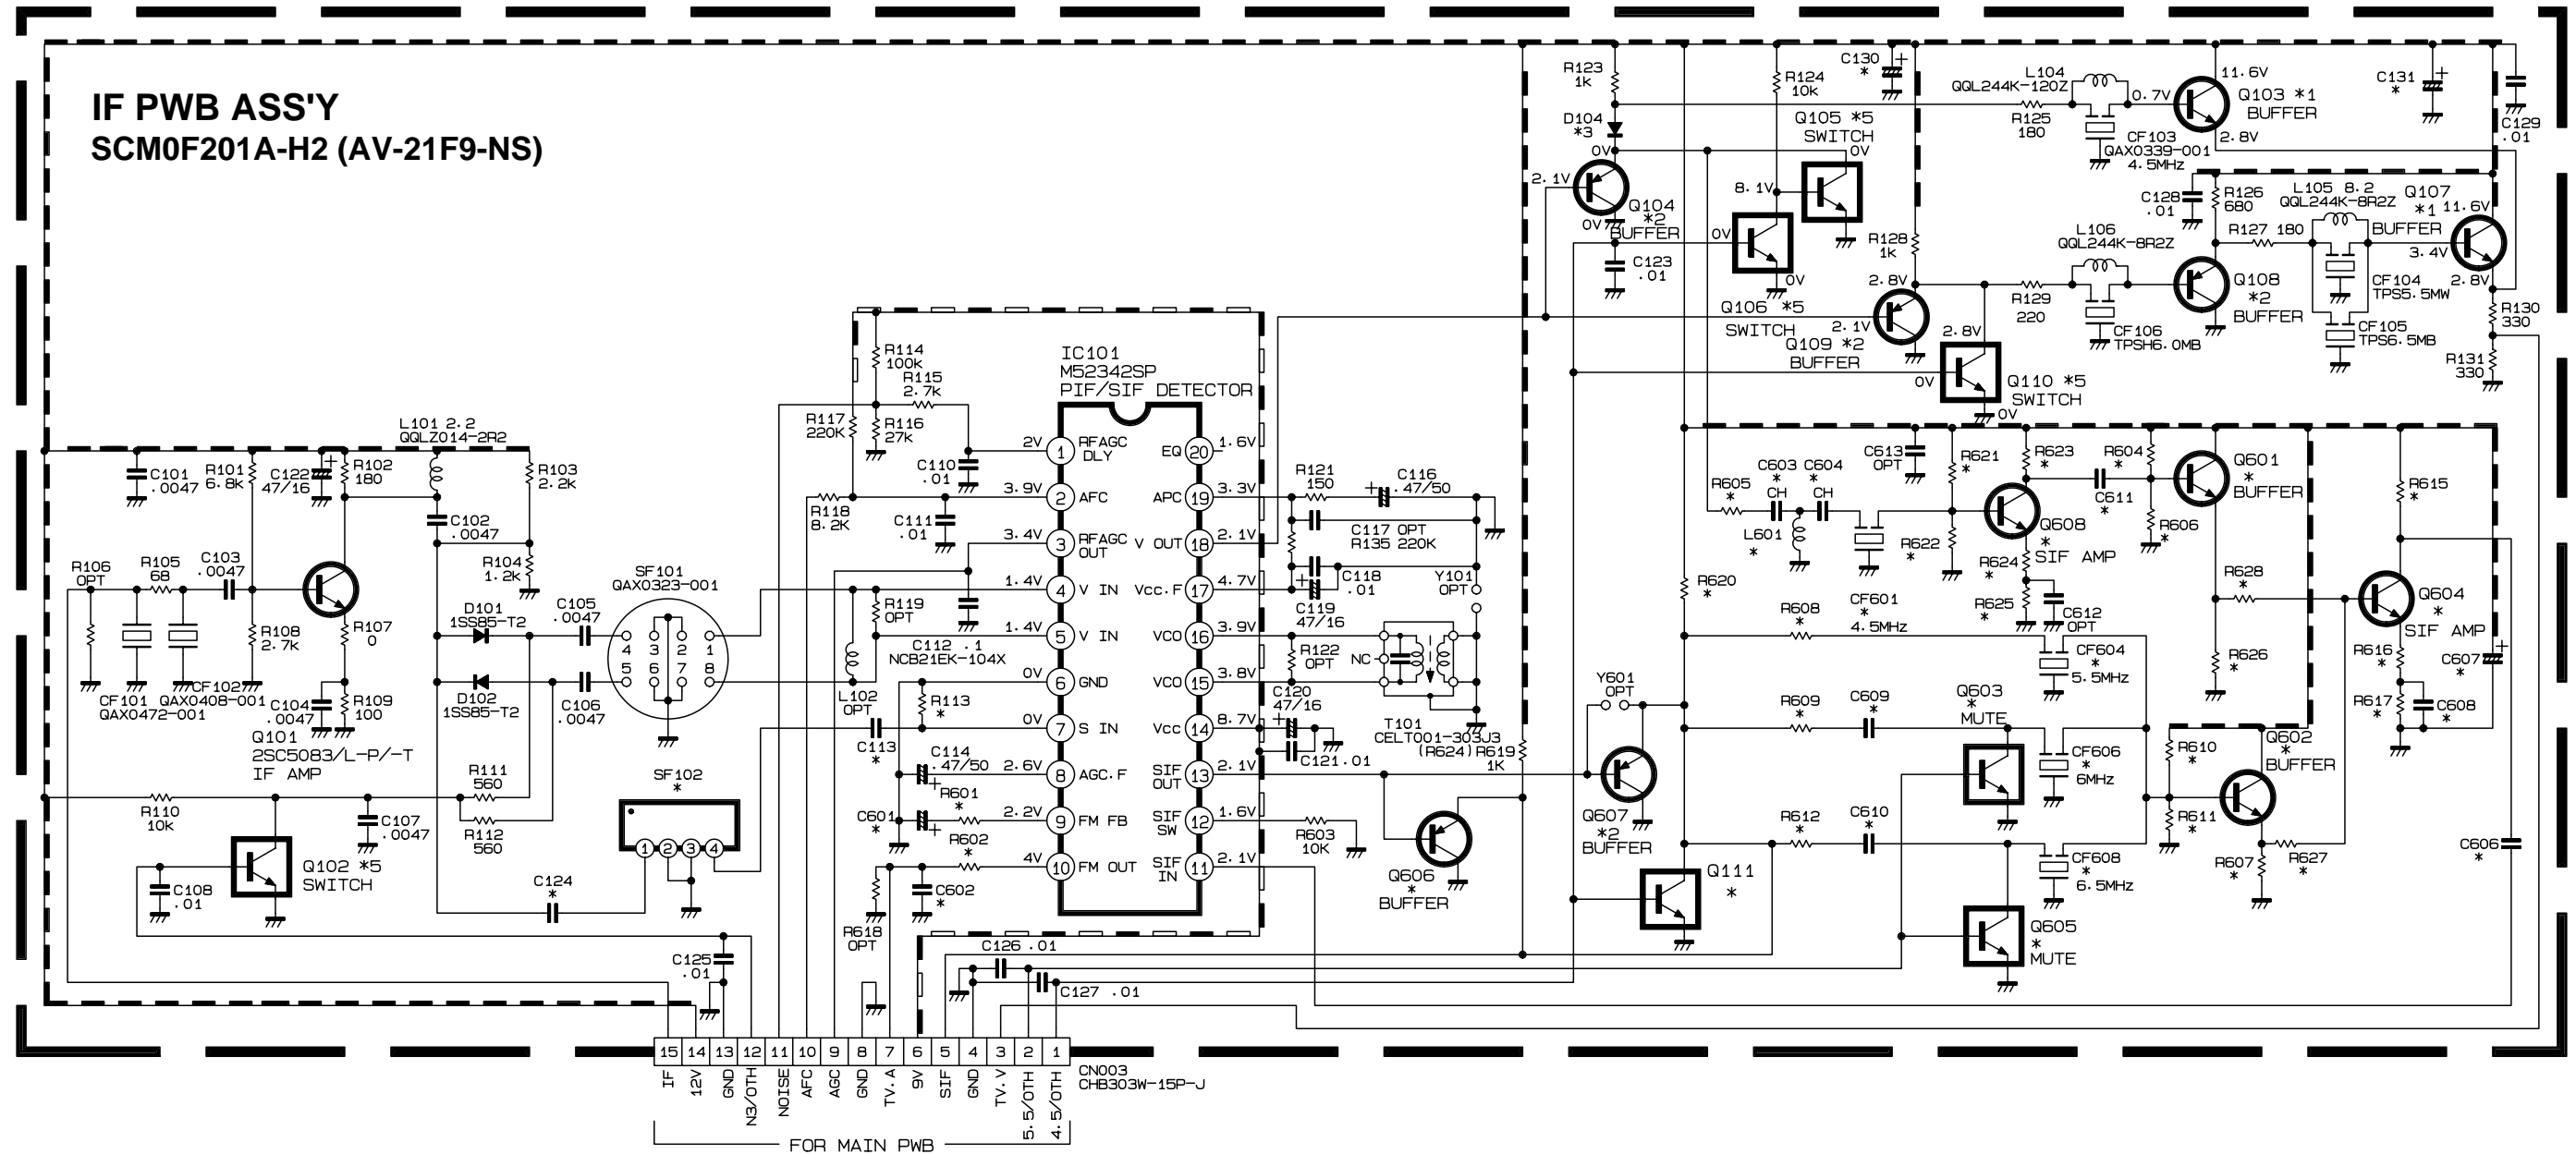




CRT SOCKET CIRCUIT DIAGRAM

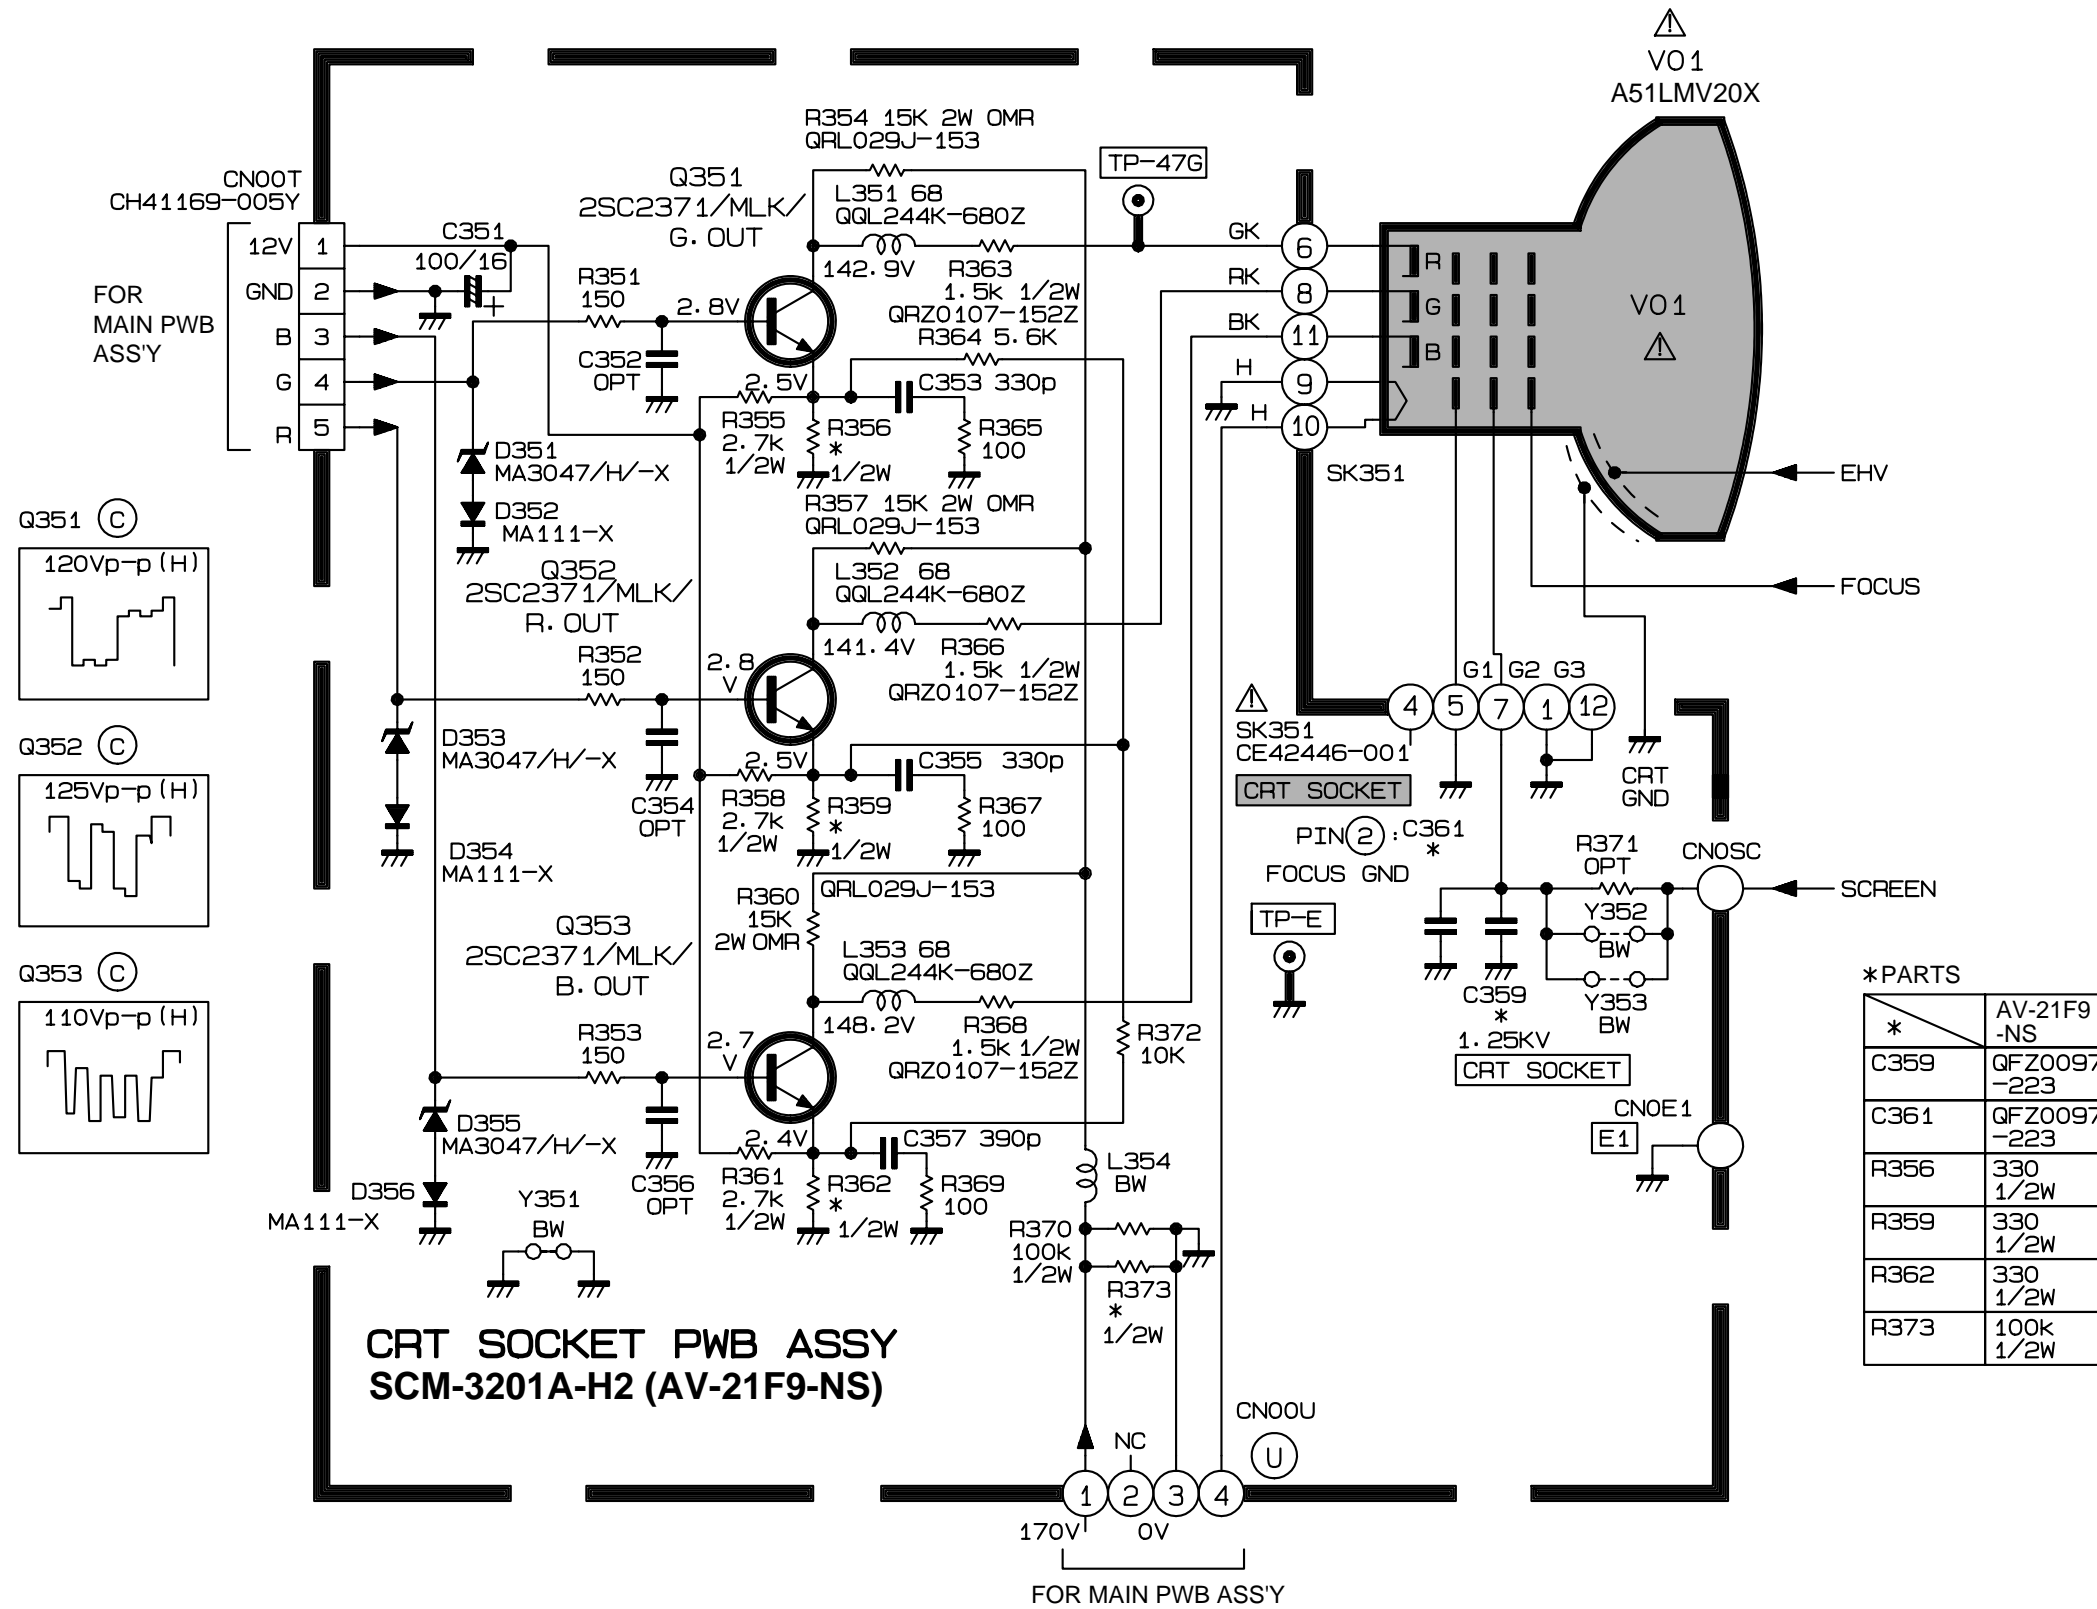

## Locations


### Locations of remote control buttons

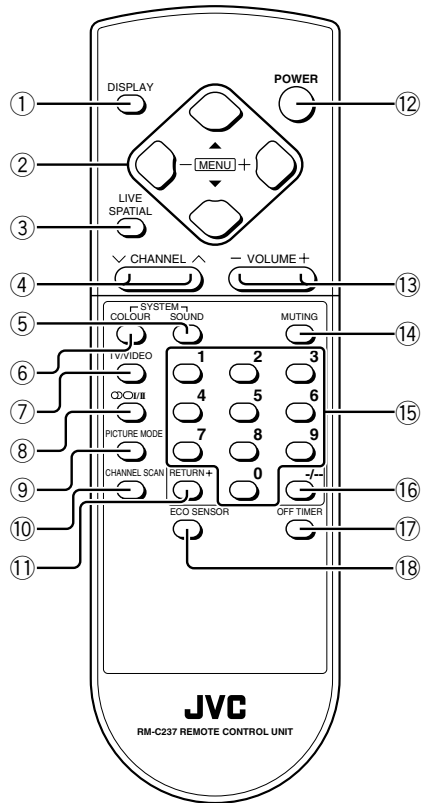

①	DISPLAY button	p.21
②	MENU buttons	
	• MENU ▲/▼ buttons	
	• MENU -/+ buttons	
③	LIVE SPATIAL button	p.17
④	CHANNEL V/^ buttons	p.13
⑤	SOUND SYSTEM button	p.16
⑥	COLOUR SYSTEM button	p.16
⑦	TV/VIDEO button	p.15
⑧	Multi Sound button	p.17
⑨	PICTURE MODE button	p.16
⑩	CHANNEL SCAN button	p.22
⑪	RETURN + button	p.22
⑫	POWER button	p.6,13,14
⑬	VOLUME -/+ buttons	p.14
⑭	MUTING button	p.17
⑮	Number buttons	p.13
⑯	-/-- button	p.13
⑰	OFF TIMER button	p.21
⑱	ECO SENSOR button	p.21

## Locations

### Locations of front panel buttons and lamps

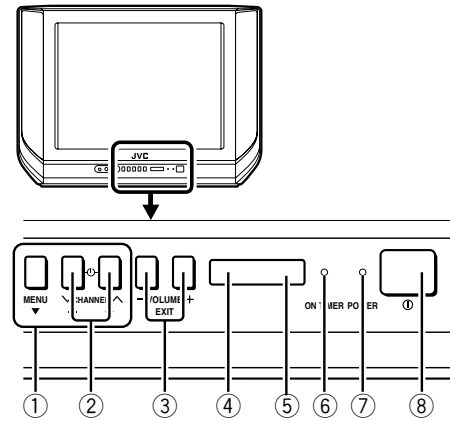

①	MENU buttons	p.26
	• MENU button	
	• MENU -/+ buttons	
②	CHANNEL V/^ buttons	p.14
③	VOLUME -/+ buttons	p.14

④	ECO sensor	
⑤	Remote control sensor	
⑥	ON TIMER lamp	p.23
⑦	POWER lamp	p.6,13,14
⑧	Main power button	p.6,14